


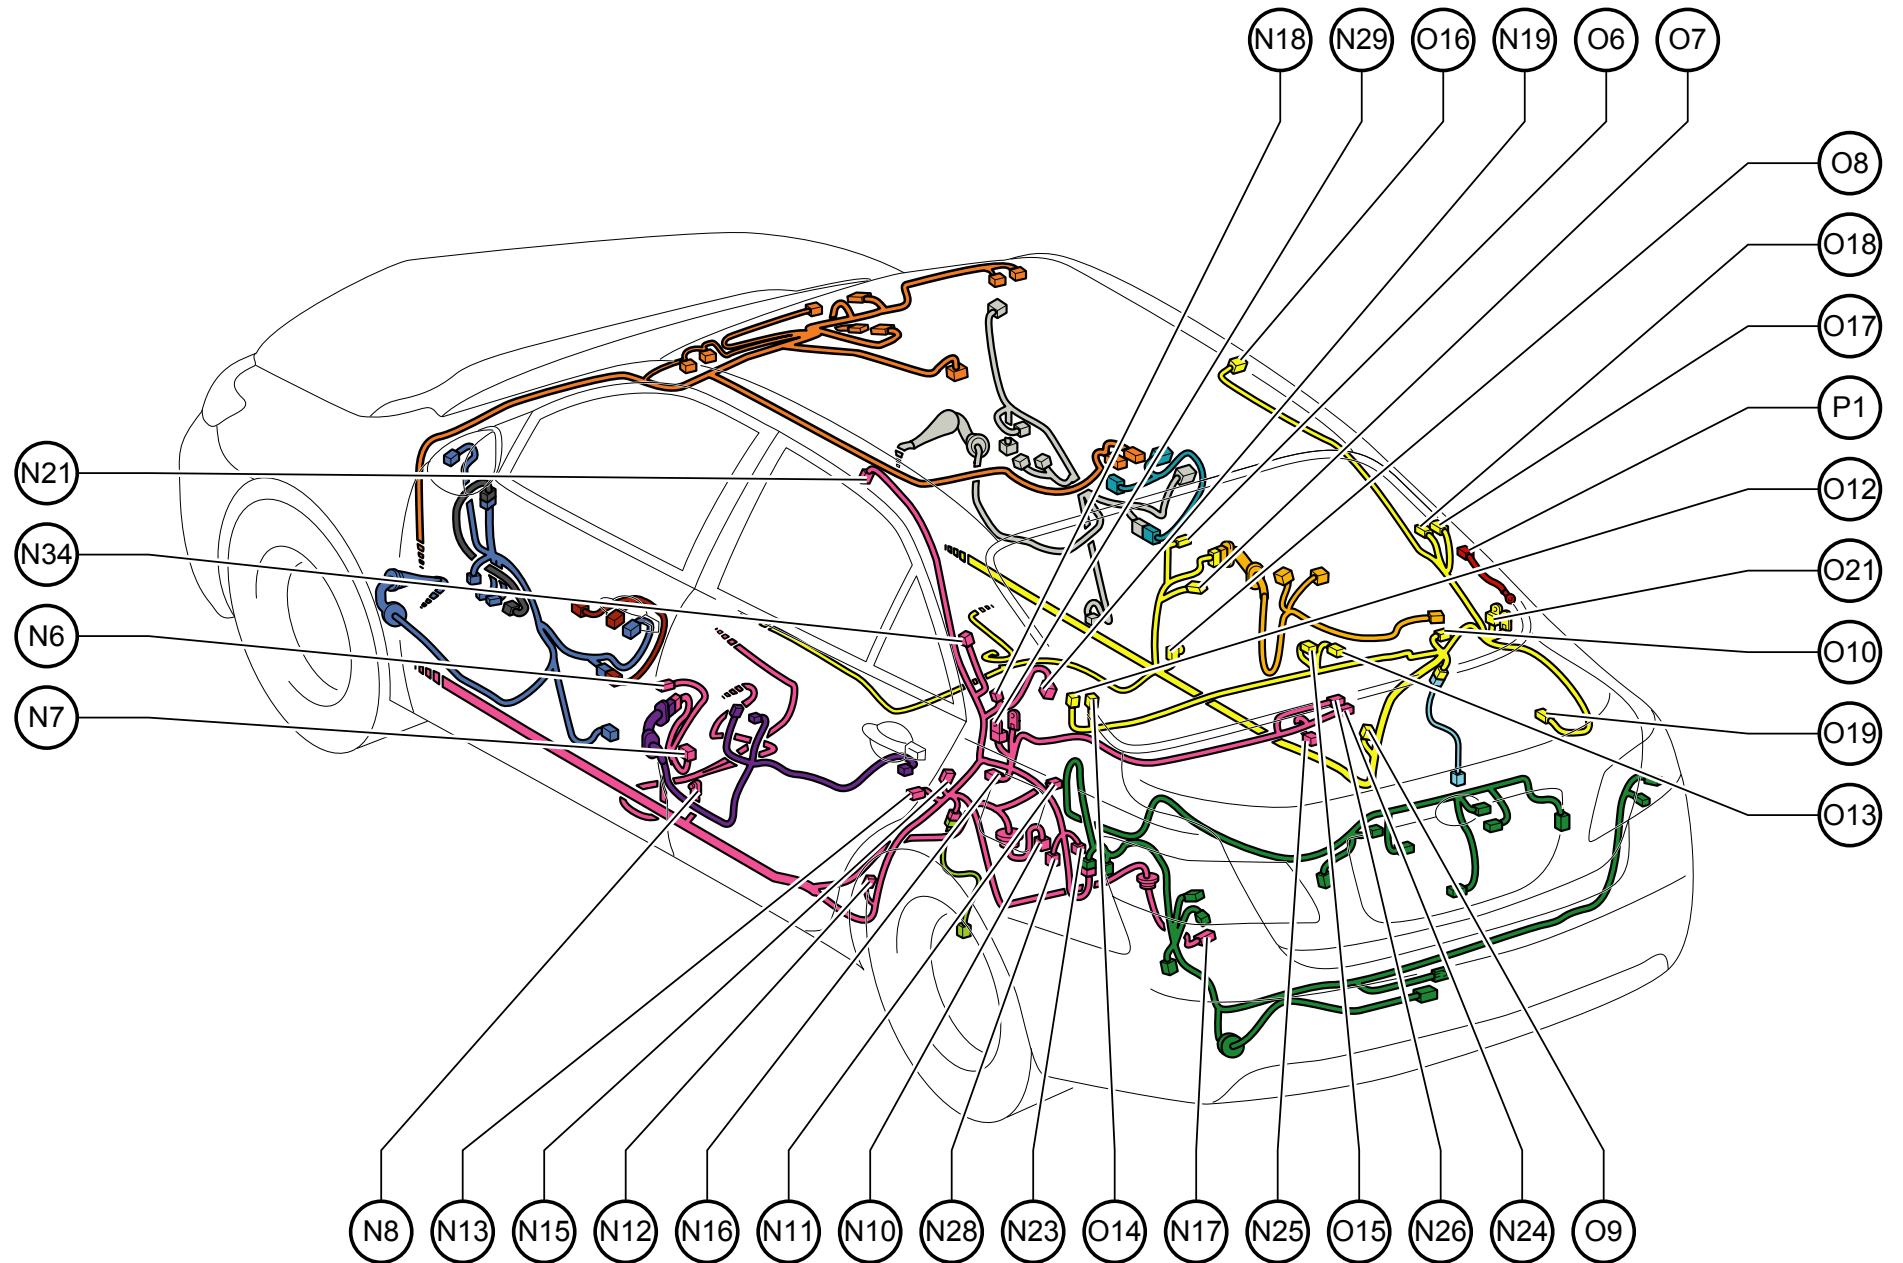


N 6 Door Courtesy SW (Driver's Side)
N 6 Door Courtesy SW (Driver's Side)
N 7 Side Airbag Sensor (Front LH)
N 8 Pretensioner (LH)
N 10 Fuel Suction Pump and Gage Assembly
N 11 Electrical Key Oscillator (Rear Seat)
N 12 Side Airbag Sensor (Rear LH)
N 13 Door Courtesy SW (Rear LH)
N 13 Door Courtesy SW (Rear LH)
N 15 Noise Filter (Dome and Stop)
N 16 Center Stop Lamp
N 17 Canister Pump Module
N 18 Noise Filter (Rear Window Defogger)
N 19 Rear Window Defogger
N 21 Curtain Shield Airbag Squib (LH)
N 23 Diode (Luggage Compartment Lamp)
N 24 Luggage Compartment Lamp
N 25 Electrical Key Oscillator (Inside Luggage Room)
N 26 Luggage Compartment Lamp
N 28 Junction Connector
N 29 Junction Connector
N 34 Tire Pressure Warning Antenna and Receiver

O 6 Door Courtesy SW (Front Passenger's Side)
O 7 Side Airbag Sensor (Front RH)
O 8 Pretensioner (RH)
O 9 Side Airbag Sensor (Rear RH)
O 10 Door Courtesy SW (Rear RH)
O 12 Speaker (Rear LH)
O 13 Speaker (Rear RH)
O 14 Speaker (Rear LH)
O 15 Speaker (Rear RH)
O 16 Curtain Shield Airbag Squib (RH)
O 17 Door Control Receiver
O 18 Door Control Receiver
O 19 Electrical Key Antenna
O 21 Junction Connector

P 1 Rear Window Defogger

Position of Parts in Body

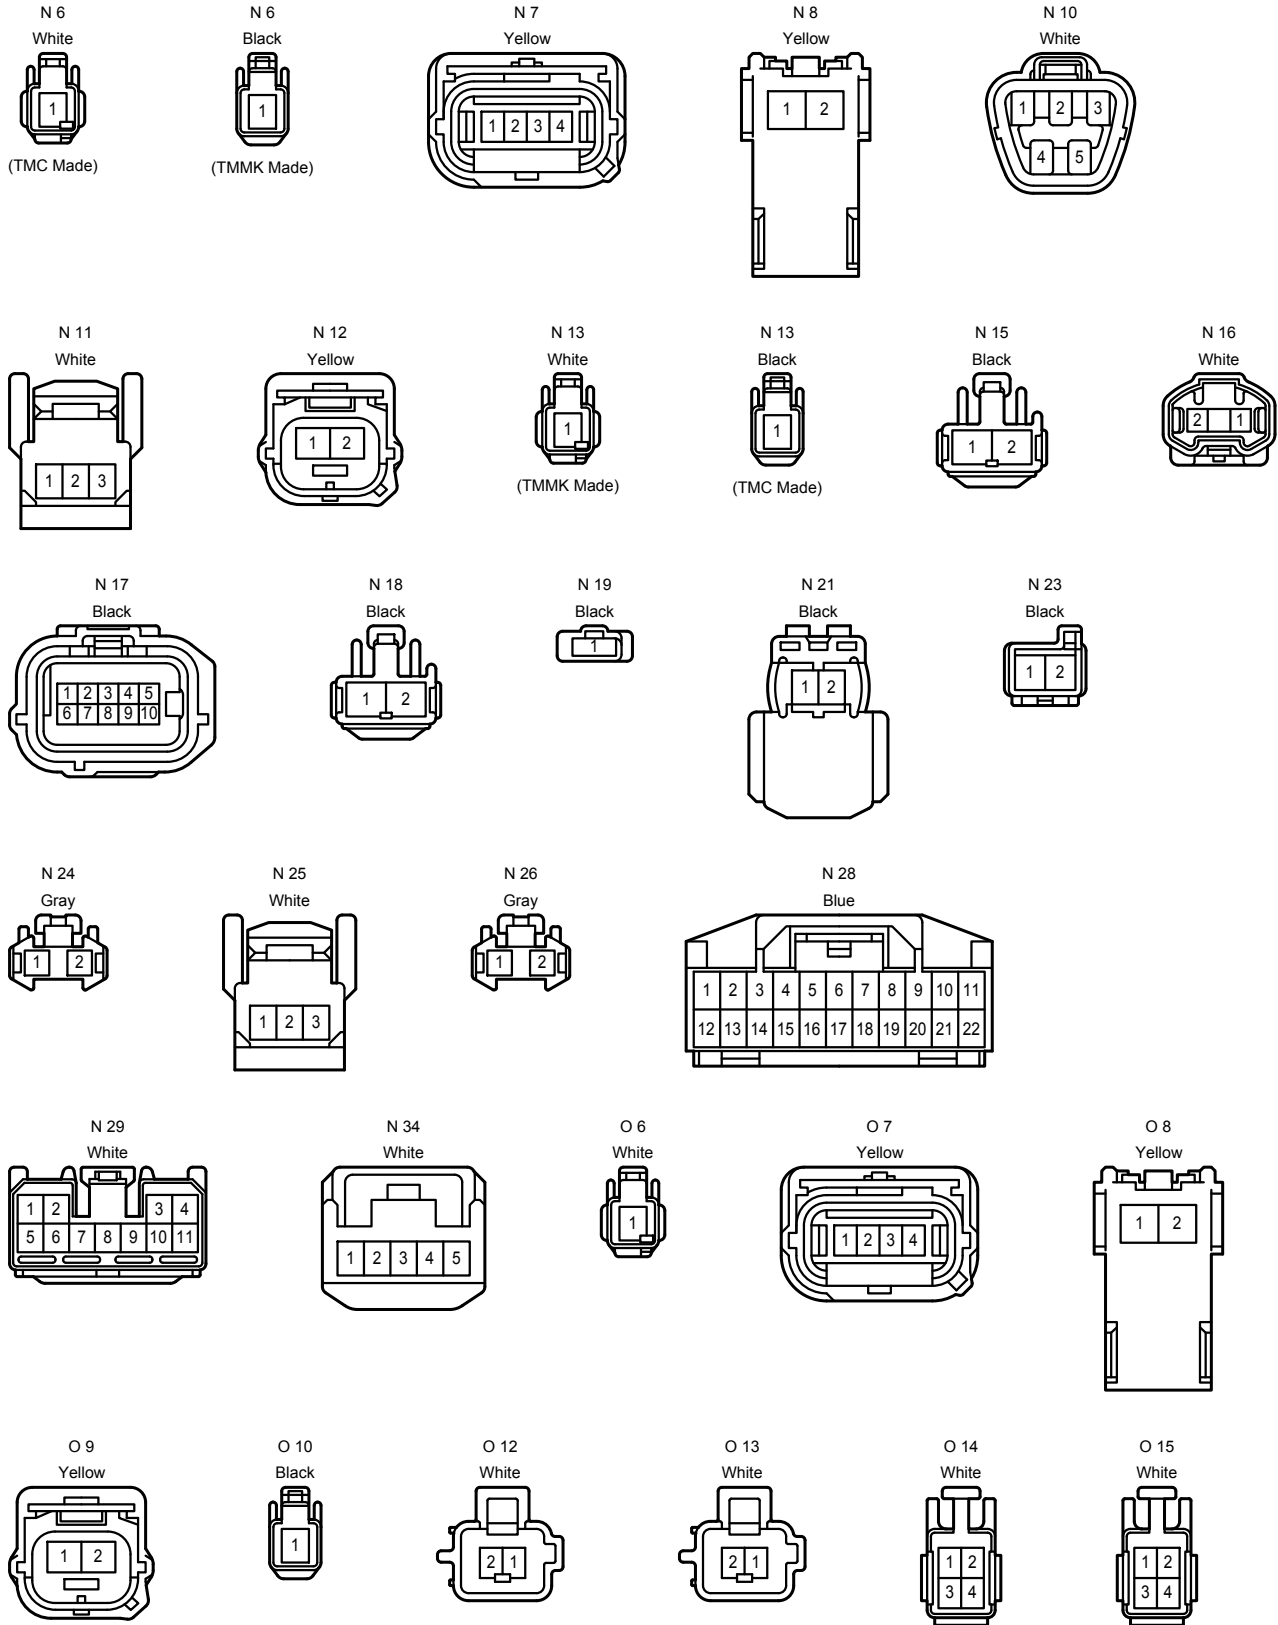

Position of Parts in Body

