

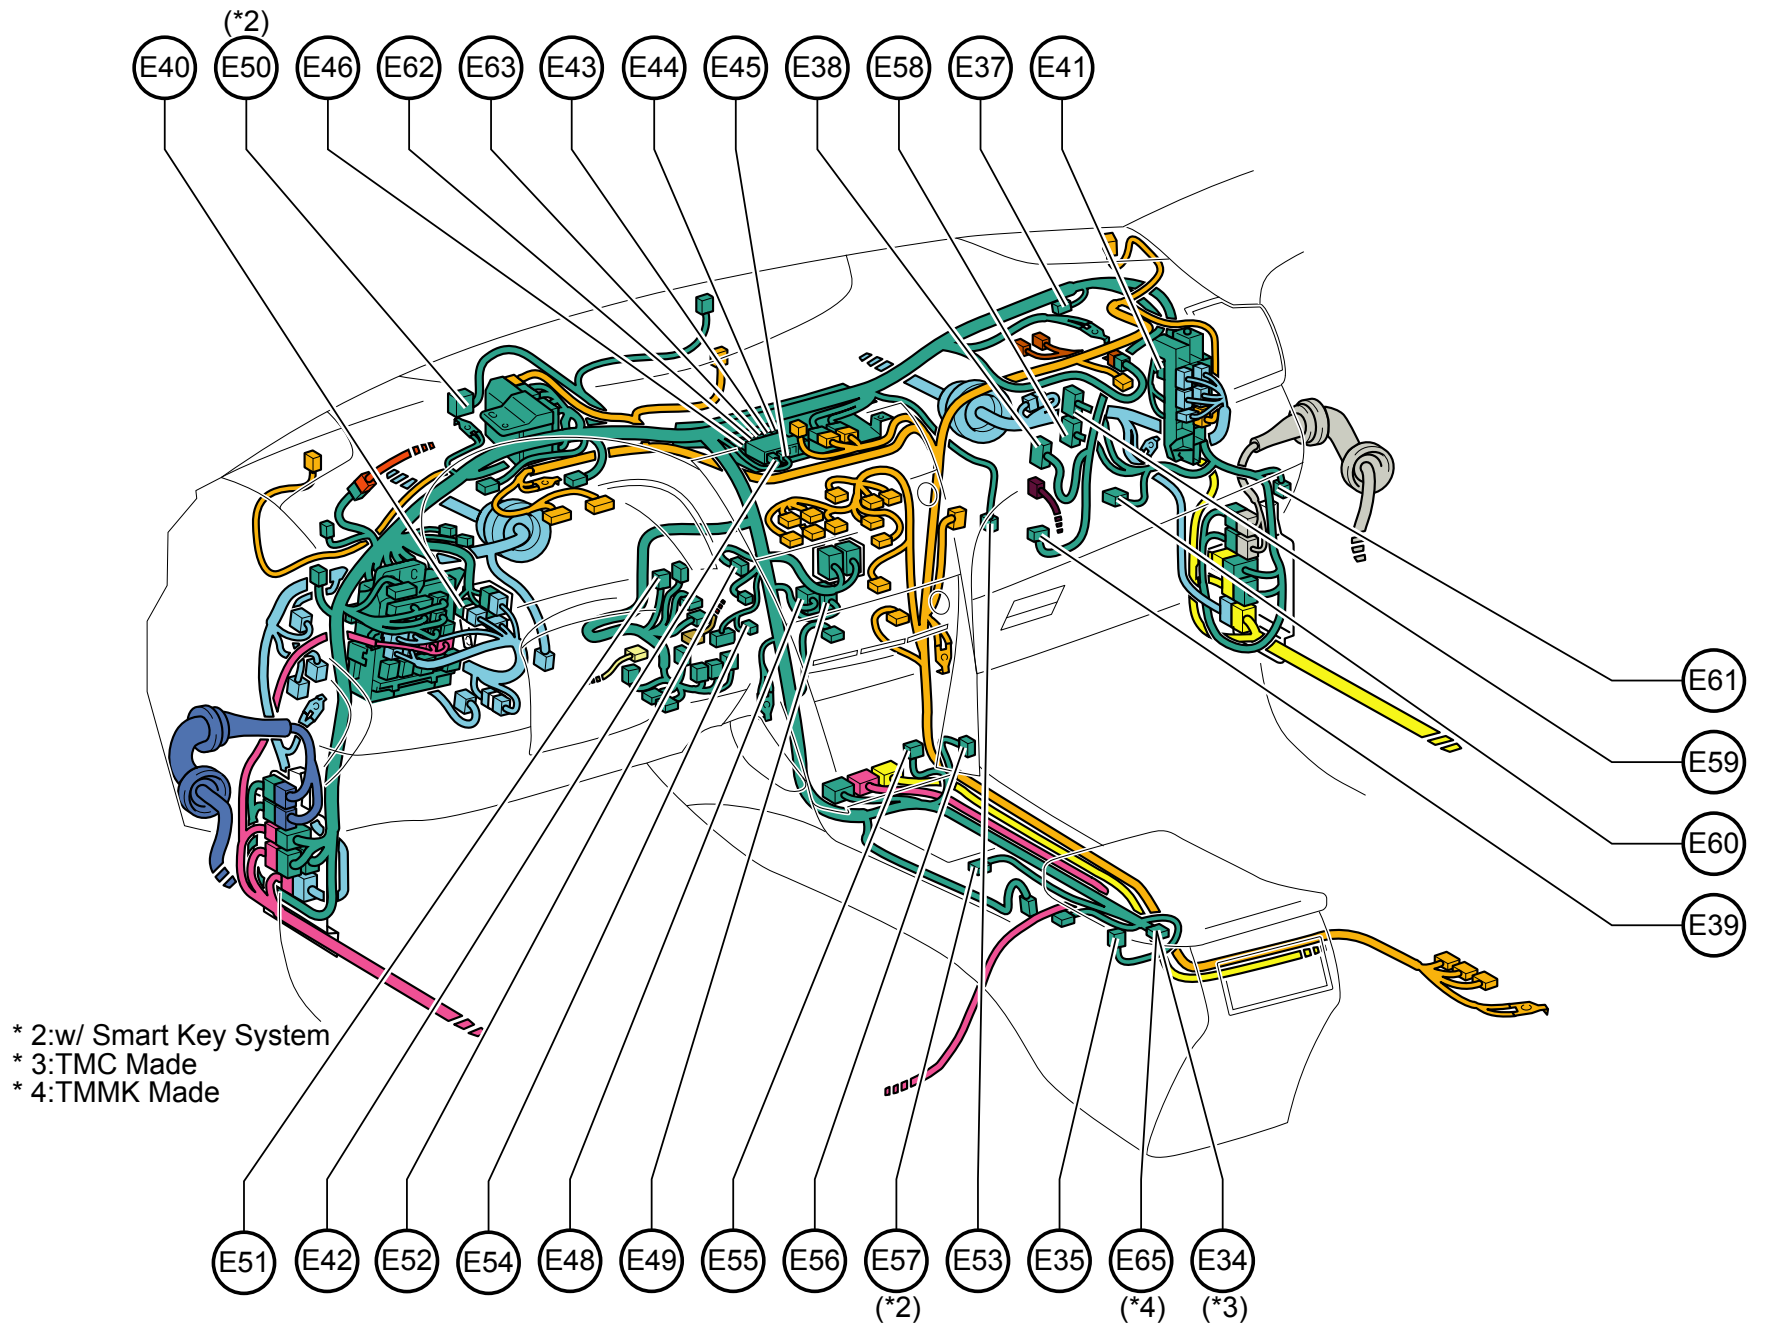
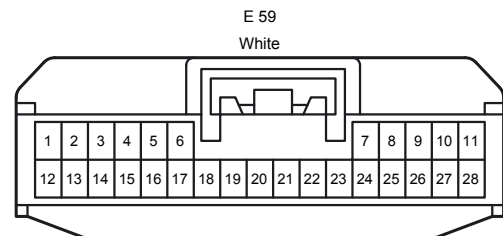
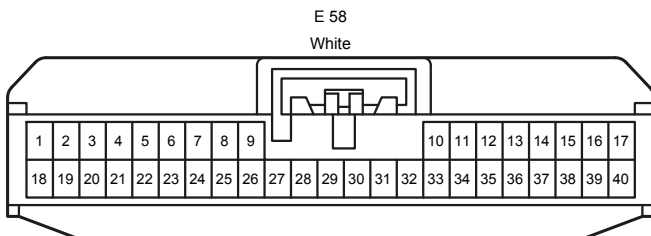
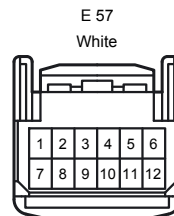
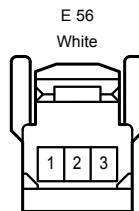
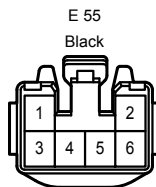
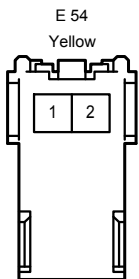

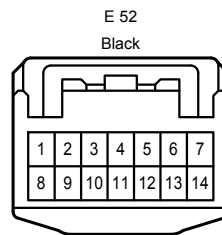
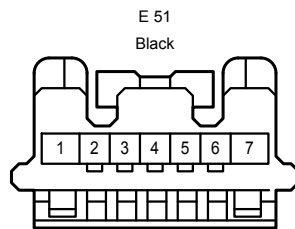
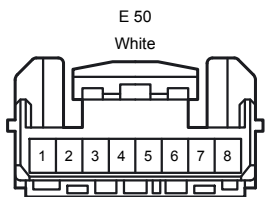
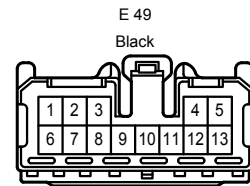
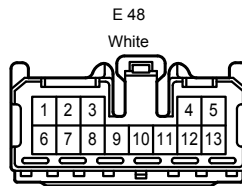

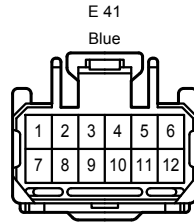
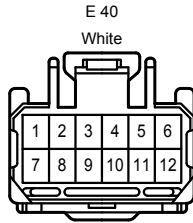
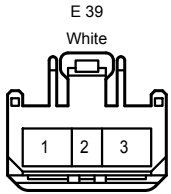
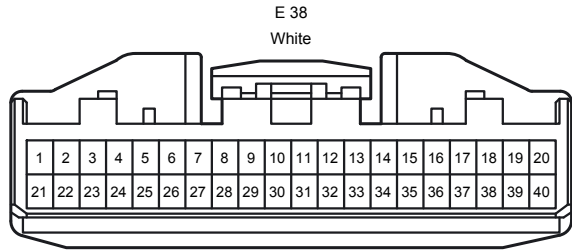



Position of Parts in Instrument Panel



- E 34 Yaw Rate Sensor
- E 35 Power Outlet Socket (Rear)
- E 37 Diode (Door Courtesy Front RH)
- E 38 A/C Amplifier
- E 39 Blower Motor
- E 40 Junction Connector
- E 41 Junction Connector
- E 42 Junction Connector
- E 43 Junction Connector
- E 44 Junction Connector
- E 45 Junction Connector
- E 46 Junction Connector
- E 48 Junction Connector
- E 49 Junction Connector
- E 50 ID Code Box
- E 51 Steering Lock ECU
- E 52 Power SW
- E 53 Tire Pressure Warning SW (Reset)
- E 54 Airbag Squib (Knee Airbag)
- E 55 Seat Heater SW
- E 56 Electrical Key Oscillator (Console)
- E 57 Shift Lock Control ECU
- E 58 Certification ECU
- E 59 Certification ECU
- E 60 Tire Pressure Warning ECU
- E 61 Option Connector (Bus Buffer)
- E 62 Junction Connector
- E 63 Junction Connector
- E 65 Yaw Rate Sensor

Position of Parts in Instrument Panel

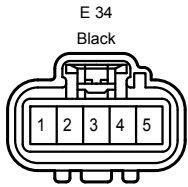

Position of Parts in Instrument Panel

