


POWER DISTRIBUTOR

DESCRIPTION

- The power distributor is built into the engine room relay block, and uses a small mechanical relay and semiconductor relay for a compact and lightweight design.
- The power distributor has a headlight control function. This function dims the headlights (Hi beam) in accordance with operation signals from the main body ECU while the daytime running light system is operating. For details, [see page BE-19](#).

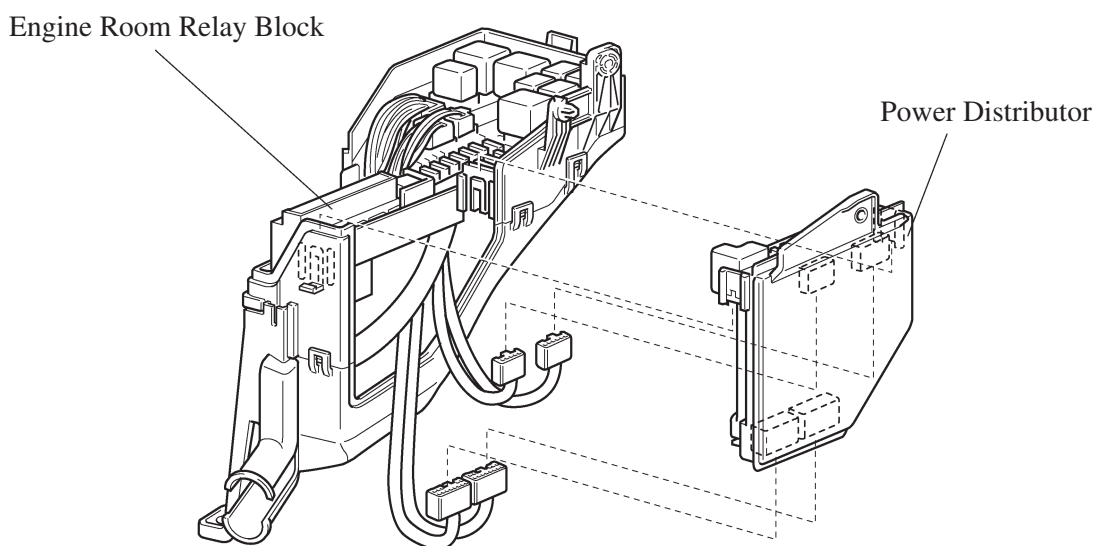

01YBE09Y

- The components of the power distributor are shown below.

Component	Relay
Mechanical Relay	• Horn Relay • A/F Relay • Security Horn Relay* • EFI Relay • Circuit Opening Relay • Headlight Relay (RH) • Headlight Relay (LH)
Semiconductor Relay	• Daytime Running Light Relay (Headlight HI Beam Relay)

*: Only for models with theft deterrent system