


DAYTIME RUNNING LIGHT SYSTEM

- A daytime running light system is designed to automatically illuminate the headlights (dimmed Hi beam), during the daytime to keep the car highly visible to other vehicles.
- The main body ECU and power distributor control this system. The main body ECU transmits a turn ON signal to the power distributor, and the power distributor illuminates and dims the Hi beam with the duty control.
- This system is enabled when the conditions given below are met:
 - Power Source: IG-ON*¹
 - Engine Speed Signal Input (Engine Running Condition)
 - Light Control Switch OFF*², TAIL, or AUTO position (if headlight-on control is not being performed by the automatic light control.)
 - Parking Brake Switch: OFF

*¹: The power source condition can be changed by operating the engine switch on models with the smart key system, and the ignition switch on models without the smart key system.

*²: Only for Canadian package models

► System Diagram ◀

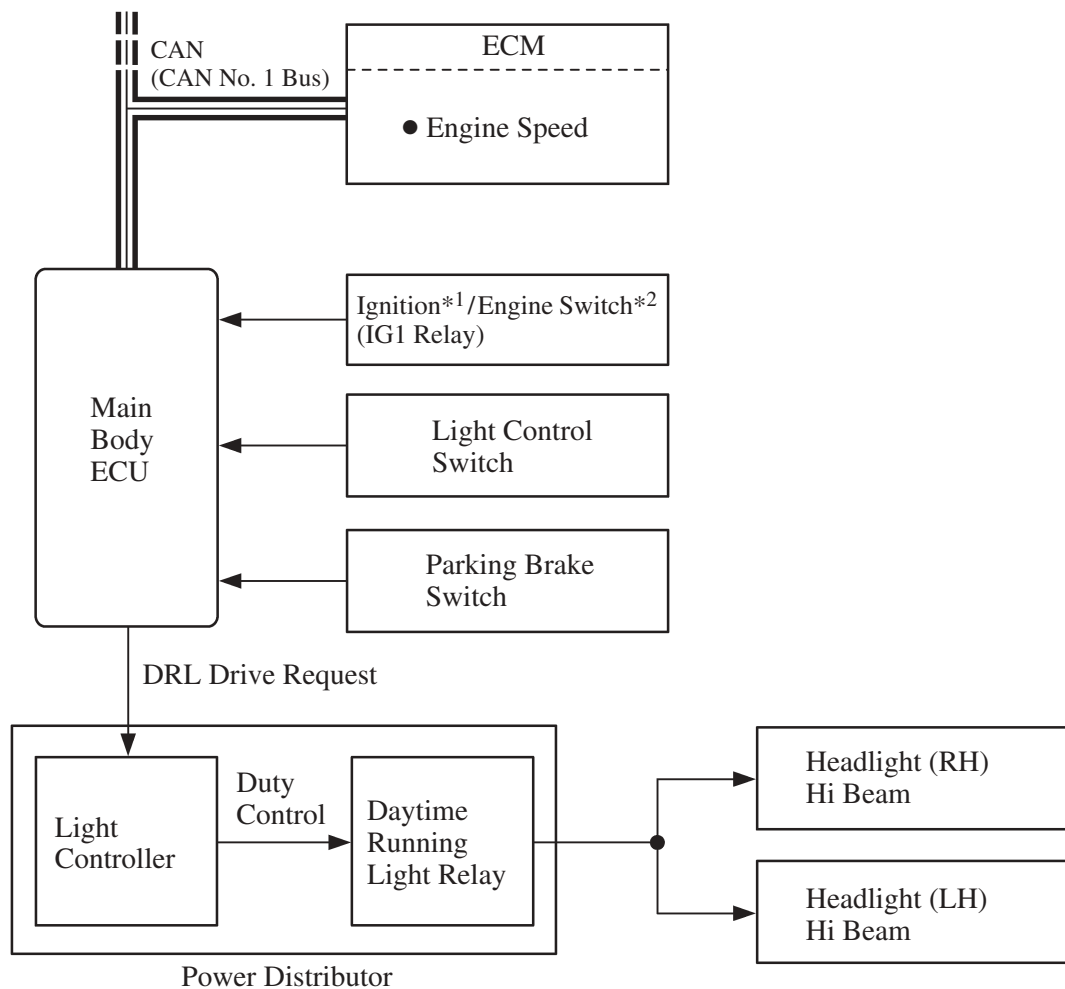

*¹: Models without smart key system

*²: Models with smart key system