


■ AUTOMATIC LIGHT CONTROL SYSTEM

- When the light control switch is in the AUTO position, the automatic light control system detects ambient light levels and controls the headlights and taillights (parking lights, taillights and license plate lights).
- The light control sensor detects the ambient light levels. This sensor is integrated into the solar sensor that is used for automatic air conditioning control on models with automatic air conditioning.
- The main body ECU controls this system.

► System Diagram ◀

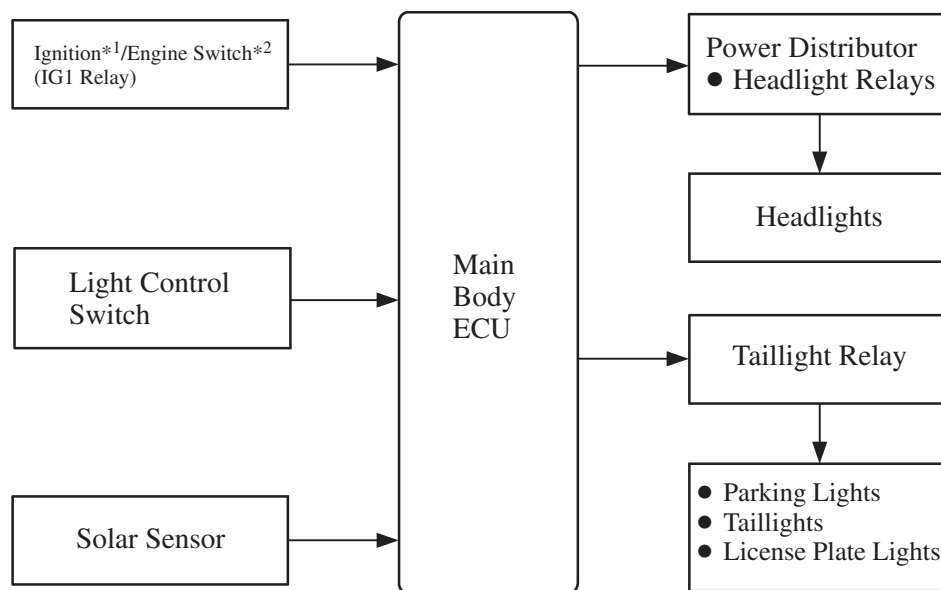

*1: Models without smart key system

*2: Models with smart key system

01YBE23P