

DOOR LOCK CONTROL SYSTEM

■ DESCRIPTION

The door lock control system has the following functions:


Function	Outline
Manual unlock prohibition function	Performing the door lock operation with a transmitter (wireless remote) or a key will prohibit the unlock operation by the door lock control switch (door mounted interior lock switch).
One-motion open	When the door is locked, this function enables the door to be unlocked by merely pulling the inside handle lever of the door.
Key-linked lock and unlock function	This function, which is linked with the door key cylinder, can lock or unlock all the doors when a lock or unlock operation is effected using the mechanical key.
Key confine prevention function	When the key is in the interior detection area (for models with smart key system) or the key is inserted into the ignition key cylinder (for models without smart key system), if the door lock operation is performed with the driver's door open, all the doors will be unlocked.
2-step unlock function* ¹	This function is provided to unlock the driver's door when the key is turned in the door lock cylinder the first time, and to unlock the remaining doors when it is turned the second time.
Shift-linked automatic door lock* ^{1,2}	When the conditions listed below are met, this function causes all the doors to be automatically locked. ● The engine is running. ● All doors are closed. ● The shift lever is moved to any position other than P.
Speed-sensitive automatic door lock* ¹	When the conditions listed below are met, this function causes all the doors to be automatically locked. ● Vehicle speed is higher than approximately 20 km/h (13 mph). ● All doors are closed. ● Any one of the doors in an unlocked state.
Shift-linked automatic door unlock* ^{1,2}	When the power source* ³ is ON, and the shift lever is moved to P position from any position other than P, and the vehicle speed is 16 km/h (10 mph) or less, all of the doors will be automatically unlocked.
Opening driver's door-linked automatic door unlock* ¹	All doors are unlocked automatically when the driver's door is opened within 10 seconds after the power source* ³ is changed from IG-ON to the ACC or OFF.

*¹: The setting function can be changed using the customized body electronics system. For details, refer to Customized Body Electronics System section on [page BE-13](#).

*²: Only for automatic transaxle models.

*³: Power source conditions can be changed by pressing the engine switch on models with the smart key system and by operating the ignition switch on models without the smart key system.

► System Diagram ◀

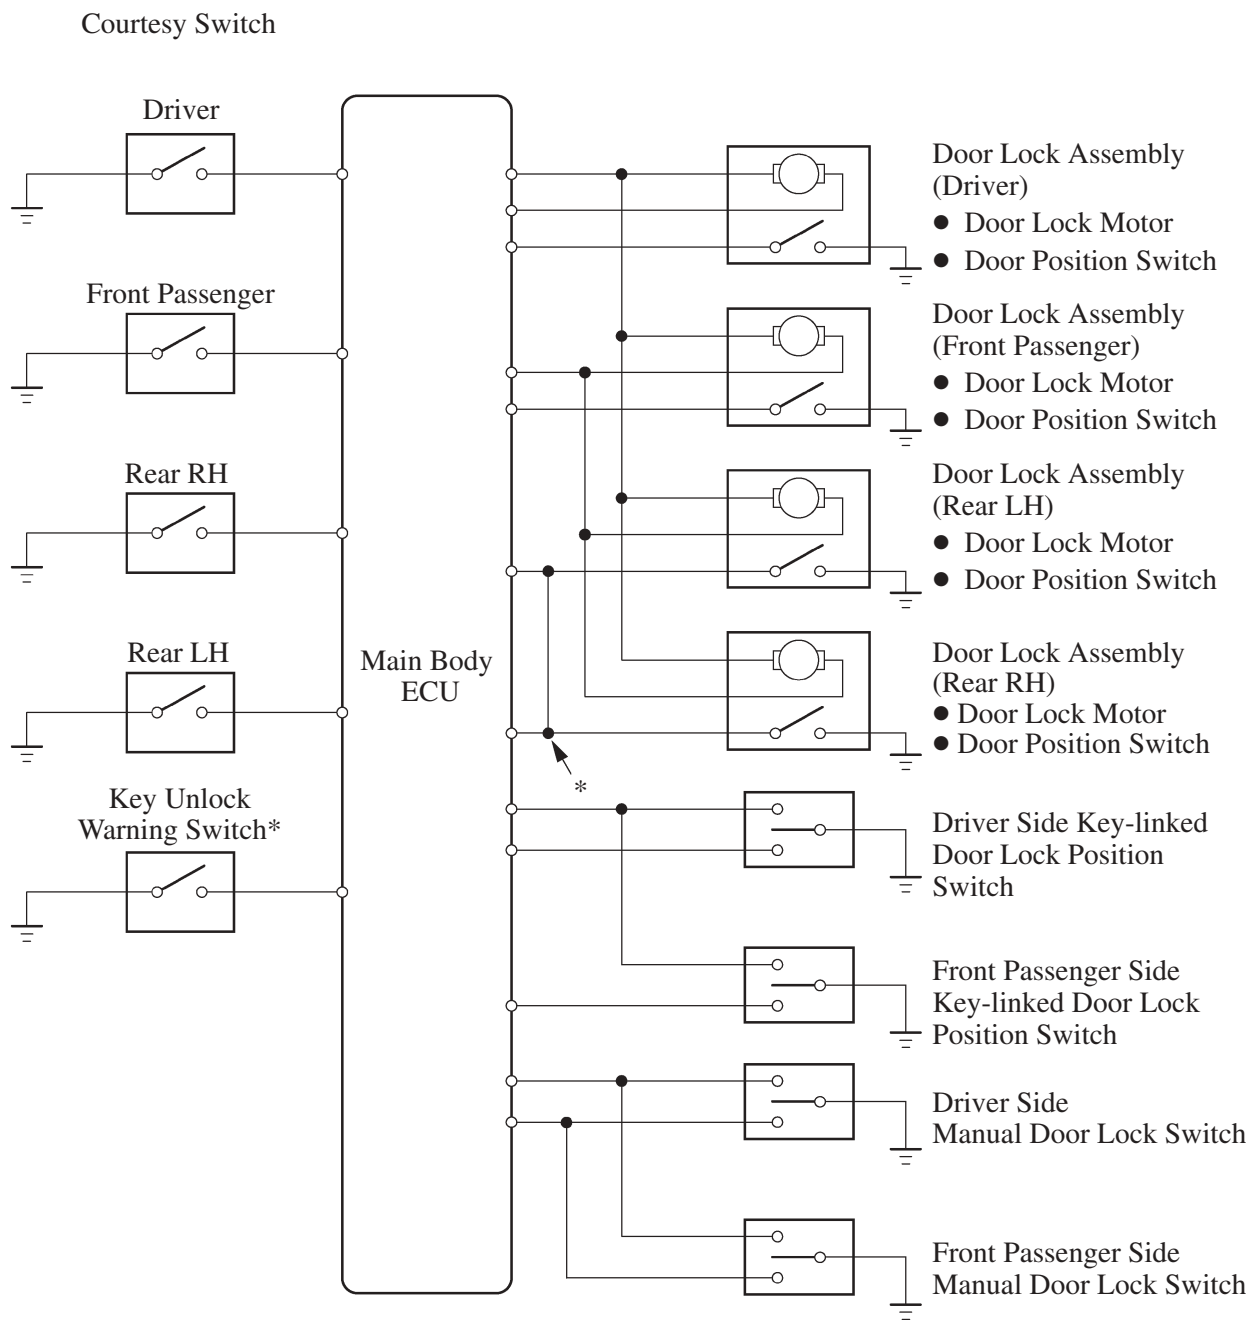

025BE78TE

*: Models without smart key system