


■ LAYOUT OF MAIN COMPONENTS

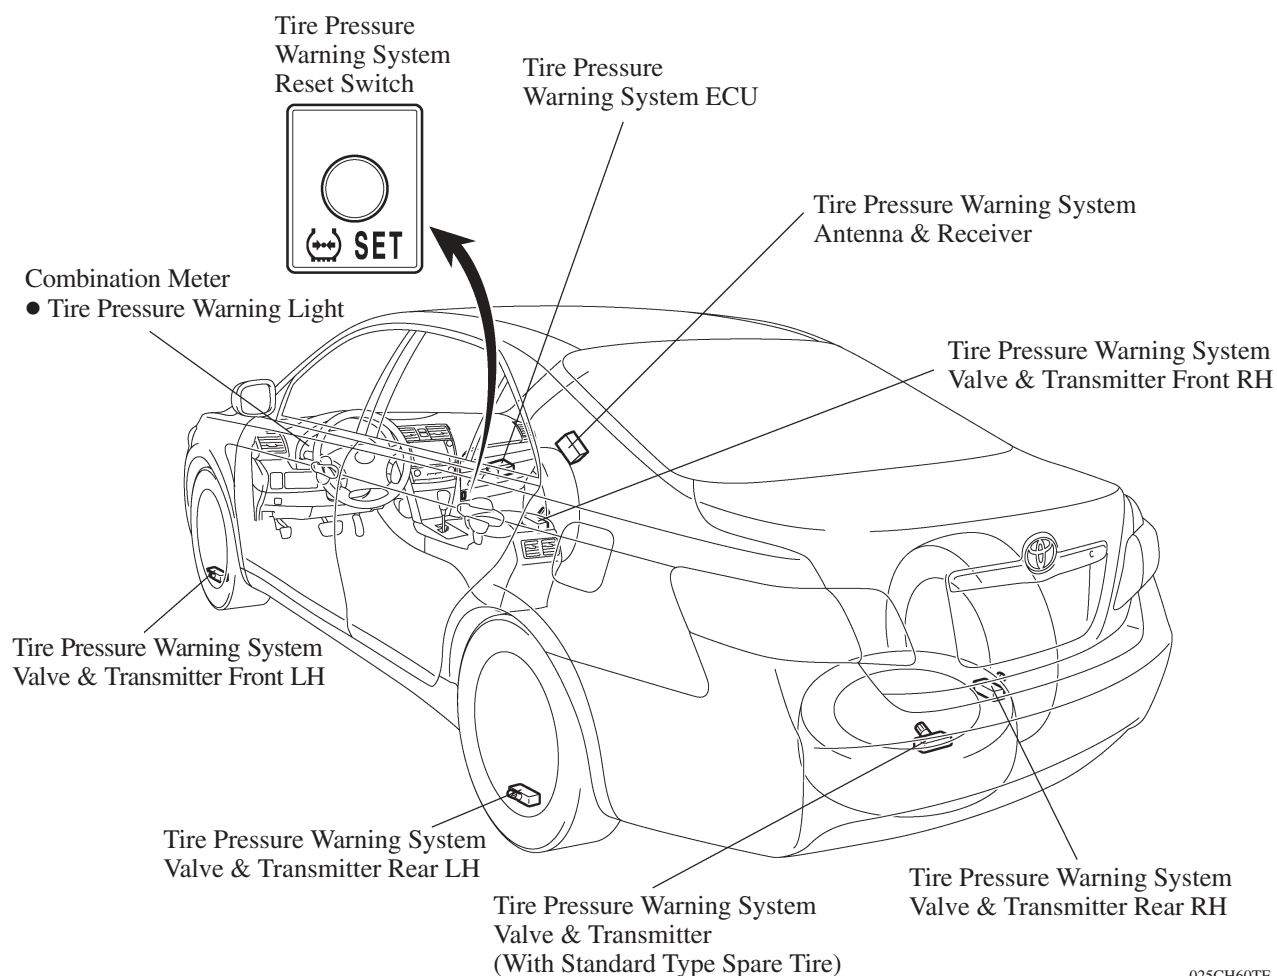

025CH60TE

■ FUNCTION OF MAIN COMPONENTS

Component		Outline
Combination Meter		Transmits the vehicle speed signal to the tire pressure warning system ECU for vehicle speed correction
	Tire Pressure Warning Light	● Turns ON or blinks to warn the driver in accordance with the signal from the tire pressure warning system ECU. ● Displays the 2-digit DTC (Diagnostic Trouble Code).
Tire Pressure Warning System Reset Switch		The appropriate air pressures of the tires currently mounted on the vehicle are stored in the tire pressure warning system ECU by operating the tire pressure warning system reset switch.
Tire Pressure Warning System Valve & Transmitter		Detects the inflation pressure and internal temperature of the tire and transmits the measured value and the ID number to the tire pressure warning antenna & receiver.
Tire Pressure Warning System Antenna & Receiver		Receives the tire pressure warning system valve & transmitter signal and transmits this data to the tire pressure warning system ECU.
Tire Pressure Warning System ECU		● Receives the data from the tire pressure warning system antenna & receiver and monitors the tire inflation pressure. ● When the tire pressure warning system ECU detects a drop in the tire inflation pressure or a system malfunction, it outputs the respective signal to the combination meter.