


Remote Control

The FYLA Boreal module can be controlled remotely via serial link (RS232), using the USB connector in the Rear Panel. Please follow the next steps to achieve the communication:

1. Connect the USB cable between the PC and Boreal after that the module is ready to be used.
2. Check the number of the COM port form: Control panel / Devices

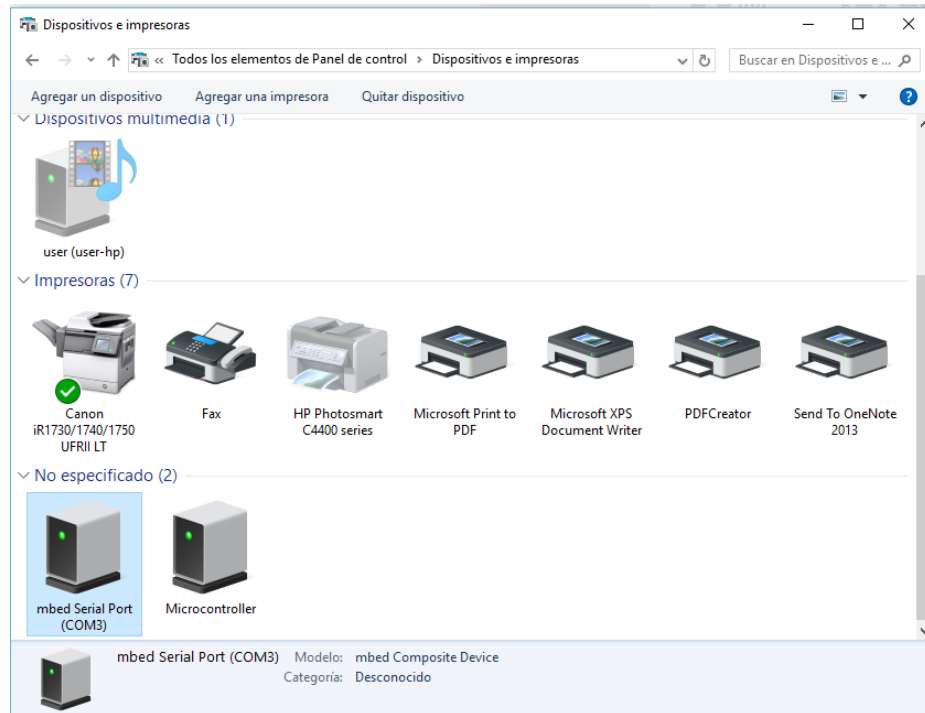


The USB port works in VCP (Virtual COM Port) mode. In case that after connecting the USB cable between the Boreal and your computer, it does not recognize the device as a COM Port, please download the VCP driver from the link below and install it.


[VCP Drivers - FTDI \(ftdichip.com\)](http://ftdichip.com)

Communication can be performed with any program of Terminal for RS232. In this case, we are using Windows HyperTerminal.

3. Open Windows Hyperterminal and create a new connection. The name of the connection is "FYLA TW" but you can choose another name.

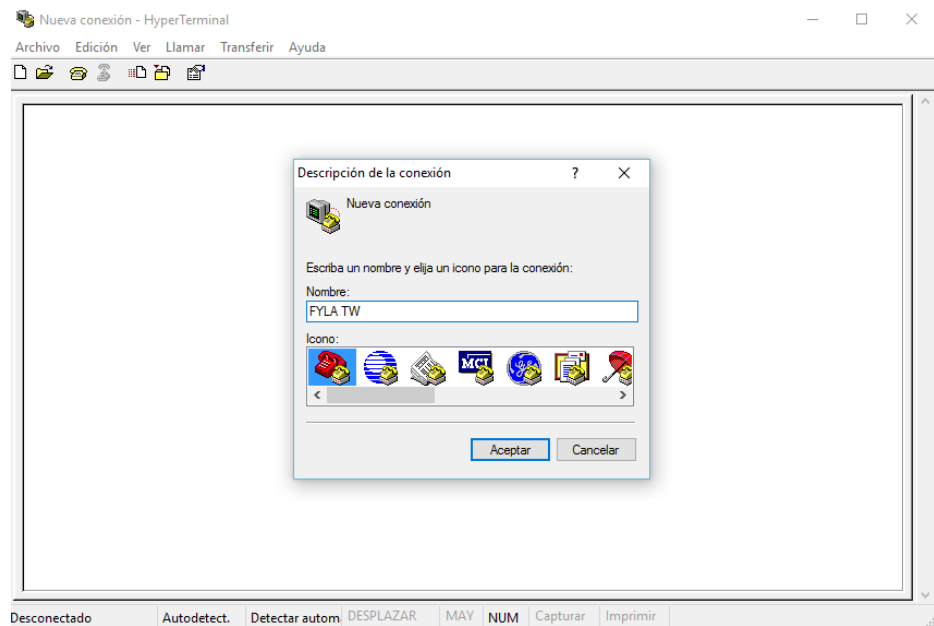

4. Select the detected Boreal COM port.

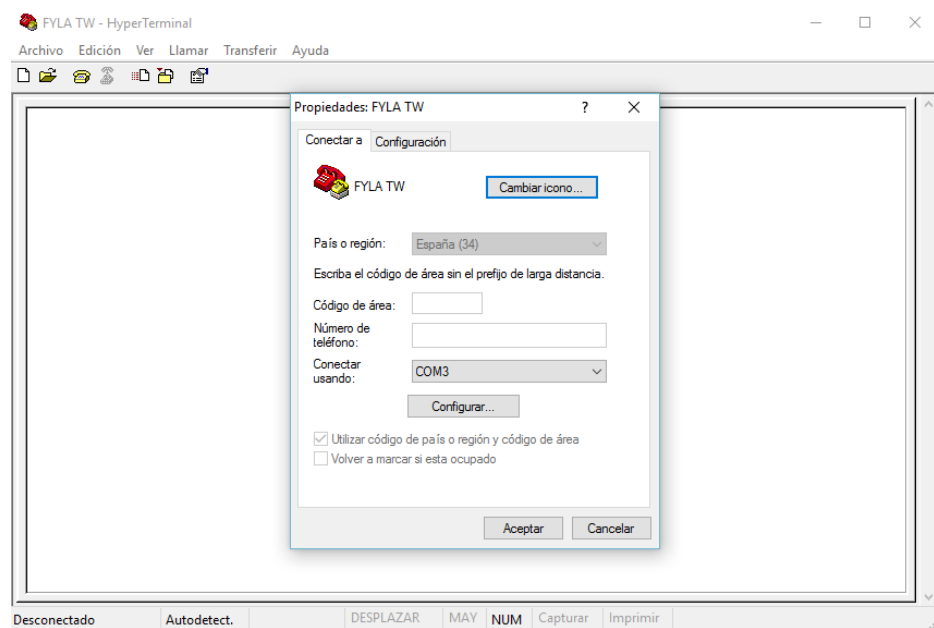

2. Next, introduce the port configuration and pulse Accept.

Bits por segundo: 19200


Bits de datos: 8

Paridad: Ninguno

Bits de parada: 1

Control de flujo: Ninguno

- At this point we should be connected to the FYLA TW (BOREAL). In case of not visualizing the introduced commands go to: File/Proprieties/Configuration/ASCII Configuration and mark the case near Eco of characters.

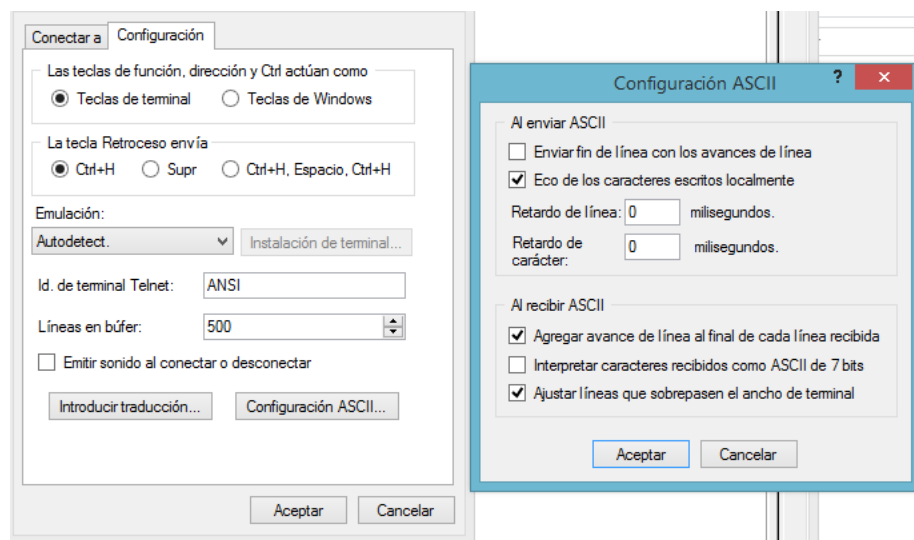

- Now the introduced commands should be visualized. Next write a command and press enter. Example: <set lambda min 550><enter>;<set lambda max 650><enter>. If the introduced command is accepted the FYLA BOREAL will answer with a “ok” via serial communication.

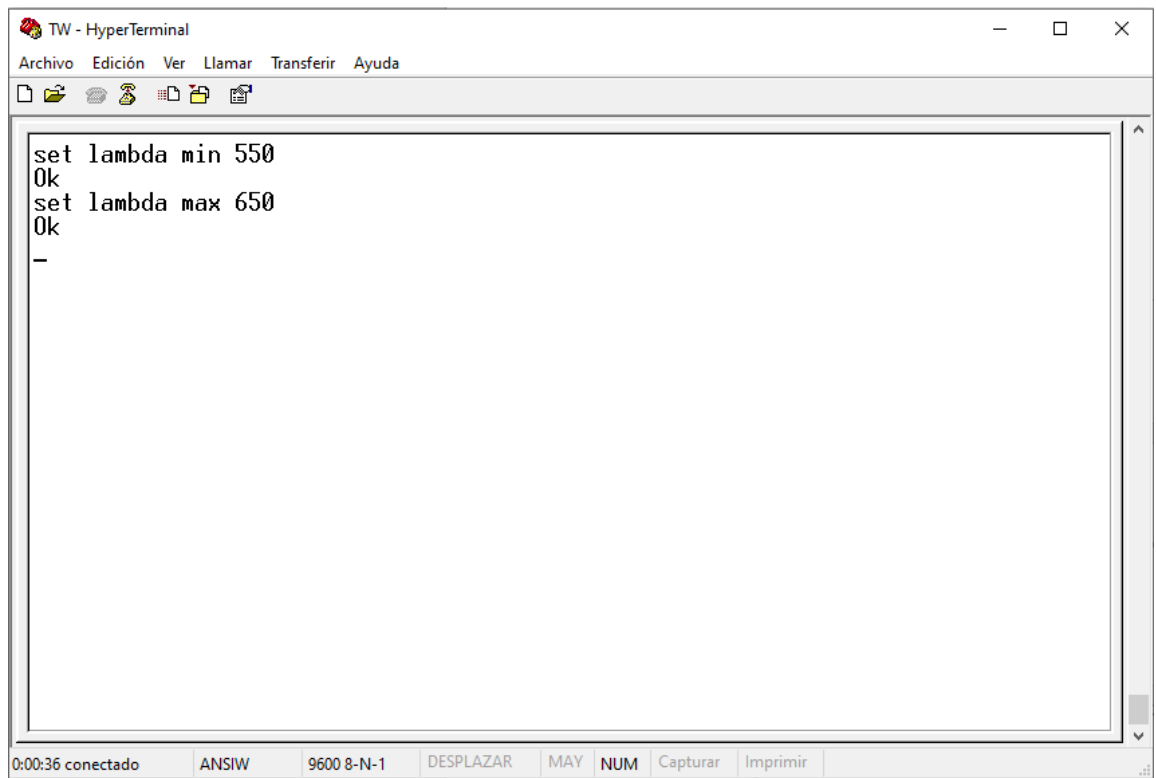


Fig 1. Example of introduced command

Commands List

Command	Parameter	Description
set lambda min xxx	Wavelength in nm.	Sets the lower bandwidth position to the indicated value. The value must be formed of three number.
set lambda max xxx	Wavelength in nm.	Sets the upper bandwidth position to the indicated value. The value must be formed of three number.
Ps1	--	Shows general information
home	--	Activates the system to go to the initial position.

PS1 return:

- 001: Device status.
- 002: Motor 1 position.
- 003: Motor 2 position.
- 004: Motor 3 position.
- 005: Lambda max.
- 006: Lambda min.
- 007: Interlock status.
- 008: Shutter status
- 009: HOME position Motor 1
- 010: HOME position Motor 2
- 011: Monitor error