
SHAFT KNOB SUBASSEMBLY

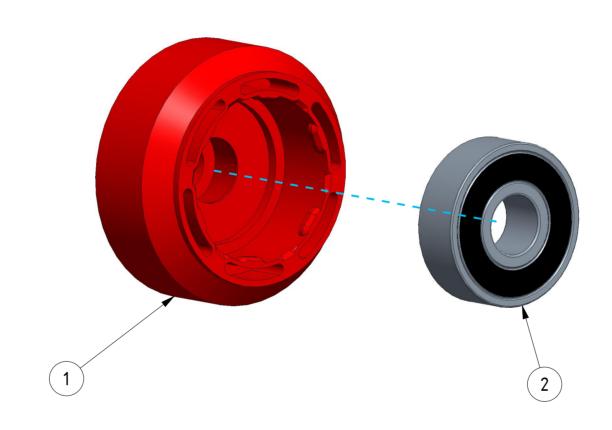

TEM NO	PART NUMBER	QTY	DESCRIPTION	NOTES
1	Shaft_knob	1	SHAFT KNOB	SHAFT_KNOB.STL
2	BEARING_608-2RS	1	BEARING 608-2RS	INSTALL AS SHOWN