


SM124-10E GMR Smart Magnetometer

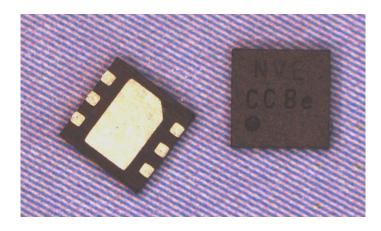

<u>Features</u>

- Sensitive (0 to 10 Oe / 0 to 1 mT linear range)
- Can detect magnets more than 50 mm away
- Slick, single-byte communication interface
- Analog field measurement plus on/off digital output
- Internal temperature compensation
- · Factory calibrated
- Programmable offset and gain correction
- Programmable I2C address
- In-plane sensitivity—more usable than Hall effect sensors
- Optional magnet temperature compensation
- 2.2 to 3.6 V supply
- 3.3 or 5 V compatible I²C interface
- Ultraminiature 2.5 x 2.5 x 0.8 mm TDFN6 package

Key Specifications

- 8 bit / 1% output resolution
- -40 °C to +125 °C operating range
- 5% FS accuracy for 0 to 85 °C
- 10 kSps sample rate for fast response

Applications

- Mechatronics
- Proximity sensing
- Level sensing
- Current sensing
- Security and intrusion detection
- Automotive applications
- · Cylinder position sensing

Description


SM124 Smart Magnetometers provide precise magnetic field measurements. The sensors combine Giant Magnetoresistance (GMR) sensor elements with easy-to-use digital signal processing.

Unlike awkward, old-fashioned Hall-effect sensors, GMR is sensitive in-plane for optimal current sensing and easy mechanical interfaces. GMR also provides more sensitivity, higher precision, higher speed, and lower noise than Hall.

A digital output provides precise, programmable thresholds. An I²C interface provides magnetic field data, as well as a calibration interface. The device is factory calibrated for high accuracy. Calibration coefficients are stored in internal nonvolatile memory.

All commands, data, and coefficients are a single byte, and a slick, elegant data structure lets you get up and running with a minimum of firmware.

Simplified Block Diagram

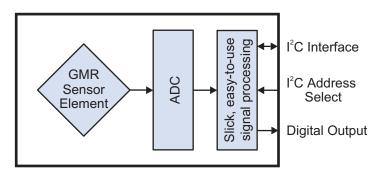

Transfer Functions

NVE Corporation







Absolute Maximum Ratings

| Parameter | Min. | Max. | Units |
|----------------------------|------|--------------------------|-------|
| Supply voltage | -0.3 | 4.2 | Volts |
| Output current | -100 | 100 | mA |
| SCL and SDA input voltages | -0.5 | $V_{cc} + 2.5$ up to 5.8 | Volts |
| Storage temperature | -55 | 150 | °C |
| ESD (Human Body Model) | | 2000 | Volts |
| Applied magnetic field | | Unlimited | Oe |





Operating Specifications

| T_{min} to T_{max} ; 2.2 < V_{DD} < 3.6 V unless otherwise stated. | | | | | | |
|--|---|----------------|-------|------|--------|--------------------------|
| General | Symbol | Min. | Тур. | Max. | Units | Test Condition |
| Operating temperature | T _{min} ; T _{max} | -40 | | 125 | °C | |
| Supply voltage | $V_{\scriptscriptstyle DD}$ | 2.2 | | 3.6 | V | |
| Supply current | $I_{\scriptscriptstyle m DD}$ | | 6 | 7 | mA | max. at $V_{DD} = 3.6V$ |
| Power-on Reset supply voltage | V_{POR} | | 1.4 | | V | |
| Brown-out power supply voltage | V_{BOR} | 0.75 | 1 | 1.36 | V | |
| Digital out high voltage | V_{OH} | $V_{DD} - 0.7$ | | | V | $I_{OH} = -5 \text{ mA}$ |
| Digital out low voltage | V_{oL} | 0.5 | | | V | $I_{OL} = 15 \text{ mA}$ |
| Magnetics | | | | | • | |
| Linear range | | 0 | | 10 | | Omnipolar |
| Saturation | | | 15 | | Oe | (fields of either |
| Resolution | δН | | 0.1 | | | polarity) |
| | | | | _ | | 0 to 85°C, |
| | | | | ±5 | ~ 50 | Unipolar |
| Accuracy (% of linear range) | | | | . 10 | % FS | -40 to 125°C, |
| | | | | ±10 | | Unipolar |
| Precision and Speed | | | | ı | L | |
| Resolution | | | ±1 | | % | |
| Digital precision | | | 7 | | bits | |
| Sample rate | | | 10 | | kSps | |
| Output response time | | | 85 | | μs | |
| Start-up time | T_{sta} | | 15 | | ms | |
| Internal Temperature Sensor | | | | | | |
| T | | | | ±2.5 | °C | 25 to 85°C |
| Temperature accuracy (factory calibrated) | | | | ±5 | °C | −40 to 125°C |
| I ² C Interface | | | | | | |
| Data transfer rate | DR | | | 400 | kBaud | |
| Bus voltage | $V_{\scriptscriptstyle BUS}$ | 2.2 | | 5.5 | V | |
| Output response and transmission times | | | | 20 | μs | 400 kBaud |
| Low level input threshold voltage | V_{IL} | 0.8 | | | V | |
| High level input threshold voltage | V_{IH} | | | 2.2 | V | |
| Low level output current | I_{OL} | 3 | | | mA | $V_{OL} = 0.4V$ |
| I/O capacitance | C _{I/O} | | | 10 | pF | |
| RAM Timing | | | | | | |
| Address setup time | $t_{ m ADDR}$ | 3 | | | μs | |
| Data read time | t _{READ} | 10 | | | μs | |
| Nonvolatile Memory Characteristics | | | | | | |
| Address setup time | $t_{ m ADDR}$ | 3 | | | μs | |
| Data read time | t _{READ} | 10 | | | μs | |
| Data write time | t _{NVM} | 20 | | | ms | |
| Endurance | | | 10000 | | Cycles | |
| Package Thermal Characteristics | | | | | | |
| Junction-to-ambient thermal resistance | $\theta_{\scriptscriptstyle \mathrm{JA}}$ | | 320 | | °C/W | |
| Package power dissipation | | | 500 | | mW | |



SM124 Overview

Direction of Magnetic Sensitivity

As the field varies in intensity, the digital output will turn on and off. Unlike Hall effect and other sensors, the direction of sensitivity is in the plane of the package. The diagrams below show two permanent magnet orientations that will activate the sensor in the direction of sensitivity:

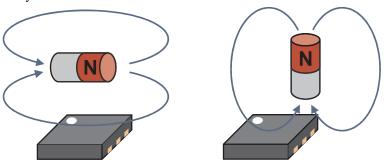


Figure 1. Direction of magnetic sensitivity.

The axis of sensitivity is in the pin 2 to pin 5 sensor axis, which is ideal for position sensing or current sensing so a current-sensing trace can be run under the sensor without crossing the pins. These sensors are "omnipolar," meaning the output is positive for either magnetic polarity, simplifying systems where the magnetic polarity is not known.

Typical Operation

Position Sensing

A typical proximity sensor using an SM124-10E sensor and magnet is shown below. With a 4 Oe operate point, the sensor actuates with a rare-earth magnet at more than 50 mm (two inches) from the sensor:

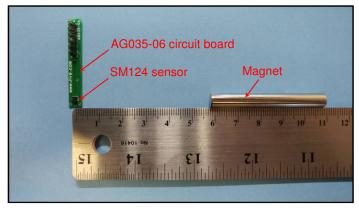


Figure 2. The SM124-10E sensor can be activated by a magnet more than 50 mm away. Maximum sensitivity is in plane with the sensor, with the magnet axis in the pin 2/pin 5 sensor axis.

The part is sensitive to either north or south fields.

Thresholds even lower than 4 Oe can be programmed, although care must be taken to account for the earth's magnetic field, which is typically in the 0.5 Oe range.

Typical magnetic operate distances for the SM124 is illustrated in the following graph with a small, inexpensive ceramic disk magnet:



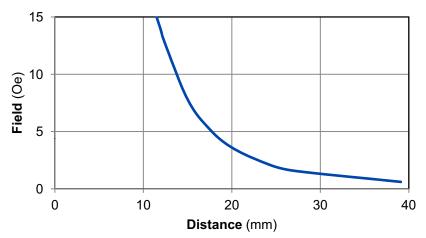


Figure 3. Field vs. distance from the center of the sensor (NVE part number 12216 ferrite magnet; 6 mm dia. x 4 mm thick; C1/Y10T; M_s = B_r =2175 G).

Larger and stronger magnets allow farther operate and release distances. For more calculations, use our axial disc magnetic field versus distance Web application at:

www.nve.com/spec/calculators.php#tabs-Axial-Disc-Magnet-Field.

Noncontact Current Sensing

SM124 sensors can measure the current through a circuit board trace by detecting the magnetic field generated by the current through the trace. The sensor is ideal for these applications because of the low fields generated. The digital output can be used for current threshold detection or overcurrent protection.

Typical current sensing configurations are shown below:



Figure 4a. 0.05" (1.3 mm) trace on top of PCB (2.8 Oe/amp; 0 to 3.5 A linear range).



Figure4b. Five-turn, 0.0055" (0.14 mm) trace on top of PCB (14 Oe/amp; 0 to 700 mA linear range).



Figure 4c. 0.5" (13 mm) trace on bottom of 0.15" (3.8 mm) thick PCB (0.4 Oe/amp; 0 to 30 A linear range).



For the geometry shown below and narrow traces, the magnetic field generate can be approximated by Ampere's law:

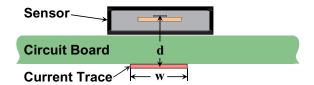


Figure 5. The geometry of current-sensing over a circuit board trace.

$$H = \frac{2I}{d}$$
 ["H" in oersteds, "I" in amps, and "d" in millimeters]

For traces on the top side of the board, "d" is simply the distance of the sensor element from the bottom of the package, which is 0.5 millimeters.

Traces on the top side of the board are typically used for currents of five amps or less. Large traces on the bottom side of the PCB can be used for currents of up to 30 amps.

More precise calculations can be made by breaking the trace into a finite element array of thin traces, and calculating the field from each array element. We have a free, Web-based application with a finite-element model to estimate magnetic fields and sensor outputs in this application:

www.nve.com/spec/calculators.php#tabs-Current-Sensing



Operation

A detailed block diagram is shown below:

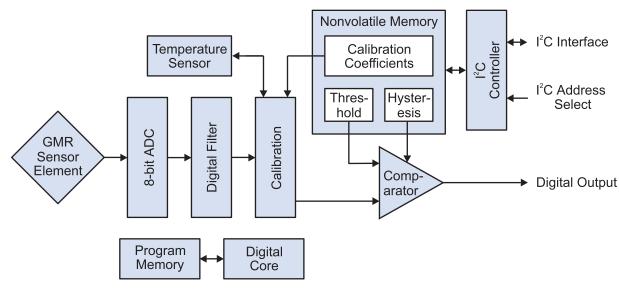


Figure 6. Detailed block diagram.

Sensor Element

SM124 sensors use unique GMR sensor elements that are inherently high sensitivity, high speed, and low noise.

ADC

The sensor output is digitized with an eight-bit ADC.

Digital Filter

A first-order Infinite Impulse Response (IIR) digital filter with a programmable cutoff frequency can be used for ultralow noise if high-frequency operation is required. The factory default is the filter turned off.

Single-Byte Addresses, Data, and Parameters

All data and parameters are input and output as single bytes (eight bits). This provides at least 1% precision while eliminating the need to concatenate upper and lower bytes.

No Communications Overhead

Data are always valid, so there is no need to wait for data during an I²C read, and there are no set-up commands or error handling required.

Sensitivity and Offset Calibration

The sensor element is factory calibrated for sensitivity, offset, linearity, and temperature compensation. The user can also calibrate the output for a particular system.

A sensor calibration curve is illustrated below:



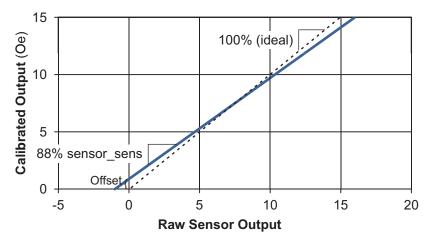


Figure 7. Illustrative sensor calibration curve.

There are two sensor calibration parameters, sensitivity and offset. Sensitivity is expressed as a percentage of nominal; offset is expressed as bits out of seven bits full scale. Calibration parameters are stored in nonvolatile memory, and can be read or written via I²C.

Mathematically, the corrected sensor output is calculated as follows:

sensor = ((temperature)*tempco/100000+1)*(sensor_raw))/sensor_sens- sensor_offset

where "sensor" is the corrected sensor output, "temperature" is the measured temperature in °C, and the other operands are parameters provided from factory calibration. "tempco" is expressed in %/1000°C and as a positive number for convenience although GMR actually has a negative temperature coefficient, meaning it is less sensitive at higher temperatures.

Magnet Temperature Compensation

There are optional magnet temperature profiles that also compensate for the loss of magnetic field strength as temperature increases. Two profiles are available: one for low-cost ferrite magnets and another for high field rare-earth magnets. Writing to address 0x2B sets the compensation profile: "0" is the default profile and provides no magnet temperature compensation; "1" compensates for ceramic or ferrite magnets, and "2" compensates for NdFeB or rare-earth magnets.

Temperature Sensor

An internal temperature sensor is used to compensate the sensor element, and the temperature sensor itself is factory calibrated for slope and offset. Like magnetic field, temperature can be read via I²C and can also be user calibrated.

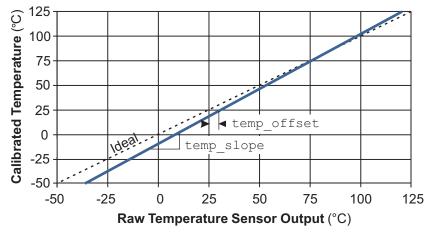


Figure 8. Temperature sensor calibration.



Mathematically, temperature is corrected as follows:

temperature = (temperature_raw)*100/temp_slope+temp_offset

where "temp_offset" is the temperature error at 0°C (positive indicating the sensor reads low); and temp_slope is the temperature sensor sensitivity expressed as a percent of ideal; greater than 100% indicates the sensor reads high.

Comparator and Digital Output

A digital comparator drives a CMOS Digital Output ("DOUT")

Default Mode

By default, DOUT goes HIGH when the sensor field exceeds a threshold (THRSH; also known as THRSH_L), then LOW when the field magnitude drops below the threshold minus hysteresis as illustrated below:

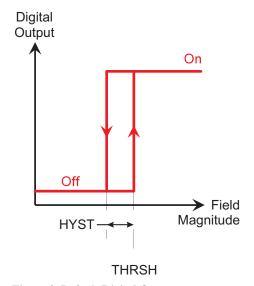


Figure 9. Default Digital Output parameters.

THRSH_L provides the threshold in this mode. THRSH_H is unused in this mode, and can be set to 255 (dec).

Latching Mode

In the default mode (THRSH_H = 255) with HYST greater than THRSH, DOUT will latch ON when the field exceeds the threshold. A HYST value of 255 (dec) can be used to ensure the latching mode. The output can be reset by setting it to zero via I²C or by cycling the sensor power. Latching mode can be used to implement a "virtual circuit breaker" for overcurrent protection.



Window Comparator Mode

(Note: The Window Comparator Mode is only available in sensor lot codes 1932xx and higher.)

Using two thresholds (THRSH_L and THRSH_H) can be used to simulate a window comparator:

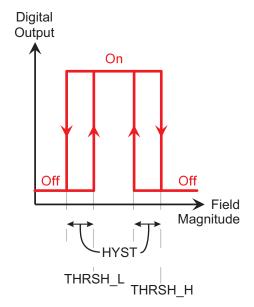


Figure 10. Window comparator mode.

Operation is the same for positive or negative fields, since the sensor is sensitive to field magnitude, not polarity.

Digital Output Operation

NVE Corporation

Unlike some other parts, the digital output is continuously updated at high speed and runs independently of the I²C interface. The SM124 can therefore be used with factory defaults or customer programmed Digital Output parameters without an I²C connection.

Threshold and hysteresis parameters are expressed as percentages of the sensor's linear range and are stored in nonvolatile memory. Threshold parameters can be set once for the life of the device if desired.

The "DOUT_invert" parameter can be set to invert DOUT. DOUT is a high-current push-pull output, with especially high current-sinking capability. Inverting DOUT and connecting an LED, relay, or other load between $V_{\tiny DD}$ and DOUT takes advantage of the Digital Output's strong current-sinking capability.



Graceful Saturation

Unlike other magnetic sensor technologies, GMR sensing elements gradually saturate at high fields, rather than suddenly becoming unresponsive. This allows over-field sensing if high accuracy is not required, such as detecting tamper fields or high fault currents. The linear range is up to 10 Oe, which corresponds to an output value of 100, but the sensor typically does not saturate until 15 Oe and the digital resolution extends to 255, which allows measurements all the way to saturation.

The typical magnetic response is illustrated below:

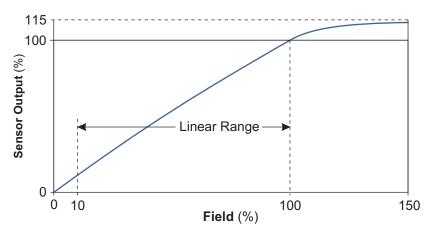


Figure 11. Graceful sensor saturation.





Temperature Compensation

SM124 sensors compensate for an inherent slight decrease in GMR sensitivity with temperature. Each sensor is factory calibrated and does not normally need to be recalibrated. If necessary, however, the temperature coefficient can be rewritten, or the user's sensor system can be calibrated based on a coefficient incorporating the change in magnet strength with temperature.

The sensor also has built-in options to compensate for magnet strength degradation with temperature using established residual induction temperature coefficients. Two corrections are available: one for ferrite ceramic magnets, and the other for neodymium rare-earth magnets.

Restoring Factory Calibration

Writing a "1" to sensor memory location 0x7 restores factory calibration settings. This does <u>not</u> change the I²C address back to the factory default.

I²C Interface

The I²C interface is an industry standard full-duplex 400 kHz connection with the sensor as the slave. I²C Data (SDA) and Clock (SCL) are 3.3- and five-volt compliant. Consistent with industry practice, SDA is open-drain, and a pull-up resistor to V_{DD} is normally needed.

A schematic of a typical 3.3- or five-volt microcontroller interface is show in the "Typical Circuit" section of this datasheet.

Factory Programming

Factory programming of any parameters is available Contact us for specifics.





Applications Information

Minimizing Noise

Several steps allow taking advantage of the SM124's inherent low noise:

- V_{DD} should be bypassed with a 1 μF/6.3 V capacitor (preferably nonmagnetic) as close as possible to the V_{DD} and GND pins.
 10 μF can be used in noisy environments or if the capacitor can't be located close to the sensor. Inadequate bypassing can cause noise or anomalous device behavior.
- Use a circuit board ground plane.
- If the sensor is not being used for current over trace sensing, ground the sensor's center pad so the leadframe acts as a shield.

Minimizing Magnetic Interference

Several precautions can be taken for applications that need maximum accuracy:

- Components such as resistors and capacitors can be slightly magnetic, and should be located away from the sensor if possible.
- Moving the bypass capacitor away from the sensor may lead to noise problem, but a larger bypass capacitor (e.g., 10 μF) can often compensate for longer traces.
- If components must be located near the sensor, ultrasmall components such as 0201 (0603 metric) contain less ferromagnetic
 material than larger components.
- Nonmagnetic resistors and capacitors can be used for extremely sensitive applications. Nonmagnetic 1 μF capacitors may not be available, but a 0.1 μF bypass capacitor can be used in applications not subject to significant noise.

Changing the I²C Address in Nonvolatile Memory

The default I²C address is stored in nonvolatile memory, and can be changed like any other parameter. The I2CADDR pin (pin 1) should be left floating or connected to VCC to select the user-programmed address. The I²C standard reserves certain addresses, so recommended I²C addresses are 16 to 238 (0x10 to 0xEE hex).

Note that if there are multiple SM124s on the same I²C bus there will be a collision before addresses can be changed. Therefore changing the address in this way may require a single-sensor programming setup.

Overriding the I²C Address with an External Jumper

Grounding the I²C address override pin ("I2CADDR"; pin 1) changes the I²C address to 16 dec regardless of the programmed address. Leaving the pin open or tied HIGH invokes the I²C address in nonvolatile memory, which is 72 dec by default but can be reprogrammed by the user in memory location 0x04. The pin is checked only on power-up.

Eight-Bit I²C Address

In accordance with industry standards, SM124 sensors have eight-bit I²C addresses (seven bits plus an R/W bit). Some I²C Master devices (such as Arduinos) send seven-bit addresses. In this case, the SM124 address should be divided by two, so for example a default I²C address of 36 rather than 72 would be used.





Elegant Architecture

The SM124 uses a unique "Von Neumann" architecture where all data and parameters are written and read from memory. This eliminates the need for explicit commands. In addition, all data and coefficients are just one byte, which dramatically simplifies firmware, streamlines system development, and allows high-speed communication over a simple two-wire I²C interface.

Reading and Writing the Sensor Memory

Data is read by first writing an address byte to the sensor (with the I²C Read/Write bit set to "Write"). Subsequent I²C read commands will return the data or parameter in the active address. The address does not need to be re-sent before every read, so data can be read repetitively with only a single-byte read.

The default memory address is 0, which is the calibrated sensor output, so "out of the box" the sensor output can simply be retrieved with I²C read commands.

Reading from unsupported addresses will return 0xFF; writing to unsupported addresses has no effect.

Phone: (952) 829-9217





Memory Allocation

| | Symbol | Default | Read/ Write | Range | Address | Description |
|---|---------------|---------|----------------|--------------------------------|--------------|--|
| RAM (0x hex) | | | | | | |
| Sensor (calibrated) | Sensor | | R | 0 - 255 | 0x00 | 100 = 10 Oe / 1 mT |
| Sensor (uncalibrated) | Sensor_Raw | | R | -128 - 127 | 0x01 | Raw bridge output, unsigned. Wraps on overflow. |
| Temperature | Temperature | | R | -128 - 127 | 0x02 | °C |
| Digital output | DOUT | | R/W | 0 – 1 | 0x03 | Writing resets the output if latched |
| I ² C address | I2CADDR | | R/W | 16 to 238 (0x10 to 0xEE) | 0x04 | I2CADDR with pin 1 floating or HIGH |
| Factory setting restore | | | R | 0 – 1 | 0x05 | Writing a "1" restores factory settings |
| Nonvolatile Memory (2x hex) | | | | | | |
| Default Mode Digital Output threshold, or lower threshold in window comparator mode | THRSH_L | 100 | R/W | 1 – 255 | 0x20 | 100 = 10 Oe / 1 mT |
| Higher Digital Output threshold (window comparator mode only) | THRSH_H | 255 | R/W | 1 – 255 | 0x21 | 255 if not used |
| Magnetic threshold differential | HYST | 10 | R/W | 0 – 127 | 0x22 | 100 = 10 Oe / 1 mT; 255 invokes latching |
| Digital Output invert | DOUT_invert | 0 | R/W | 0 – 1 | 0x23 | HIGH to invert DOUT |
| Sensor offset | sensor_offset | 0 | R/W | -128 - 127 | 0x24 | |
| Sensor sensitivity | sensor_sens | 100 | R/W | 0 - 256 | 0x25 | % of max. |
| Temperature coef. of sensitivity | tempco | 100 | R/W | 0 - 256 | 0x26 | % of max. |
| Temperature sensor offset | temp_offset | 0 | R/W | -128 - 127 | 0x27 | °C |
| Temperature slope | temp_slope | 100 | R/W | 0 - 256 | 0x28 | Temp. cal. curve (%) |
| Digital filter constant | m | 1 | R/W | 1 – 127 | 0x29 | $f_{\text{CUTOFF}} = f_{\text{SAMPLE}}/(2\pi \text{ m});$ $f_{\text{SAMPLE}} = 10 \text{ kSps}$ m = 1 disables filter |
| I ² C pull-ups enabled | | 1 | R/W | 0 – 1 | 0x2A | 1 = enable pull-ups (no pull-ups on Master); 0 = disable pull-ups (pull-ups on Master) |
| Magnet temperature compensation profile | magnet_comp | 0 | R/W | 0-2 | 0x2B | 0 = no compensation 1 = ceramic magnet 2 = NdFeB magnet |
| Read-Only Memory (8x hex) | | | | _ | | , |
| | YY | | | | 0x80– x81 | ASCII date code in the form YYWWXX, where: YY = year; |
| Lot code | ww | N/A | R | N/A (ASCII) | 0x82- x83 | WW = work week; XX = internal code. |
| | XX | | | | 0x84- x85 | The left-most character is in address 0x80 and the right-most in 0x85. |

Table 2. SM124 memory addresses.



Power-Up and Initialization; What's Nonvolatile and What's Not

The above table is grouped into nonvolatile and nonvolatile.

All *parameters*, including Thresholds, Hysteresis, and Magnet Temperature Compensation, are nonvolatile so they can be set once via I²C, and then used without a microcontroller.

Measured and calculated *data* such as magnetic field and temperature are indeterminate until the first readings after power-up.

The default memory address is not preserved after power-down, and defaults to 0 (the calibrated magnetic field). The active address remains until it is changed, so multiple reads of the same address do not require writing the address before each read.

DOUT is not saved but initializes in the low field state. This ensures it will not be "latched" initially when used in the latching mode.

Digital Filter

The digital filter is an Infinite impulse response (IIR), weighted running average filter, where the filtered output is calculated as follows:

$$H_{\rm n} = \frac{1}{m} H + \frac{m-1}{m} H_{\rm n-1}$$

Where H = is the measured magnetic field; $H_n = the$ filtered magnetic field; H_{n-1} is the previous value of the filtered magnetic field; and m is a constant that determines the cutoff frequency as described later.

The time-domain response is exponential, as shown below for a step change in magnetic field:

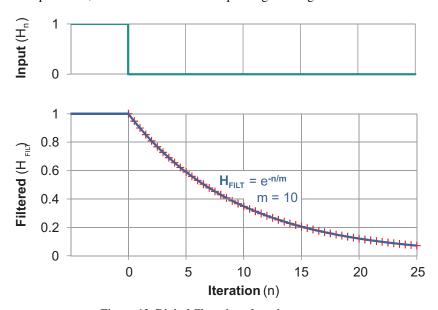


Figure 12. Digital filter time-domain response.

The filter provides a first-order response in the frequency domain:

$$f_{\text{CUTOFF}} = f_{\text{SAMPLE}}/(2\pi \text{ m})$$

Where f_{CUTOFF} is the filter cutoff frequency and f_{SAMPLE} is the sensor sampling rate (typically 10 kSps).

So for example, if m = 16, the cutoff frequency is approximately 200 Hz.

m=0 or m=1 disables filter so the output will simply be updated with each sample.



Application Circuits

Microcontroller Interface

A typical microcontroller interface is shown below:

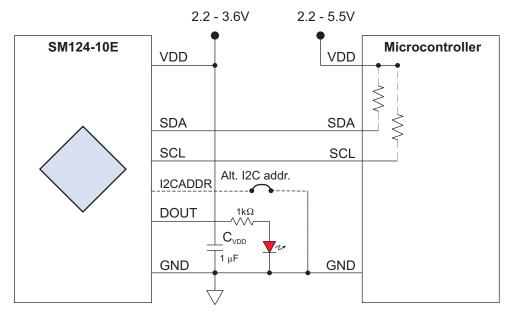


Figure 13. Typical microcontroller connections.

The SM124 is configured as a Slave and the microcontroller should be configured as the Master. The I²C interface is compatible with 3.3 or five-volt microcontrollers.

The SCL and SDA lines are open-drain, so the microcontroller's internal pull-up resistors should be activated in software. External resistors can be used to maximize rise time for high-speed I²C operation, or to preserve I²C speed if there are multiple slaves or a multi-master configuration adding bus capacitance. If external pull-ups are used with different power supplies, they should be connected to the lower supply voltage. A typical external pull-up resistor value is $10 \text{ k}\Omega$. If I²C speed is not critical, the effects of bus capacitance can be overcome by slowing the I²C speed.

The I2CADDR pin can be left unconnected for the default I²C address (72 decimal/48 hex), or the pin can be ground to select an alternate address (16 decimal/10 hex).

 V_{DD} should be bypassed with a 0.1 μ F capacitor placed as close as possible to the V_{DD} and GND pins.

An LED can be used to indicate the digital output. The appropriate series resistor depends on the supply voltage and LED type. A high-efficiency LED will operate over the sensor's entire 2.2 to 3.6V supply range with the 1 $K\Omega$ resistor, although its brightness will change with the supply voltage.

NVE Corporation



Overcurrent Protection

The sensor's digital output can be used as a "virtual circuit breaker" for overcurrent protection of a load such as a DC motor:

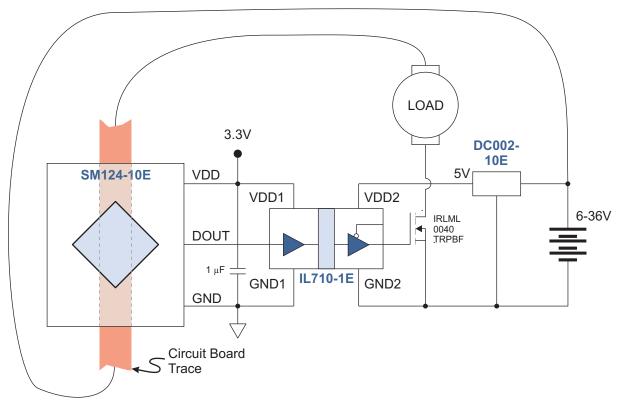


Figure 14. Typical overcurrent protection circuit.

The IL710-1E is an ultraminiature (MSOP8) data coupler that isolates the controller power from the load power. The DC002-10E is a high-voltage tolerant, five-volt regulator to power the gate drive. The power MOSFET has 4.5 volt drive voltage and 3.6 amp and 40 volt drain-to-source voltage capability. The sensor is located over a trace that carries current to the motor.

In this configuration, DOUT_invert is set to 1 to invert DOUT so that the output goes LOW for overcurrent. HYST and THRSH_H are set to 255 (dec) to invoke the latching mode where DOUT latches ON if the current exceeds the THRSH_L. The output can be reset by via I²C or by cycling the sensor power.

If the field generated by the motor current exceeds the threshold, DOUT goes LOW, the isolator output also goes LOW, the MOSFET turns off, and power is removed from the load.

The SM124's high sample rate ensures rapid detection of an overcurrent condition. But unlike shunt resistor-based circuits, there are virtually no losses associated with current sensing, and the controller can be electrically isolated from the motor for less noise and more safety.

The SM124 can also drive solid-state relays rather than the isolator and MOSFET in Figure 14. Relays are normally connected from DOUT to VDD to take advantage of the output's high output sink capability. Relays with a three-volt "Must Turn On Voltage" and fairly high input impedance can be driven directly by the sensor output.

Phone: (952) 829-9217



Reciprocating Actuator

A back-and-forth actuator can be constructed with just a single SM124 smart sensor, one magnet, and no microprocessor needed. The sensor's digital threshold output is connected to the direction input of a stepper motor driver board, so the actuator motor reverses as the sensor turns on and off:

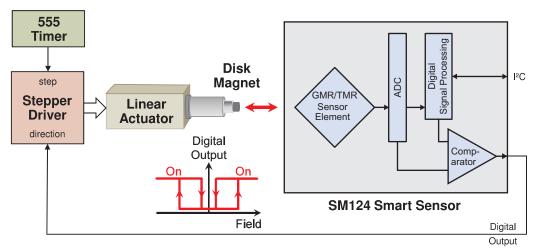


Figure 15. Reciprocating actuator using an SM124 smart sensor.

The flexibility and wide range of the sensor's digital threshold output makes it ideal for this application. For example, a 10 Oe turn-on threshold with 9 Oe hysteresis provides a 1 Oe turn-off threshold and a distance of more than one inch (25 mm) between the turn-on and turn-off thresholds. Since the SM124 is omnipolar, it works with either magnet polarity.

The programmed thresholds are nonvolatile, so the sensor can be programmed once and then operated without a computer or microprocessor interface.





Illustrative Microcontroller Code





```
Sets an SM124-10E threshold via an Arduino Uno. I2C SDA on A4; SCL on A5.
#include <Wire.h> //I2C Library
const unsigned char THRSH-L_address = 0x20; //Digital threshold in default mode
const unsigned char HYST_address = 0x22; //Magnetic threshold differential
const unsigned char THRSH-L = 100; //Threshold (100 = 10 \text{ Oe})
const unsigned char HYST = 10; /Hysteresis (10 = 1 0e)
void setup() {
 Wire.begin(); //Join I2C bus as Master
 Wire.beginTransmission(36); //Transmit to I2C addr 72 shifted right 1 bit (SM124 default)
 Wire.write(THRSH-L_address); //Set Sensor active memory address to digital threshold
 Wire.write(THRSH-L); //Send threshold data
 Wire.write(HYST_address); //Set Sensor address to hysteresis
 Wire.write(HYST); //Send hysteresis data
 Wire.endTransmission();
 delay(15); //Allow parameters to be written to nonvolatile memory before proceeding
void loop() {
```



Evaluation Support

Breakout Board

The AG958-07E breakout board provides easy connections to an SM124-10E sensor with a six pin connector. It also has a recommended 1 μ F bypass capacitor:

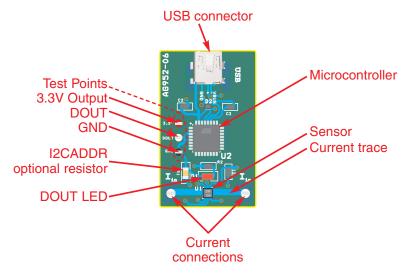


Figure 16. AG958-07 breakout board (actual size)

0.5" x 0.6" (12 mm x 15 mm)

Evaluation Kit

This simple board includes an SM124-10E Smart Magnetometer, a microcontroller that interfaces to the SM124 via I²C, and interfaces to a PC via USB. The sensor can be activated with a magnet or an on-board current trace. A PC-based user interface provides two-way communication with the sensor to display the sensor outputs and allowing field calibration.



Figure~17.~AG952-07E:~SM124~Smart~Sensor~Evaluation~Kit~board~(actual~size)

1" x 1.625" (25 mm x 41 mm)

Socket Board

NVE Corporation

The AG954-07E provides connections to a TDFN6 socket for easy interface to smart sensors such as the SM124-10E without soldering:

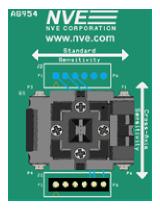


Figure 18. AG954-07E: TDFN socket board (actual size)

1.5" x 2" (38 mm x 50 mm)



AG955-07E: Self-Contained Programmer

The AG955-07E is a self-contained SM124 programmer that allows zeroing the sensor and programming a simple digital output threshold and hysteresis without need of a computer or a customer microcontroller. The SM124 is connected to an I²C master microcontroller. Miniature rotary thumbwheel switches provide three digits of resolution for programming the threshold (THRSH_L) and two digits for hysteresis (HYST). There is also a pushbutton for zeroing. Jumpers allow the SM124-10E to be disconnected from the rest of the board so the board can be used as an interface to the customer's electronics.



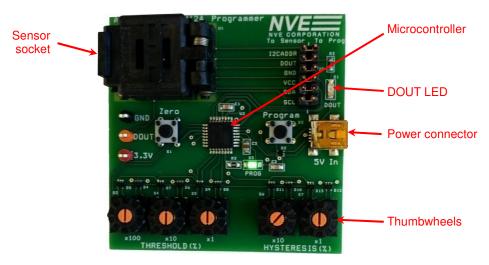



Figure 19. AG955-07E: Self-Contained SM124 Programmer (actual size) 2.5" x 2.5" (64 mm x 64 mm)




2.5 x 2.5 mm TDFN6 Package

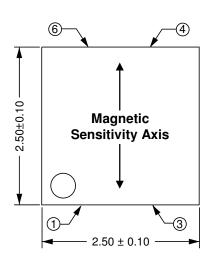

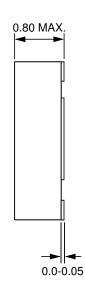

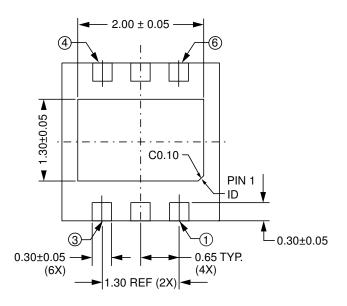

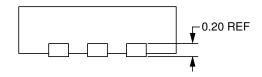



| Pin | Symbol | Description | | |
|-----------|---------|---|--|--|
| 1 I2CADDR | | I ² C address override (LOW-true input; read on power-up). | | |
| | | Grounding this pin changes the I ² C address to 16 dec regardless of the | | |
| 1 | 12CADDR | programmed address. Open or HIGH invokes the I ² C address in | | |
| | | nonvolatile memory. | | |
| 2 | DOUT | Digital Output (CMOS output; default HIGH if above threshold) | | |
| 3 | GND | V _{ss} /Ground | | |
| 4 | VCC | Power Supply (2.2 to 3.6V; bypass with 1 µF typ. capacitor) | | |
| 5 | SDA | I ² C Data (bidirectional; open drain) | | |
| 6 | SCL | I ² C Clock (input) | | |
| Center | | Internal leadframe connection; connect to GND to minimize noise; | | |
| pad | | leave unconnected for current over trace sensing. | | |

Notes:

- Dimensions in millimeters.
- Soldering profile per JEDEC J-STD-020C, MSL 1.



Ordering Information

SM124-10E - 10E TR13

SM = Product Family (Smart Magnetometers)

- 1 = GMR element with 1 byte data
- 2 = Magnetic Orientation (cross-axis, i.e., sensitive to a field vector in the pin 2 / pin 5 direction)
- 4 = Magnetic Field Linear Range (0 to 10 Oe / 0 to 1 mT)
- **10** = Part Package (2.5 x 2.5 mm TDFN6 package)
- **E** = RoHS compliant (Pb-free)

Bulk Packaging

TR13 = 13" Tape and Reel

Available Parts

| Part | Linear Range | Package Marking |
|-----------|--------------|--------------------|
| SM124-10E | 10 Oe (1 mT) | ССВе |





Revision History

SB-00-075-E

August 2019

Change

- Added Absolute Maximum output current specification (p. 2).
- Added RAM timing specifications (p. 3).
- Corrected pin one location on Figure 1 (p. 5).
- Added window comparator function effective for lot codes 1932xx and higher (p. 10). [refer to datasheet Rev. D for lot codes less than 1932xx].
- Changed nonvolatile memory addresses (p. 15).
- Clarified lot code formatting and corrected its memory address range (p. 15).
- Added reciprocating actuator application circuit (p. 20).
- Changed Arduino code for new addressing (p. 21).
- Replaced bare board with breakout board (p. 23).

SB-00-075-D

April 2019

Change

- Allow programming the default I²C address (pp. 12, 14, and 22).
- Corrected error in memory map addresses 28 to 2A.

SB-00-075-C

April 2019

Change

• Recommended 1 μF rather than 0.1 μF bypass capacitor.

SB-00-075-B

February 2019

Change

- Added details on center pad and grounding recommendation to minimize noise.
- Added AG955-07E Self-Contained Programmer (p. 20).
- Clarified direction of sensitivity (p. 25).
- Minor typographic changes.

SB-00-075-A

January 2019

Change

- Finalized memory addresses.
- Added self-contained programmers and socket board to "Evaluation Support" section.
- Minor typographic changes.
- Release at Rev. A.

SB-00-075-Prototype

December 2018

Change

- Updated specifications for prototype.
- Deleted high-field version (SM125) pending product qualification.

SB-00-075-PRELIM-A

September 2018

Change

• Updated specifications.

SB-00-075-PRELIM

June 2018

Change

• Preliminary release.





Datasheet Limitations

The information and data provided in datasheets shall define the specification of the product as agreed between NVE and its customer, unless NVE and customer have explicitly agreed otherwise in writing. All specifications are based on NVE test protocols. In no event however, shall an agreement be valid in which the NVE product is deemed to offer functions and qualities beyond those described in the datasheet.

Limited Warranty and Liability

Information in this document is believed to be accurate and reliable. However, NVE does not give any representations or warranties, expressed or implied, as to the accuracy or completeness of such information and shall have no liability for the consequences of use of such information.

In no event shall NVE be liable for any indirect, incidental, punitive, special or consequential damages (including, without limitation, lost profits, lost savings, business interruption, costs related to the removal or replacement of any products or rework charges) whether or not such damages are based on tort (including negligence), warranty, breach of contract or any other legal theory.

Right to Make Changes

NVE reserves the right to make changes to information published in this document including, without limitation, specifications and product descriptions at any time and without notice. This document supersedes and replaces all information supplied prior to its publication.

Use in Life-Critical or Safety-Critical Applications

Unless NVE and a customer explicitly agree otherwise in writing, NVE products are not designed, authorized or warranted to be suitable for use in life support, life-critical or safety-critical devices or equipment. NVE accepts no liability for inclusion or use of NVE products in such applications and such inclusion or use is at the customer's own risk. Should the customer use NVE products for such application whether authorized by NVE or not, the customer shall indemnify and hold NVE harmless against all claims and damages.

Applications

Applications described in this datasheet are illustrative only. NVE makes no representation or warranty that such applications will be suitable for the specified use without further testing or modification.

Customers are responsible for the design and operation of their applications and products using NVE products, and NVE accepts no liability for any assistance with applications or customer product design. It is customer's sole responsibility to determine whether the NVE product is suitable and fit for the customer's applications and products planned, as well as for the planned application and use of customer's third party customers. Customers should provide appropriate design and operating safeguards to minimize the risks associated with their applications and products.

NVE does not accept any liability related to any default, damage, costs or problem which is based on any weakness or default in the customer's applications or products, or the application or use by customer's third party customers. The customer is responsible for all necessary testing for the customer's applications and products using NVE products in order to avoid a default of the applications and the products or of the application or use by customer's third party customers. NVE accepts no liability in this respect.

Limiting Values

Stress above one or more limiting values (as defined in the Absolute Maximum Ratings System of IEC 60134) will cause permanent damage to the device. Limiting values are stress ratings only and operation of the device at these or any other conditions above those given in the recommended operating conditions of the datasheet is not warranted. Constant or repeated exposure to limiting values will permanently and irreversibly affect the quality and reliability of the device.

Terms and Conditions of Sale

In case an individual agreement is concluded only the terms and conditions of the respective agreement shall apply. NVE hereby expressly objects to applying the customer's general terms and conditions with regard to the purchase of NVE products by customer.

No Offer to Sell or License

Nothing in this document may be interpreted or construed as an offer to sell products that is open for acceptance or the grant, conveyance or implication of any license under any copyrights, patents or other industrial or intellectual property rights.

Export Control

This document as well as the items described herein may be subject to export control regulations. Export might require a prior authorization from national authorities.

Automotive Qualified Products

Unless the datasheet expressly states that a specific NVE product is automotive qualified, the product is not suitable for automotive use. It is neither qualified nor tested in accordance with automotive testing or application requirements. NVE accepts no liability for inclusion or use of non-automotive qualified products in automotive equipment or applications.

In the event that customer uses the product for design-in and use in automotive applications to automotive specifications and standards, customer (a) shall use the product without NVE's warranty of the product for such automotive applications, use and specifications, and (b) whenever customer uses the product for automotive applications beyond NVE's specifications such use shall be solely at customer's own risk, and (c) customer fully indemnifies NVE for any liability, damages or failed product claims resulting from customer design and use of the product for automotive applications beyond NVE's standard warranty and NVE's product specifications.

Phone: (952) 829-9217

Fax: (952) 829-9189





An ISO 9001 Certified Company

NVE Corporation 11409 Valley View Road Eden Prairie, MN 55344-3617 USA Telephone: (952) 829-9217

www.nve.com

e-mail: sensor-info@nve.com

©NVE Corporation

All rights are reserved. Reproduction in whole or in part is prohibited without the prior written consent of the copyright owner.

SB-00-075_SM124-10E

August 2019