REPLICANT // TR-8S

RHYTHM PERFORMER | ACB + FM + USER SAMPLE ENGINE
Official User Manual & Usability Guide (English & Español)



Figure 1: ReplicantTR8S Full Hardware Interface — Interactive Backlit LCD, 11 Channel Strips, Master FX, Scatter & 16-Step TR-REC Sequencer.

PART I — ENGLISH USER MANUAL

1. First-Time Startup: Loading the Firmware File

For copyright compliance, **ReplicantTR8S** does not bundle proprietary ROM data inside the installer. Instead, it uses a clean-room **Runtime Firmware Loader** that extracts all **128 Factory Kits**, **128 Factory Patterns**, and **522 Factory Tones** in memory from your own copy of the v3.00 firmware archive.

- **Step 1:** Obtain the system firmware archive `tr8s_sys_v300.zip` (or unpacked `TR8S_UP.bin`).
- **Step 2:** Launch **ReplicantTR8S** (Standalone, VST3, or AU). On first launch, the **Firmware Required** overlay will appear.
- **Step 3:** Click `[SELECT FIRMWARE FILE]` or **Drag & Drop** `tr8s_sys_v300.zip` directly onto the plugin window.
- **Step 4:** The file path is saved automatically in your user configuration folder (`~/.config/ReplicantTr8s/firmware_location.txt` on Linux, `AppData` on Windows, or `Application Support` on macOS) so future sessions load immediately. You can change or reload it anytime via the top-bar `[FW v3.00: READY (CHANGE)]` button.

2. Selecting Audio Banks, Kits, Patterns & Tones (LCD Screen)

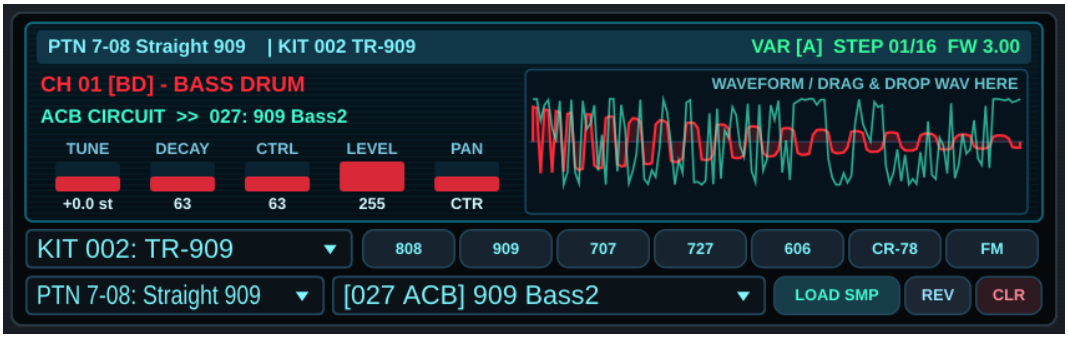


Figure 2: Interactive Backlit LCD Display with Pattern, Kit, and Per-Channel Tone Selectors.

Control / Selector	Location on LCD	How to Use
1-Click Classic Kit Banks [808] [909] [707] [727] [606] [CR-78] [FM]	Bottom-left row of the LCD screen	Click any bank button to immediately load the corresponding classic drum kit across all 11 channels (e.g., TR-808, TR-909, TR-707, TR-727, TR-606, CR-78, or FM-Groover).
Full 128 Factory Kit Dropdown (001: TR-808 .. 128)	Top-center dropdown of the LCD screen	Open the middle dropdown to browse and load any of the 128 Factory Kits with their exact per-channel tuning, decay, level, panning, and FX sends.
128 Factory Pattern Selector (1-01 .. 8-16)	Top-left dropdown of the LCD screen	Select any of the 8 banks of 16 patterns (1-01 through 8-16). Selecting a pattern loads all 8 rhythm variations (A–H).
Per-Channel Tone Selector (522 Factory Tones)	Top-right dropdown of the LCD screen	First click a channel's bottom pad button (e.g. [BD], [SD], [CH]) to select that channel, then open the top-right LCD dropdown to assign any of the 522 tones (grouped by BD, SD, Tom, RS/Clap, Hi-Hat, Cymbal, and FM/Synth).

3. Loading Custom Audio Samples (WAV / AIFF / FLAC / MP3 / OGG)

Every one of the 11 drum channels can replace or hybridize its synthesized voice with your own custom audio samples:

- **Method A — Per-Channel `[SMP]` Button:** Click the `[SMP]` button on any channel strip (left of the vertical volume fader) to open a file browser for that channel. The button lights up amber when a custom sample is active.
- **Method B — LCD `[LOAD SMP]` Button:** Select the target channel and click `[LOAD SMP]` at the bottom-right of the LCD display.
- **Method C — Drag & Drop:** Drag any `.wav`, `.aiff`, `.flac`, `.mp3`, or `.ogg` file from your OS file manager or DAW browser and drop it directly onto the desired channel strip.
- **Sample Shaping & Reverse:** Use the channel's **TUNE** knob (-24 to +24 semitones), **DECAY** knob (amplitude envelope tail), and **CTRL** knob (drive/filter). Click `[REV]` on the LCD to reverse sample playback, or `[CLR SMP]` to revert to the internal ACB/FM synthesizer.

4. The 11 Drum Channel Strips (BD to RC)



Figure 3: Hardware Channel Strips with Tune, Decay, Ctrl, Mute/Solo/Sample buttons, Illuminated Fader, and Trigger Pad.

Channel Control	Function
TUNE Knob	Adjusts pitch (+/- 24 semitones) for both ACB/FM synth voices and user samples.
DECAY Knob	Controls the amplitude envelope decay time (from tight percussive clicks to long booming 808 tails).
CTRL Knob	Controls circuit-specific parameters: Attack Click (909 BD), Snappy Wire Noise (808/909 SD), FM Modulation Index / Morph (FM tones), or Saturation Drive (User Samples).
[M] / [S] / [SMP] Buttons	[M] = Mute channel (green LED) | [S] = Solo channel (cyan LED) | [SMP] = Load custom sample (amber LED).
Vertical Level Fader	Adjusts the channel's mix level in real time.
Bottom Instrument Pad ([BD]..[RC])	Selects the channel for LCD inspection & 16-step TR-REC programming, and triggers the drum voice immediately for auditioning.

5. TR-REC 16-Step Sequencer, Variations (A–H) & DAW Transport Sync

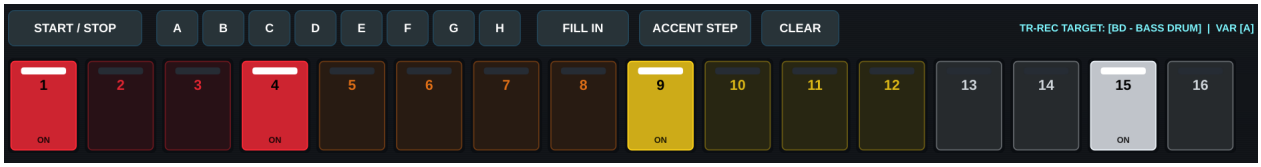


Figure 4: Transport Bar, Variations A–H, Fill-In, Accent Track Toggle, and 16 Velocity/Flam RGB Step Pads.

- **DAW Transport Sync:** The sequencer starts in a stopped state on launch. When hosted in a DAW, pressing **Play** in the DAW automatically starts the sequencer locked to the DAW's BPM and PPQ position; pressing **Pause / Stop** in the DAW immediately stops the sequencer.
- **Programming Steps (1–16):** Select a channel using its bottom pad (`[BD]`..`[RC]`), then click any of the 16 RGB pads to toggle steps ON/OFF.
- **Flams & Ghost Notes: Right-Click** (or **Shift + Click**) on a step pad to toggle a **FLAM** substep roll. **Alt + Click** cycles between **WEAK** (ghost note) and **ACC** (accented step).
- **Variations** `[A]`–`[H]` **&** `[FILL IN]`**:** Switch between 8 independent 16-step variations per pattern, trigger a dynamic end-of-bar fill with `[FILL IN]`, edit global accents with `[ACCENT STEP]`, or wipe the current variation with `[CLEAR]`.

6. Master Effects & SCATTER Performance Processor



Figure 5: 7-Segment LED Tempo Readout, Shuffle/Accent, 8-Mode Scatter Processor, and Master FX Bus.

- **TEMPO / SHUFFLE / ACCENT:** Fine-tune BPM (in Standalone mode), swing/shuffle timing, and global accent punch.
- **SCATTER ON + Modes 1–8:** Real-time beat-synced buffer manipulation: **REV** (Reverse), **GAT** (Trance Gate), **RP1** (1/32 Stutter), **RP2** (1/64 Drill), **HLF** (Half-Speed Pitch Down), **CHP** (Syncopated Chopper), **BIT** (Bitcrush Decimator), and **PAN** (Auto-Panner).
- **MASTER FX Bus:** DJ-style **LPF/HPF** isolator filter (12 o'clock = bypass, left = Low-Pass, right = High-Pass), analog **DRIVE** saturation,Lush Hall **REVERB**, Dotted-8th Stereo **DELAY**, and **MASTER** output level.

PARTE II — MANUAL DE USUARIO EN ESPAÑOL (GUÍA DE USABILIDAD)

1. Primer Inicio: Carga del Archivo de Firmware

Por cumplimiento legal de derechos de autor, **ReplicantTR8S** no distribuye datos ROM propietarios dentro del repositorio ni del instalador. Al abrir el programa por primera vez, el cargador nativo (**Runtime Firmware Loader**) te solicitará tu propio archivo de firmware v3.00 para descomprimir en memoria RAM los **128 Kits**, **128 Patrones** y **522 Tonos**.

- **Paso 1:** Ten a mano el archivo `tr8s_sys_v300.zip` (o el binario descomprimido `TR8S_UP.bin`).
- **Paso 2:** Al abrir el plugin (VST3/AU) o la app Standalone por primera vez, verás la pantalla **FIRMWARE FILE REQUIRED BEFORE STARTING**.
- **Paso 3:** Haz clic en el botón verde `[SELECT FIRMWARE FILE]` o simplemente **arrastra y suelta (Drag & Drop)** el archivo `tr8s_sys_v300.zip` sobre la ventana.
- **Paso 4:** La ruta queda guardada automáticamente para futuras sesiones. Si deseas cambiar o recargar el firmware en cualquier momento, pulsa el botón superior `[FW v3.00: READY (CHANGE)]`.

2. Cómo Seleccionar Cada Banco de Audio, Kit, Patrón y Tono

Elemento a Seleccionar	Ubicación en la Interfaz	Cómo Usarlo Paso a Paso
Bancos Clásicos en 1 Clic [808] [909] [707] [727] [606] [CR-78] [FM]	Fila inferior izquierda de la pantalla LCD	Haz clic directo en cualquiera de estos 7 botones para cargar al instante el kit completo de esa caja de ritmos en los 11 canales.
Selector de los 128 Kits (001: TR-808 .. 128)	Menú desplegable superior central del LCD	Despliega la lista para elegir cualquiera de los 128 Kits de fábrica con sus ajustes exactos de afinación, decay, nivel, paneo y envíos FX.
Selector de los 128 Patrones (1-01 .. 8-16)	Menú desplegable superior izquierdo del LCD	Elige entre los 8 bancos de 16 patrones rítmicos (1-01 a 8-16). Cada patrón incluye sus 8 variaciones (A–H).
Selector de Tono Individual por Canal (522 Tonos de Fábrica)	Menú desplegable superior derecho del LCD	1) Haz clic en el botón inferior del canal que quieras editar (ej. [BD], [SD], [CH]). 2) Abre el menú superior derecho del LCD para asignarle cualquiera de los 522 tonos (organizados por BD, SD, Tom, RS/Clap, Hi-Hat, Cymbal y FM/Synth).

3. Cómo Cargar Samples Propios (WAV / AIFF / FLAC / MP3 / OGG)

Puedes cargar tus propios samples en cualquiera de los 11 canales para crear kits personalizados o híbridos:

- **Opción A — Botón `[SMP]` en cada canal:** Pulsa el botón `[SMP]` (ubicado debajo de `[M]` y `[S]`, a la izquierda del fader vertical) para elegir un archivo de audio en ese canal. Se iluminará en color ámbar cuando tenga un sample cargado.
- **Opción B — Botón `[LOAD SMP]` en el LCD:** Selecciona el canal deseado y haz clic en `[LOAD SMP]` abajo a la derecha dentro de la pantalla LCD.
- **Opción C — Arrastrar y Soltar (Drag & Drop):** Arrastra cualquier archivo `.wav`, `.aiff`, `.flac`, `.mp3` u `.ogg` y suéltalo directamente sobre la columna del canal donde quieras asignarlo.
- **Reversa y Limpieza:** En la esquina inferior derecha del LCD puedes activar `[REV]` para reproducir el sample al revés, o `[CLR SMP]` para quitar el sample y volver al motor de síntesis ACB/FM del canal.

4. Controles de los 11 Canales, Secuenciador TR-REC y Sincronización DAW

Control / Sección	Descripción de Uso
Perillas TUNE / DECAY / CTRL	TUNE: Afinación (-24 a +24 semitonos). DECAY: Duración de la caída del sonido. CTRL: Ataque/Click en bombos, bordona (Snappy) en cajas, modulación FM o saturación en samples.
Botones [M], [S] y Fader Vertical	[M] silencia el canal (Mute), [S] lo deja en solitario (Solo), y el fader vertical iluminado regula el volumen del canal en la mezcla.
Pad Inferior del Canal ([BD]..[RC])	Selecciona el canal activo para editar sus pasos en el secuenciador o su tono en el LCD, y dispara el sonido para preescucharlo.
Secuenciador de 16 Pasos (Pads 1–16)	Clic izquierdo = Activa/Desactiva el paso. Clic derecho (o Shift+Clic) = Activa redoble FLAM. Alt+Clic = Alterna entre nota fantasma suave (WEAK) y acento fuerte (ACC).
Variaciones [A]–[H] y [FILL IN]	Cambia entre las 8 variaciones del patrón. [FILL IN] dispara un redoble automático al final del compás. [ACCENT STEP] permite editar la pista de acentos globales.
Sincronización con el DAW	El secuenciador inicia detenido al abrir el plugin. Al dar Play en tu DAW, arranca sincronizado automáticamente al tempo (BPM) y compás del proyecto; al dar Pause/Stop en el DAW, se detiene de inmediato.

5. Mapa de Notas MIDI (Para Disparar desde el Piano Roll o Pads Externos)

Canal	Instrumento	Notas MIDI Estándar (GM)	Nota Cromática Alternativa
01: BD	Bass Drum (Bombo)	35 (B0), 36 (C1)	60 (C3)
02: SD	Snare Drum (Caja)	38 (D1), 40 (E1)	61 (C#3)
03: LT	Low Tom (Tom Grave)	41 (F1), 43 (G1)	62 (D3)
04: MT	Mid Tom (Tom Medio)	45 (A1), 47 (B1)	63 (D#3)
05: HT	High Tom (Tom Agudo)	48 (C2), 50 (D2)	64 (E3)
06: RS	Rim Shot / Claves	37 (C#1), 75 (D#4)	65 (F3)
07: HC	Hand Clap / Maracas	39 (D#1)	66 (F#3)
08: CH	Closed Hi-Hat (Corta al OH)	42 (F#1), 44 (G#1)	67 (G3)
09: OH	Open Hi-Hat	46 (A#1)	68 (G#3)
10: CC	Crash Cymbal	49 (C#2), 57 (A2)	69 (A3)
11: RC	Ride Cymbal / Cowbell	51 (D#2), 56 (G#2)	70 (A#3)