

(a) flight state machine

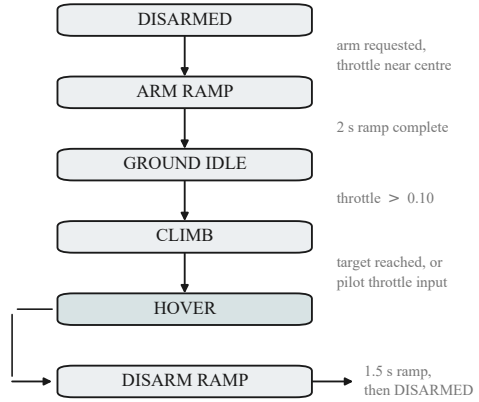

released by: signal lost · kill · safety stop · serial stop · switch off

(b) per-axis hold engagement



capture requires the axis speed to stay below its threshold for the whole dwell, so the target is a point the vehicle is actually at:

altitude	0.12 m/s	400 ms
position	0.15 m/s	500 ms
heading	8 deg/s	300 ms

Position hold additionally requires proof, within this flight, that the yaw loop is behaving: rate within 10 deg/s and heading error within 8 deg, continuously for 3 s while airborne. Disarming clears the proof.