

Generator Set Operators Manual




Generator Set


The Generator Set (Gen Set) A154F gas-engine is a fuel-based engine that supplies electrical energy. Electricity is generated through combustion of fuel from the gasoline tank. This will be used in the 2010 Philippine National and Local Elections in polling places and/or canvassing centers where there is no power or insufficient supply.

Appearance

Front view

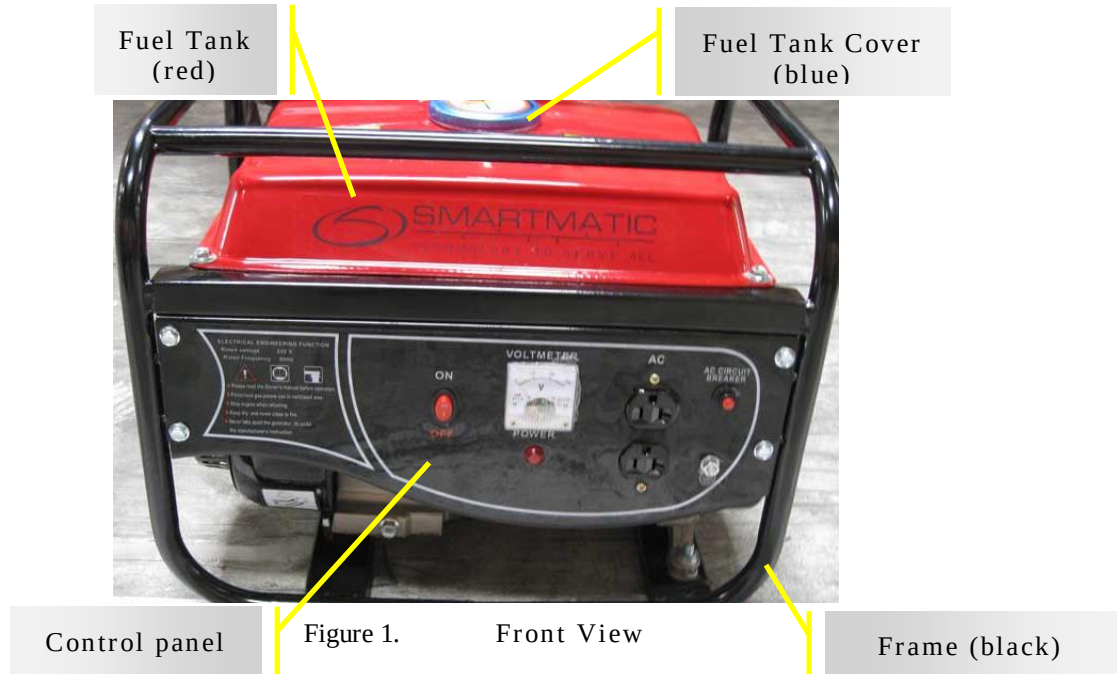

Control Panel

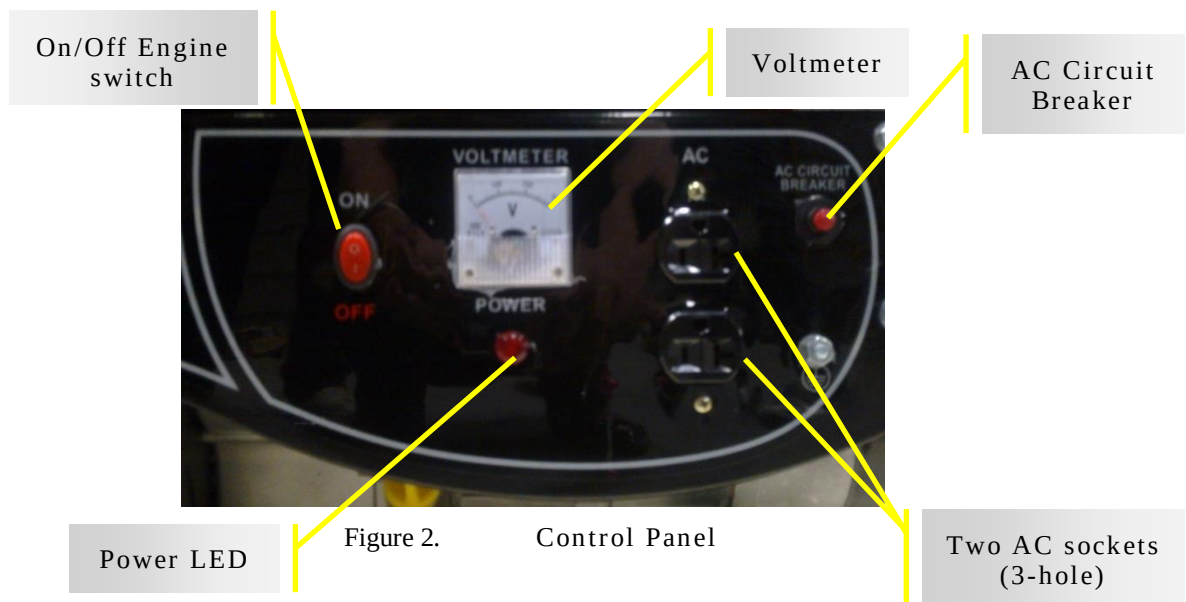

Rear view

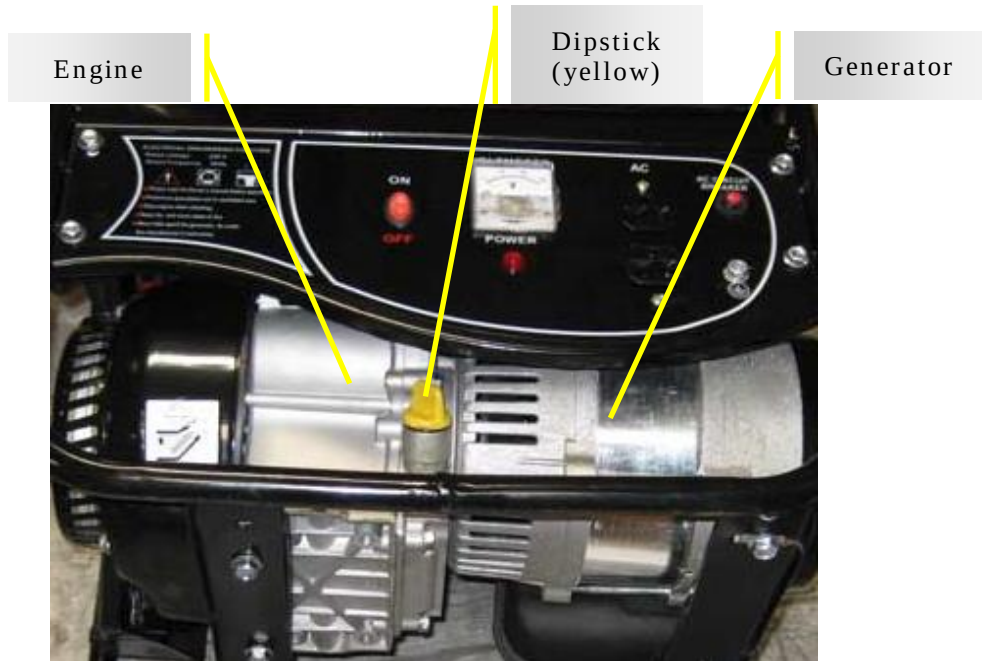


Figure 3. Rear view

Right side view

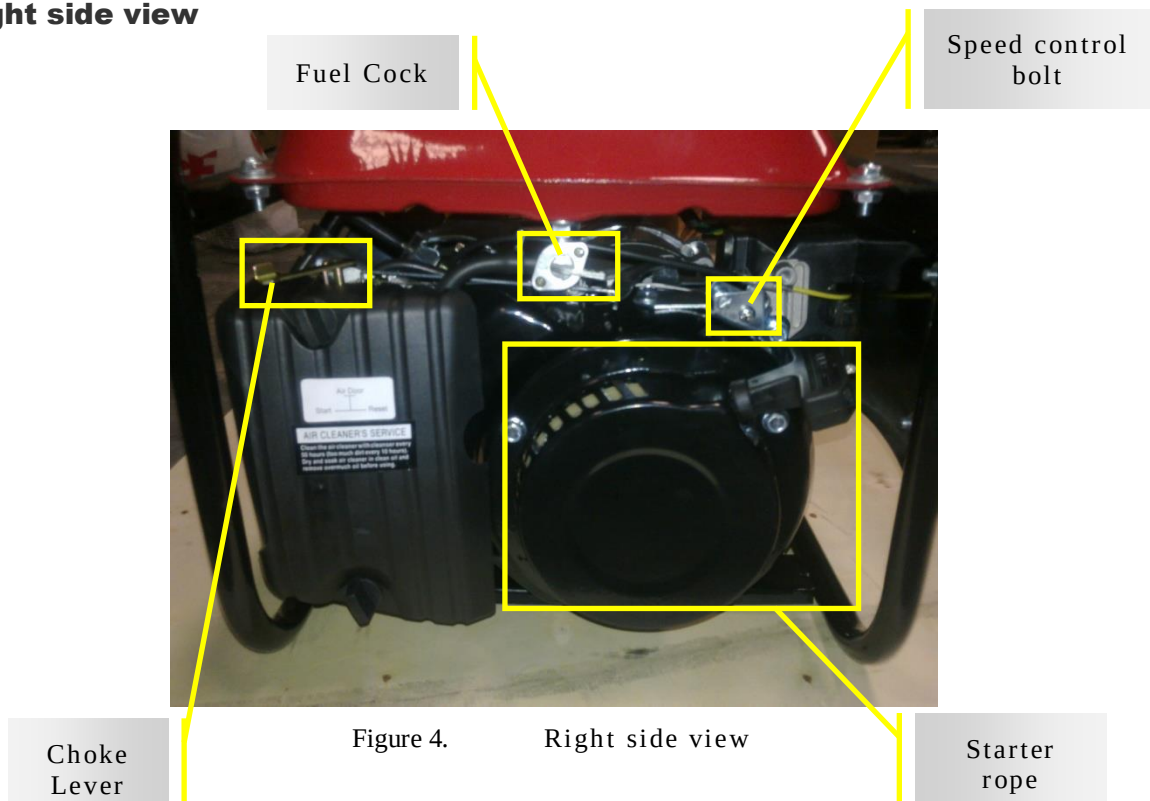


Figure 4. Right side view

Left side view



Figure 5. Left side view

Operation

- The tool that comes with the gen set is a screwdriver (Retractable to Flat or Philips). This will be used for adjusting the engine speed through the speed control bolt.



Figure 6. Screwdriver

- Set under a shade or portable shelter with ample ventilation or vent the muffler outward.
- Do not operate under the rain or with wet hands.

Filling the fuel tank

IMPORTANT: *Never fill with fuel, a running generator set. No smoking at all times. Keep the unit away from fire or heat to avoid explosion.*

The gen set will be delivered without gasoline in the fuel tank.


It is recommended to fill the fuel tank with 3 liters minimum and 5 liters maximum of unleaded gasoline.


Note: Premium gasoline is recommended in the absence of unleaded. Regular gasoline is the least alternative when neither unleaded nor premium are not available.

1. Open the fuel tank cover 	2. Do not remove the white plastic filter in the opening. 
3. Pour the gasoline through the opening of the fuel tank. 	4. Close the fuel tank cover tightly. 

Starting the engine

IMPORTANT: Do not connect any electrical apparatus before starting the unit.

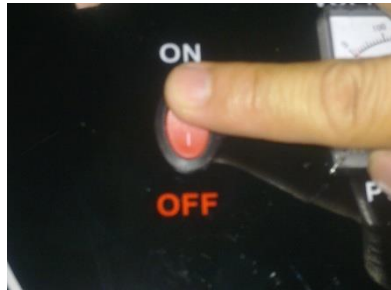1. Turn the Fuel Cock to "ON". 	2. Press the on/off switch to turn on. 
3. Close the choke lever. 	4. Pull the starter rope to start engine.  <i>Note: Keep pulling until the engine</i>

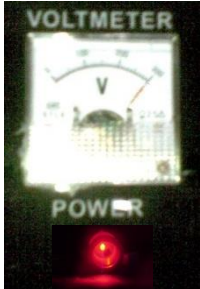	starts. Three (3) pulls should be enough.
5. Return the choke lever gradually to the open position. 	6. Adjust the speed control bolt with the screw driver. 
7. The Voltmeter needle fluctuates as the Power led lights up.  <i>Note: Continue adjusting the speed control bolt until the Voltmeter needle reaches 220 volts.</i>	8. Plug the power cable (of the equipment that needs power supply) to the AC socket.  <i>Note: Three-hole male power cable or 2-flat male power cable can be plugged in the 3-hole AC socket.</i>
<i>Note: The Voltmeter needle will fluctuate below 220 volts.</i> 	9. Adjust the speed control bolt with the screw driver until the Voltmeter needle swings back to 220. 

Stopping the engine


1. Unplug the power cable from the AC socket. 	2. Adjust the speed control bolt with the screwdriver until the Voltmeter needle swings back to zero (0). 
3. Press the on/off switch to turn off. 	4. Turn the Fuel cock to "OFF". 

Draining the fuel

Drain the fuel completely from the tank and carburetor when transporting or storing the unit for an extended period.

IMPORTANT: Ensure that the fuel cock is turned "OFF" before draining the fuel.

1. Loosen the wire clip that holds the black hose into the fuel cock. 	2. Disconnect the hose from the metal tube of the fuel cock. 
--	---

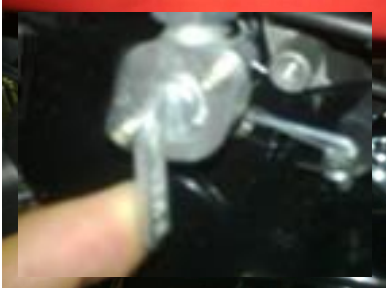3. Tilt the generator to drain the fuel tank towards the gasoline container. 	4. Turn the Fuel Cock to “ON” to drain the fuel tank. 
5. Turn the Fuel Cock to “OFF” after draining the fuel tank. 	6. Reconnect the hose the metal tube of the fuel cock. 
7. Tighten the wire clip that holds the black hose into the fuel cock. 	