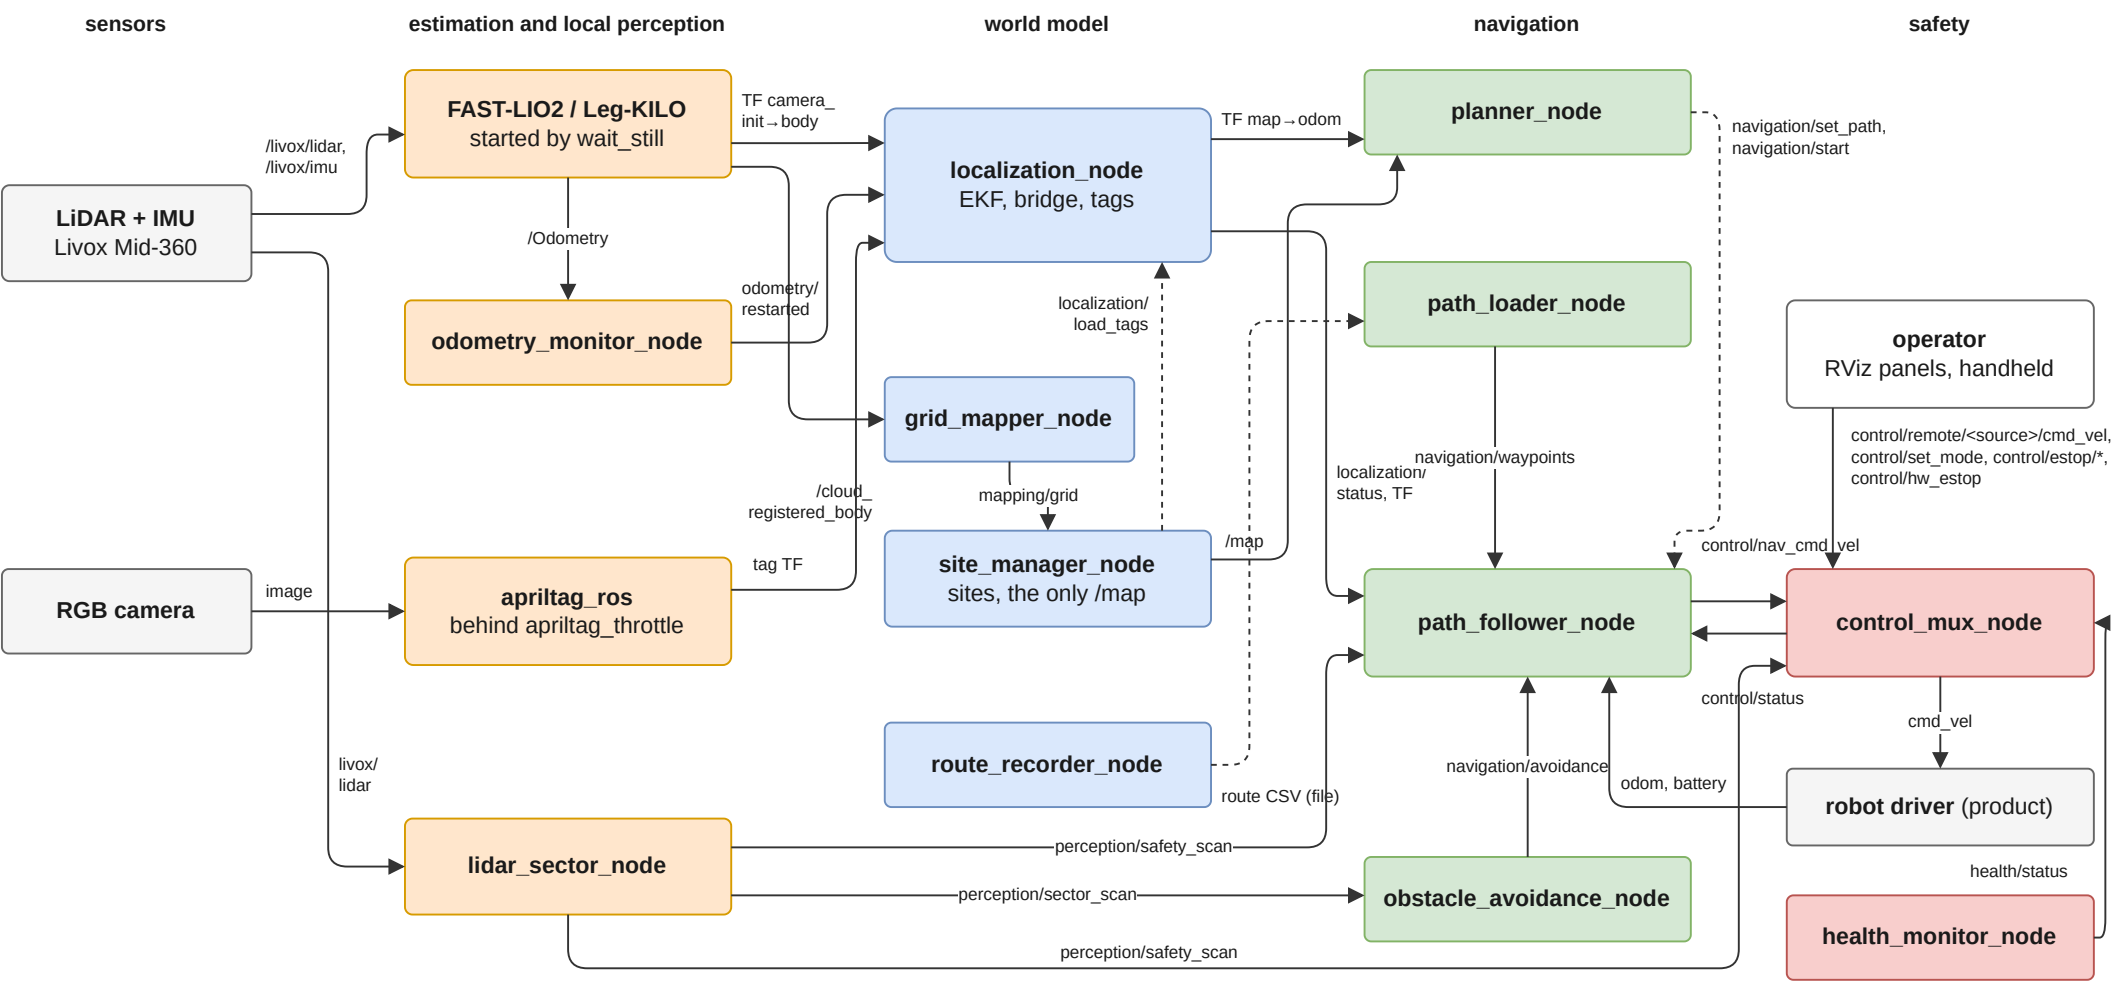
sensors
estimation and local perception
world model
navigation
safety
LiDAR + IMU
Livox Mid-360
RGB camera
/livox/lidar,
/livox/imu
image
livox/
lidar
FAST-LIO2 / Leg-KILO
started by wait_still
/Odometry
odometry_monitor_node
apriltag_ros
behind apriltag_throttle
lidar_sector_node
TF camera_
init→body
odometry/
restarted
/cloud_
registered_body
tag TF
localization_node
EKF, bridge, tags
grid_mapper_node
mapping/grid
site_manager_node
sites, the only /map
route_recorder_node
localization/
load_tags
/map
route CSV (file)
TF map→odom
planner_node
path_loader_node
navigation/waypoints
localization/
status, TF
path_follower_node
navigation/avoidance
obstacle_avoidance_node
perception/safety_scan
perception/sector_scan
perception/safety_scan
navigation/set_path,
navigation/start
operator
RViz panels, handheld
control/remote/<source>/cmd_vel,
control/set_mode, control/estop/*,
control/hw_estop
control/nav_cmd_vel
control_mux_node
control/status
cmd_vel
odom, battery
robot driver (product)
health/status
health_monitor_node