



Submittal

AHRI: 218394213


Rooftop Inverter Package Unit Heat Pump TPV24H2XA 24 kBTU/h

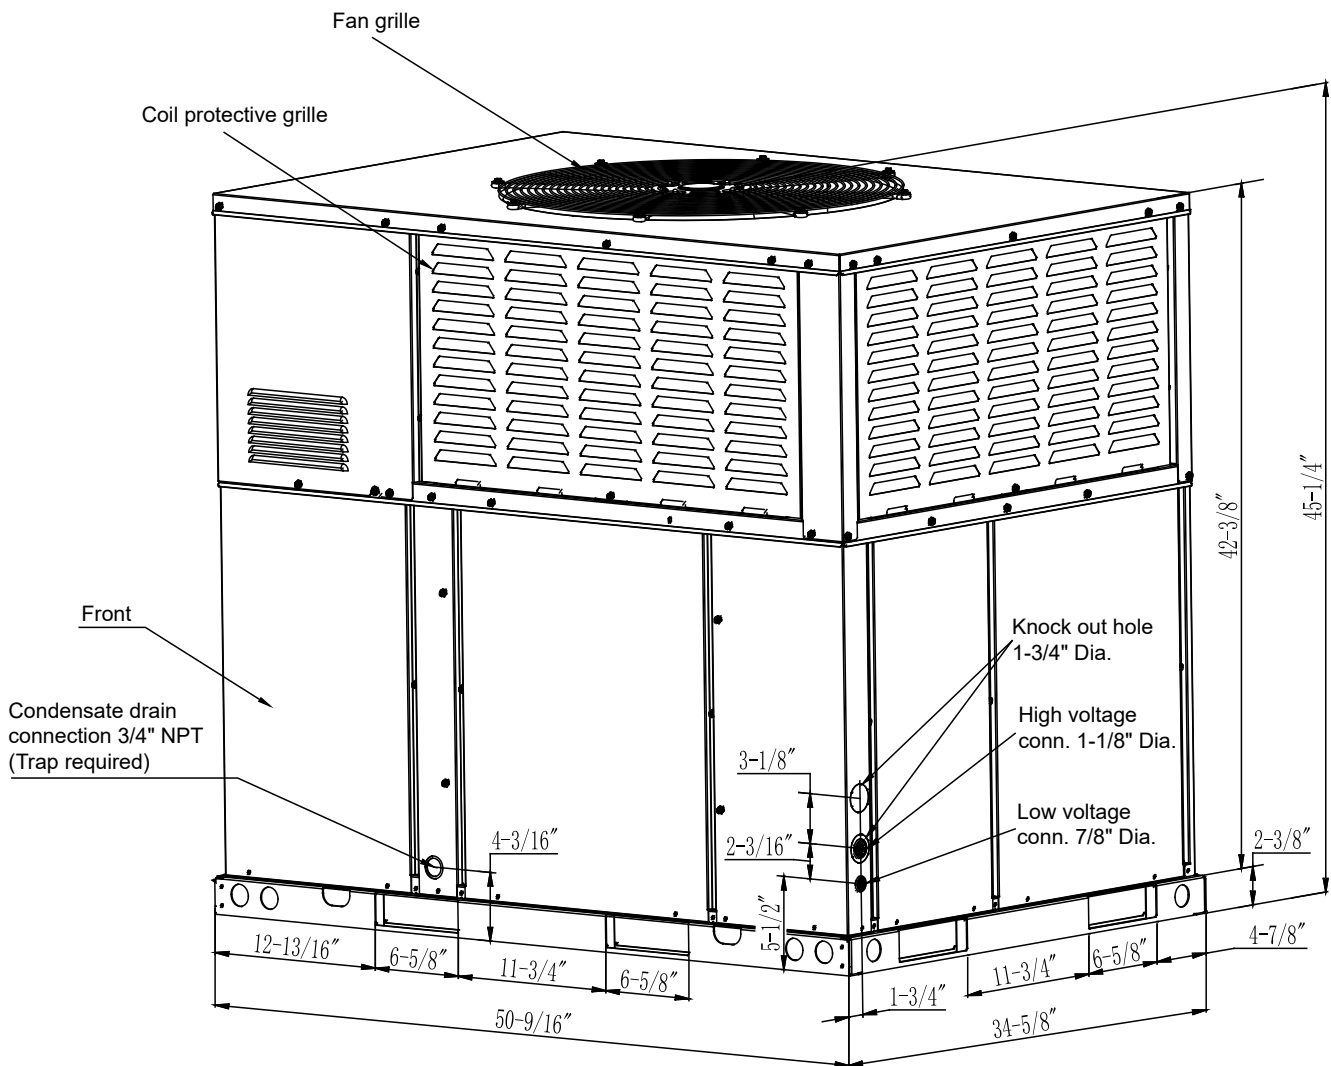

Bottom view

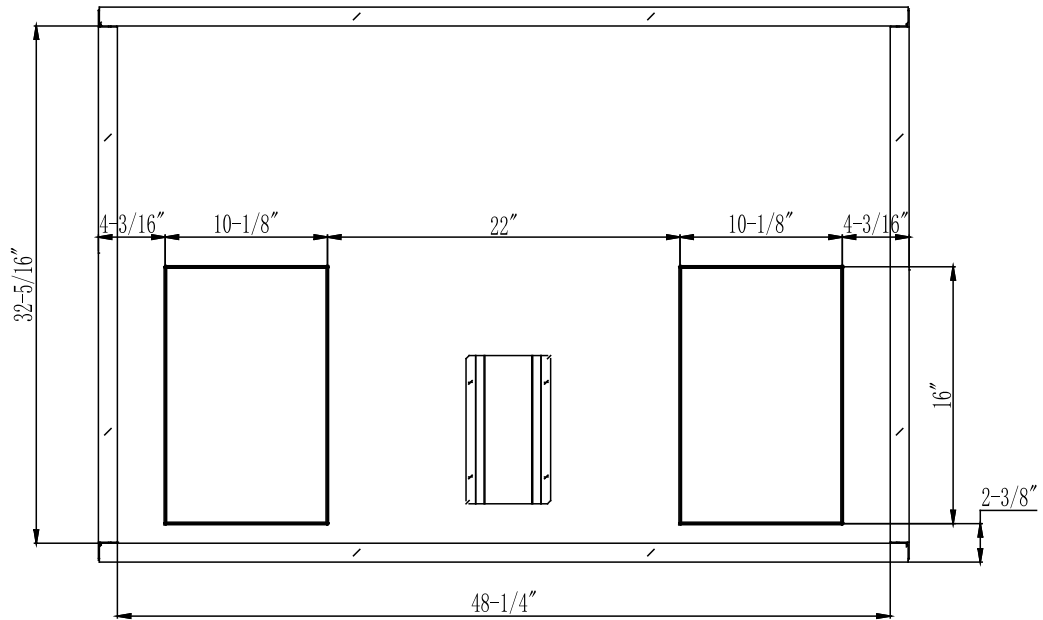

Back view

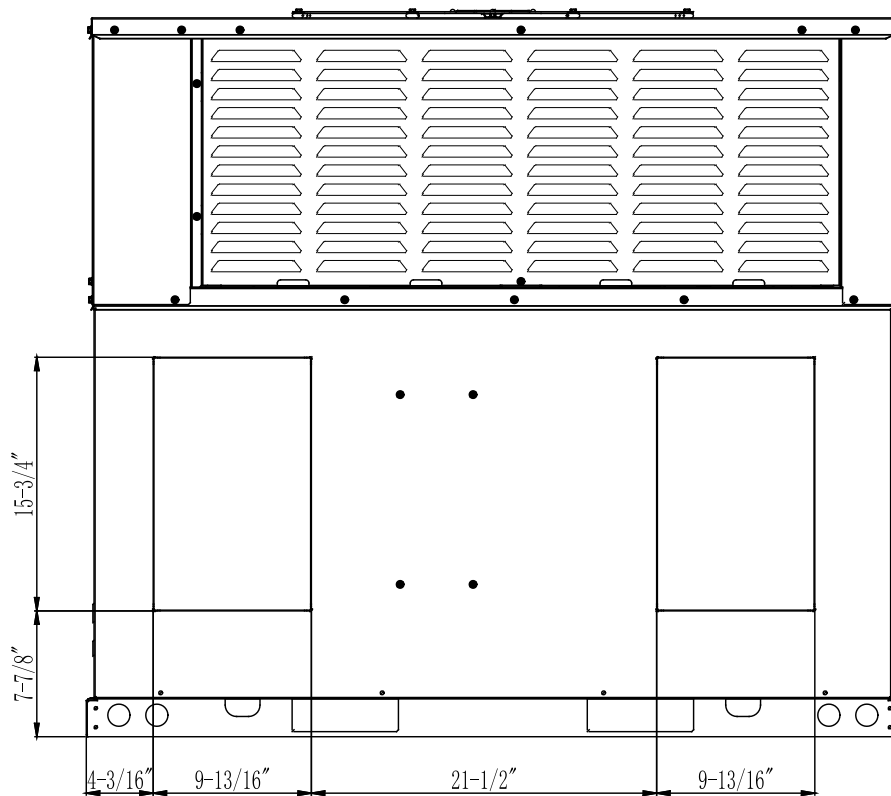

Product Specifications

Model	TPV24H2XA	CONDENSER COIL	
NOMINAL RATING		Type	Copper Tube
Cooling (BTU/h)	24000	Fin Material	Hydrophilic Aluminium
Heating (BTU/h)	24000	EVAPORATOR FAN MOTOR	
Standard Static(Without filter/Pa)	145	Motor Type	ECM
ELECTRICAL DATA		Horsepower (HP)	1/2
Voltage/Phase/Hz	208-230~/1/60	Full Load Amps (FLA)	3.2
SOUND POWER LEVEL [dB(A)]	60	Capacitor (uF)	/
MCA	36	Rated RPM	1000
MOP	40	EVAPORATOR COIL	
COMPRESSOR		Type	Aluminum Tube
Type	ROTARY	Fin Material	Hydrophilic Aluminium
Voltage/Phase/Hz	208-230~/1/60	REFRIGERATION SYSTEM	
RLA	22	Refrigerant	R32
NO. USED-NO. SPEEDS	1-INVERTER	LBS. R-32	5 LBS.-8 OZ.
INSULATION/SOUND BLANKET	NO	REFRIGERANT SENSOR	YES
COMPRESSOR HEAT	YES	Refrigerant Control	EXV
CONDENSER FAN MOTOR		DIMENSIONS	W×D×H
Motor Type	DC	Unit	50-9/16×34-5/8×45-1/4
Horsepower (HP)	2/7	Packing	51-3/16×35-1/4×46-5/11
Full Load Amps (FLA)	2.0	WEIGHT	
Capacitor (uF)	/	SHIPPING (LBS.)	416.7
Rated RPM	1000	NET (LBS.)	399.9

Fan Performance Table

Rooftop Package Unit	Blower Speeds		External Static Pressure (in.w.c)								
			0	0.1	0.2	0.3	0.4	0.5	0.6	0.7	0.8
24K/2Ton	1	CFM	1134	1056	997	951	899	842	786	717	673
		Watts	196	210	217	222	228	227	237	245	252
		Amps	1.80	1.88	1.93	1.97	2.01	2.03	2.10	2.15	2.20
	2	CFM	1251	1168	1111	1061	1018	973	933	846	788
		Watts	248	259	261	267	277	281	291	294	306
		Amps	2.18	2.25	2.28	2.33	2.39	2.43	2.50	2.54	2.61
	3	CFM	1355	1291	1230	1176	1133	1094	1055	993	936
		Watts	325	331	341	347	341	387	381	392	410
		Amps	2.75	2.81	2.87	2.92	2.92	3.07	3.06	3.15	3.25
	4	CFM	1501	1449	1373	1322	1280	1243	1207	1144	1086
		Watts	408	428	430	436	434	450	456	453	450
		Amps	3.43	3.52	3.56	3.61	3.62	3.71	3.75	3.73	3.71
	5	CFM	1541	1480	1365	1345	1283	1236	1197	1134	1069
		Watts	446	460	457	444	454	457	452	445	450
		Amps	3.73	3.78	3.77	3.71	3.75	3.76	3.74	3.71	3.72

The highlighted area indicates the airflow within the required range of 300-450cfm/ton.

NOTES:

1. This table is only used to select the highest blower speed.

2. The rated airflow of systems without electric heater kits requires between 300 and 450 cubic feet of air per minute (CFM). The rated airflow of systems with electric heater kits requires between 350 and 450 cubic feet of air per minute (CFM).
3. The air distribution system has the greatest effect on airflow. Therefore, the contractor should use only industry-recognized procedures.
4. Duct design and construction should be carefully done. System performance can be lowered dramatically through poor design or workmanship.
5. Air supplier ducts should be located along the perimeter of the conditioned space and properly sized. Improper location or insufficient air flow may cause drafts or noise in the ductwork.
6. Installers should balance the air distribution system to ensure proper quiet airflow to all rooms in the home. An air velocity meter or airflow hood can be used to balance and verify branch and system airflow (CFM).

Electrical Data

Heater Kit Model	Rooftop Package Unit	Electric Heater (kW)	MCA (Min.Circuit Ampacity)		MOP(Max. Fuse or Breaker (HACR) Ampacity)	
			208V	230V	208V	230V
ZP-HP50-01	24K/2Ton	5	22.80	24.90	25	25
ZP-HP75-01		7.5	34.80	37.90	35	40
ZP-HP100-01		10	45.40	49.80	50	50

Note:

1. The electric heating must be installed by qualified personnel. Refer to current regulations and laws for installation location.
2. Ampacities for MCA and Fuse/breaker excluding the blower motor.
3. The heat pump system needs specific airflow. Each ton of cooling requires 350 to 450 cubic feet (CFM) of air per minute, or nominally 400 CFM.

Standard Features :

- a. Uses environmentally friendly R32 refrigerant.
- b. Evaporator uses inner-grooved aluminum tubes.
- c. Constructed with hydrophilic aluminum foil.
- d. ENERGY STAR Certified: Products that are recognized as the most efficient of ENERGY STAR.
- e. Using world famous brand compressor to ensure reliability and energy efficiency.
- f. RS485 communication is used between the internal and external PCB, more precise system control.
- g. The unit is equipped with a variety of sensors, EXV and pressure control switches, making the unit control more precise and energy-efficient.
- h. The unit can be installed on the ground or roof, and comes with static pressure at the factory, flexibly meeting different installation scenarios.

Optional Features :

- a. Electrical heater kits are optional: 5/7.5/10/15/20kW.
- b. Economizer is optional.
- c. WIFI control function is optional.

Rooftop Installation - Curb Mounting

The manufacturer does not supply roof curbs, they must be field supplied. The dimensions are shown in the following picture. On applications when a roof curb is used, the unit must be positioned on the curb so the front of the unit is tight against the curb.


The default orientation from the factory is for horizontal airflow. Convert the unit to downflow using the following procedure:

1. Remove the sheet metal screws securing the supply air cover and the sheet metal screws securing the return air cover from the base of the unit. Remove the covers from the base.
2. Place the covers over the horizontal supply and return openings (painted side out). Align the screw holes, and secure using the same screws removed in step 1.


Install the field-supplied roof mounting curb according to the Installation Instructions supplied with the curb. Install insulation, cant strips, roofing, and flashing. Ductwork must be attached to curb.

Notice:

1. The gasketing of the unit to the roof curb is critical for a water tight seal. Install gasketing material supplied with the field supplied roof curb. Improperly applied gasketing also can result in air leaks and poor unit performance.
2. The unit must be secured to the curb by installing screws through the bottom of the curb flange and into the unit base rails.
3. For units applied with a roof curb, the minimum clearance may be reduced from 1 inch to 1/2 inch between combustible roof curb material and supply air duct.
4. Failure to follow this caution may result in property damage. Ensure there is sufficient clearance for saw blade when cutting the outer horizontal flange of the roof curb so there is no damage to the roof or flashing.

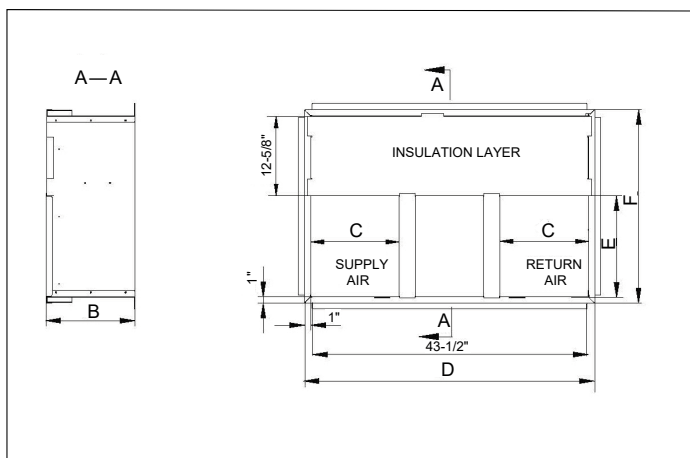

2/3Ton Roof Curb Details

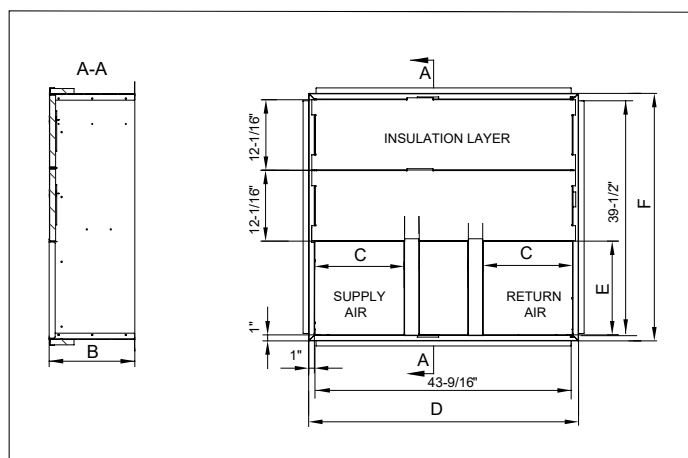

4/5Ton Roof Curb Details

Model	B	C	D	E	F
2/3Ton	14-1/4"	14"	46-1/16"	16"	30-5/8"
4/5Ton	14-1/4"	15-1/4"	46-1/16"	16"	42-3/16"

NOTES:


1. Roof Curb must be set up for unit being installed
2. Seal strip must be applied, as required, to unit being installed
3. Attach ductwork to curb (flanges of duct rest on curb)
4. Recommended insulated panels: 1 in. (25.4 mm) thick fiberglass 1 lb. density

NOTE: Innovair has a policy of continuous product and product data improvement and it reserves the right to change design and specifications without notice.


Rooftop Inverter Package Unit Heat Pump

TPV36H2XA


36 kBTU/h

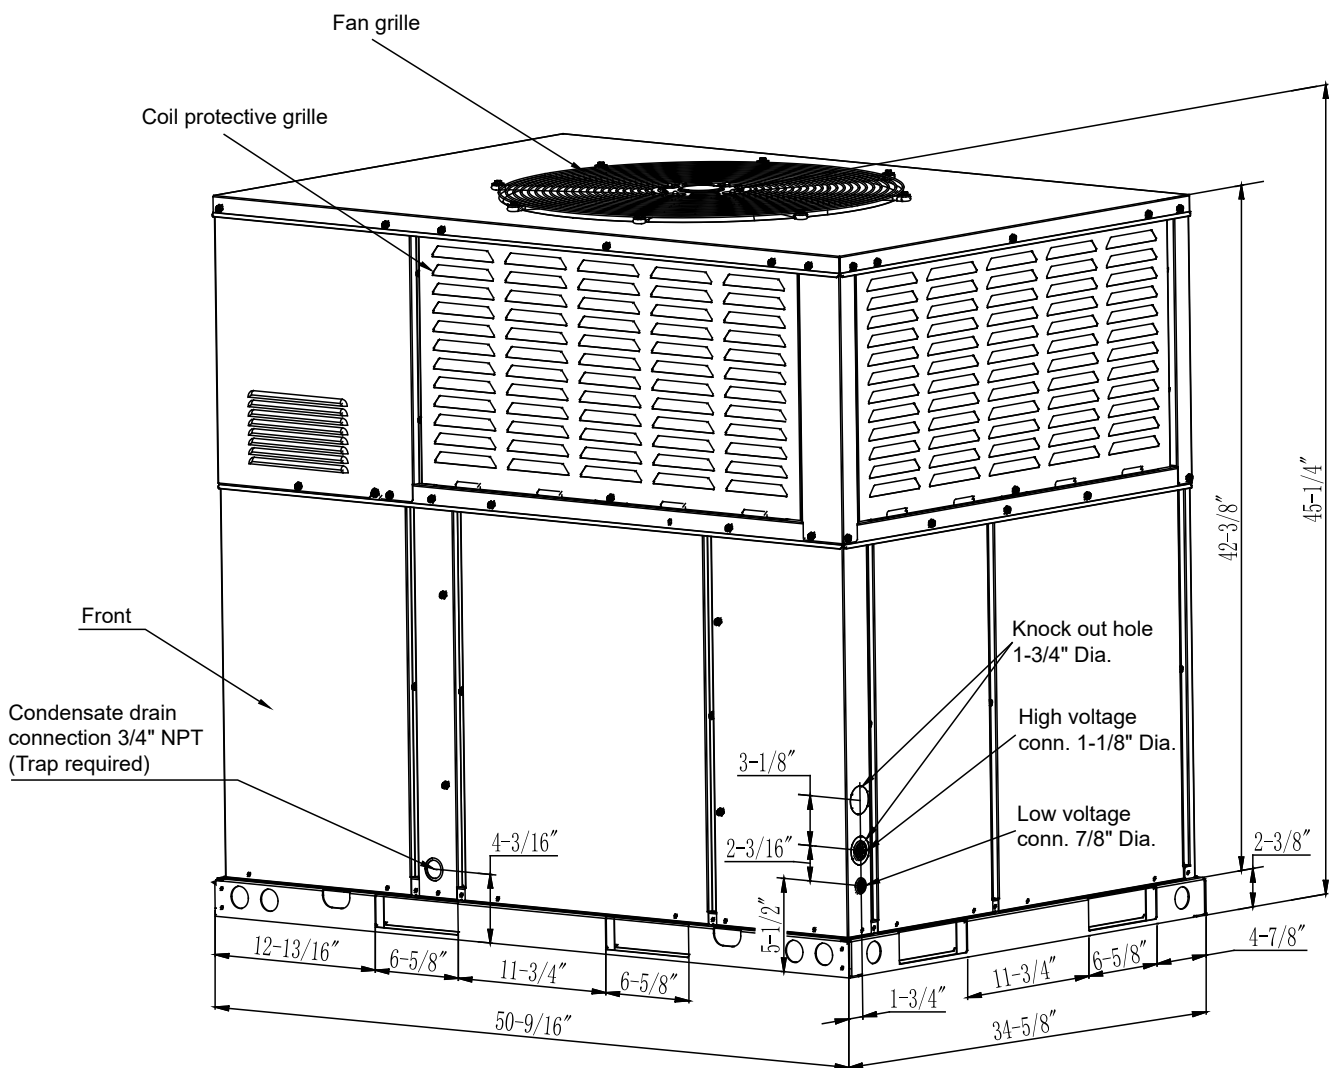

Bottom view

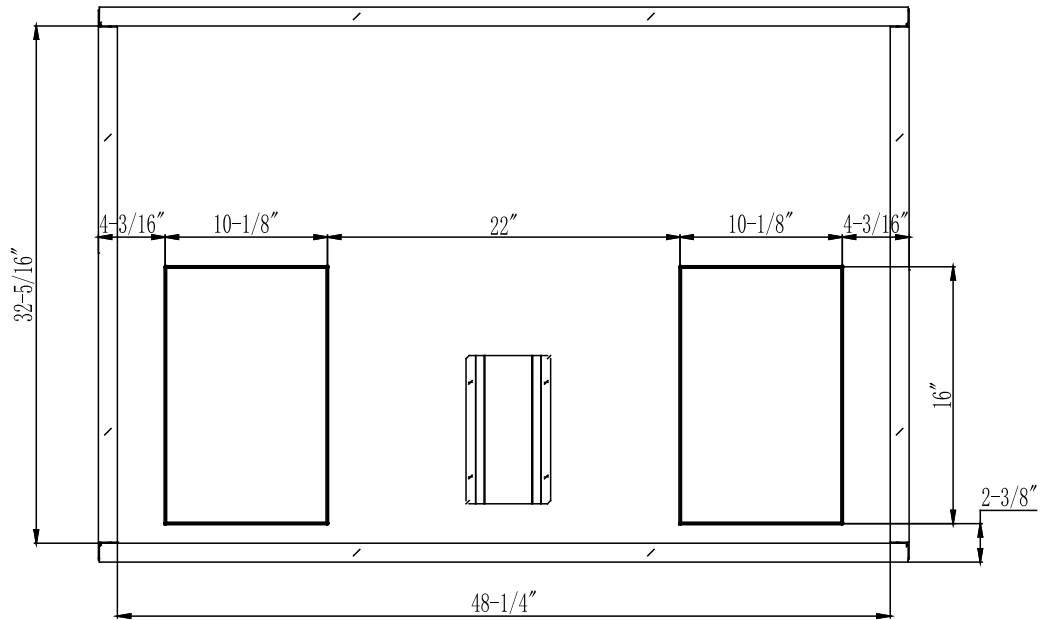

Back view

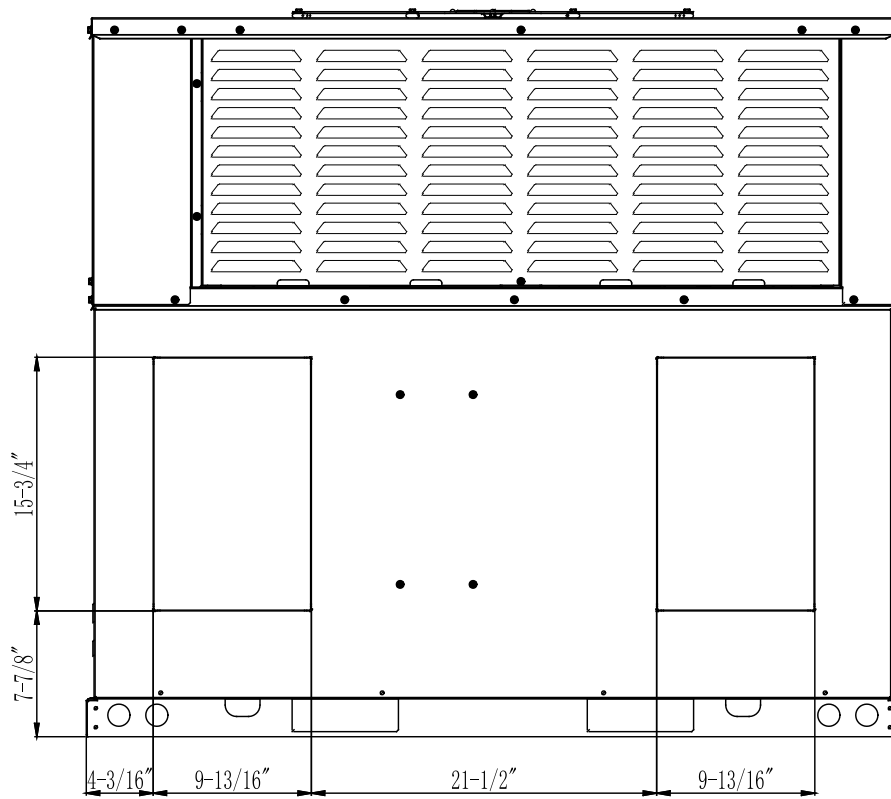

Product Specifications

Model	TPV36H2XA	CONDENSER COIL	
NOMINAL RATING		Type	Copper Tube
Cooling (BTU/h)	33000	Fin Material	Hydrophilic Aluminium
Heating (BTU/h)	33000	EVAPORATOR FAN MOTOR	
Standard Static(Without filter/Pa)	145	Motor Type	ECM
ELECTRICAL DATA		Horsepower (HP)	1/2
Voltage/Phase/Hz	208-230~/1/60	Full Load Amps (FLA)	3.2
SOUND POWER LEVEL [dB(A)]	60	Capacitor (uF)	/
MCA	36	Rated RPM	1000
MOP	40	EVAPORATOR COIL	
COMPRESSOR		Type	Aluminum Tube
Type	ROTARY	Fin Material	Hydrophilic Aluminium
Voltage/Phase/Hz	208-230~/1/60	REFRIGERATION SYSTEM	
RLA	22	Refrigerant	R32
NO. USED-NO. SPEEDS	1-INVERTER	LBS. R-32	5 LBS.-8 OZ.
INSULATION/SOUND BLANKET	NO	REFRIGERANT SENSOR	YES
COMPRESSOR HEAT	YES	Refrigerant Control	EXV
CONDENSER FAN MOTOR		DIMENSIONS	W×D×H
Motor Type	DC	Unit	50-9/16×34-5/8×45-1/4
Horsepower (HP)	2/7	Packing	51-3/16×35-1/4×46-5/11
Full Load Amps (FLA)	2.0	WEIGHT	
Capacitor (uF)	/	SHIPPING (LBS.)	416.7
Rated RPM	1000	NET (LBS.)	399.9

Fan Performance Table

Rooftop Package Unit	Blower Speeds		External Static Pressure (in.w.c)								
			0	0.1	0.2	0.3	0.4	0.5	0.6	0.7	0.8
36K/3Ton	1	CFM	1134	1056	997	951	899	842	786	717	673
		Watts	196	210	217	222	228	227	237	245	252
		Amps	1.80	1.88	1.93	1.97	2.01	2.03	2.10	2.15	2.20
	2	CFM	1251	1168	1111	1061	1018	973	933	846	788
		Watts	248	259	261	267	277	281	291	294	306
		Amps	2.18	2.25	2.28	2.33	2.39	2.43	2.50	2.54	2.61
	3	CFM	1355	1291	1230	1176	1133	1094	1055	993	936
		Watts	325	331	341	347	341	387	381	392	410
		Amps	2.75	2.81	2.87	2.92	2.92	3.07	3.06	3.15	3.25
	4	CFM	1501	1449	1373	1322	1280	1243	1207	1144	1086
		Watts	408	428	430	436	434	450	456	453	450
		Amps	3.43	3.52	3.56	3.61	3.62	3.71	3.75	3.73	3.71
	5	CFM	1541	1480	1365	1345	1283	1236	1197	1134	1069
		Watts	446	460	457	444	454	457	452	445	450
		Amps	3.73	3.78	3.77	3.71	3.75	3.76	3.74	3.71	3.72

The highlighted area indicates the airflow within the required range of 300-450cfm/ton.

NOTES:

1. This table is only used to select the highest blower speed.

2. The rated airflow of systems without electric heater kits requires between 300 and 450 cubic feet of air per minute (CFM). The rated airflow of systems with electric heater kits requires between 350 and 450 cubic feet of air per minute (CFM).
3. The air distribution system has the greatest effect on airflow. Therefore, the contractor should use only industry-recognized procedures.
4. Duct design and construction should be carefully done. System performance can be lowered dramatically through poor design or workmanship.
5. Air supplier ducts should be located along the perimeter of the conditioned space and properly sized. Improper location or insufficient air flow may cause drafts or noise in the ductwork.
6. Installers should balance the air distribution system to ensure proper quiet airflow to all rooms in the home. An air velocity meter or airflow hood can be used to balance and verify branch and system airflow (CFM).

Electrical Data

Heater Kit Model	Rooftop Package Unit	Electric Heater (kW)	MCA (Min.Circuit Ampacity)		MOP(Max. Fuse or Breaker (HACR) Ampacity)	
			208V	230V	208V	230V
ZP-HP50-01	36K/3Ton	5	22.80	24.90	25	25
ZP-HP75-01		7.5	34.80	37.90	35	40
ZP-HP100-01		10	45.40	49.80	50	50
ZP-HP150-01		15	34.8/34.8	37.9/37.9	35/35	40/40

Note:

1. The electric heating must be installed by qualified personnel. Refer to current regulations and laws for installation location.
2. Ampacities for MCA and Fuse/breaker excluding the blower motor.
3. The heat pump system needs specific airflow. Each ton of cooling requires 350 to 450 cubic feet (CFM) of air per minute, or nominally 400 CFM.

Standard Features :

- a. Uses environmentally friendly R32 refrigerant.
- b. Evaporator uses inner-grooved aluminum tubes.
- c. Constructed with hydrophilic aluminum foil.
- d. ENERGY STAR Certified: Products that are recognized as the most efficient of ENERGY STAR.
- e. Using world famous brand compressor to ensure reliability and energy efficiency.
- f. RS485 communication is used between the internal and external PCB, more precise system control.
- g. The unit is equipped with a variety of sensors, EXV and pressure control switches, making the unit control more precise and energy-efficient.
- h. The unit can be installed on the ground or roof, and comes with static pressure at the factory, flexibly meeting different installation scenarios.

Optional Features :

- a. Electrical heater kits are optional: 5/7.5/10/15/20kW.
- b. Economizer is optional.
- c. WIFI control function is optional.

Rooftop Installation - Curb Mounting

The manufacturer does not supply roof curbs, they must be field supplied. The dimensions are shown in the following picture. On applications when a roof curb is used, the unit must be positioned on the curb so the front of the unit is tight against the curb.


The default orientation from the factory is for horizontal airflow. Convert the unit to downflow using the following procedure:

1. Remove the sheet metal screws securing the supply air cover and the sheet metal screws securing the return air cover from the base of the unit. Remove the covers from the base.
2. Place the covers over the horizontal supply and return openings (painted side out). Align the screw holes, and secure using the same screws removed in step 1.


Install the field-supplied roof mounting curb according to the Installation Instructions supplied with the curb. Install insulation, cant strips, roofing, and flashing. Ductwork must be attached to curb.

Notice:

1. The gasketing of the unit to the roof curb is critical for a water tight seal. Install gasketing material supplied with the field supplied roof curb. Improperly applied gasketing also can result in air leaks and poor unit performance.
2. The unit must be secured to the curb by installing screws through the bottom of the curb flange and into the unit base rails.
3. For units applied with a roof curb, the minimum clearance may be reduced from 1 inch to 1/2 inch between combustible roof curb material and supply air duct.
4. Failure to follow this caution may result in property damage. Ensure there is sufficient clearance for saw blade when cutting the outer horizontal flange of the roof curb so there is no damage to the roof or flashing.

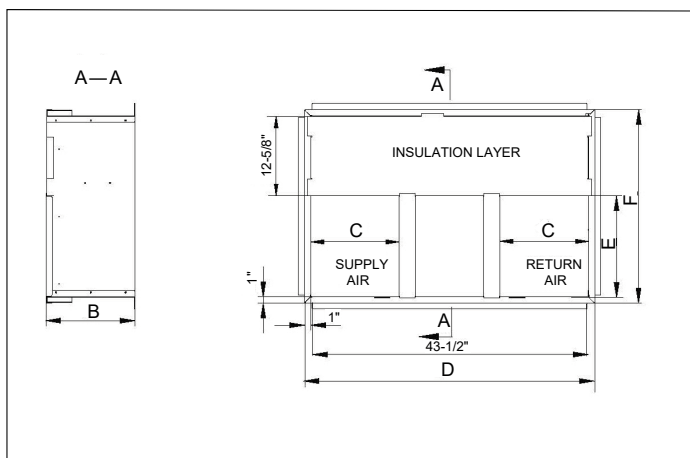

2/3Ton Roof Curb Details

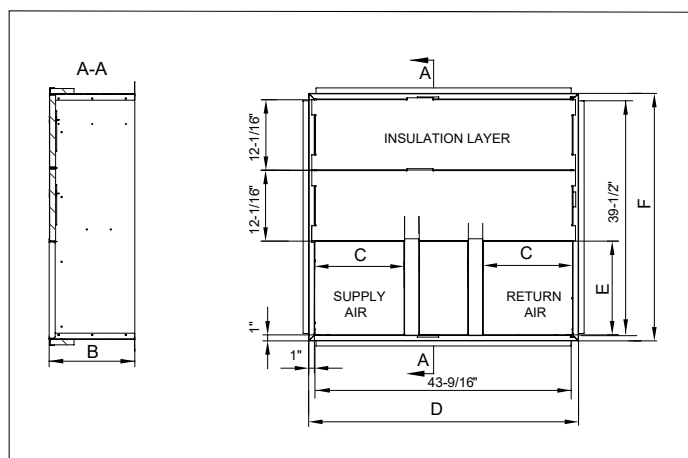

4/5Ton Roof Curb Details

Model	B	C	D	E	F
2/3Ton	14-1/4"	14"	46-1/16"	16"	30-5/8"
4/5Ton	14-1/4"	15-1/4"	46-1/16"	16"	42-3/16"

NOTES:


1. Roof Curb must be set up for unit being installed
2. Seal strip must be applied, as required, to unit being installed
3. Attach ductwork to curb (flanges of duct rest on curb)
4. Recommended insulated panels: 1 in. (25.4 mm) thick fiberglass 1 lb. density

NOTE: Innovair has a policy of continuous product and product data improvement and it reserves the right to change design and specifications without notice.


Submittal

AHRI: 218394214


Rooftop Inverter Package Unit Heat Pump TPV48H2XA 48 kBTU/h

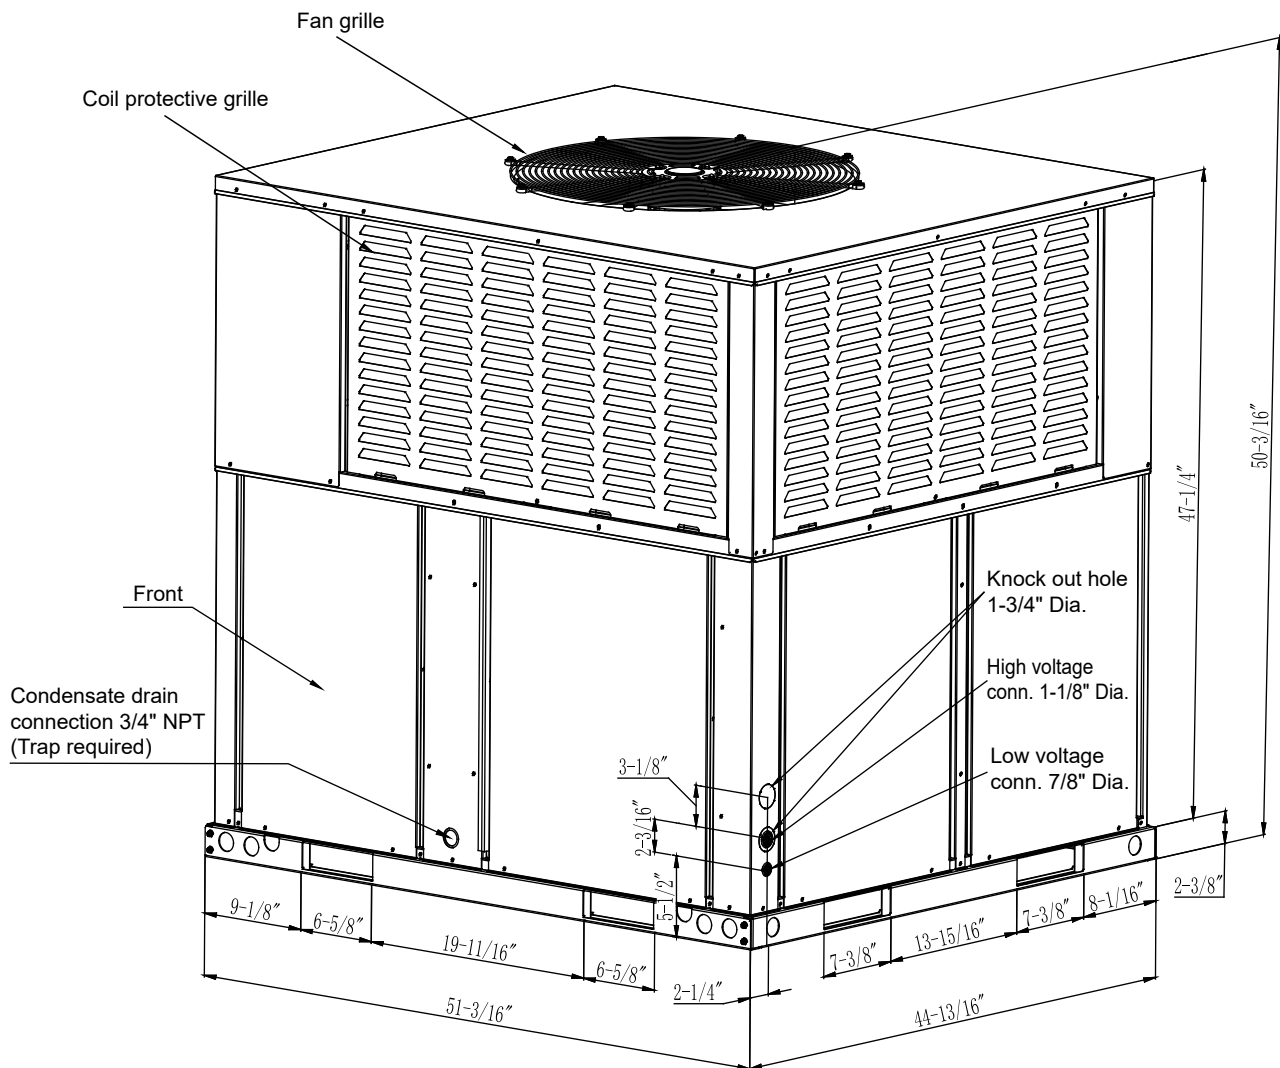

Bottom view

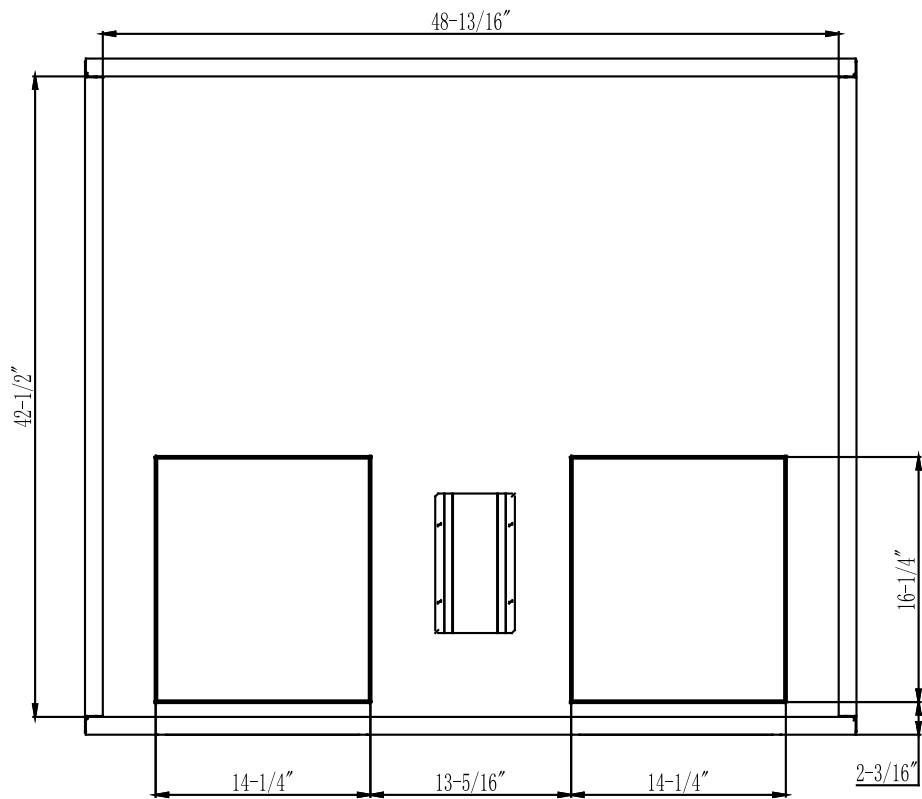

Back view

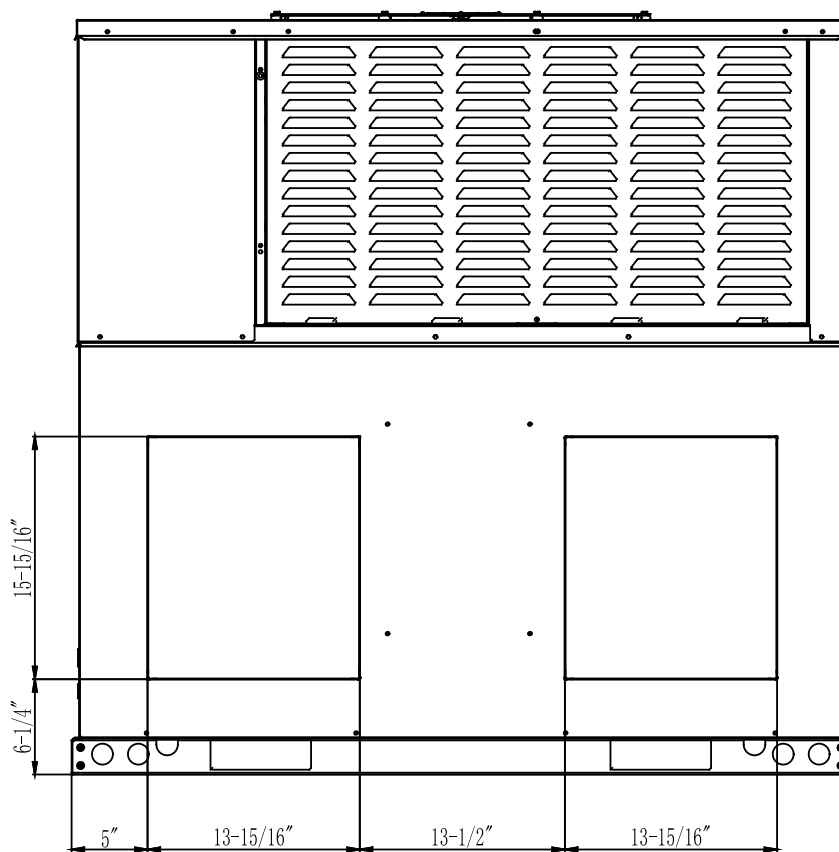

Product Specifications

Model	TPV48H2XA	CONDENSER COIL	
NOMINAL RATING		Type	Copper Tube
Cooling (BTU/h)	48000	Fin Material	Hydrophilic Aluminium
Heating (BTU/h)	48000	EVAPORATOR FAN MOTOR	
Standard Static(Without filter/Pa)	145	Motor Type	ECM
ELECTRICAL DATA		Horsepower (HP)	3/4
Voltage/Phase/Hz	208-230~/1/60	Full Load Amps (FLA)	5.5
SOUND POWER LEVEL [dB(A)]	62	Capacitor (uF)	/
MCA	48	Rated RPM	1050
MOP	60	EVAPORATOR COIL	
COMPRESSOR		Type	Aluminum Tube
Type	ROTARY	Fin Material	Hydrophilic Aluminium
Voltage/Phase/Hz	208-230~/1/60	REFRIGERATION SYSTEM	
RLA	30	Refrigerant	R32
NO. USED-NO. SPEEDS	1-INVERTER	LBS. R-32	8 LBS.-6 OZ.
INSULATION/SOUND BLANKET	NO	REFRIGERANT SENSOR	YES
COMPRESSOR HEAT	YES	Refrigerant Control	EXV
CONDENSER FAN MOTOR		DIMENSIONS	W×D×H
Motor Type	DC	Unit	51-3/16×44-13/16×50-3/16
Horsepower (HP)	2/7	Packing	51-3/4×45-1/2×50-3/4
Full Load Amps (FLA)	2.0	WEIGHT	
Capacitor (uF)	/	SHIPPING (LBS.)	538.8
Rated RPM	1050	NET (LBS.)	523.6

Fan Performance Table

Rooftop Package Unit	Blower Speeds		External Static Pressure (in.w.c)								
			0	0.1	0.2	0.3	0.4	0.5	0.6	0.7	0.8
48K/4Ton	1	CFM	1529	1460	1413	1358	1303	1244	1187	1111	1024
		Watts	242	249	256	263	271	279	288	291	312
		Amps	2.28	2.33	2.37	2.43	2.49	2.54	2.61	2.66	2.78
	2	CFM	1647	1605	1562	1514	1461	1405	1365	1300	1237
		Watts	306	316	324	333	342	351	357	369	380
		Amps	2.75	2.81	2.87	2.93	3.00	3.07	3.11	3.20	3.28
	3	CFM	1885	1847	1809	1769	1724	1677	1640	1585	1537
		Watts	447	457	466	475	484	495	502	514	523
		Amps	3.78	3.85	3.92	3.99	4.05	4.13	4.18	4.27	4.34
	4	CFM	1980	1934	1894	1855	1810	1763	1726	1673	1629
		Watts	510	520	526	532	539	548	557	568	577
		Amps	4.24	4.31	4.36	4.41	4.46	4.53	4.59	4.67	4.74
	5	CFM	2175	2134	2096	2060	2014	1960	1897	1839	1781
		Watts	649	659	670	661	681	679	659	678	654
		Amps	5.28	5.35	5.43	5.43	5.51	5.49	5.41	5.47	5.37

The highlighted area indicates the airflow within the required range of 300-450cfm/ton.

NOTES:

1. This table is only used to select the highest blower speed.

2. The rated airflow of systems without electric heater kits requires between 300 and 450 cubic feet of air per minute (CFM). The rated airflow of systems with electric heater kits requires between 350 and 450 cubic feet of air per minute (CFM).
3. The air distribution system has the greatest effect on airflow. Therefore, the contractor should use only industry-recognized procedures.
4. Duct design and construction should be carefully done. System performance can be lowered dramatically through poor design or workmanship.
5. Air supplier ducts should be located along the perimeter of the conditioned space and properly sized. Improper location or insufficient air flow may cause drafts or noise in the ductwork.
6. Installers should balance the air distribution system to ensure proper quiet airflow to all rooms in the home. An air velocity meter or airflow hood can be used to balance and verify branch and system airflow (CFM).

Electrical Data

Heater Kit Model	Rooftop Package Unit	Electric Heater (kW)	MCA (Min.Circuit Ampacity)		MOP(Max. Fuse or Breaker (HACR) Ampacity)	
			208V	230V	208V	230V
ZP-HP50-01	48K/4Ton	5	22.80	24.90	25	25
ZP-HP75-01		7.5	34.80	37.90	35	40
ZP-HP100-01		10	45.40	49.80	50	50
ZP-HP150-01		15	34.8/34.8	37.9/37.9	35/35	40/40
ZP-HP200-01		20	45.4/45.4	49.8/49.8	50/50	50/50

Note:

1. The electric heating must be installed by qualified personnel. Refer to current regulations and laws for installation location.
2. Ampacities for MCA and Fuse/breaker excluding the blower motor.
3. The heat pump system needs specific airflow. Each ton of cooling requires 350 to 450 cubic feet (CFM) of air per minute, or nominally 400 CFM.

Standard Features :

- a. Uses environmentally friendly R32 refrigerant.
- b. Evaporator uses inner-grooved aluminum tubes.
- c. Constructed with hydrophilic aluminum foil.
- d. ENERGY STAR Certified: Products that are recognized as the most efficient of ENERGY STAR.
- e. Using world famous brand compressor to ensure reliability and energy efficiency.
- f. RS485 communication is used between the internal and external PCB, more precise system control.
- g. The unit is equipped with a variety of sensors, EXV and pressure control switches, making the unit control more precise and energy-efficient.
- h. The unit can be installed on the ground or roof, and comes with static pressure at the factory, flexibly meeting different installation scenarios.

Optional Features :

- a. Electrical heater kits are optional: 5/7.5/10/15/20kW.
- b. Economizer is optional.
- c. WIFI control function is optional.

Rooftop Installation - Curb Mounting

The manufacturer does not supply roof curbs, they must be field supplied. The dimensions are shown in the following picture. On applications when a roof curb is used, the unit must be positioned on the curb so the front of the unit is tight against the curb.


The default orientation from the factory is for horizontal airflow. Convert the unit to downflow using the following procedure:

1. Remove the sheet metal screws securing the supply air cover and the sheet metal screws securing the return air cover from the base of the unit. Remove the covers from the base.
2. Place the covers over the horizontal supply and return openings (painted side out). Align the screw holes, and secure using the same screws removed in step 1.


Install the field-supplied roof mounting curb according to the Installation Instructions supplied with the curb. Install insulation, cant strips, roofing, and flashing. Ductwork must be attached to curb.

Notice:

1. The gasketing of the unit to the roof curb is critical for a water tight seal. Install gasketing material supplied with the field supplied roof curb. Improperly applied gasketing also can result in air leaks and poor unit performance.
2. The unit must be secured to the curb by installing screws through the bottom of the curb flange and into the unit base rails.
3. For units applied with a roof curb, the minimum clearance may be reduced from 1 inch to 1/2 inch between combustible roof curb material and supply air duct.
4. Failure to follow this caution may result in property damage. Ensure there is sufficient clearance for saw blade when cutting the outer horizontal flange of the roof curb so there is no damage to the roof or flashing.

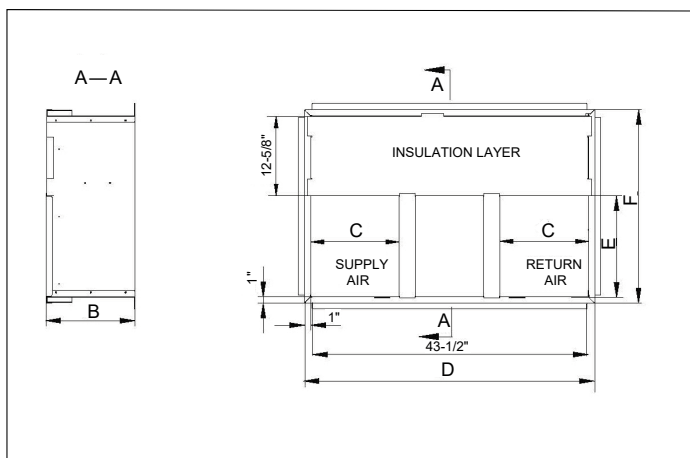

2/3Ton Roof Curb Details

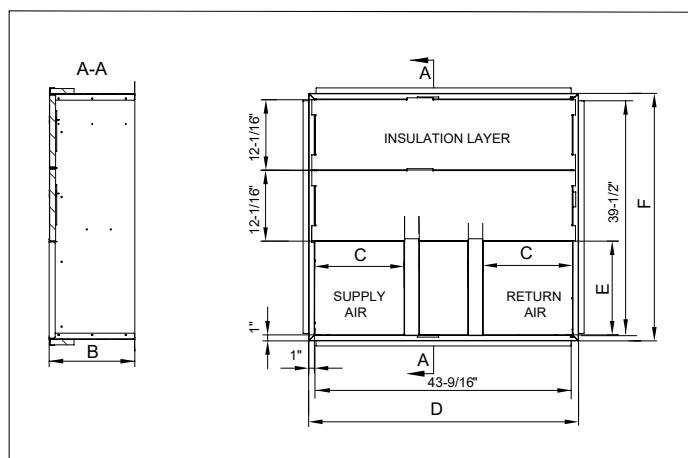

4/5Ton Roof Curb Details

Model	B	C	D	E	F
2/3Ton	14-1/4"	14"	46-1/16"	16"	30-5/8"
4/5Ton	14-1/4"	15-1/4"	46-1/16"	16"	42-3/16"

NOTES:

1. Roof Curb must be set up for unit being installed
2. Seal strip must be applied, as required, to unit being installed
3. Attach ductwork to curb (flanges of duct rest on curb)
4. Recommended insulated panels: 1 in. (25.4 mm) thick fiberglass 1 lb. density

NOTE: Innovair has a policy of continuous product and product data improvement and it reserves the right to change design and specifications without notice.




AHRI: 218338176

TPV60H2XA


60 kBTU/h



Bottom view

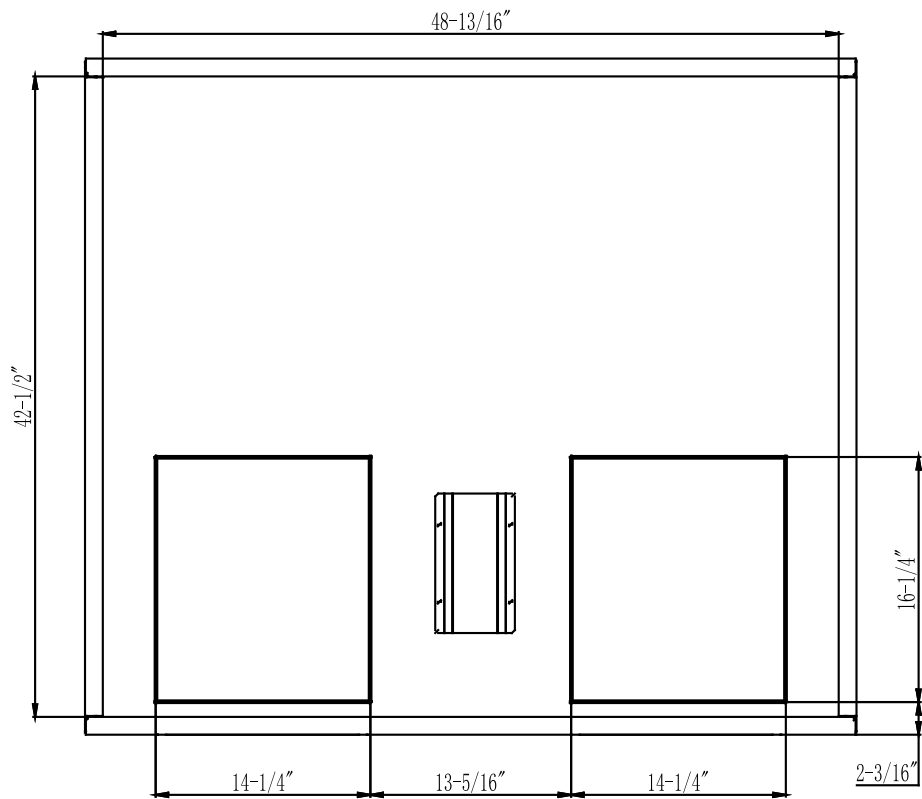

Back view

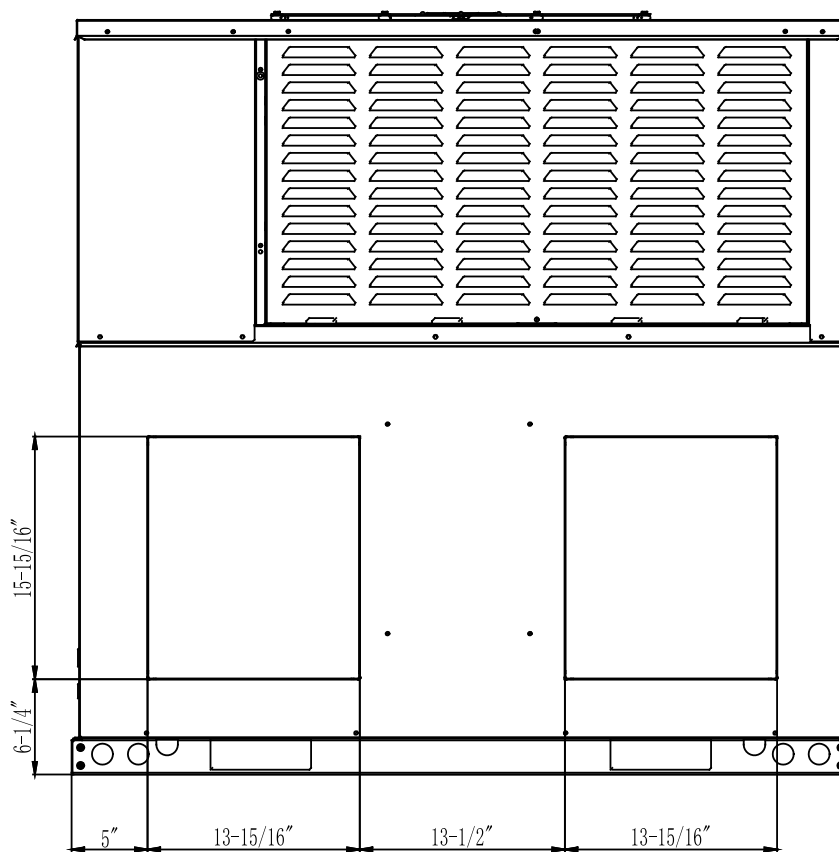

Product Specifications

Model	TPV60H2XA	CONDENSER COIL	
NOMINAL RATING		Type	Copper Tube
Cooling (BTU/h)	56000	Fin Material	Hydrophilic Aluminium
Heating (BTU/h)	56000	EVAPORATOR FAN MOTOR	
Standard Static(Without filter/Pa)	145	Motor Type	ECM
ELECTRICAL DATA		Horsepower (HP)	3/4
Voltage/Phase/Hz	208-230~/1/60	Full Load Amps (FLA)	5.5
SOUND POWER LEVEL [dB(A)]	62	Capacitor (uF)	/
MCA	48	Rated RPM	1050
MOP	60	EVAPORATOR COIL	
COMPRESSOR		Type	Aluminum Tube
Type	ROTARY	Fin Material	Hydrophilic Aluminium
Voltage/Phase/Hz	208-230~/1/60	REFRIGERATION SYSTEM	
RLA	30	Refrigerant	R32
NO. USED-NO. SPEEDS	1-INVERTER	LBS. R-32	8 LBS.-6 OZ.
INSULATION/SOUND BLANKET	NO	REFRIGERANT SENSOR	YES
COMPRESSOR HEAT	YES	Refrigerant Control	EXV
CONDENSER FAN MOTOR		DIMENSIONS	W×D×H
Motor Type	DC	Unit	51-3/16×44-13/16×50-3/16
Horsepower (HP)	2/7	Packing	51-3/4×45-1/2×50-3/4
Full Load Amps (FLA)	2.0	WEIGHT	
Capacitor (uF)	/	SHIPPING (LBS.)	538.8
Rated RPM	1050	NET (LBS.)	523.6

Fan Performance Table

Rooftop Package Unit	Blower Speeds		External Static Pressure (in.w.c)								
			0	0.1	0.2	0.3	0.4	0.5	0.6	0.7	0.8
60K/5Ton	1	CFM	1529	1460	1413	1358	1303	1244	1187	1111	1024
		Watts	242	249	256	263	271	279	288	291	312
		Amps	2.28	2.33	2.37	2.43	2.49	2.54	2.61	2.66	2.78
	2	CFM	1647	1605	1562	1514	1461	1405	1365	1300	1237
		Watts	306	316	324	333	342	351	357	369	380
		Amps	2.75	2.81	2.87	2.93	3.00	3.07	3.11	3.20	3.28
	3	CFM	1885	1847	1809	1769	1724	1677	1640	1585	1537
		Watts	447	457	466	475	484	495	502	514	523
		Amps	3.78	3.85	3.92	3.99	4.05	4.13	4.18	4.27	4.34
	4	CFM	1980	1934	1894	1855	1810	1763	1726	1673	1629
		Watts	510	520	526	532	539	548	557	568	577
		Amps	4.24	4.31	4.36	4.41	4.46	4.53	4.59	4.67	4.74
	5	CFM	2175	2134	2096	2060	2014	1960	1897	1839	1781
		Watts	649	659	670	661	681	679	659	678	654
		Amps	5.28	5.35	5.43	5.43	5.51	5.49	5.41	5.47	5.37

The highlighted area indicates the airflow within the required range of 300-450cfm/ton.

NOTES:

1. This table is only used to select the highest blower speed.

2. The rated airflow of systems without electric heater kits requires between 300 and 450 cubic feet of air per minute (CFM). The rated airflow of systems with electric heater kits requires between 350 and 450 cubic feet of air per minute (CFM).
3. The air distribution system has the greatest effect on airflow. Therefore, the contractor should use only industry-recognized procedures.
4. Duct design and construction should be carefully done. System performance can be lowered dramatically through poor design or workmanship.
5. Air supplier ducts should be located along the perimeter of the conditioned space and properly sized. Improper location or insufficient air flow may cause drafts or noise in the ductwork.
6. Installers should balance the air distribution system to ensure proper quiet airflow to all rooms in the home. An air velocity meter or airflow hood can be used to balance and verify branch and system airflow (CFM).

Electrical Data

Heater Kit Model	Rooftop Package Unit	Electric Heater (kW)	MCA (Min.Circuit Ampacity)		MOP(Max. Fuse or Breaker (HACR) Ampacity)	
			208V	230V	208V	230V
ZP-HP50-01	60K/5Ton	5	22.80	24.90	25	25
ZP-HP75-01		7.5	34.80	37.90	35	40
ZP-HP100-01		10	45.40	49.80	50	50
ZP-HP150-01		15	34.8/34.8	37.9/37.9	35/35	40/40
ZP-HP200-01		20	45.4/45.4	49.8/49.8	50/50	50/50

Note:

1. The electric heating must be installed by qualified personnel. Refer to current regulations and laws for installation location.
2. Ampacities for MCA and Fuse/breaker excluding the blower motor.
3. The heat pump system needs specific airflow. Each ton of cooling requires 350 to 450 cubic feet (CFM) of air per minute, or nominally 400 CFM.

Standard Features :

- a. Uses environmentally friendly R32 refrigerant.
- b. Evaporator uses inner-grooved aluminum tubes.
- c. Constructed with hydrophilic aluminum foil.
- d. ENERGY STAR Certified: Products that are recognized as the most efficient of ENERGY STAR.
- e. Using world famous brand compressor to ensure reliability and energy efficiency.
- f. RS485 communication is used between the internal and external PCB, more precise system control.
- g. The unit is equipped with a variety of sensors, EXV and pressure control switches, making the unit control more precise and energy-efficient.
- h. The unit can be installed on the ground or roof, and comes with static pressure at the factory, flexibly meeting different installation scenarios.

Optional Features :

- a. Electrical heater kits are optional: 5/7.5/10/15/20kW.
- b. Economizer is optional.
- c. WIFI control function is optional.

Rooftop Installation - Curb Mounting

The manufacturer does not supply roof curbs, they must be field supplied. The dimensions are shown in the following picture. On applications when a roof curb is used, the unit must be positioned on the curb so the front of the unit is tight against the curb.


The default orientation from the factory is for horizontal airflow. Convert the unit to downflow using the following procedure:

1. Remove the sheet metal screws securing the supply air cover and the sheet metal screws securing the return air cover from the base of the unit. Remove the covers from the base.
2. Place the covers over the horizontal supply and return openings (painted side out). Align the screw holes, and secure using the same screws removed in step 1.


Install the field-supplied roof mounting curb according to the Installation Instructions supplied with the curb. Install insulation, cant strips, roofing, and flashing. Ductwork must be attached to curb.

Notice:

1. The gasketing of the unit to the roof curb is critical for a water tight seal. Install gasketing material supplied with the field supplied roof curb. Improperly applied gasketing also can result in air leaks and poor unit performance.
2. The unit must be secured to the curb by installing screws through the bottom of the curb flange and into the unit base rails.
3. For units applied with a roof curb, the minimum clearance may be reduced from 1 inch to 1/2 inch between combustible roof curb material and supply air duct.
4. Failure to follow this caution may result in property damage. Ensure there is sufficient clearance for saw blade when cutting the outer horizontal flange of the roof curb so there is no damage to the roof or flashing.

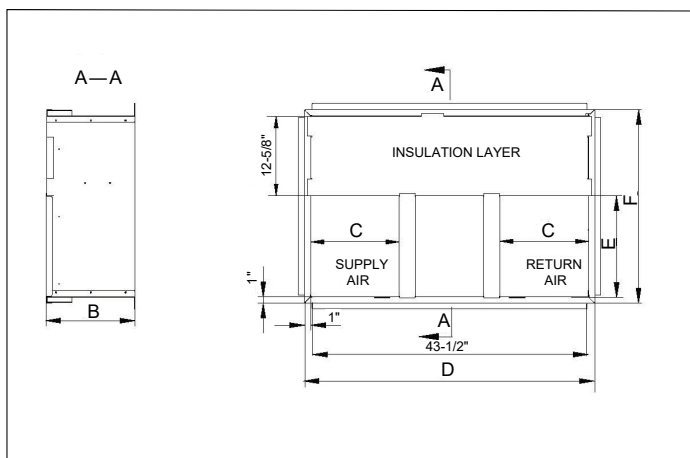

2/3Ton Roof Curb Details

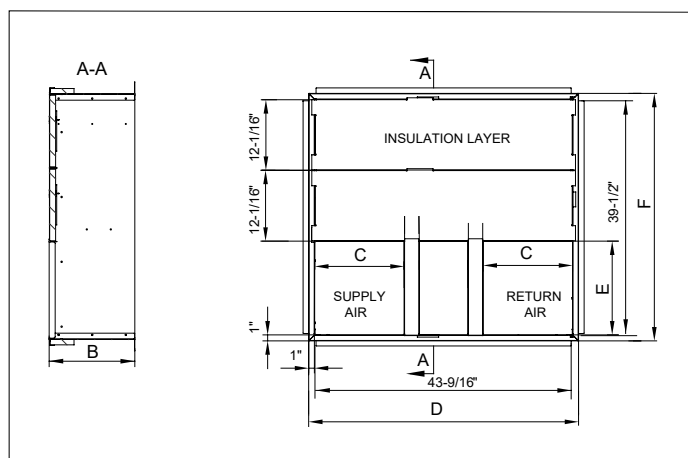

4/5Ton Roof Curb Details

Model	B	C	D	E	F
2/3Ton	14-1/4"	14"	46-1/16"	16"	30-5/8"
4/5Ton	14-1/4"	15-1/4"	46-1/16"	16"	42-3/16"

NOTES:

1. Roof Curb must be set up for unit being installed
2. Seal strip must be applied, as required, to unit being installed
3. Attach ductwork to curb (flanges of duct rest on curb)
4. Recommended insulated panels: 1 in. (25.4 mm) thick fiberglass 1 lb. density

NOTE: Innovair has a policy of continuous product and product data improvement and it reserves the right to change design and specifications without notice.