


▼Fuse Panel Description
Fuse block (Engine compartment)

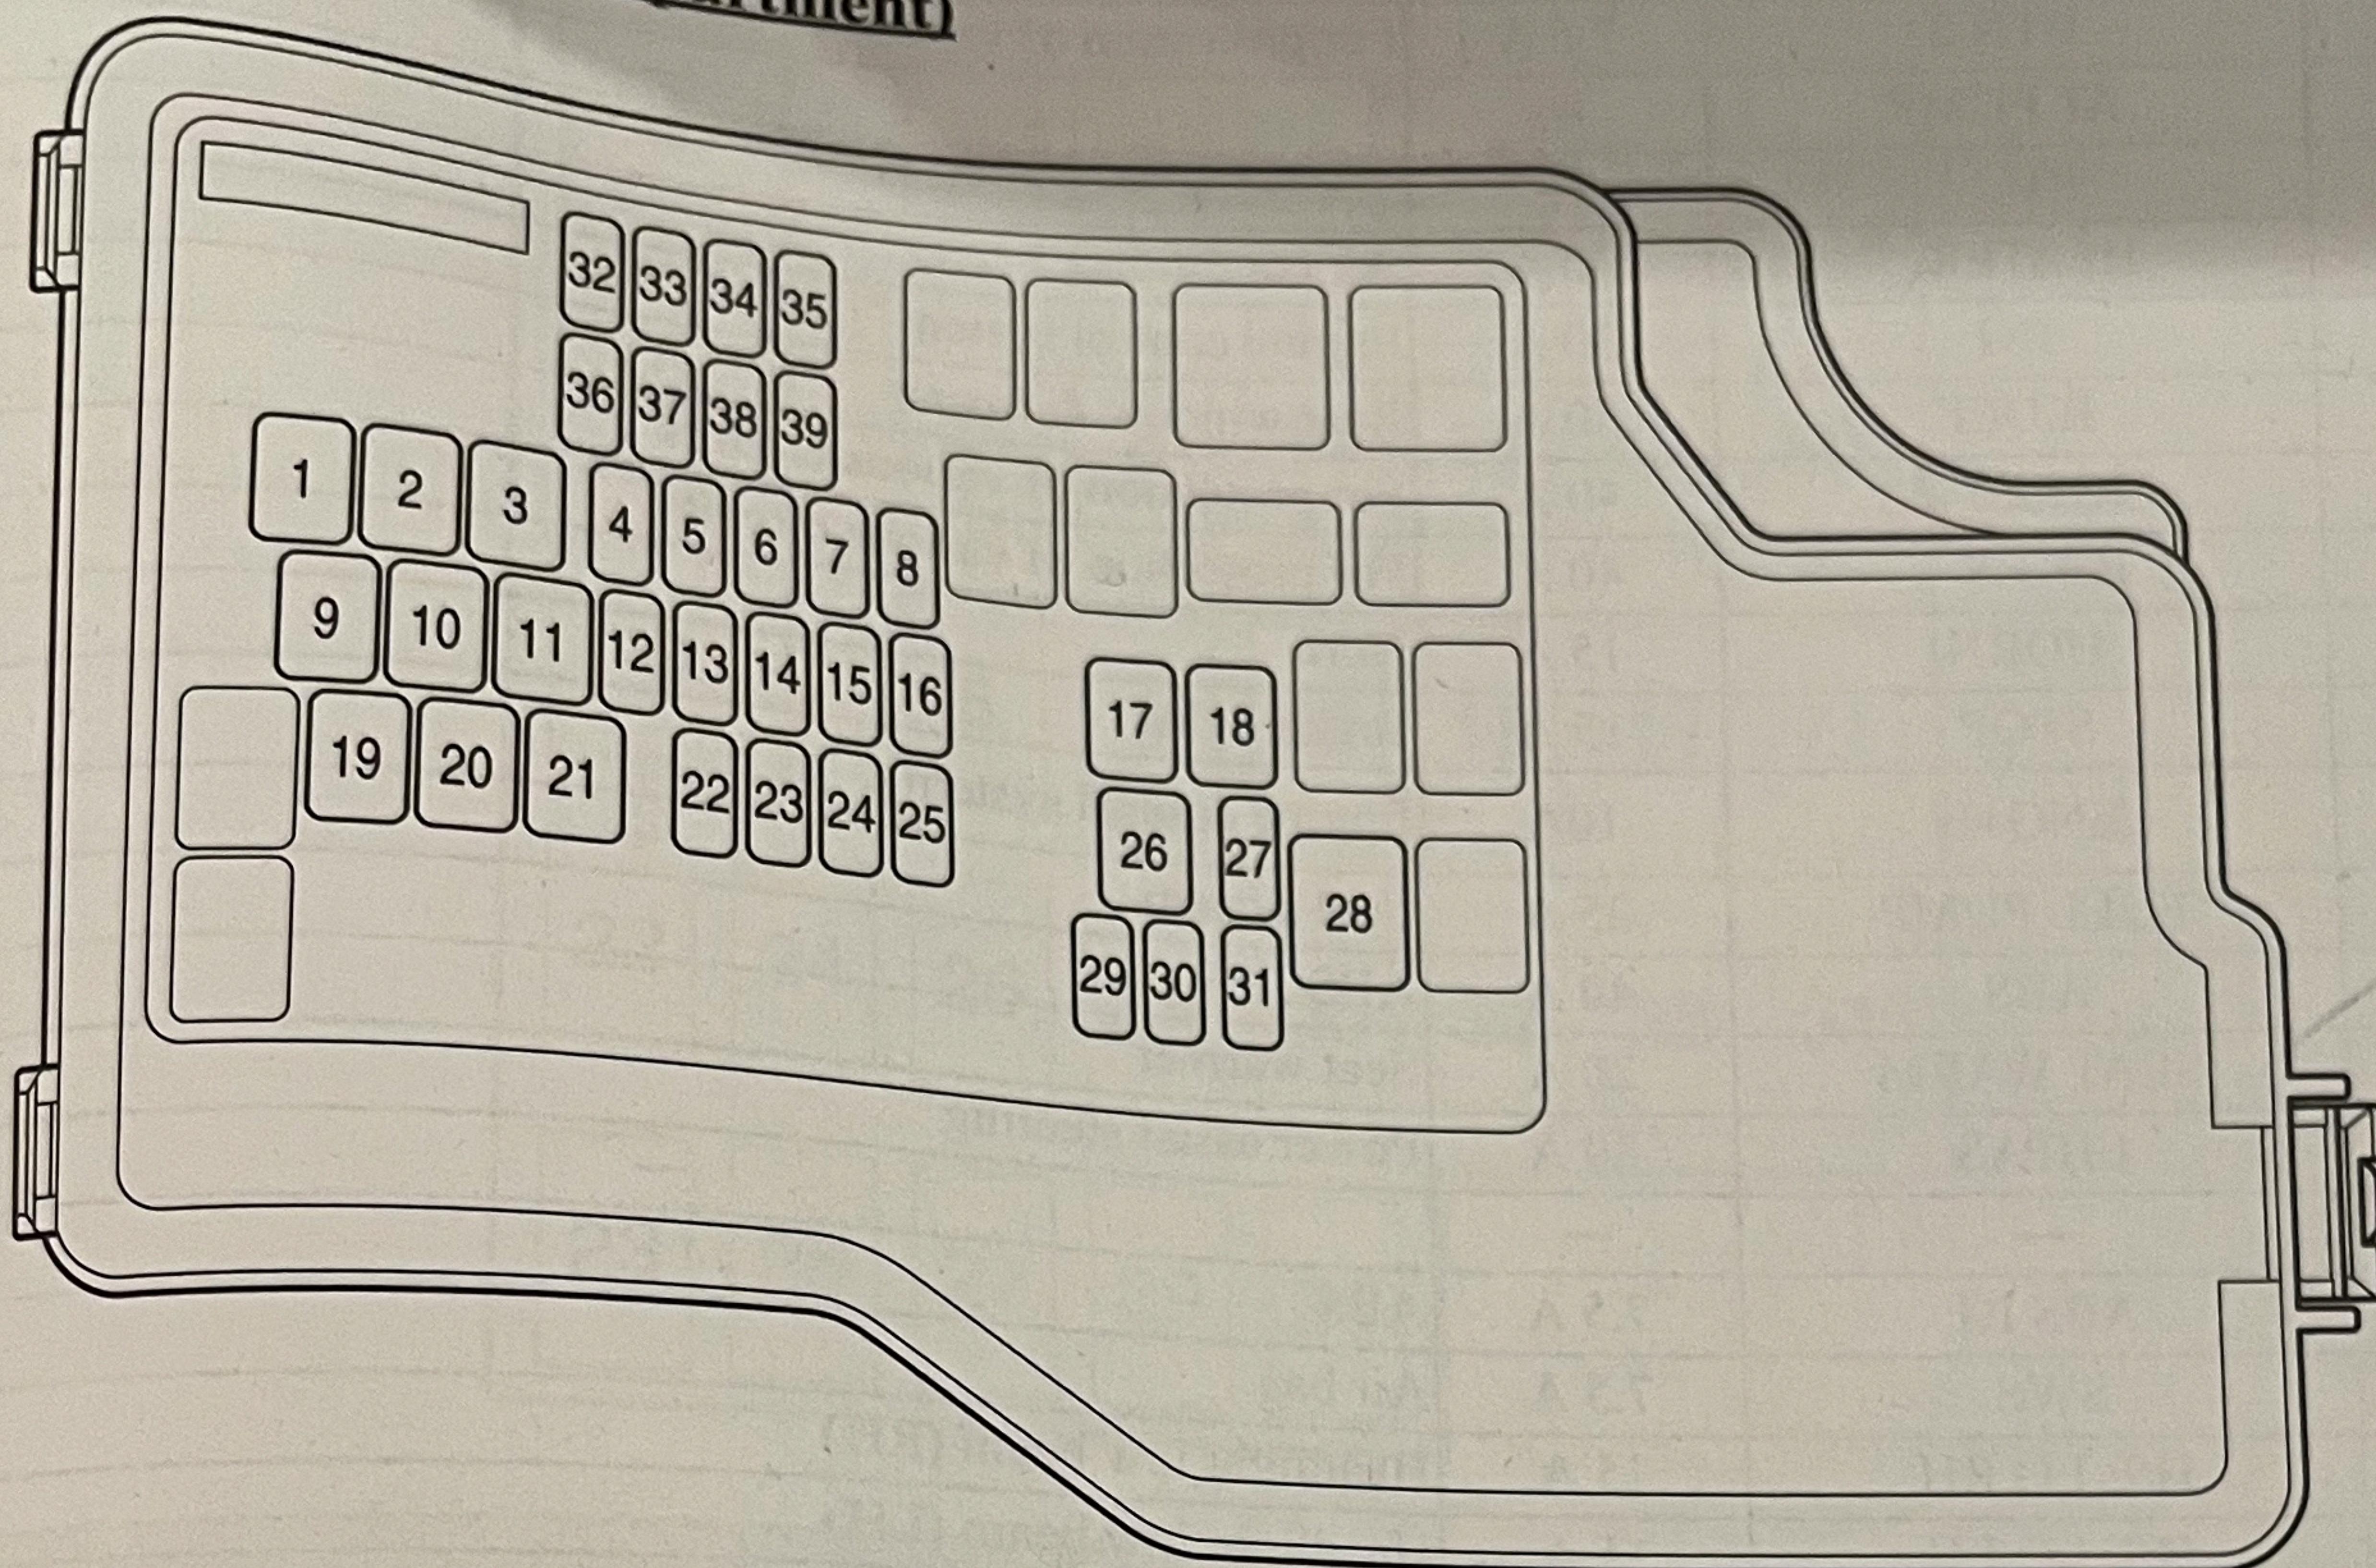

DESCRIPTION		FUSE RATING	PROTECTED COMPONENT
1	DCDC ^{*1}	—	—
	FAN 2 ^{*2}	40 A	Cooling fan*
2	ENG MAIN	40 A	Engine control system
3	BTN 1	50 A	For protection of various circuits
4	A/C MAG	7.5 A	Air conditioner
5	H/L HI	20 A	Headlight high beam
6	FOG	15 A	Fog lights*
7	H/L WASH	—	—
8	SUNROOF	15 A	Moonroof*
9	HEATER ^{*1}	40 A	Air conditioner
	F.DEF RH ^{*2}	—	—
10	EVVT ^{*1}	20 A	Engine control system
11	F.DEF LH ^{*2}	—	—
	FAN 1	40 A	Cooling fan*
12	ROOM	15 A	Overhead lights
13	TCM	15 A	Transaxle control system*
14	DSC	20 A	Dynamic Stability Control system*

* Some models.

Maintenance and Care
Owner Maintenance

DESCRIPTION		FUSE RATING	PROTECTED COMPONENT
15	BTN 2	7.5 A	For protection of various circuits
16	AT PUMP	—	—
17	PTC ^{*1} HEATER ^{*2}	40 A	Air conditioner
18	INJ	30 A	Engine control system*
19	R.DEF	30 A	Rear window defroster
20	IGKEY 2	40 A	For protection of various circuits
21	IGKEY 1	40 A	For protection of various circuits
22	HORN	15 A	Horn
23	STOP	15 A	Brake lights
24	ENG+B	10A	Engine control system
25	FUEL PUMP	25 A	Fuel system
26	ABS	40 A	ABS
27	SEAT WARM	20 A	Seat warmer*
28	EHPAS	80 A	Power assist steering
29	—	—	—
30	ABS IG	7.5 A	ABS
31	SWS	7.5 A	Air bag
32	H/L LO RH	15 A	Headlight low beam (RH)
33	H/L LO LH	15 A	Headlight low beam (LH)
34	ILLUM	7.5 A	Instrument panel illumination
35	TAIL	15 A	Taillights, Parking lights, License plate lights
36	ENG INJ	15 A	Engine control system
37	ENG BAR	15 A	Engine control system
38	ENG INJ2 ^{*1} ENG BAR 2 ^{*2}	15 A 20 A	Engine control system Engine control system
39	EHPAS IG ^{*1} ETV ^{*2}	— 15 A	— Engine control system

*1 SKYACTIV-G 2.0

*2 MZR 2.0, MZR 2.3 DISI Turbo and MZR 2.5

Fuse block

DI
1
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17