

DeGirum AI Client for C++ Reference Guide

Contents

1 DeGirum AI Client for C++ **1**
- 1.1 Introduction . . . 1
  - 1.1.1 AI Server Package . . . 1
  - 1.1.2 AI Model Zoo . . . 2
  - 1.1.3 AI Client Package . . . 2
- 1.2 AI Client Package Installation and Build . . . 3
  - 1.2.1 Installation Pre-Requisites . . . 3
  - 1.2.2 AI Client Package Installation . . . 3
  - 1.2.3 AI Client Package Build . . . 4
- 1.3 AI Client C++ API Description . . . 4
  - 1.3.1 AI Server Connection and Addressing . . . 4
  - 1.3.2 Listing and Searching Models in Local Model Zoo . . . 5
  - 1.3.3 Working with Cloud Zoo Models . . . 6
  - 1.3.4 AIModel: Synchronous Sequential AI Inferencing API . . . 7
  - 1.3.5 Format of Inference Results . . . 7
  - 1.3.6 AIModelAsync: Asynchronous Pipelined AI Inferencing API . . . 9
  - 1.3.7 Model Parameters Management . . . 11
  - 1.3.8 Format of Data Frames for Image Processing Models . . . 14
  - 1.3.9 Error Handling . . . 14

2 Hierarchical Index **17**
- 2.1 Class Hierarchy . . . 17

3 Class Index **19**
- 3.1 Class List . . . 19

4 File Index **21**
- 4.1 File List . . . 21

5 Namespace Documentation **23**
- 5.1 DG Namespace Reference . . . 23
  - 5.1.1 Detailed Description . . . 25
  - 5.1.2 Enumeration Type Documentation . . . 25
    - 5.1.2.1 DetectionStatus . . . 26
    - 5.1.2.2 ServerType . . . 26
  - 5.1.3 Function Documentation . . . 26
    - 5.1.3.1 detectHostnameServers() . . . 26
    - 5.1.3.2 detectSubnetServers() . . . 27
    - 5.1.3.3 devCtrl() . . . 27
    - 5.1.3.4 errorCheck() . . . 28
    - 5.1.3.5 jsonGetMandatoryValue() . . . 28
    - 5.1.3.6 jsonGetOptionalValue() . . . 28
    - 5.1.3.7 jsonKeyExist() . . . 29
    - 5.1.3.8 jsonSetOptionalValue() . . . 29
    - 5.1.3.9 labelDictionary() . . . 30
    - 5.1.3.10 messagePrepare() . . . 30

5.1.3.11 messagePrepareJson() . . . 31
5.1.3.12 modelFind() . . . 31
5.1.3.13 modelzooListGet() . . . 31
5.1.3.14 modelZooManage() . . . 32
5.1.3.15 serverPing() . . . 32
5.1.3.16 shutdown() . . . 33
5.1.3.17 systemInfo() . . . 33
5.1.3.18 traceManage() . . . 33
5.1.3.19 versionGet() . . . 33
5.1.4 Variable Documentation . . . 34
5.1.4.1 MODEL_PARAMS_CURRENT_VERSION . . . 34
5.1.4.2 MODEL_PARAMS_MIN_COMPATIBLE_VERSION . . . 34
5.1.4.3 SECT_TOP . . . 34

6 Class Documentation **35**
6.1 DG::AIModel Class Reference . . . 35
6.1.1 Detailed Description . . . 35
6.1.2 Constructor & Destructor Documentation . . . 35
6.1.2.1 AIModel() . . . 36
6.1.3 Member Function Documentation . . . 36
6.1.3.1 predict() . . . 36
6.2 DG::AIModelAsync Class Reference . . . 37
6.2.1 Detailed Description . . . 37
6.2.2 Member Typedef Documentation . . . 37
6.2.2.1 callback_t . . . 38
6.2.3 Constructor & Destructor Documentation . . . 38
6.2.3.1 AIModelAsync() . . . 38
6.2.3.2 ~AIModelAsync() . . . 39
6.2.4 Member Function Documentation . . . 39
6.2.4.1 lastError() . . . 39
6.2.4.2 predict() . . . 39
6.2.4.3 setCallback() . . . 39
6.2.4.4 waitCompletion() . . . 40
6.3 DG::BasicTensor Class Reference . . . 40
6.3.1 Detailed Description . . . 42
6.3.2 Constructor & Destructor Documentation . . . 43
6.3.2.1 BasicTensor() [1/3] . . . 43
6.3.2.2 BasicTensor() [2/3] . . . 43
6.3.2.3 BasicTensor() [3/3] . . . 44
6.3.3 Member Function Documentation . . . 44
6.3.3.1 adopt() . . . 44
6.3.3.2 alloc() [1/3] . . . 45
6.3.3.3 alloc() [2/3] . . . 45
6.3.3.4 alloc() [3/3] . . . 46
6.3.3.5 convert() [1/2] . . . 46
6.3.3.6 convert() [2/2] . . . 46
6.3.3.7 copy() . . . 47
6.3.3.8 data() [1/2] . . . 47
6.3.3.9 data() [2/2] . . . 47
6.3.3.10 dequantize() . . . 47
6.3.3.11 isEqualData() [1/2] . . . 47
6.3.3.12 isEqualData() [2/2] . . . 48
6.3.3.13 isEqualDataShape() . . . 48
6.3.3.14 isEqualStruct() . . . 48
6.3.3.15 linearSizeCalc() . . . 49
6.3.3.16 quantize() . . . 49
6.3.3.17 quantParamsSet() . . . 49
6.3.3.18 reinterpretShapeForYolo() . . . 49

6.3.3.19 reinterpretShapeScaled() . . . 50
6.3.3.20 reshapeCombineDims() . . . 50
6.3.3.21 reshapeTo() [1/2] . . . 50
6.3.3.22 reshapeTo() [2/2] . . . 50
6.3.3.23 shapeStringGet() [1/2] . . . 50
6.3.3.24 shapeStringGet() [2/2] . . . 51
6.4 DG::JsonHelper Class Reference . . . 51
6.4.1 Detailed Description . . . 51
6.4.2 Member Function Documentation . . . 52
6.4.2.1 errorCheck() . . . 52
6.4.2.2 jsonDeserialize() . . . 52
6.4.2.3 jsonDeserializeStr() . . . 52
6.4.2.4 jsonSerialize() . . . 53
6.4.2.5 jsonSerializeStr() . . . 53
6.4.2.6 parse() . . . 53
6.4.2.7 parse_ignore_errors() . . . 54
6.4.2.8 tensorDeserialize() . . . 54
6.4.2.9 tensorSerialize() . . . 55
6.5 DG::ModelInfo Struct Reference . . . 55
6.5.1 Detailed Description . . . 56
6.6 DG::ModelParams< Base, > Class Template Reference . . . 56
6.6.1 Detailed Description . . . 58
6.6.2 Constructor & Destructor Documentation . . . 58
6.6.2.1 ModelParams() [1/4] . . . 58
6.6.2.2 ModelParams() [2/4] . . . 58
6.6.2.3 ModelParams() [3/4] . . . 59
6.6.2.4 ModelParams() [4/4] . . . 59
6.7 DG::ModelParamsReadAccess Class Reference . . . 59
6.7.1 Detailed Description . . . 61
6.7.2 Constructor & Destructor Documentation . . . 61
6.7.2.1 ModelParamsReadAccess() . . . 61
6.7.3 Member Function Documentation . . . 61
6.7.3.1 fullJsonGet() . . . 61
6.7.3.2 jsonGet() . . . 61
6.7.3.3 modelHashGet() . . . 62
6.7.3.4 modelShapeGet() . . . 62
6.7.3.5 operator const json &() . . . 62
6.7.3.6 operator std::string() . . . 62
6.7.3.7 paramExist() . . . 63
6.7.3.8 paramGet() . . . 63
6.7.3.9 sectionGet() . . . 64
6.7.3.10 sectionSizeGet() . . . 64
6.8 DG::ModelParamsSection Struct Reference . . . 65
6.8.1 Detailed Description . . . 65
6.9 DG::ModelParamsWriteAccess Class Reference . . . 65
6.9.1 Detailed Description . . . 66
6.9.2 Constructor & Destructor Documentation . . . 66
6.9.2.1 ModelParamsWriteAccess() . . . 67
6.9.3 Member Function Documentation . . . 68
6.9.3.1 merge() . . . 68
6.9.3.2 paramSet() . . . 68
6.9.3.3 set_dirty() . . . 69
6.10 DG::ModelQuery Struct Reference . . . 69
6.10.1 Detailed Description . . . 69
6.10.2 Member Enumeration Documentation . . . 69
6.10.2.1 TriState . . . 69
6.11 DG::BasicTensor::quant_params_t Struct Reference . . . 70
6.11.1 Detailed Description . . . 70

6.11.2 Constructor & Destructor Documentation . . . 71
6.11.2.1 quant_params_t() [1/3] . . . 71
6.11.2.2 quant_params_t() [2/3] . . . 72
6.11.2.3 quant_params_t() [3/3] . . . 72
6.11.3 Member Function Documentation . . . 72
6.11.3.1 isEqualData() . . . 72
6.11.3.2 isEqualStruct() . . . 73
6.12 DG::BasicTensor::quant_params_t::scale_t Struct Reference . . . 73
6.12.1 Detailed Description . . . 73
6.13 DG::ServerAddress Struct Reference . . . 73
6.13.1 Detailed Description . . . 74
6.13.2 Constructor & Destructor Documentation . . . 74
6.13.2.1 ServerAddress() . . . 74
6.13.3 Member Function Documentation . . . 75
6.13.3.1 fromHostname() . . . 75
6.13.3.2 is_valid() . . . 75

7 File Documentation **77**
7.1 dg_client_structs.h File Reference . . . 77
7.1.1 Detailed Description . . . 79
7.2 dg_json_helpers.h File Reference . . . 79
7.2.1 Detailed Description . . . 80
7.3 dg_model_api.h File Reference . . . 81
7.3.1 Detailed Description . . . 82
7.4 dg_model_parameters.h File Reference . . . 82
7.4.1 Detailed Description . . . 84
7.5 dg_tensor_structs.h File Reference . . . 84
7.5.1 Detailed Description . . . 86

Index **87**

Chapter 1

DeGirum AI Client for C++

1.1 Introduction

The DeGirum AI Client package referenced in this document is the part of DeGirum AI Software Suite.

Note: AI Client package consists of multiple programming language support packs. This document describes AI Client for C++. AI client packs for other languages are described in separate documents.

The DeGirum AI Software Suite provides means to perform fast and efficient AI model inferencing on locally installed AI hardware accelerator platforms.

The list of supported hardware accelerator platforms includes all DeGirum Orca AI hardware accelerators and Google Edge TPU accelerators. AI inferencing on local host CPU is also supported.

The DeGirum AI Software Suite consists of DeGirum AI Server package, AI Model Zoo, and DeGirum AI Client package.

1.1.1 AI Server Package

The AI Server package is installed on a computer system where AI hardware accelerators are connected to. The purpose of the AI Server is the following:

- It controls AI hardware accelerators
- It provides distributed and concurrent access of multiple AI clients to AI inferencing functionality of AI hardware accelerators over the TCP/IP network
- It maintains local AI model zoo with AI models to be used for AI inferencing
- It provides Web-based GUI to manage local model zoo

The following computer platforms are currently supported for the server installation:

- Intel x64 with Linux 64-bit OS
- ARM64 with Linux 64-bit OS

The support for following computer platforms is currently under development:

- Intel x64 with Windows 10 OS
- Intel x64 with MacOS
- ARM64 with MacOS

The AI Server for Linux is distributed as fully configured Docker container (refer to https://hub.docker.com/r/degirum/aiserver), which simplifies AI Server deployment to the variety of Linux platforms.

1.1.2 AI Model Zoo

The AI Model Zoo is the place where AI models reside.

The local AI Model Zoo of DeGirum AI Server is implemented as the directory on the AI Server local file system. It contains files of all locally deployed AI models. Only models in the local Model Zoo can be used for AI inferencing on particular AI server installation.

Currently, AI Server supports the following AI model types:

- N2X models: models in proprietary DeGirum N2X format compiled for DeGirum Orca AI accelerator hardware and CPU
- TFLite Edge TPU models: models in Google TFLite format compiled for Google Edge TPU AI accelerator hardware
- TFLite CPU models: models in Google TFLite format compiled for execution on CPU
- OpenVINO models

The deployment of the local Model Zoo is performed using PySDK server module (please refer to PySDK documentation available on https://degirum.github.io).

1.1.3 AI Client Package

The AI Client package is installed on a computer system, where client-side ML software runs. It can be the same computer system, where the AI Server is deployed, or it can be any other computer system, which has TCP/IP network access to the AI Server computer system.

AI Client Package includes the following components:

- AI Client library
- AI Client examples
- Build scripts

AI Client library provides APIs to control and use the AI Server. It includes the following functionality:

- List all AI models with their attributes available for AI inferencing in particular AI Server local Model Zoo
- Find AI model in that local Model Zoo matching particular model attributes
- Open and configure streaming connection to particular AI Server for inferencing using particular AI model from local Model Zoo
- Stream data frames to the that streaming connection to perform AI inferencing on these data frames

AI Client library provides integration into the C++ programming language. This document describes AI Client for C++. AI client packs for other languages are described in separate documents.

All AI Client Package software is distributed in the source code and requires compilation.

The following computer platforms are currently supported for the client installation:

- Intel x64 with Linux 64-bit OS
- Intel x64 with Windows 10 OS
- ARM64 with Linux 64-bit OS
- Intel x64 with MacOS
- ARM64 with MacOS

1.2 AI Client Package Installation and Build

1.2.1 Installation Pre-Requisites

For Linux OS the following software packages need to be installed in order to build AI Client package software:

- Git
- CMake
- GCC compiler
- Thread building blocks library

To install all these component use the following commands:

```
sudo apt install git-all cmake g++ libtbb-dev
```

For Windows OS the following software packages need to be installed in order to build AI Client package software:

- Git
- CMake
- Visual Studio 2019 (Community Edition would suffice)

1.2.2 AI Client Package Installation

The AI Client library is distributed in source code and is available on GitHub at the following link:

```
https://github.com/DeGirum/CppSDK
```

You clone the AI Client library repo by executing command:

```
git clone https://github.com/DeGirum/CppSDK
```

The repo directory contains the AI Client library collaterals. The subdirectory structure is as follows:

Directory	Contents
/client	AI Client library code
/doc	documentation
/examples	sample applications
/extern	third-party libraries
/images	sample images to be used for AI inference
/inc	AI Client library C++ include files

1.2.3 AI Client Package Build

The CMakeLists.txt file is provided for the CMake build. It builds AI Client C++ library, and C++ examples.

To perform the build under Linux OS, execute the following commands:

```
cd client
mkdir build
cd build
cmake ..
cmake --build .
```

For Windows OS and Visual Studio, CMake will create the Visual Studio project files and `AICLIENTLIB.sln` solution.

For Linux OS, CMake will create make files (unless otherwise specified with the -G flag).

After building, the library and example executables are copied into `/bin` subdirectory.

1.3 AI Client C++ API Description

DeGirum AI Client library provides the following functionality:

- versionGet() function to query the version of the AI Client library
- modelzooListGet() function to list all AI models with their attributes available for AI inferencing in particular AI Server local Model Zoo
- systemInfo() function to obtain AI server system information including information about connected AI devices
- modelFind() function to find AI model in that local Model Zoo matching particular model attributes
- labelDictionary() function to query the model class label dictionary
- errorCheck() function to check given AI server JSON response for run-time errors
- DG::AIModel class to connect to AI server and to perform AI model inference in a simple non-pipelined sequential manner (see AIModel: Synchronous Sequential AI Inferencing API)
- DG::AIModelAsync class to connect to AI server and to perform AI model inference in efficient pipelined asynchronous manner using mechanism of callbacks (see AIModelAsync: Asynchronous Pipelined AI Inferencing API)
- the family of ModelParams classes to handle model parameters (see Model Parameters Management)
- functions and methods for error handling (see Error Handling)

1.3.1 AI Server Connection and Addressing

The client software communicates with AI server through TCP/IP network using DeGirum proprietary communication protocol based on ASIO library. In order to establish a connection to AI server, the client side must know the host name or IP address of the AI server, and TCP port, which AI server listens.

The server address is passed to AI inference classes as a string in the following format:

If AI server domain name is known, the address string is specified in the form

```
domain_name:port
```

If only IP address of AI server is known, the address string is specified in the form

```
xxx.xxx.xxx.xxx:port
```

The port number together with ':' separator can be omitted, in this case default port 8778 is used. When AI server is started without specifying the port, the same default port 8778 is used for the server side. In this case it is safe to omit the port. Otherwise you should match the port on the client side to the port used on the server side.

1.3.2 Listing and Searching Models in Local Model Zoo

The AI server can perform AI inferences only on models located either in the local model zoo of that AI server or in the cloud zoo you have access to. This section describes how to deal with local zoo models. The section Working with Cloud Zoo Models describes how to deal with cloud zoo models.

To initiate an inference of a model form the local model zoo on AI server, the client must provide to the server the *model name*, which uniquely identifies the desired model in the local model zoo. There are two ways for the client code to obtain the model name.

1. By obtaining the full list of models available in the model zoo using modelzooListGet() function
2. By searching the model zoo for a model satisfying certain search attributes using modelFind() function.

Either way you obtain the instance of DG::ModelInfo structure, which contains all necessary model identification information, including:

- DG::ModelInfo::name - model string name
- DG::ModelInfo::extended_params - extended model parameters (all parameter as listed in model JSON configuration file)

Then you pass model name DG::ModelInfo::name to constructors of classes used for AI inference: DG::AIModel or DG::AIModelAsync.

The modelzooListGet() function returns an array of ModelInfo structures listing all models found in the local model zoo. It is then your responsibility to iterate over all elements of this array to find the model you want to use.

The modelFind() function provides simpler means to find the desired model. It accepts the model query: the instance of DG::ModelQuery structure, which contains some model attributes you want to look for. The modelFind() function first obtains the full list of models from the AI server, and then iterates over this list to find a model matching all attributes specified in the model query. It returns the first model matching all attributes.

You may specify the following attributes:

- Any part of the model name. Only models which have the specified substring in their model name would be considered.
- Device type to use for inference. Only models which are designed for specified device type would be considered.
- Runtime agent to use for inference. Only models which are designed for specified runtime agent would be considered.
- Model should be quantized flag. Only quantized models would be considered.
- Model should be pruned/sparse flag. Only sparse/pruned models would be considered.

Only the model name substring attribute is mandatory, all other attributes are optional and can be omitted if not needed.

You specify the device type by providing the Device ID string. The following device types are supported:

Device ID	Device
"ORCA"	DeGirum Orca AI accelerator
"EDGETPU"	Google Edge TPU AI accelerator
"MYRIAD"	Intel Myriad AI accelerator
"CPU"	AI server host computer

The *runtime agent* is the software module, which controls the device used for AI inference. You specify the runtime agent type by providing the Agent ID string. The following runtime agent types are supported:

Agent ID	Agent
"N2X"	DeGirum N2X runtime agent. Used for all Orca devices and N2X model inference on CPU.
"TFLITE"	Google TFLite runtime agent. Used for Edge TPU devices and direct TFlite model inference on CPU.
"OPENVINO"	Intel OpenVINO runtime agent. Used for Myriad devices and direct OpenVINO model inference on CPU.

Note: the runtime agent attribute is rarely required because in most use cases the AI hardware uniquely defines the runtime agent to use, so it is recommended to avoid setting this attribute.

Examples:

Find a model which has 'MobileNet_v2' substring in the model name:

```
auto model_id = DG::modelFind( server, { "mobilenet_v2" } );
```

Find a model which has 'mobilenet_v2' substring in the model name, is designed to run on DeGirum Orca AI accelerator hardware, is quantized, and is sparse/pruned:

```
auto model_id = DG::modelFind( server, { "MobileNet_v2",
    "ORCA", "", DG::ModelQuery::Yes, DG::ModelQuery::Yes } );
```

1.3.3 Working with Cloud Zoo Models

Starting from release 0.5.0, the AI server supports inference of models from DeGrirum-hosted cloud model zoos. In order to use models from a cloud zoo you need to register at DeGirum AI Hub, https://hub.degirum.com, and generate API access token. Please refer either to PySDK documentation or General Information section, both available on https://hub.degirum.com, for more details.

To do the inference of a model from some cloud zoo you need to perform the following steps:

1. Obtain your **API access token**. You can generate it on DeGirum AI Hub site https://hub.degirum.com under Management | My Tokens* main menu item.
2. Figure out the **extended model name**. It has the following format: "<organization>/<zoo>/<model>". The "<organization>" field is the name of the zoo owner organization, the "<zoo>" field is the name of the cloud zoo, and the "<model>" field is the name of the model in that cloud zoo. You can obtain the "<organization>/<zoo>" prefix (so-called model zoo path) on DeGirum AI Hub site https://hub.degirum.com under *Management* | *Models* main menu item. Just select the model zoo you want to access: the model zoo page opens. Then click the `Copy` button near the model zoo name to copy the model zoo path into the clipboard. All models available in the cloud zoo are also listed on the model zoo page. Click on particular model: the model page opens. The model name will be displayed at the top of the page. Now concatenate the model zoo path with the model name separated by the slash / to obtain the extended model name.
3. Create DG::ModelParamsWriter object and assign `CloudToken` parameter.
4. Create DG::AIModel or DG::AIModelAsync object passing the AI server hostname, extended model name, and DG::ModelParamsWriter object.

For example: const std::string hostname = ""; // specify AI server hostname const std::string ext_model_name = "" // specify extended model name const std::string token = ""; // specify your API access token string

DG::ModelParamsWriter mparams; mparams.CloudToken_set(token); DG::AIModel model(hostname, ext_↩ model_name, mparams);

AI server will automatically download the model from the cloud model zoo using provided credentials and store this model in the local model cache to be reused for later inferences.

Each time you create new DG::AIModel or DG::AIModelAsync object and perform the first inference, the checksum of the model in the local cache is compared with the checksum of the model in the cloud zoo, and if they mismatch, the model from the cloud zoo is downloaded into the local cache. This mechanism guarantees that you always perform the inference of the newest model.

1.3.4 AIModel: Synchronous Sequential AI Inferencing API

The DG::AIModel class is used to perform AI model inference on AI server in simple non-pipelined sequential manner.

Note: for more efficient (but somewhat more complex to use) asynchronous pipelined inference use DG::AIModelAsync class.

On construction this class performs connection to AI server, selection of AI model, and setting model run-time parameters.

You specify the AI server address as a string as described in the section AI Server Connection and Addressing.

You specify the model name as described in the section Listing and Searching Models in Local Model Zoo.

If you want to modify some of the model parameters (see more on that in the section Model Parameters Management), you define the instance of ModelParamsWriteAccess-derived class, change model parameters you want to adjust by invoking setter methods, and pass this instance as one of DG::AIModel constructor arguments.

For example, you want to change the input frame image type to JPEG. You can pass the following expression to DG::AIModel constructor:

```
DG::ModelParamsWriter().InputImgFmt_set( "JPEG" )
```

Once constructed, it can be used to perform sequential AI inference by invoking DG::AIModel::predict() method. Predict method accepts the input frame data in various formats (see section Format of Data Frames for Image Processing Models for more details) and returns the inference results, which are described in the section Format of Inference Results. This method is blocking method, i.e. it returns the execution only when the inference of an input frame is complete. Working with blocking methods simplifies the programming, but loses some run-time efficiency because (unlike for DG::AIModelAsync class) some actions like sending data to AI server, frame pre-processing, result post-processing, and receiving results from AI server are not pipelined between frames.

1.3.5 Format of Inference Results

The predict() method of DG::AIModel class returns JSON array with inference results. The internal structure of this JSON array greatly depends on the AI model type: it is different for classification models, detection models, and so on. But in general, that JSON array is an array of identical JSON objects, and each JSON object contains inference results for one detected entity.

The following tables describe JSON array format for some model types.

For classification model types each classified object is represented by the following JSON object:

JSON Field Name	Description	Data Type
"label"	Classified object class label	string
"category_id"	Classified object class index	integer
"score"	Probability of classified object	floating point

For detection model types each detected object is represented by the following JSON object:

JSON Field Name	Description	Data Type
"label"	Detected object class label	string
"category_id"	Detected object class index	integer
"score"	Probability of detected object	floating point
"bbox"	Detected object rectangle	four-element JSON array [xmin, ymin, xmax, ymax]
"landmarks"	Landmark points (optional)	JSON array of two-element arrays [[x1, y1], [x2, y2], ...]

For pose detection types each detected object is represented by the following JSON object:

JSON Field Name	Description	Data Type
"score"	Probability of detected pose	floating point
"landmarks"	Pose description landmarks	array of landmark JSON objects

The following is the structure of pose description landmark JSON object:

JSON Field Name	Description	Data Type
"label"	Classified object class label	string
"category_id"	Classified object class index	integer
"score"	Probability of classified landmark	floating point
"landmark"	landmark point	two-element JSON array [x, y]
"connect"	list of adjacent landmarks indices	JSON array of integers

For hand detection types each detected object is represented by the following JSON object:

JSON Field Name	Description	Data Type
"score"	Probability of detected hand	floating point
"handedness"	Probability of right hand	floating point
"landmarks"	hand description landmarks	array of landmark JSON objects

The following is the structure of hand description landmark JSON object:

JSON Field Name	Description	Data Type
"label"	Classified object class label	string
"category_id"	Classified object class index	integer
"landmark"	landmark point	three-element JSON array [x, y, z]
"world_landmark"	metric world landmark point	three-element JSON array [x, y, z]
"connect"	list of adjacent landmarks indices	JSON array of integers

When you specify post-processing type as "None" (see section Model Parameters Management) then the inference

result JSON array contains network output tensors. Each element of that array corresponds to one tensor. Each tensor is represented by the following JSON object:

JSON Field Name	Description	Data Type
"id"	Tensor numeric ID as specified in network	integer
"name"	Tensor name as specified in network	string
"shape"	Tensor shape: sizes of each dimension	integer array
"quantization"	Tensor quantization parameters	object
"type"	Tensor element type	string
"data"	Tensor linear data buffer contents	binary field

The following tensor data types are supported:

Type String	Type Description
DG_FLT	32-bit floating point
DG_UINT8	8-bit unsigned integer

The following is the structure of quantization JSON object:

JSON Field Name	Description	Data Type
"axis"	Quantization axis or -1 for global quantization	integer
"scale"	Quantization scale array	floating point array
"zero"	Quantization zero offset	integer array

For convenient handling of tensors the DG::BasicTensor class is provided. You can convert JSON array containing a tensor into DG::BasicTensor object by using DG::JsonHelper::tensorDeserialize() static method:

```
for( const auto &json_tensor: inference_result )
{
    DG::BasicTensor basic_tensor( DG::JsonHelper::tensorDeserialize( json_tensor ) );
    auto shape = basic_tensor.shape();              // get tensor shape
    auto element_type = basic_tensor.dataTypeGet(); // get tensor element type
    if( element_type == DG_UINT8 )                  // get pointer to tensor linear buffer
        const uint8_t *data = basic_tensor.data< uint8_t >();
}
```

There is a special case of JSON array returned by AI server in case when runtime error happens during inference. In this case the runtime error info object is returned. It is described in details in the Error Handling section.

1.3.6 AIModelAsync: Asynchronous Pipelined AI Inferencing API

The DG::AIModelAsync class is used to perform AI model inference on AI server in efficient pipelined asynchronous manner using the mechanism of callbacks.

Note: for simple (but less efficient) synchronous non-pipelined inference use DG::AIModel class.

On construction this class performs connection to AI server, selection of AI model, setting model run-time parameters, and installation of the client callback function. The client callback function is used to pass the inference results from the AI server to the client code.

You specify the AI server address as a string as described in the section AI Server Connection and Addressing.

You specify the model name as described in the section Listing and Searching Models in Local Model Zoo.

You should define the callback function somewhere in your code in the following form:

```
void MyAiCallback( const json &result, const std::string &info ){}
```

Then you pass your callback name (in this example it is MyAiCallback) as one of DG::AIModelAsync constructor arguments. The callback function has two arguments: the inference result and the frame info string. The inference result is JSON array, described in the section Format of Inference Results. The frame info string is the string passed to predict() method along with the frame data. More on that below.

If you want to modify some of the model parameters (see more on that in the section Model Parameters Management), you define the instance of DG::ModelParamsWriteAccess derived class, change model parameters you want to adjust by invoking setter methods, and pass this instance as one of DG::AIModelAsync constructor arguments.

For example, you want to change the input frame image type to JPEG. You can pass the following expression to DG::AIModelAsync constructor:

```
DG::ModelParamsWriter().InputImgFmt_set( "JPEG" )
```

Once constructed, it can be used to perform asynchronous AI inference by invoking DG::AIModelAsync::predict() method. The predict method accept the input frame data in various formats (see section Format of Data Frames for Image Processing for more details) and initiates the inference on the AI server. The method is a non-blocking method, i.e. it returns execution immediately after posting the frame data to the AI server. This allows calling this method in a loop without waiting for the inference results, achieving the maximum AI server utilization.

To simplify matching inference results and corresponding frames in the client callback, additional argument can be passed to predict() method. The frame_info argument is optional frame information string. It will be passed to the client callback along with the frame result. You can pass arbitrary information as the frame info, for example frame data filenames, or frame numbers, or any other frame identification information, which you need to know in the scope of client callback function in order to interpret inference results in respect to the input frames.

Once the inference of a frame is complete, and the inference result is received from the AI server, the client callback is invoked to dispatch the inference result. Such result handling via callback mechanism is performed in a thread, separate from the main execution thread. It means that the client callback function is called in asynchronous manner, thus the name of the class.

During construction you may also specify the depth of the internal frame queue. The internal frame queue works the following way. If predict() method is invoked too often and the number of non-processed ("outstanding") frames exceeds the specified queue depth, the consecutive call to predict() method will be blocked until the number of outstanding frames in the queue becomes smaller than the queue depth thus allowing to post one more frame.

The class destructor waits until all outstanding results are received and then closes the connection to AI server. You may use DG::AIModelAsync::waitCompletion() to explicitly wait for completion of all outstanding inferences. It is a blocking call: it returns only when all outstanding frames are processed by AI server and all results are dispatched via client callback.

To monitor the number of outstanding inferences in real-time you use DG::AIModelAsync::outstandingResultsCountGet() method.

To check for runtime errors which happened during inferences you use DG::AIModelAsync::lastError() method. If ever during consecutive calls to predict() method the AI server reported a run-time error, then this method will return the error message string, otherwise it returns an empty string. Alternatively, you may check for runtime errors directly in the callback function by invoking errorCheck() function on inference result argument.

Note: in case of server runtime error, all frames posted after the error was detected, will not be processed.

1.3.7 Model Parameters Management

Each AI model in the model zoo comes with the model parameters file in JSON format. This JSON file defines all model parameters such as model name, model input dimensions, pre-processing parameters, post-processing parameters, etc. Some of the model parameters are fixed and cannot be altered without breaking the model behavior, and some of the model parameters can be changed to adjust the model behavior. Later parameters are called model *runtime parameters* and can be adjusted when constructing instances of model inference classes DG::AIModel and DG::AIModelAsync.

To work with model parameters the following classes are provided:

- DG::ModelParamsReadAccess
- DG::ModelParamsWriteAccess
- DG::ModelParams
- DG::ModelParamsWriter

DG::ModelParamsReadAccess class provides programmatic type-safe read access to model parameters defined in JSON model configuration. It keeps non-owning const reference to underlying JSON array. For each model parameter it provides getter method, which name matches the parameter name as it appears in JSON array.

DG::ModelParamsWriteAccess inherits DG::ModelParamsReadAccess and provides programmatic type-safe read *and write* access to model parameters defined in JSON model configuration. It keeps non-owning non-const reference to underlying JSON array. For each model parameter it provides both getter and setter methods. Getter method name matches the parameter name as it appears in JSON array. Setter method name is constructed from the parameter name by appending `_set` suffix. For example, `InputImgFmt_set()` Setter methods return reference to self, so they can be called in a daisy-chain manner, for example:

```
params.InputImgFmt_set( "RAW" ).InputImgRawDataType_set( "DG_UINT8" );
```

DG::ModelParams class provides programmatic type-safe access to model parameters defined in JSON model configuration while *owning* that JSON array. Access (read or write) is defined by the template parameter, which is used as the base class. You can use any DG::ModelParamsReadAccess-derived base class: it can be DG::ModelParamsReadAccess or DG::ModelParamsWriteAccess.

And finally DG::ModelParamsWriter is DG::ModelParams template instantiation with write access. Instances of this class you typically use to pass adjusted runtime model parameters to constructors of inference classes.

The following table summarizes all runtime parameters which are accessible to the client code:

Parameter Name	Type	Access	Description	Possible Values	Default Value
`CloudToken`	string	R/W	Cloud API access token	Valid cloud API access token	""
`EagerBatchSize`	size_t	R/W	The size of the batch to be used by device scheduler when inferencing this model. The batch is the number of consecutive frames before this model is switched to another model during batch predict.	1..80	8
`FrameQueueDepth`	size_t	R/W	Maxinum size of the client's frame queue	1..160	8

Parameter Name	Type	Access	Description	Possible Values	Default Value
InputImgFmt	string	R/W	Input frame format: JPEG or raw binary	"JPEG", "RAW"	"JPEG"
InputRawDataType	string	R/W	Data type for raw binary frame format: byte of 32-bit float	"DG_UINT8", "DG_FLT"	"DG_UINT8"
InputImgRotation	int	R/W	Input image rotation angle in degrees, clockwise	0, 90, 180, 270	0
InputColorSpace	string	R/W	Input image colorspace (sequence of colors in C dimension)	"RGB", "BGR"	"RGB"
InputResizeMethod	string	R/O	Interpolation algorithm used for image resizing during model training	"nearest", "bilinear", "area", "bicubic", "lanczos"	"bilinear"
InputPadMethod	string	R/O	How input image is padded when resized during model training	"stretch", "letterbox", "crop-first", "crop-last"	"letterbox"
InputCropPercentage	double	R/O	How much input image was cropped during model training	0..1	1
ImageBackend	string	R/O	Graphical package used for image processing during model training	"pil", "opencv", "auto"	"auto"
MaxDetections	int	R/W	Maximum number of objects to report for detection models	> 0	20
MaxDetectionsPerClass	int	R/W	Maximum number of objects to report for each class for detection models	> 0	100
MaxClassesPerDetection	int	R/W	Maximum number of classes to report for detection models	> 0	30
MeasureTime	bool	R/W	Enable inference time measurements	true/false	false
OutputPostprocessType	string	R/W	Post-processor type	see below	"None"
OutputConfThreshold	double	R/W	Confidence threshold	0..1	0.1
OutputNMSThreshold	double	R/W	Threshold for non-max suppression	0..1	0.6
OutputTopK	size_t	R/W	Number of classes with biggest scores to report for classification models	0,1...	0
UseRegularNMS	bool	R/W	Use regular (per-class) NMS algorithm as opposed to global (class-ignoring) NMS algorithm for detection models	true/false	true

If you do not specify a runtime parameter, then the value for this parameter will be taken from the model JSON configuration file from the local model zoo. If the model JSON configuration file also does not specify this parameter, then the default value will be used.

The following table lists currently available post-processor types.

Post-Processor Name	Applicability	Description
"None"	All models	Pass-through post-processor. Network output tensors are sent without any post-processing
"Classification"	Classification models	Classification post-processor for all classification models
"Segmentation"	Segmentation models	Semantic segmentation post-processor for all segmentation models
"TFLiteDetection"	TFlite detection models	Object detection post-processor for TFLite detection models
"DetectionYolo"	Yolov5-based models	Object detection post-processor for DeGirum Yolov5-based models
"Detection"	Other detection models	Object detection post-processor for all other DeGirum general object detection models
"DetectionYoloPlates"	Yolov5-based license plate detection models	DeGirum license plate detection model post-processor
"DetectionYoloV8Plates"	Yolov8-based license plate detection models	DeGirum license plate detection model post-processor
"DetectionYoloV8OBB"	Yolov8-based oriented bounding box (OBB) detection models	OBB object detection post-processor for DeGirum Yolov8-based OBB models
"FaceDetection"	Face detection models	Face detection post-processor for all DeGirum face detection models
"PoseDetection"	Pose detection models	Person pose detection post-processor for all DeGirum pose detection models
"HandDetection"	Hand detection models	Hand landmark detection post-processor for all DeGirum hand detection models
"Dequantize"	For quantized outputs	Dequantize output tensors and provide float tensors as the output

Note: not all post-processors are compatible with all models. Special care should be taken when specifying post-processor type other than "None".

Notes of Input∗ parameters.

DG::ModelParamsReadAccess::InputImgFmt parameter is used to tell pre-processor what input frame format to expect. The value of this parameter should match the frame data type you pass to predict() methods. You may change it to match the format of your input frames.

DG::ModelParamsReadAccess::InputRawDataType parameter is used to tell pre-processor what data element type to expect for raw data frames (InputImgFmt is "RAW"). Again, the value of this parameter should match the frame data element type you pass to predict() methods. You may change it to match the format of your input frames.

DG::ModelParamsReadAccess::InputImgRotation parameter is used to ask pre-processor to perform input image rotation by certain angle. It is convenient when your input frames are coming from your camera which is mounted on a side or upside down.

DG::ModelParamsReadAccess::InputColorSpace defines the colorspace (pixel order) which the AI model expects (was trained to). In case when the input image format is "RAW", you should provide raw image frame with correct pixel order corresponding to the input colorspace parameter value. In case when the input image format is "JPEG", the pre-processor will perform the conversion to the proper pixel order when decoding the JPEG image. Usually you do not change this parameter, otherwise the model performance will degrade.

1.3.8 Format of Data Frames for Image Processing Models

The AI Client package supports two formats of the input data frames for image processing models: JPEG images and binary bitmaps, where binary format is used by default and typically set in JSON model configuration files for all DeGirum models.

In any case the HxW dimension of the input data frame must match the input dimension of the AI model used for the inference. The input dimensions of the AI model are stored in the DG::ModelInfo data structure members `DG::ModelInfo::extended_params.InputW()` and `DG::ModelInfo::extended_params::InputH()`, returned by either modelzooListGet() or modelFind() functions (see section Listing and Searching Models in Local Model Zoo).

The frame data in the binary bitmap format should be arranged as HWC three-dimensional dense array, meaning that color dimension 'C' is the fastest dimension, while the vertical dimension 'H' is the slowest. The color order is dependent on how the model was originally trained. The pixel data type can be either 8-bit unsigned integer number or 32-bit floating point number.

You specify input frame type when you construct instances of model inference classes DG::AIModel and DG::AIModelAsync, passing instance of ModelParams class as the constructor parameter (see more details in the section Model Parameters Management).

To specify JPEG frame type you need to set InputImgFmt parameter to "JPEG".

To specify binary frame type you need to set both InputImgFmt and InputImgRawDataType parameters. For example, the byte binary frame type you set this way:

```
std::string server = "192.168.0.1"; // some server address
auto model_id = DG::modelFind( server, { "MobileNet_v2" } );
DG::AIModel model( server, model_id,
    DG::ModelParamsWriter.InputImgFmt_set( "RAW" ).InputImgRawDataType_set( "DG_UINT8" ) );
```

1.3.9 Error Handling

There are two mechanisms of error handling employed in AI Client package: using standard library exceptions and using specially formatted JSON inference results.

All runtime errors *except errors happened during inference*, are handled by throwing standard library exceptions - objects of std::exception type. To handle such errors the recommended practice is to place all the code which interacts with the AI Client library into one try/catch block, and then catch exceptions of std::exception type:

```
try
{
    ...
}
catch( std::exception &e )
{
    std::cout << e.what();  // handle exception
}
```

Errors which happened during the inference are handled special way. Instead of throwing an exception, the special JSON runtime error info object is returned by DG::AIModel::predict() method in case you use synchronous API, and that JSON object is passed as an argument into your callback in case you use asynchronous API.

The JSON runtime error info object has the following structure:

JSON Field Name	Description
"success"	Boolean field containing "false" in case of error
"msg"	Error message string

If you want to check that the inference result actually defines runtime error, you use errorCheck() function. If the AI server JSON response contains the run-time error, then this function will return the error message string, otherwise it returns an empty string. The following code demonstrates the typical use case for synchronous API:

```
json result;
model.predict( frame, result );
auto possible_error = DG::errorCheck( result );
if( !possible_error.empty() )
    throw std::runtime_error( possible_error );
```

The following code demonstrates the typical use case for asynchronous API:

```
void MyAiCallback( const json &result, const std::string &info )
{
    auto possible_error = DG::errorCheck( result );
    if( possible_error.empty() )
    {
        ... accept inference result
    }
    else // do not throw exception, since it will be ignored by AI Client thread
}
```

Note: do not throw any exceptions in your callback, since the AI Client callback thread, which handles user callback invocation, suppresses all exceptions thrown in callbacks to not to terminate the callback thread unexpectedly.

Another approach for the inference error handling for asynchronous API would be to check for inference errors at the very end of the inference sequence. You can use DG::AIModelAsync::lastError() method: if ever during consecutive calls to predict() method the inference errors are detected, then this method will return the error message string, otherwise it returns an empty string. To guarantee that all outstanding frames are processed before the error check, you can use DG::AIModelAsync::waitCompletion() method:

```
model.waitCompletion();
auto possible_error = model.lastError();
if( !possible_error.empty() )
    throw std::runtime_error( possible_error );
```

Note: in case of inference error in asynchronous client, all frames posted after the error was detected, will not be processed.

Chapter 2

Hierarchical Index

2.1 Class Hierarchy

This inheritance list is sorted roughly, but not completely, alphabetically:

DG::AIModel 35
DG::AIModelAsync 37
DG::BasicTensor 40
DG::JsonHelper 51
DG::ModelInfo 55
DG::ModelParamsReadAccess 59
DG::ModelParams< Base, > 56
DG::ModelParamsWriteAccess 65
DG::ModelParams< ModelParamsWriteAccess > 56
DG::ModelParamsSection 65
DG::ModelQuery 69
DG::BasicTensor::quant_params_t 70
DG::BasicTensor::quant_params_t::scale_t 73
DG::ServerAddress 73

Chapter 3

Class Index

3.1 Class List

Here are the classes, structs, unions and interfaces with brief descriptions:

DG::AIModel
: AIModel is DeGirum AI client API class for simple non-pipelined sequential inference 35

DG::AIModelAsync
: AIModelAsync is DeGirum AI client API class for efficient pipelined asynchronous inference . . 37

DG::BasicTensor 40

DG::JsonHelper
: JSON helper class: contains assorted static methods to operate with JSON configurations . . 51

DG::ModelInfo
: ModelInfo is the model identification structure. It keeps AI model key attributes 55

DG::ModelParams< Base, >
: ModelParams is model parameters collection with user-defined access rights 56

DG::ModelParamsReadAccess
: ModelParamsReadAccess is read-only accessor to model parameters 59

DG::ModelParamsSection
: Model parameters section descriptor 65

DG::ModelParamsWriteAccess
: ModelParamsWriteAccess is read/write accessor to model parameters 65

DG::ModelQuery
: Model query structure used to search models on AI server which match a set of provided model attributes 69

DG::BasicTensor::quant_params_t
: Quantization parameters (how to convert from integer/quantized data back to floating point) . . 70

DG::BasicTensor::quant_params_t::scale_t 73

DG::ServerAddress 73

Chapter 4

File Index

4.1 File List

Here is a list of all documented files with brief descriptions:

dg_client_structs.h
DG client API data types 77
dg_json_helpers.h
DG Core JSON helper classes and functions 79
dg_model_api.h
DG Client API for model inference 81
dg_model_parameters.h
DG centralized handling of JSON model parameters 82
dg_tensor_structs.h
DG tensor container classes 84

Chapter 5

Namespace Documentation

5.1 DG Namespace Reference

DG is DeGirum namespace which groups all DeGirum software declarations.

Classes

- class AIModel

  AIModel is DeGirum AI client API class for simple non-pipelined sequential inference.
- class AIModelAsync

  AIModelAsync is DeGirum AI client API class for efficient pipelined asynchronous inference.
- class BasicTensor
- class JsonHelper

  JSON helper class: contains assorted static methods to operate with JSON configurations.
- struct ModelInfo

  ModelInfo is the model identification structure. It keeps AI model key attributes.
- class ModelParams

  ModelParams is model parameters collection with user-defined access rights.
- class ModelParamsReadAccess

  ModelParamsReadAccess is read-only accessor to model parameters.
- struct ModelParamsSection

  Model parameters section descriptor.
- class ModelParamsWriteAccess

  ModelParamsWriteAccess is read/write accessor to model parameters.
- struct ModelQuery

  Model query structure used to search models on AI server which match a set of provided model attributes.
- struct ServerAddress

Typedefs

- using BasicTensorVector = std::vector< BasicTensor >

  Collection of tensors.
- using json = nlohmann::json

  JSON library.
- typedef struct DG::ModelInfo ModelInfo

  ModelInfo is the model identification structure. It keeps AI model key attributes.
- using ModelParamsWriter = ModelParams< ModelParamsWriteAccess >

  ModelParamsWriter is ModelParams template instantiation with write access.
- using vec3d_int = std::vector< std::vector< std::vector< int > > >

  3D vector of integers
- using vec_dbl = std::vector< double >

  vector of doubles
- using vec_flt = std::vector< float >

  vector of floats
- using vec_int = std::vector< int >

  vector of integers
- using vec_str = std::vector< std::string >

  vector of strings
- using vec_sz = std::vector< size_t >

  vector of size_t

Enumerations

- enum DetectionStatus { DetectionStatus::OK, DetectionStatus::ProtocolMismatch, DetectionStatus::HostAlive }

  Enumerator showing server status as detected by the below function.
- enum ServerType { ServerType::Unknown, ServerType::ASIO, ServerType::HTTP }

  Server protocol type.

Functions

- std::vector< std::tuple< std::string, DG::DetectionStatus > > detectHostnameServers (const std::string &prefix, const int range_start, const int range_end, const int numeral_width=3)
- std::vector< std::tuple< std::string, DetectionStatus > > detectSubnetServers (const std::string &root_ip, const std::string &subnet_mask)
- json devCtrl (const std::string &server, const json &req)
- std::string errorCheck (const json &json_response)
- template<typename T >
  T jsonGetMandatoryValue (const json &json_params, const std::string &section, int index, const std::string &key)
- template<typename T >
  T jsonGetOptionalValue (const json &json_params, const std::string &section, int index, const std::string &key, const T &default_value)
- static bool jsonKeyExist (const json &json_params, const std::string &section, int index, const std::string &key)
- template<typename T >
  void jsonSetOptionalValue (json &json_params, const std::string &section, int index, const std::string &key, const T &value)
- json labelDictionary (const std::string &server, const std::string &model_name)
- static std::string messagePrepare (const json &in)

- static json messagePrepareJson (const json &in)
- ModelInfo modelFind (const std::string &server, const ModelQuery &query)
- void modelzooListGet (const std::string &server, std::vector< ModelInfo > &modelzoo_list)
- json modelZooManage (const std::string &server, const json &req)
- std::ostream & operator<< (std::ostream &os, const BasicTensor &t)

  Print tensor to stream.
- bool serverPing (const std::string &server)
- void shutdown (const std::string &server)
- json systemInfo (const std::string &server)
- json traceManage (const std::string &server, const json &req)
- std::string versionGet ()

Variables

- const int CURRENT_PROTOCOL_VERSION = 4

  current client-server protocol version
- const int DEFAULT_CONNECTION_TIMEOUT_MS = 10000

  Default connection timeout, ms.
- const int DEFAULT_FRAME_QUEUE_DEPTH = 8

  Default frame queue depth.
- const int DEFAULT_INFERENCE_TIMEOUT_MS = 180000

  Default inference timeout, ms.
- const int DEFAULT_PORT = 8778

  Default TCP port of AI server.
- const int MIN_COMPATIBLE_PROTOCOL_VERSION = 4

  minimum compatible client-server protocol version
- const int MODEL_PARAMS_CURRENT_VERSION = 14
- const int MODEL_PARAMS_MIN_COMPATIBLE_VERSION = 1
- constexpr const char * PROTOCOL_VERSION_TAG = "VERSION"

  client-server protocol version tag
- constexpr ModelParamsSection SECT_DEVICE = { "DEVICE", true }

  device parameters section
- constexpr ModelParamsSection SECT_INTERNAL = { "INTERNAL", true }

  internal parameters section
- constexpr ModelParamsSection SECT_MODEL_PARAMETERS = { "MODEL_PARAMETERS", true }

  model parameters section
- constexpr ModelParamsSection SECT_POST_PROCESS = { "POST_PROCESS", true }

  post-processing parameters section
- constexpr ModelParamsSection SECT_PRE_PROCESS = { "PRE_PROCESS", false }

  pre-processing parameters section
- constexpr ModelParamsSection SECT_TOP = { "", true }

  JSON file top-level sections.

5.1.1 Detailed Description

DG is DeGirum namespace which groups all DeGirum software declarations.

5.1.2 Enumeration Type Documentation

5.1.2.1 DetectionStatus

```
enum DG::DetectionStatus  [strong]
```

Enumerator showing server status as detected by the below function.

Enumerator

OK	Server fully operational.
ProtocolMismatch	Server is up, but is outdated.
HostAlive	Hardware is alive, but no server found. Unimplemented!

5.1.2.2 ServerType

```
enum DG::ServerType  [strong]
```

Server protocol type.

Enumerator

Unknown	Not set.
ASIO	proprietary TCP socket server protocol
HTTP	HTTP server protocol.

5.1.3 Function Documentation

5.1.3.1 detectHostnameServers()

```
std::vector< std::tuple< std::string, DG::DetectionStatus > > DG::detectHostnameServers (
            const std::string & prefix,
            const int range_start,
            const int range_end,
            const int numeral_width = 3 )
```

Detect all ORCA servers with hostnames generated from a prefix and a range

Parameters

in	*prefix*	is a string prefix, formatted as "nnnn[:port]". This will be used to generate two sets of hostnames, one with the pattern "nnnn#", and one "nnnn###". For example, the prefix "farm", range_start 1, range_end 2 and numeral_width 3 will scan the hosts "farm1", "farm001", "farm2", "farm002". Setting numeral_width to 0 disables pattern generation, and will just scan the prefix. The port part is optional. If included, all servers will be scanned on the port. If omitted, the default port 8778 will be used.

Parameters

in	*range_start*	is the lowest numeral to be applied to the pattern
in	*range_end*	is the highest numeral to be applied to the pattern, inclusive
in	*numeral_width*	is the width of the numeral in the padded set. This is optional, set to 3 by default. Set to 0 to disable pattern generation.

Returns

Vector of strings containing hostnames of ORCA servers on the network.

5.1.3.2 detectSubnetServers()

```
std::vector< std::tuple< std::string, DetectionStatus > > DG::detectSubnetServers (
            const std::string & root_ip,
            const std::string & subnet_mask )
```

Detect all ORCA servers on a given subnet

Parameters

in	*root_ip*	is an IP address in the network, formatted as "xxx.xxx.xxx.xxx[:port]". The port part is optional. If included, all servers will be scanned on the port. If omitted, the default port 8778 will be used.
in	*subnet_mask*	specifies the subnet with the associated IP, formatted as "xxx.xxx.xxx.xxx", where "xxx" is either 255 for fixed bits or 0 for variable bits.

Returns

Vector of pairs containing IPs of ORCA servers on the network and their statuses

5.1.3.3 devCtrl()

```
json DG::devCtrl (
            const std::string & server,
            const json & req )
```

Device control facility

Parameters

in	*server*	is a string specifying server domain name/IP address and port. Format: "domain_name:port" or "xxx.xxx.xxx.xxx:port". If port is omitted, the default port is 8778.
in	*req*	- management request

Returns

results of execution of requests

5.1.3.4 errorCheck()

```
std::string DG::errorCheck (
            const json & json_response )
```

Check given AI server JSON response for run-time errors. If AI server reported run-time error in the given JSON response, then this function extracts and returns the error message string from the provided JSON array, otherwise it returns an empty string.

5.1.3.5 jsonGetMandatoryValue()

```
template<typename T >
T DG::jsonGetMandatoryValue (
            const json & json_params,
            const std::string & section,
            int index,
            const std::string & key )
```

Get value from JSON array. Raise error, if not there

Parameters

in	*json_params*	- JSON array
in	*section*	- top section name, which contains array of records; if empty, key is taken from topmost level
in	*index*	- index in array of records
in	*key*	- key of key-value pair

Returns

parameter value

5.1.3.6 jsonGetOptionalValue()

```
template<typename T >
T DG::jsonGetOptionalValue (
            const json & json_params,
            const std::string & section,
            int index,
            const std::string & key,
            const T & default_value )
```

Get value from JSON array, which may not be present there

Parameters

in	*json_params*	- JSON array
in	*section*	- top section name, which contains array of records if empty, key is taken from topmost level
in	*index*	- index in array of records
in	*key*	- key of key-value pair
in	*default_value*	- value to return, if no such key is found

Returns

parameter value

5.1.3.7 jsonKeyExist()

```
static bool DG::jsonKeyExist (
            const json & json_params,
            const std::string & section,
            int index,
            const std::string & key )  [inline], [static]
```

Check if given key exists in JSON array

Parameters

in	*json_params*	- JSON array
in	*section*	- top section name, which contains array of records if empty, key is checked on topmost level
in	*index*	- index in array of records
in	*key*	- key of key-value pair

Returns

true if such key exists in array

5.1.3.8 jsonSetOptionalValue()

```
template<typename T >
void DG::jsonSetOptionalValue (
            json & json_params,
            const std::string & section,
            int index,
            const std::string & key,
            const T & value )
```

Set value to JSON array; if it is not present, skip assignment

Parameters

in	*json_params*	- JSON array
in	*section*	- top section name, which contains array of records if empty, key is set on topmost level
in	*index*	- index in array of records
in	*key*	- key of key-value pair
in	*value*	- value to set

5.1.3.9 labelDictionary()

```
json DG::labelDictionary (
            const std::string & server,
            const std::string & model_name )
```

Get model label dictionary

Parameters

in	*server*	is a string specifying server domain name/IP address and port. Format: "domain_name:port" or "xxx.xxx.xxx.xxx:port". If port is omitted, the default port is 8778.
in	*model_name*	specifies the AI model. To obtain valid model name, either modelFind() or modelzooListGet() functions should be used.

Returns

JSON object containing model label dictionary

5.1.3.10 messagePrepare()

```
static std::string DG::messagePrepare (
            const json & in )  [static]
```

prepare client-server response message string from input json

Parameters

in	server response json

Returns

client response string

5.1.3.11 messagePrepareJson()

```
static json DG::messagePrepareJson (
            const json & in )  [static]
```

Prepare client-server response message json from input json

Parameters

in	server response json

Returns

client response json

5.1.3.12 modelFind()

```
ModelInfo DG::modelFind (
            const std::string & server,
            const ModelQuery & query )
```

Find a model on a given AI server which matches given model query.

Parameters

in	*server*	is a string specifying server domain name/IP address and port. Format: "domain_name:port" or "xxx.xxx.xxx.xxx:port". If port is omitted, the default port is 8778.
in	*query*	is the ModelQuery structure of model parameters to look for.

Returns

model descriptor to be used in AIModel and AIModelAsync constructors. If the model is not found, the model descriptor contains an empty model name.

5.1.3.13 modelzooListGet()

```
void DG::modelzooListGet (
            const std::string & server,
            std::vector< ModelInfo > & modelzoo_list )
```

Get a list of supported models from AI server. In case of server connection errors throws std::exception.

Parameters

in	*server*	is a string specifying server domain name/IP address and port. Format: "domain_name:port" or "xxx.xxx.xxx.xxx:port". If port is omitted, the default port is 8778.
out	*modelzoo_list*	is the output vector of ModelInfo structures; each structure contains essential model attributes such as model ID, model name, input width and input height. The ModelInfo structure extracted from this vector can be used as a parameter for construction of AIModel and AIModelAsync instances.

5.1.3.14 modelZooManage()

```
json DG::modelZooManage (
            const std::string & server,
            const json & req )
```

AI server model zoo management

Parameters

in	*server*	is a string specifying server domain name/IP address and port. Format: "domain_name:port" or "xxx.xxx.xxx.xxx:port". If port is omitted, the default port is 8778.
in	*req*	- management request

Returns

results of management request completion (request-specific)

5.1.3.15 serverPing()

```
bool DG::serverPing (
            const std::string & server )
```

Ping server with an instantaneous command

Parameters

in	*server*	is a string specifying server domain name/IP address and port. Format: "domain_name:port" or "xxx.xxx.xxx.xxx:port". If port is omitted, the default port is 8778. return true if no error occurred during the ping

5.1.3.16 shutdown()

```
void DG::shutdown (
            const std::string & server )
```

Send shutdown request to AI server [in] server is a string specifying server domain name/IP address and port. Format: "domain_name:port" or "xxx.xxx.xxx.xxx:port". If port is omitted, the default port is 8778.

5.1.3.17 systemInfo()

```
json DG::systemInfo (
            const std::string & server )
```

Return host system information dictionary.

Parameters

in	*server*	is a string specifying server domain name/IP address and port. Format: "domain_name:port" or "xxx.xxx.xxx.xxx:port". If port is omitted, the default port is 8778.

5.1.3.18 traceManage()

```
json DG::traceManage (
            const std::string & server,
            const json & req )
```

AI server tracing facility management

Parameters

in	*server*	is a string specifying server domain name/IP address and port. Format: "domain_name:port" or "xxx.xxx.xxx.xxx:port". If port is omitted, the default port is 8778.
in	*req*	- management request

Returns

results of management request completion (request-specific)

5.1.3.19 versionGet()

```
std::string DG::versionGet ( )
```

Get the version of the library.

Returns

library version in the following format: MAJOR.MINOR.REVISION.GIT_REVISION

5.1.4 Variable Documentation

5.1.4.1 MODEL_PARAMS_CURRENT_VERSION

```
const int DG::MODEL_PARAMS_CURRENT_VERSION = 14
```

The most current version of JSON model configuration, supported by this version of software. Increment it each time you change any parameter definition or add/remove any parameter

5.1.4.2 MODEL_PARAMS_MIN_COMPATIBLE_VERSION

```
const int DG::MODEL_PARAMS_MIN_COMPATIBLE_VERSION = 1
```

The minimum compatible version of JSON model configuration, still supported by this version of software. Increase it when the software is modified such a way, that it stops supporting older JSON model configuration versions.

5.1.4.3 SECT_TOP

```
constexpr ModelParamsSection DG::SECT_TOP = { "", true }  [constexpr]
```

JSON file top-level sections.

top-level section

Chapter 6

Class Documentation

6.1 DG::AIModel Class Reference

AIModel is DeGirum AI client API class for simple non-pipelined sequential inference.

`#include <dg_model_api.h>`

Public Member Functions

- AIModel (const std::string &server, const std::string &model_name, const ModelParamsReadAccess &model_params=ModelParamsReadAccess({}), size_t connection_timeout_ms=DEFAULT_CONNECTION_TIMEOUT_MS, size_t inference_timeout_ms=DEFAULT_INFERENCE_TIMEOUT_MS)
- void predict (std::vector< std::vector< char > > &data, json &json_response)
- ~AIModel ()

  Destructor. Closes connection to AI server.

6.1.1 Detailed Description

AIModel is DeGirum AI client API class for simple non-pipelined sequential inference.

This class is used to perform AI model inference on AI server in a simple non-pipelined sequential manner. For more efficient (but somewhat more complex) asynchronous pipelined inference use AIModelAsync class.

On construction this class performs connection to AI server, selection of AI model, and setting model run-time parameters.

Once constructed, it can be used to perform sequential AI inference by invoking predict() method. The predict() methods accept the input frame data in various formats and return the inference results. These are blocking methods, i.e. they return execution only when the inference of an input frame is complete.

6.1.2 Constructor & Destructor Documentation

6.1.2.1 AIModel()

```
DG::AIModel::AIModel (
            const std::string & server,
            const std::string & model_name,
            const ModelParamsReadAccess & model_params = ModelParamsReadAccess({}),
            size_t connection_timeout_ms = DEFAULT_CONNECTION_TIMEOUT_MS,
            size_t inference_timeout_ms = DEFAULT_INFERENCE_TIMEOUT_MS )  [explicit]
```

Constructor. Performs connection to AI server, selection of AI model, and optionally setting model run-time parameters. In case of server connection errors throws std::exception.

Parameters

in	*server*	is a string specifying server domain name/IP address and port. Format: "domain_name:port" or "xxx.xxx.xxx.xxx:port". If port is omitted, the default port is 8778.
in	*model_name*	specifies the AI model to be used for inference. To obtain valid model name, either modelFind() or modelzooListGet() functions should be used.
in	*model_params*	is runtime parameter collection, which defines the model runtime behavior. This is optional parameter: if not specified, then default runtime parameters (as defined in the model zoo) are used. ModelParamsWriter class instance can be used to conveniently define runtime parameters.
in	*connection_timeout_ms*	is the AI server connection timeout in milliseconds. This is optional parameter: by default it is set to 10 sec.
in	*inference_timeout_ms*	is the AI server inference timeout in milliseconds. This is optional parameter: by default it is set to 180 sec.

6.1.3 Member Function Documentation

6.1.3.1 predict()

```
void DG::AIModel::predict (
            std::vector< std::vector< char > > & data,
            json & json_response )
```

Run the AI inference on provided byte array. The byte array contains the frame data, which depends on selected frame format. It can be either JPEG or bitmap depending on the model parameters. In case of errors throws std::exception. This is blocking method, i.e. it returns execution only when the inference of an input frame is complete.

Parameters

in	*data*	is a vector of input data for each model input where each data element is a vector of bytes.
out	*json_response*	is the result of the inference. The response format depends on the model post-processor type.

The documentation for this class was generated from the following file:

- dg_model_api.h

6.2 DG::AIModelAsync Class Reference

AIModelAsync is DeGirum AI client API class for efficient pipelined asynchronous inference.

`#include <dg_model_api.h>`

Public Types

- using callback_t = std::function< void(const json &inference_result, const std::string &frame_info) >

Public Member Functions

- AIModelAsync (const std::string &server, const std::string &model_name, callback_t callback, const ModelParamsReadAccess &model_params=ModelParamsReadAccess({}), size_t frame_queue_depth=DEFAULT_FRAME_QUEUE_DEPTH, size_t connection_timeout_ms=DEFAULT_CONNECTION_TIMEOUT_MS, size_t inference_timeout_ms=DEFAULT_INFERENCE_TIMEOUT_MS)
- std::string lastError () const
- int outstandingResultsCountGet () const

  Get the number of outstanding inference results posted so far.
- void predict (std::vector< std::vector< char > > &data, const std::string &frame_info="")
- void setCallback (callback_t callback)
- void waitCompletion ()
- ~AIModelAsync ()

6.2.1 Detailed Description

AIModelAsync is DeGirum AI client API class for efficient pipelined asynchronous inference.

This class is used to perform AI model inference on AI server in efficient pipelined asynchronous manner using the mechanism of callbacks. For simple (but less efficient) synchronous non-pipelined inference use AIModel class.

On construction this class performs connection to AI server, selection of AI model, setting model run-time parameters, and installation of the client callback function. The client callback function is used to pass the inference results from the AI server to the client code.

Once constructed, it can be used to perform asynchronous AI inference by invoking predict() method. The predict() methods accept the input frame data and initiate the inference on the AI server. Each of those methods is a non-blocking method, i.e. it returns execution immediately after posting the frame data to the AI server. This allows calling those methods in a loop without waiting for the inference results, achieving the maximum AI server utilization. Once the inference of a frame is complete, and the inference result is received from the AI server, the client callback is invoked to dispatch the inference result. Such result handling via callback mechanism is performed in a thread, separate from the main execution thread. It means that the client callback function is called in asynchronous manner, thus the name of the class.

6.2.2 Member Typedef Documentation

6.2.2.1 callback_t

```
using DG::AIModelAsync::callback_t = std::function< void( const json &inference_result, const
std::string &frame_info ) >
```

User callback type. The callback is called asynchronously from the main execution thread as soon as prediction result is ready. Consecutive prediction result in a form of JSON array is passed as the inference_result argument. Corresponding frame info string (provided to predict() call) is passed as the frame_info argument.

6.2.3 Constructor & Destructor Documentation

6.2.3.1 AIModelAsync()

```
DG::AIModelAsync::AIModelAsync (
            const std::string & server,
            const std::string & model_name,
            callback_t callback,
            const ModelParamsReadAccess & model_params = ModelParamsReadAccess({}),
            size_t frame_queue_depth = DEFAULT_FRAME_QUEUE_DEPTH,
            size_t connection_timeout_ms = DEFAULT_CONNECTION_TIMEOUT_MS,
            size_t inference_timeout_ms = DEFAULT_INFERENCE_TIMEOUT_MS )  [explicit]
```

Constructor. Performs connection to AI server, selection of AI model, installing client callback, and optionally setting model run-time parameters. In case of server connection errors throws std::exception.

Parameters

in	*server*	is a string specifying server domain name/IP address and port. Format: "domain_name:port" or "xxx.xxx.xxx.xxx:port". If port is omitted, the default port is 8778.
in	*model_name*	specifies the AI model to be used for inference. To obtain valid model name, either modelFind() or modelzooListGet() functions should be used.
in	*callback*	is user callback functional, which will be called asynchronously from the main execution thread as soon as prediction result is ready.
in	*model_params*	is runtime parameter collection, which defines the model runtime behavior. This is optional parameter: if not specified, then default runtime parameters (as defined in the model zoo) are used. ModelParamsWriter class instance can be used to conveniently define runtime parameters.
in	*frame_queue_depth*	is the depth of the internal frame queue. If predict() methods are invoked too often and the number of non-processed (aka "outstanding") frames exceeds this parameter, the consecutive call to any predict() method will be blocked until the number of outstanding frames in the queue becomes smaller than the queue depth thus allowing to post one more frame. This is optional parameter: by default it is set to 8 frames.
in	*connection_timeout_ms*	is the AI server connection timeout in milliseconds. This is optional parameter: by default it is set to 10 sec.
in	*inference_timeout_ms*	is the AI server inference timeout in milliseconds. This is optional parameter: by default it is set to 180 sec.

6.2.3.2 ~AIModelAsync()

```
DG::AIModelAsync::~AIModelAsync ( )
```

Destructor. Waits until all outstanding results are received and then closes the connection to AI server. Note: in case of server runtime error, all frames posted after that error was detected, will not be processed.

6.2.4 Member Function Documentation

6.2.4.1 lastError()

```
std::string DG::AIModelAsync::lastError ( ) const
```

If ever during consecutive calls to predict() methods AI server reported a run-time error, then this method will return the error message string, otherwise it returns an empty string. Note: in case of server runtime error, all frames posted after that error was detected, will not be processed.

6.2.4.2 predict()

```
void DG::AIModelAsync::predict (
            std::vector< std::vector< char > > & data,
            const std::string & frame_info = "" )
```

Start the inference on given byte data vector. The byte vector contains the frame data, which depends on selected frame format. It can be either JPEG or bitmap depending on the model parameters. In case of errors throws std::exception. This is non-blocking call meaning that it returns execution immediately after posting the frame data to the AI server.

Parameters

in	*data*	is a vector of input data for each model input where each data element is a vector of bytes.
in	*frame_info*	is optional frame information string to be passed to the client callback along with the frame result. You can pass arbitrary information as frame info. This simplifies matching results to frames in the client callback.

6.2.4.3 setCallback()

```
void DG::AIModelAsync::setCallback (
            callback_t callback )
```

Set user callback

Parameters

in	*callback*	is user callback functional, which will be called asynchronously from the main execution thread as soon as prediction result is ready.

6.2.4.4 waitCompletion()

```
void DG::AIModelAsync::waitCompletion ( )
```

Wait for completion of all outstanding inferences. This is blocking call: it returns when all outstanding frames are processed by AI server and all results are dispatched via client callback. You can continue calling predict() after call to this method - frame processing will restart automatically.

The documentation for this class was generated from the following file:

- dg_model_api.h

6.3 DG::BasicTensor Class Reference

```
#include <dg_tensor_structs.h>
```

Classes

- struct quant_params_t

  Quantization parameters (how to convert from integer/quantized data back to floating point)

Public Types

- using shape_t = std::vector< size_t >

  Tensor shape vector type.

Public Member Functions

- template<class CONTAINER >
  auto adopt (CONTAINER &&source, int32_t id=0, const std::string &name="", const shape_t &shape={}, const quant_params_t &quant_params={}) -> decltype(source.data(), source.size(), void())
- template<class CONTAINER >
  auto alloc (const CONTAINER &source, bool do_copy, int32_t id=0, const std::string &name="", const shape_t &shape={}, const quant_params_t &quant_params={}) -> decltype(source.data(), source.size(), void())
- template<typename T >
  void alloc (int32_t id, const std::string &name, const shape_t &shape, const quant_params_t &quant_↩ params={}, T *ext_lin_buffer=nullptr, bool set_zero=true)
- void alloc (int32_t id, const std::string &name, const shape_t &shape, DGType data_type, const quant_params_t &quant_params={}, void *ext_lin_buffer=nullptr, bool set_zero=true)
- BasicTensor () noexcept

Default constructor.

- BasicTensor (BasicTensor &&move) noexcept

  Move constructor.

- BasicTensor (const BasicTensor &)=delete

  Deleted copy constructor.

- template<class CONTAINER >
  BasicTensor (const CONTAINER &source, bool do_copy=true, int32_t id=0, const std::string &name="", const shape_t &shape={}, const quant_params_t &quant_params={})
- template<typename T >
  BasicTensor (int32_t id, const std::string &name, const shape_t &shape, const quant_params_t &quant_↩ params={}, T *ext_lin_buffer=nullptr, bool set_zero=true)
- BasicTensor (int32_t id, const std::string &name, const shape_t &shape, DGType data_type, const quant_params_t &quant_params={}, void *ext_lin_buffer=nullptr, bool set_zero=true)
- BasicTensor clone () const

  Create and return exact copy of itself.

- template<typename T >
  BasicTensor convert () const
- BasicTensor convert (DGType to_type) const
- BasicTensor copy () const
- template<typename T >
  T * data ()
- template<typename T >
  const T * data () const
- DGType dataTypeGet () const

  Get DG data type of tensor element.

- void dealloc ()

  Deallocate tensor data and clear tensor.

- template<typename T_IN , typename T_OUT >
  void dequantize ()
- size_t elementSizeGet () const

  Get tensor element size in bytes.

- bool empty () const

  Check if tensor is empty.

- int32_t id () const

  Get id.

- FloatCompareResult< double > isEqualData (const BasicTensor &rhs, double maxRelDiff) const
- template<typename T >
  FloatCompareResult< double > isEqualData (const std::vector< T > &rhs, double maxRelDiff) const
- bool isEqualDataShape (const BasicTensor &rhs) const
- bool isEqualStruct (const BasicTensor &rhs) const
- bool isExternal () const

  Is external buffer?

- bool isNull () const

  Check if tensor is null.

- size_t linearSizeGet () const

  Get tensor linear size in elements of current type.

- size_t linearSizeGet_bytes () const

  Get tensor linear size in bytes.

- const std::string & name () const

  Get name.

- void NCHWToNHWC ()

  Wrapper function for NCHWToNHWC<T>()

- template<typename T >
  void NCHWToNHWC ()
  Roll NCHW -> NHWC.
- void NHWCToNCHW ()
  Wrapper function for NHWCToNCHW<T>()
- template<typename T >
  void NHWCToNCHW ()
  Roll NHWC -> NCHW.
- std::string numpyTypeGet () const
  Return numpy-compatible type string.
- BasicTensor & operator= (BasicTensor &&move)
  Move assignment operator.
- BasicTensor & operator= (const BasicTensor &)=delete
  Deleted copy assignment operator.
- template<typename T_IN , typename T_OUT >
  void quantize ()
- const quant_params_t & quantParams () const
  Get quantization parameters.
- void quantParamsSet (const quant_params_t &qp)
- void reinterpretShapeForYolo ()
- void reinterpretShapeScaled (size_t last_dim, float32_t scale)
- void reshapeCombineDims (const std::vector< size_t > dims_to_combine)
- void reshapeTo (const shape_t &new_shape, DGType new_type=DG_UNDEFINED)
- void reshapeTo (size_t dim)
- void reshapeToNHWC ()
  Reshape tensor to 4-D NHWC shape.
- const shape_t & shape () const
  Get shape vector.
- std::string shapeStringGet () const
- const std::type_info & typeInfo () const
  Return type info.
- template<typename T = void>
  T * untypedData ()
  Return raw data buffer.
- template<typename T = void>
  T * untypedData () const
  Return raw data buffer.
- ~BasicTensor ()
  Destructor.

Static Public Member Functions

- static size_t linearSizeCalc (const shape_t &shape)
- static std::string numpyTypeGet (const std::string &dg_type)
  Return numpy-compatible type string from given DG type string.
- static std::string shapeStringGet (const shape_t &shape)

6.3.1 Detailed Description

Basic tensor container class. Based on "linear buffer with dimension array" approach. Dynamically-typed. Supports both internally or externally allocated buffers.

6.3.2 Constructor & Destructor Documentation

6.3.2.1 BasicTensor() [1/3]

```
template<typename T >
DG::BasicTensor::BasicTensor (
            int32_t id,
            const std::string & name,
            const shape_t & shape,
            const quant_params_t & quant_params = {},
            T * ext_lin_buffer = nullptr,
            bool set_zero = true )  [inline]
```

Constructor: allocate or assign tensor memory according to dimension vector (static typing version)

Parameters

in	*id*	- tensor ID
in	*name*	- tensor name
in	*shape*	- tensor shape vector, which defines dimensions of new tensor
in	*quant_params*	- tensor quantization parameters
in	*ext_lin_buffer*	- optional external linear buffer pointer; if nullptr, buffer will be allocated internally
in	*set_zero*	- when true, allocated buffer will be zeroed

6.3.2.2 BasicTensor() [2/3]

```
DG::BasicTensor::BasicTensor (
            int32_t id,
            const std::string & name,
            const shape_t & shape,
            DGType data_type,
            const quant_params_t & quant_params = {},
            void * ext_lin_buffer = nullptr,
            bool set_zero = true )  [inline]
```

Constructor: allocate or assign tensor memory according to dimension vector (dynamic typing version)

Parameters

in	*id*	- tensor ID
in	*name*	- tensor name
in	*shape*	- tensor shape vector, which defines dimensions of new tensor
in	*data_type*	- tensor element data type id
in	*quant_params*	- tensor quantization parameters
in	*ext_lin_buffer*	- optional external linear buffer pointer; if nullptr, buffer will be allocated internally
in	*set_zero*	- when true, allocated buffer will be zeroed

6.3.2.3 BasicTensor() [3/3]

```
template<class CONTAINER >
DG::BasicTensor::BasicTensor (
            const CONTAINER & source,
            bool do_copy = true,
            int32_t id = 0,
            const std::string & name = "",
            const shape_t & shape = {},
            const quant_params_t & quant_params = {} )  [inline], [explicit]
```

Constructor: allocate tensor memory and copy data from given linear container. CONTAINER type should have value_type, data(), and size() methods. If shape is empty, 1-D tensor the size of the linear container will be allocated. The size of the data copied is the minimum of the linear container size and the shape dimensions product.

Parameters

in	*source*	- linear container (such as string or vector) with tensor data
in	*do_copy*	- when true, copy data from container into tensor-owned buffer, otherwise assign pointer to container data
in	*id*	- tensor ID
in	*name*	- tensor name
in	*shape*	- tensor shape vector, which defines dimensions of new tensor
in	*quant_params*	- tensor quantization parameters

6.3.3 Member Function Documentation

6.3.3.1 adopt()

```
template<class CONTAINER >
auto DG::BasicTensor::adopt (
            CONTAINER && source,
            int32_t id = 0,
            const std::string & name = "",
            const shape_t & shape = {},
            const quant_params_t & quant_params = {} ) -> decltype( source.data(), source.↩
size(), void() )
```

  [inline]

Adopt data from given linear container by moving it to internal storage. CONTAINER type should have value_type, data(), and size() methods.

Parameters

in	*source*	- linear container (such as string or vector) with tensor data
in	*id*	- tensor ID
in	*name*	- tensor name
in	*shape*	- tensor shape vector, which defines dimensions of new tensor
in	*quant_params*	- tensor quantization parameters

6.3.3.2 alloc() [1/3]

```
template<class CONTAINER >
auto DG::BasicTensor::alloc (
            const CONTAINER & source,
            bool do_copy,
            int32_t id = 0,
            const std::string & name = "",
            const shape_t & shape = {},
            const quant_params_t & quant_params = {} ) -> decltype( source.data(), source.↩
size(), void() )

  [inline]
```

Allocate tensor memory and copy data from given linear container. CONTAINER type should have value_type, data(), and size() methods. If shape is empty, 1-D tensor the size of the linear container will be allocated. The size of the data copied is the minimum of the linear container size and the shape dimensions product.

Parameters

in	*source*	- linear container (such as string or vector) with tensor data
in	*do_copy*	- when true, copy data from container into tensor-owned buffer, otherwise assign pointer to container data
in	*id*	- tensor ID
in	*name*	- tensor name
in	*shape*	- tensor shape vector, which defines dimensions of new tensor
in	*quant_params*	- tensor quantization parameters

6.3.3.3 alloc() [2/3]

```
template<typename T >
void DG::BasicTensor::alloc (
            int32_t id,
            const std::string & name,
            const shape_t & shape,
            const quant_params_t & quant_params = {},
            T * ext_lin_buffer = nullptr,
            bool set_zero = true )  [inline]
```

Allocate or assign tensor memory according to dimension vector (static typing version)

Parameters

in	*id*	- tensor ID
in	*name*	- tensor name
in	*shape*	- tensor shape vector, which defines dimensions of new tensor
in	*quant_params*	- tensor quantization parameters
in	*ext_lin_buffer*	- optional external linear buffer pointer; if nullptr, buffer will be allocated internally
in	*set_zero*	- when true, allocated buffer will be zeroed

6.3.3.4 alloc() [3/3]

```
void DG::BasicTensor::alloc (
            int32_t id,
            const std::string & name,
            const shape_t & shape,
            DGType data_type,
            const quant_params_t & quant_params = {},
            void * ext_lin_buffer = nullptr,
            bool set_zero = true )  [inline]
```

Allocate or assign tensor memory according to dimension vector (dynamic typing version)

Parameters

in	*id*	- tensor ID
in	*name*	- tensor name
in	*shape*	- tensor shape vector, which defines dimensions of new tensor
in	*data_type*	- tensor element data type id
in	*quant_params*	- tensor quantization parameters
in	*ext_lin_buffer*	- optional external linear buffer pointer; if nullptr, buffer will be allocated internally
in	*set_zero*	- when true, allocated buffer will be zeroed

6.3.3.5 convert() [1/2]

```
template<typename T >
BasicTensor DG::BasicTensor::convert ( ) const  [inline]
```

Convert tensor to new element type with casting and copying data

Template Parameters

output	data type T

Returns

new owning tensor of type T

6.3.3.6 convert() [2/2]

```
BasicTensor DG::BasicTensor::convert (
            DGType to_type ) const  [inline]
```

Convert tensor to new element type with casting and copying data

Parameters

in	*to_type*	- new element type

Returns

new owning tensor

6.3.3.7 copy()

```
BasicTensor DG::BasicTensor::copy ( ) const  [inline]
```

Create and return deep copy of itself. External buffer data will be duplicated.

6.3.3.8 data() [1/2]

```
template<typename T >
T* DG::BasicTensor::data ( )  [inline]
```

Return non-const typed pointer to underlying linear buffer. Returns nullptr if template type does not match actual runtime tensor element type

6.3.3.9 data() [2/2]

```
template<typename T >
const T* DG::BasicTensor::data ( ) const  [inline]
```

Return const typed pointer to underlying linear buffer. Returns nullptr if template type does not match actual runtime tensor element type

6.3.3.10 dequantize()

```
template<typename T_IN , typename T_OUT >
void DG::BasicTensor::dequantize ( )  [inline]
```

Dequantize tensor according to current quantization settings from type T_IN to type T_OUT New linear buffer will be internally allocated to receive dequantized data.

6.3.3.11 isEqualData() [1/2]

```
FloatCompareResult< double > DG::BasicTensor::isEqualData (
            const BasicTensor & rhs,
            double maxRelDiff ) const  [inline]
```

Check, if this object and given object have equal data contents

Parameters

in	*rhs*	- object to compare with
in	*maxRelDiff*	- maximum relative difference for floating point comparison (ignored for integer data)

6.3.3.12 isEqualData() [2/2]

```
template<typename T >
FloatCompareResult< double > DG::BasicTensor::isEqualData (
            const std::vector< T > & rhs,
            double maxRelDiff ) const  [inline]
```

Check, if this object and given vector have equal data contents

Parameters

in	*rhs*	- vector to compare with
in	*maxRelDiff*	- maximum relative difference for floating point comparison (ignored for integer data)

6.3.3.13 isEqualDataShape()

```
bool DG::BasicTensor::isEqualDataShape (
            const BasicTensor & rhs ) const  [inline]
```

Check, if this object and given object have equal shape, element size and number of elements

Parameters

in	*rhs*	- object to compare with

6.3.3.14 isEqualStruct()

```
bool DG::BasicTensor::isEqualStruct (
            const BasicTensor & rhs ) const  [inline]
```

Check, if this object and given object have equal structure

Parameters

in	*rhs*	- object to compare with

6.3.3.15 linearSizeCalc()

```
static size_t DG::BasicTensor::linearSizeCalc (
            const shape_t & shape )  [inline], [static]
```

Calculate tensor linear size by shape

Parameters

in	*shape*	- tensor shape vector

Returns

linear size in elements of current type

6.3.3.16 quantize()

```
template<typename T_IN , typename T_OUT >
void DG::BasicTensor::quantize ( )  [inline]
```

Quantize tensor according to current quantization settings from type T_IN to type T_OUT New linear buffer will be internally allocated to receive quantized data.

6.3.3.17 quantParamsSet()

```
void DG::BasicTensor::quantParamsSet (
            const quant_params_t & qp )  [inline]
```

Set quantization parameters

Parameters

in	*qp*	- new quantization parameters

6.3.3.18 reinterpretShapeForYolo()

```
void DG::BasicTensor::reinterpretShapeForYolo ( )  [inline]
```

Reinterpret shape tensor to 3d to be used for YOLO detection/pose/segmentation models The last dimension is interpreted as channels, and all other dimensions are flattened 1xHxWxC -> 1x(H∗W)xC HxWx1xC -> 1x(H∗W)xC

6.3.3.19 reinterpretShapeScaled()

```
void DG::BasicTensor::reinterpretShapeScaled (
            size_t last_dim,
            float32_t scale )  [inline]
```

If the 3rd dimension is equal to last_dim, reshape tensor by scaling up 2nd dimension by scale and scaling down 3rd dimension by scale. E.g. If last_dim = 255 and scale = 3, then shape (1 x 6400 x 255) would be reshaped as 1 x 6400 x 255 -> 1 x 19200 x 85

6.3.3.20 reshapeCombineDims()

```
void DG::BasicTensor::reshapeCombineDims (
            const std::vector< size_t > dims_to_combine )  [inline]
```

Reshape tensor of multiple dimensions to a smaller number of dimensions by combining specified dimensions. E.g. reshapeCombineDims({0, 1, 2}) will combine first 3 dimensions into one.

6.3.3.21 reshapeTo() [1/2]

```
void DG::BasicTensor::reshapeTo (
            const shape_t & new_shape,
            DGType new_type = DG_UNDEFINED )  [inline]
```

Reshape tensor to given shape and element type

Parameters

in	*new_shape*	- new shape vector
in	*new_type*	- new element type, if DG_UNDEFINED, use current type Linear size after reshape must be the same as before reshape.

6.3.3.22 reshapeTo() [2/2]

```
void DG::BasicTensor::reshapeTo (
            size_t dim )  [inline]
```

Reshape tensor to given shape When new shape is bigger than current, shape is appended with unity values When new shape is smaller than current, shape is reduced, and last shape dimension is multiplied by product of reduced dimensions

6.3.3.23 shapeStringGet() [1/2]

```
std::string DG::BasicTensor::shapeStringGet ( ) const  [inline]
```

Construct shape string in "dim1xdim2x..." format

Returns

shape string

6.3.3.24 shapeStringGet() [2/2]

```
static std::string DG::BasicTensor::shapeStringGet (
            const shape_t & shape )  [inline], [static]
```

Construct shape string in "dim1xdim2x..." format

Parameters

in	*shape*	- tensor shape vector

Returns

shape string

The documentation for this class was generated from the following file:

- dg_tensor_structs.h

6.4 DG::JsonHelper Class Reference

JSON helper class: contains assorted static methods to operate with JSON configurations.

`#include <dg_json_helpers.h>`

Public Types

- using serial_container_t = json::binary_t::container_type
  Container type for serialized JSON array (it is std::vector< unit8_t >)

Static Public Member Functions

- static std::string errorCheck (const json &response, const std::string &source, bool do_throw=true)
- static json jsonDeserialize (const serial_container_t &v)
- static json jsonDeserializeStr (const std::string &v)
- static serial_container_t jsonSerialize (const json &j)
- static std::string jsonSerializeStr (const json &j)
- static json parse (const std::string &json_cfg, const char *file, const char *line, const char *func)
- static json parse_ignore_errors (const std::string json_cfg)
- static BasicTensor tensorDeserialize (const json &j)
- static json tensorSerialize (const BasicTensor &t)

6.4.1 Detailed Description

JSON helper class: contains assorted static methods to operate with JSON configurations.

6.4.2 Member Function Documentation

6.4.2.1 errorCheck()

```
static std::string DG::JsonHelper::errorCheck (
            const json & response,
            const std::string & source,
            bool do_throw = true )  [inline], [static]
```

Check server JSON response for errors and throw exception, if any

Parameters

in	*response*	- JSON response from server/core
in	*source*	- description of the server command initiator
in	*do_throw*	- if true, throws exception in case of error

Returns

original error string, if error is detected, empty string otherwise

6.4.2.2 jsonDeserialize()

```
static json DG::JsonHelper::jsonDeserialize (
            const serial_container_t & v )  [inline], [static]
```

Deserialize given byte vector with msgpack data into JSON array

Parameters

in	*v*	- byte vector with msgpack data to deserialize

Returns

JSON array

6.4.2.3 jsonDeserializeStr()

```
static json DG::JsonHelper::jsonDeserializeStr (
            const std::string & v )  [inline], [static]
```

Deserialize given string with msgpack data into JSON array

Parameters

in	*v*	- byte vector with msgpack data to deserialize

Returns

JSON array

6.4.2.4 jsonSerialize()

```
static serial_container_t DG::JsonHelper::jsonSerialize (
            const json & j )  [inline], [static]
```

Serialize given JSON array into byte vector using conversion to msgpack

Parameters

in	*j*	- JSON array to serialize

Returns

byte vector with JSON array contents converted to msgpack representation

6.4.2.5 jsonSerializeStr()

```
static std::string DG::JsonHelper::jsonSerializeStr (
            const json & j )  [inline], [static]
```

Serialize given JSON array into string using conversion to msgpack

Parameters

in	*j*	- JSON array to serialize

Returns

string with JSON array contents converted to msgpack representation

6.4.2.6 parse()

```
static json DG::JsonHelper::parse (
            const std::string & json_cfg,
```

```
            const char * file,
            const char * line,
            const char * func )  [inline], [static]
```

Parse given JSON string with proper exception handling

Parameters

in	*json_cfg*	- JSON string to parse
in	*file*	- file where parsing happens
in	*line*	- line in file where parsing happens
in	*func*	- function where parsing happens

Returns

JSON array

6.4.2.7 parse_ignore_errors()

```
static json DG::JsonHelper::parse_ignore_errors (
            const std::string json_cfg )  [inline], [static]
```

Parse given JSON string with swallowing exceptions

Parameters

in	*json_cfg*	- JSON string to parse

Returns

JSON array or empty array, if parsing failed

6.4.2.8 tensorDeserialize()

```
static BasicTensor DG::JsonHelper::tensorDeserialize (
            const json & j )  [inline], [static]
```

Convert JSON array to basic tensor

Parameters

in	*j*	- JSON array

Returns

basic tensor

6.4.2.9 tensorSerialize()

```
static json DG::JsonHelper::tensorSerialize (
            const BasicTensor & t )  [inline], [static]
```

Convert basic tensor to JSON array

Parameters

in	*t*	- basic tensor

Returns

JSON array

The documentation for this class was generated from the following file:


- dg_json_helpers.h

6.5 DG::ModelInfo Struct Reference

ModelInfo is the model identification structure. It keeps AI model key attributes.

```
#include <dg_client_structs.h>
```

Collaboration diagram for DG::ModelInfo:

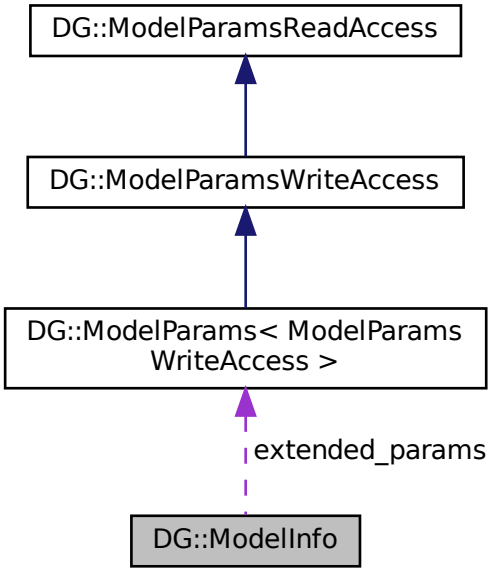

Public Attributes

- DG::ModelParamsWriter extended_params

  extended model parameters
- std::string name

  model string name

6.5.1 Detailed Description

ModelInfo is the model identification structure. It keeps AI model key attributes.

The documentation for this struct was generated from the following file:


- dg_client_structs.h

6.6 DG::ModelParams< Base, > Class Template Reference


ModelParams is model parameters collection with user-defined access rights.

`#include <dg_model_parameters.h>`

Inheritance diagram for DG::ModelParams< Base, >:

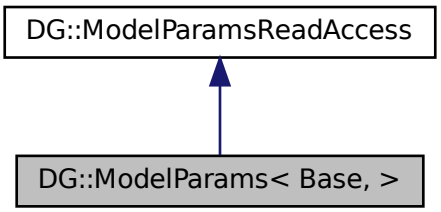

Collaboration diagram for DG::ModelParams< Base, >:

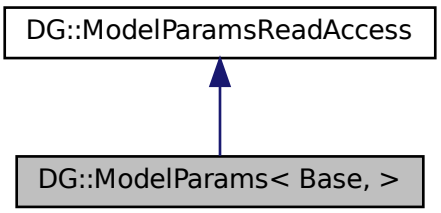

Public Member Functions

- ModelParams (const char *json_text="{}")
- ModelParams (const json &json_cfg)
- ModelParams (const std::string &json_text)
- ModelParams (json &&json_cfg)
- ModelParams (ModelParams &&rhs)

  Move constructor.
- ModelParams (ModelParams const &rhs)

  Copy constructor.
- ModelParams & operator= (ModelParams &&rhs)

  Move assignment.
- ModelParams & operator= (ModelParams const &rhs)

  Copy assignment.

Additional Inherited Members

6.6.1 Detailed Description

template<class Base = ModelParamsReadAccess, std::enable_if_t< std::is_base_of_v< ModelParamsReadAccess, Base >, bool > = false>
class DG::ModelParams< Base, >

ModelParams is model parameters collection with user-defined access rights.

This class provides programmatic type-safe access to model parameters defined in JSON model configuration while owning that JSON array. Access (read or write) is defined by the Base template parameter, which is used as the base class.

Template Parameters

Base	- ModelParamsReadAccess-derived base class: it can be ModelParamsReadAccess or ModelParamsWriteAccess

6.6.2 Constructor & Destructor Documentation

6.6.2.1 ModelParams() [1/4]

```
template<class Base = ModelParamsReadAccess, std::enable_if_t< std::is_base_of_v< Model↩
ParamsReadAccess, Base >, bool > = false>
DG::ModelParams< Base, >::ModelParams (
            const char * json_text = "{}" )  [inline]
```

Constructor. Creates model parameter collection by parsing JSON text in character array

Parameters

in	*json_text*	- JSON text with model parameters. It will be parsed and stored in internal JSON array.

6.6.2.2 ModelParams() [2/4]

```
template<class Base = ModelParamsReadAccess, std::enable_if_t< std::is_base_of_v< Model↩
ParamsReadAccess, Base >, bool > = false>
DG::ModelParams< Base, >::ModelParams (
            const std::string & json_text )  [inline], [explicit]
```

Constructor. Creates model parameter collection by parsing JSON text in std::string

Parameters

in	*json_text*	- JSON text with model parameters. It will be parsed and stored in internal JSON array.

6.6.2.3 ModelParams() [3/4]

```
template<class Base = ModelParamsReadAccess, std::enable_if_t< std::is_base_of_v< Model↩
ParamsReadAccess, Base >, bool > = false>
DG::ModelParams< Base, >::ModelParams (
            const json & json_cfg )  [inline], [explicit]
```

Constructor. Creates model parameter collection from given JSON array

Parameters

in	*json_cfg*	- JSON array with model parameters. It will be copied into internal JSON array.

6.6.2.4 ModelParams() [4/4]

```
template<class Base = ModelParamsReadAccess, std::enable_if_t< std::is_base_of_v< Model↩
ParamsReadAccess, Base >, bool > = false>
DG::ModelParams< Base, >::ModelParams (
            json && json_cfg )  [inline], [explicit]
```

Constructor with move semantic. Creates model parameter collection from given JSON array

Parameters

in	*json_cfg*	- JSON array with model parameters. It will be moved into internal JSON array.

The documentation for this class was generated from the following file:


- dg_model_parameters.h

6.7 DG::ModelParamsReadAccess Class Reference

ModelParamsReadAccess is read-only accessor to model parameters.

```
#include <dg_model_parameters.h>
```

Inheritance diagram for DG::ModelParamsReadAccess:

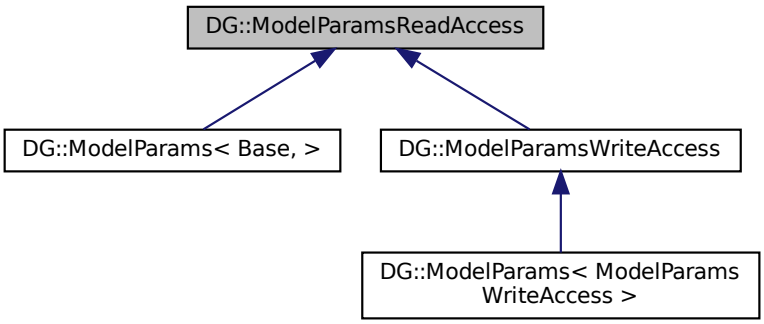

Public Member Functions

- json fullJsonGet () const
- const json & jsonGet () const
- size_t modelHashGet () const
- size_t modelInputSizeGet () const

  Helper method: get model input size.
- ModelParamsReadAccess (const json &config)
- std::vector< size_t > modelShapeGet (size_t inp_idx, size_t expected_size) const
- template<typename T >
  T None (size_t idx=0) const

  Stub for empty getter fallback.
- bool None_exist (size_t idx=0) const

  Stub for empty existence checker fallback.
- template<typename T >
  T None_get (size_t idx=0) const

  Stub for empty getter fallback.
- operator const json & () const
- operator std::string () const
- const json & sectionGet (const std::string &section, size_t idx=0) const
- size_t sectionSizeGet (const std::string &section) const

Protected Member Functions

- bool paramExist (const char *section, const char *key, size_t idx, bool(ModelParamsReadAccess::*fallback)(size_t) const) const
- template<typename T >
  T paramGet (const char *section, const char *key, bool is_mandatory, const T &default_value, size_t idx, T(ModelParamsReadAccess::*fallback)(size_t) const) const

Protected Attributes

- const json & m_cfg_ro

  non-owning reference to JSON array with model configuration

6.7.1 Detailed Description

ModelParamsReadAccess is read-only accessor to model parameters.

This class provides programmatic type-safe read access to model parameters defined in JSON model configuration. It keeps non-owning const reference to underlying JSON array. For each model parameter it provides getter method, which name matches the parameter name as it appears in JSON array.

6.7.2 Constructor & Destructor Documentation

6.7.2.1 ModelParamsReadAccess()

```
DG::ModelParamsReadAccess::ModelParamsReadAccess (
            const json & config )  [inline]
```

Constructor. Attaches model parameter read-only accessor to JSON array

Parameters

in	*config*	- JSON array with model configuration

6.7.3 Member Function Documentation

6.7.3.1 fullJsonGet()

```
json DG::ModelParamsReadAccess::fullJsonGet ( ) const  [inline]
```

Function to return the full JSON of model parameters This returns the model parameter JSON merged with a JSON of default values for all the parameters that aren't listed

6.7.3.2 jsonGet()

```
const json& DG::ModelParamsReadAccess::jsonGet ( ) const  [inline]
```

Access to underlying JSON array

Returns

constant non-owning reference to JSON array with model configuration

6.7.3.3 modelHashGet()

```
size_t DG::ModelParamsReadAccess::modelHashGet ( ) const  [inline]
```

Compute the hash of the parameter values in a given section

Returns

std::hash for a given section

6.7.3.4 modelShapeGet()

```
std::vector< size_t > DG::ModelParamsReadAccess::modelShapeGet (
            size_t inp_idx,
            size_t expected_size ) const  [inline]
```

Helper method: get model input shape

Parameters

in	*inp_idx*	- input index
in	*expected_size*	- expected size of the shape vector, 0 if not checked

Returns

model input shape vector

6.7.3.5 operator const json &()

```
DG::ModelParamsReadAccess::operator const json & ( ) const  [inline]
```

Access to underlying JSON array

Returns

constant non-owning reference to JSON array with model configuration

6.7.3.6 operator std::string()

```
DG::ModelParamsReadAccess::operator std::string ( ) const  [inline]
```

Access to underlying JSON array as string

Returns

JSON text with model configuration

6.7.3.7 paramExist()

```
bool DG::ModelParamsReadAccess::paramExist (
            const char * section,
            const char * key,
            size_t idx,
            bool(ModelParamsReadAccess::*)(size_t) const fallback ) const  [inline], [protected]
```

Check parameter for existence

Template Parameters

T	- parameter type

Parameters

in	*section*	- top section name; if empty, key is taken from topmost level
in	*key*	- key of key-value pair
in	*idx*	- array index inside section object
in	*fallback*	- existence checker for fallback parameter

Returns

parameter value

6.7.3.8 paramGet()

```
template<typename T >
T DG::ModelParamsReadAccess::paramGet (
            const char * section,
            const char * key,
            bool is_mandatory,
            const T & default_value,
            size_t idx,
            T(ModelParamsReadAccess::*)(size_t) const fallback ) const  [inline], [protected]
```

Get parameter from JSON array

Template Parameters

T	- parameter type

Parameters

in	*section*	- top section name; if empty, key is taken from topmost level
in	*key*	- key of key-value pair
in	*is_mandatory*	- if parameter mandatory
in	*default_value*	- value to return, if no such key is found

Parameters

in	*idx*	- array index inside section object
in	*fallback*	- fallback parameter getter

Returns

parameter value

6.7.3.9 sectionGet()

```
const json& DG::ModelParamsReadAccess::sectionGet (
            const std::string & section,
            size_t idx = 0 ) const  [inline]
```

Access to underlying JSON sub-array for particular section

Parameters

in	*section*	- section name to access (one of SECT_xxx constants)
in	*idx*	- array index inside section object

Returns

constant non-owning reference to JSON array with particular model section configuration

6.7.3.10 sectionSizeGet()

```
size_t DG::ModelParamsReadAccess::sectionSizeGet (
            const std::string & section ) const  [inline]
```

Get size of underlying JSON sub-array for particular section

Parameters

in	*section*	- section name to access (one of SECT_xxx constants)

Returns

section sub-array size in elements

The documentation for this class was generated from the following file:

- dg_model_parameters.h

6.8 DG::ModelParamsSection Struct Reference

Model parameters section descriptor.

`#include <dg_model_parameters.h>`

Public Attributes

- bool is_scalar

  scalar vs vector flag: vector sections contain more than one element
- const char * label

  section name string

6.8.1 Detailed Description

Model parameters section descriptor.

The documentation for this struct was generated from the following file:


- dg_model_parameters.h

6.9 DG::ModelParamsWriteAccess Class Reference


ModelParamsWriteAccess is read/write accessor to model parameters.

`#include <dg_model_parameters.h>`

Inheritance diagram for DG::ModelParamsWriteAccess:

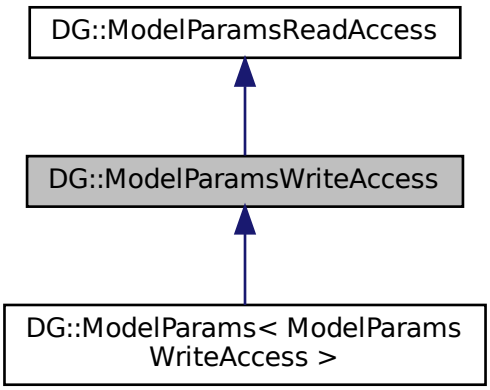

Collaboration diagram for DG::ModelParamsWriteAccess:

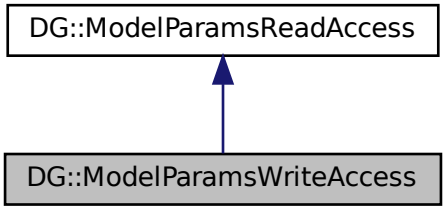

Public Member Functions

- bool is_dirty () const

  Check if dirty: at least one of the parameters was changed.
- ModelParamsWriteAccess & merge (const json &config)
- ModelParamsWriteAccess (json &config)
- void set_dirty (bool state)

Protected Member Functions

- template<typename T >
  ModelParamsWriteAccess & paramSet (const char *section, const char *key, const T &value, size_t idx)

Protected Attributes

- json & m_cfg_rw

  non-owning reference to JSON array with model configuration
- bool m_dirty

  'some parameter was changed' flag

6.9.1 Detailed Description

ModelParamsWriteAccess is read/write accessor to model parameters.

This class provides programmatic type-safe read and write access to model parameters defined in JSON model configuration. It keeps non-owning non-const reference to underlying JSON array. For each model parameter it provides both getter and setter methods. Getter method name matches the parameter name as it appears in J↩ SON array. Setter method name is constructed from the parameter name by appending _set suffix. For example, InputImgFmt_set()

6.9.2 Constructor & Destructor Documentation

6.9.2.1 ModelParamsWriteAccess()

```
DG::ModelParamsWriteAccess::ModelParamsWriteAccess (
            json & config )  [inline]
```

Constructor. Attaches model parameter read-write accessor to JSON array

Parameters

in	*config*	- JSON array with model configuration

6.9.3 Member Function Documentation

6.9.3.1 merge()

```
ModelParamsWriteAccess& DG::ModelParamsWriteAccess::merge (
            const json & config )  [inline]
```

Merge given model configuration JSON array with self Note: only runtime parameters will be merged

Parameters

in	*config*	- model configuration JSON array to be merged

6.9.3.2 paramSet()

```
template<typename T >
ModelParamsWriteAccess& DG::ModelParamsWriteAccess::paramSet (
            const char * section,
            const char * key,
            const T & value,
            size_t idx )  [inline], [protected]
```

Set parameter to JSON array

Template Parameters

T	- parameter type

Parameters

in	*section*	- top section name; if empty, key is placed in topmost level
in	*key*	- key of key-value pair
in	*value*	- value to set
in	*idx*	- array index inside section object

6.9.3.3 set_dirty()

```
void DG::ModelParamsWriteAccess::set_dirty (
            bool state )  [inline]
```

Set dirty flag

Parameters

in	*state*	- dirty flag value to set

The documentation for this class was generated from the following file:

- dg_model_parameters.h

6.10 DG::ModelQuery Struct Reference

Model query structure used to search models on AI server which match a set of provided model attributes.

`#include <dg_model_api.h>`

Public Types

- enum TriState { Yes, No, Dont_care }
  Tri-state boolean enum.

Public Attributes

- std::string device_type
  device type to use for inference (optional, can be empty if don't care)
- std::string model_name
  any part of the model name (mandatory parameter)
- TriState model_pruned = Dont_care
  model should be pruned/sparse (not dense)
- TriState model_quantized = Dont_care
  model should be quantized
- std::string runtime_agent
  runtime agent to use for inference (optional, can be empty if don't care)

6.10.1 Detailed Description

Model query structure used to search models on AI server which match a set of provided model attributes.

6.10.2 Member Enumeration Documentation

6.10.2.1 TriState

```
enum DG::ModelQuery::TriState
```

Tri-state boolean enum.

Enumerator

Yes	yes / true
No	no / false
Dont_care	not set / don't care

The documentation for this struct was generated from the following file:

- dg_model_api.h

6.11 DG::BasicTensor::quant_params_t Struct Reference

Quantization parameters (how to convert from integer/quantized data back to floating point)

`#include <dg_tensor_structs.h>`

Classes

- struct scale_t

Public Member Functions

- bool isEqualData (const quant_params_t &rhs, double maxRelDiff) const
- bool isEqualStruct (const quant_params_t &rhs) const
- int quant_axis () const

  Get quantization axis (-1 means global quantization)
- const std::vector< scale_t > & quant_params () const

  Get quantization parameters.
- quant_params_t ()

  Default constructor.
- quant_params_t (const scale_t &global_qparam)
- quant_params_t (int axis, const std::vector< scale_t > &qparams)
- template<typename SCALE_T , typename ZERO_T >
  quant_params_t (int axis, const std::vector< SCALE_T > &scales, const std::vector< ZERO_T > &zeros)
- template<typename T >
  std::vector< T > quant_scales () const

  Get array of scales.
- template<typename T >
  std::vector< T > quant_zeros () const

  Get array of zero offsets.

6.11.1 Detailed Description

Quantization parameters (how to convert from integer/quantized data back to floating point)

6.11.2 Constructor & Destructor Documentation

6.11.2.1 quant_params_t() [1/3]

```
DG::BasicTensor::quant_params_t::quant_params_t (
            const scale_t & global_qparam )  [inline]
```

Constructor for global quantization

Parameters

in	*global_qparam*	- global quantization parameters

6.11.2.2 quant_params_t() [2/3]

```
DG::BasicTensor::quant_params_t::quant_params_t (
            int axis,
            const std::vector< scale_t > & qparams )  [inline]
```

Constructor for per-axis quantization

Parameters

in	*axis*	- quantization axis
in	*qparams*	- vector of per-axis quantization parameters

6.11.2.3 quant_params_t() [3/3]

```
template<typename SCALE_T , typename ZERO_T >
DG::BasicTensor::quant_params_t::quant_params_t (
            int axis,
            const std::vector< SCALE_T > & scales,
            const std::vector< ZERO_T > & zeros )  [inline]
```

Alternative constructor for per-axis quantization

Parameters

in	*axis*	- quantization axis
in	*scales*	- vector of per-axis scales
in	*zeros*	- vector of per-axis zero offsets

6.11.3 Member Function Documentation

6.11.3.1 isEqualData()

```
bool DG::BasicTensor::quant_params_t::isEqualData (
            const quant_params_t & rhs,
            double maxRelDiff ) const  [inline]
```

Check, if this object and given object have equal data contents

Parameters

in	*rhs*	- object to compare with
in	*maxRelDiff*	- maximum relative difference for floating point comparison

6.11.3.2 isEqualStruct()

```
bool DG::BasicTensor::quant_params_t::isEqualStruct (
            const quant_params_t & rhs ) const  [inline]
```

Check, if this object and given object have equal structure

Parameters

in	*rhs*	- object to compare with

The documentation for this struct was generated from the following file:

- dg_tensor_structs.h

6.12 DG::BasicTensor::quant_params_t::scale_t Struct Reference

```
#include <dg_tensor_structs.h>
```

Public Attributes

- double m_scale
  scale factor
- int64_t m_zero
  zero offset

6.12.1 Detailed Description

Single quantization parameter: scale and zero offset Scaling formula is real_value = m_scale $*$ (int_value - m_zero)

The documentation for this struct was generated from the following file:

- dg_tensor_structs.h

6.13 DG::ServerAddress Struct Reference

```
#include <dg_client_structs.h>
```

Public Member Functions

- const bool is_valid () const
- operator std::string () const

  Convert server address to string.
- ServerAddress (const std::string &ip, int port, ServerType server_type)

Static Public Member Functions

- static ServerAddress fromHostname (const std::string &hostname)

Public Attributes

- std::string ip

  server domain name or IP address string
- int port = DEFAULT_PORT

  server TCP port number
- ServerType server_type = ServerType::Unknown

  server protocol type

6.13.1 Detailed Description

ServerAddress is the server address structure. It keeps AI server TCP/IP address, port, and server protocol type.

6.13.2 Constructor & Destructor Documentation

6.13.2.1 ServerAddress()

```
DG::ServerAddress::ServerAddress (
            const std::string & ip,
            int port,
            ServerType server_type )  [inline]
```

Constructor

Parameters

in	*ip*	- server domain name or IP address
in	*port*	- server TCP port
in	*server_type*	- server protocol type

6.13.3 Member Function Documentation

6.13.3.1 fromHostname()

```
static ServerAddress DG::ServerAddress::fromHostname (
            const std::string & hostname )  [inline], [static]
```

Construct server address from hostname

Parameters

in	*hostname*	- server domain name or IP address with optional port suffix and protocol prefix (http:// or asio://)

Returns

server address object

6.13.3.2 is_valid()

```
const bool DG::ServerAddress::is_valid ( ) const  [inline]
```

Check server address validity

Returns

true if server address is valid

The documentation for this struct was generated from the following file:

- dg_client_structs.h

Chapter 7


File Documentation

7.1 dg_client_structs.h File Reference


DG client API data types.

```
#include <stdlib.h>
#include <string>
#include <vector>
#include "Utilities/dg_model_parameters.h"
```

Include dependency graph for dg_client_structs.h:

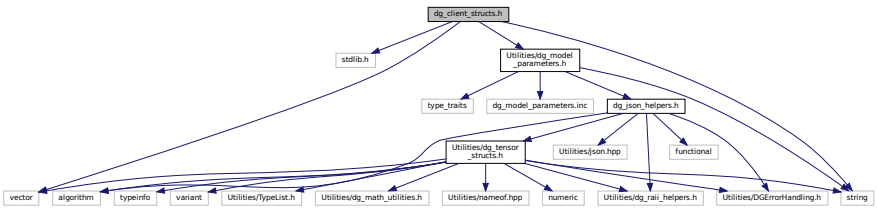

This graph shows which files directly or indirectly include this file:

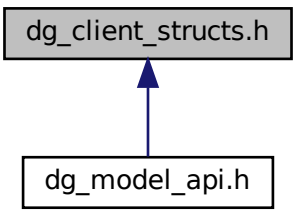

Classes

- struct DG::ModelInfo

  ModelInfo is the model identification structure. It keeps AI model key attributes.
- struct DG::ServerAddress

Namespaces

- DG

  DG is DeGirum namespace which groups all DeGirum software declarations.

Typedefs

- typedef struct DG::ModelInfo DG::ModelInfo

  ModelInfo is the model identification structure. It keeps AI model key attributes.

Enumerations

- enum DG::ServerType { DG::ServerType::Unknown, DG::ServerType::ASIO, DG::ServerType::HTTP }

  Server protocol type.

Functions

- static std::string DG::messagePrepare (const json &in)
- static json DG::messagePrepareJson (const json &in)

Variables

- const int DG::CURRENT_PROTOCOL_VERSION = 4

  current client-server protocol version
- const int DG::DEFAULT_CONNECTION_TIMEOUT_MS = 10000

  Default connection timeout, ms.
- const int DG::DEFAULT_FRAME_QUEUE_DEPTH = 8

  Default frame queue depth.
- const int DG::DEFAULT_INFERENCE_TIMEOUT_MS = 180000

  Default inference timeout, ms.
- const int DG::DEFAULT_PORT = 8778

  Default TCP port of AI server.
- const int DG::MIN_COMPATIBLE_PROTOCOL_VERSION = 4

  minimum compatible client-server protocol version
- constexpr const char * DG::PROTOCOL_VERSION_TAG = "VERSION"

  client-server protocol version tag

7.1.1 Detailed Description

DG client API data types.

This file contains declarations of various data types of DG client API:


- device types
- runtime agent types
- model parameters, etc.

7.2 dg_json_helpers.h File Reference


DG Core JSON helper classes and functions.

```
#include "Utilities/DGErrorHandling.h"
#include "Utilities/dg_tensor_structs.h"
#include "Utilities/dg_raii_helpers.h"
#include "Utilities/json.hpp"
#include <functional>
#include <algorithm>
```

Include dependency graph for dg_json_helpers.h:



This graph shows which files directly or indirectly include this file:

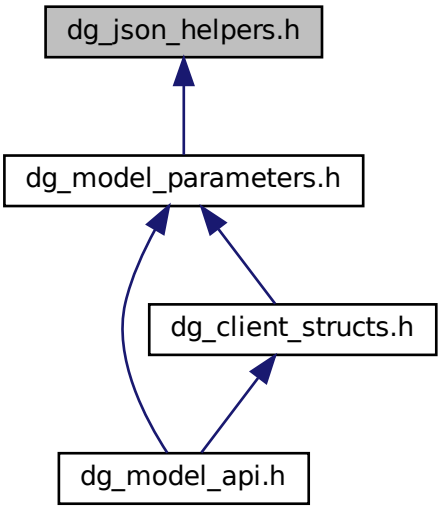

Classes

- class DG::JsonHelper

  JSON helper class: contains assorted static methods to operate with JSON configurations.

Namespaces

- DG

  DG is DeGirum namespace which groups all DeGirum software declarations.

Macros

- #define DG_JSON_PARSE(json_cfg) DG::JsonHelper::parse(json_cfg, __FILE__, TOSTRING(__LINE__), FUNCTION_NAME)

  Parse given JSON string with proper exception handling.

Typedefs

- using DG::json = nlohmann::json

  JSON library.

Functions

- template<typename T >
  T DG::jsonGetMandatoryValue (const json &json_params, const std::string &section, int index, const std::string &key)
- template<typename T >
  T DG::jsonGetOptionalValue (const json &json_params, const std::string &section, int index, const std::string &key, const T &default_value)
- static bool DG::jsonKeyExist (const json &json_params, const std::string &section, int index, const std::string &key)
- template<typename T >
  void DG::jsonSetOptionalValue (json &json_params, const std::string &section, int index, const std::string &key, const T &value)

7.2.1 Detailed Description

DG Core JSON helper classes and functions.


This file contains declaration of various helper classes and helper functions enhancing JSON handling

7.3 dg_model_api.h File Reference

DG Client API for model inference.

```
#include <cstdint>
#include <functional>
#include <map>
#include <memory>
#include <set>
#include <string>
#include <vector>
#include "Utilities/dg_client_structs.h"
#include "Utilities/dg_model_parameters.h"
```

Include dependency graph for dg_model_api.h:

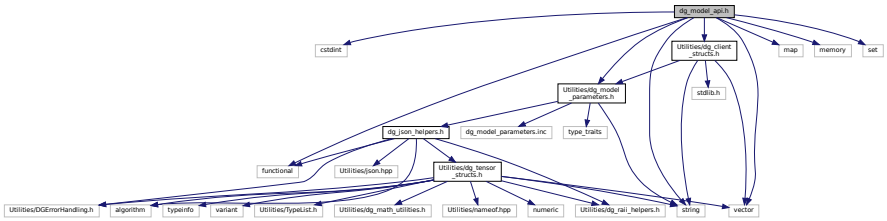

Classes

- class DG::AIModel

  AIModel is DeGirum AI client API class for simple non-pipelined sequential inference.
- class DG::AIModelAsync

  AIModelAsync is DeGirum AI client API class for efficient pipelined asynchronous inference.
- struct DG::ModelQuery

  Model query structure used to search models on AI server which match a set of provided model attributes.

Namespaces

- DG

  DG is DeGirum namespace which groups all DeGirum software declarations.

Enumerations

- enum DG::DetectionStatus { DG::DetectionStatus::OK, DG::DetectionStatus::ProtocolMismatch, DG::DetectionStatus::HostAliv
  }

  Enumerator showing server status as detected by the below function.

Functions

- std::vector< std::tuple< std::string, DG::DetectionStatus > > DG::detectHostnameServers (const std::string &prefix, const int range_start, const int range_end, const int numeral_width=3)
- std::vector< std::tuple< std::string, DetectionStatus > > DG::detectSubnetServers (const std::string &root↩_ip, const std::string &subnet_mask)
- json DG::devCtrl (const std::string &server, const json &req)
- std::string DG::errorCheck (const json &json_response)
- json DG::labelDictionary (const std::string &server, const std::string &model_name)
- ModelInfo DG::modelFind (const std::string &server, const ModelQuery &query)
- void DG::modelzooListGet (const std::string &server, std::vector< ModelInfo > &modelzoo_list)
- json DG::modelZooManage (const std::string &server, const json &req)
- bool DG::serverPing (const std::string &server)
- void DG::shutdown (const std::string &server)
- json DG::systemInfo (const std::string &server)
- json DG::traceManage (const std::string &server, const json &req)
- std::string DG::versionGet ()

7.3.1 Detailed Description

DG Client API for model inference.


This file contains declaration of DG Client API functions and classes for model inference

7.4 dg_model_parameters.h File Reference


DG centralized handling of JSON model parameters.

```
#include <string>
#include <type_traits>
#include "dg_json_helpers.h"
#include "dg_model_parameters.inc"
```

Include dependency graph for dg_model_parameters.h:

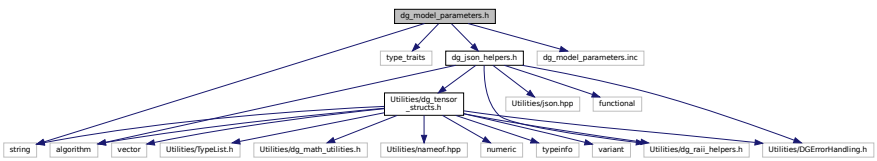

This graph shows which files directly or indirectly include this file:

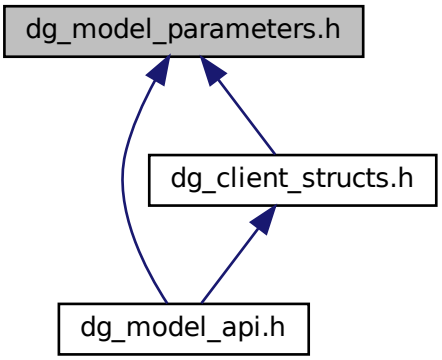

Classes

- class DG::ModelParams< Base, >

  ModelParams is model parameters collection with user-defined access rights.
- class DG::ModelParamsReadAccess

  ModelParamsReadAccess is read-only accessor to model parameters.
- struct DG::ModelParamsSection

  Model parameters section descriptor.
- class DG::ModelParamsWriteAccess

  ModelParamsWriteAccess is read/write accessor to model parameters.

Namespaces

- DG

  DG is DeGirum namespace which groups all DeGirum software declarations.

Typedefs

- using DG::ModelParamsWriter = ModelParams< ModelParamsWriteAccess >

  ModelParamsWriter is ModelParams template instantiation with write access.
- using DG::vec3d_int = std::vector< std::vector< std::vector< int > > >

  3D vector of integers
- using DG::vec_dbl = std::vector< double >

  vector of doubles
- using DG::vec_flt = std::vector< float >

  vector of floats
- using DG::vec_int = std::vector< int >

  vector of integers
- using DG::vec_str = std::vector< std::string >

  vector of strings
- using DG::vec_sz = std::vector< size_t >

  vector of size_t

Variables

- const int DG::MODEL_PARAMS_CURRENT_VERSION = 14
- const int DG::MODEL_PARAMS_MIN_COMPATIBLE_VERSION = 1
- constexpr ModelParamsSection DG::SECT_DEVICE = { "DEVICE", true }

  device parameters section
- constexpr ModelParamsSection DG::SECT_INTERNAL = { "INTERNAL", true }

  internal parameters section
- constexpr ModelParamsSection DG::SECT_MODEL_PARAMETERS = { "MODEL_PARAMETERS", true }

  model parameters section
- constexpr ModelParamsSection DG::SECT_POST_PROCESS = { "POST_PROCESS", true }

  post-processing parameters section
- constexpr ModelParamsSection DG::SECT_PRE_PROCESS = { "PRE_PROCESS", false }

  pre-processing parameters section
- constexpr ModelParamsSection DG::SECT_TOP = { "", true }

  JSON file top-level sections.

7.4.1 Detailed Description

DG centralized handling of JSON model parameters.

This file implements classes for centralized handling of JSON model parameters. Each AI model in DG framework is accompanied with JSON configuration file, which defines all model configuration parameters. Class list: ModelParamsReadAccess - read-only model parameters accessor ModelParamsWriteAccess - read/write model parameters accessor ModelParams - model parameters collection with access type defined by the template parameter

7.5 dg_tensor_structs.h File Reference


DG tensor container classes.

```
#include <algorithm>
#include <numeric>
#include <string>
#include <typeinfo>
#include <variant>
#include <vector>
#include "Utilities/DGErrorHandling.h"
#include "Utilities/TypeList.h"
#include "Utilities/dg_math_utilities.h"
#include "Utilities/dg_raii_helpers.h"
#include "Utilities/nameof.hpp"
```

Include dependency graph for dg_tensor_structs.h:



This graph shows which files directly or indirectly include this file:

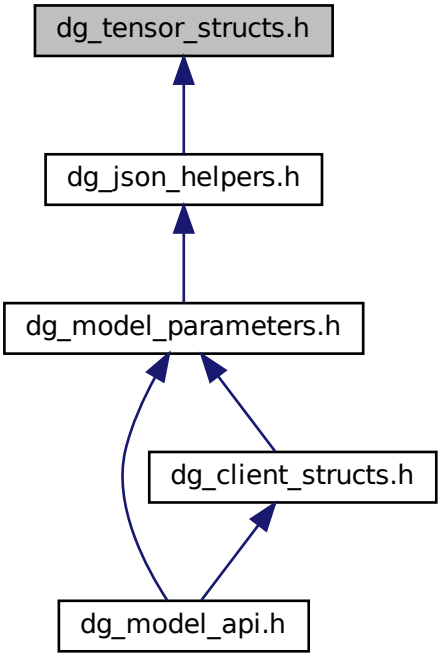

Classes

- class DG::BasicTensor
- struct DG::BasicTensor::quant_params_t

  Quantization parameters (how to convert from integer/quantized data back to floating point)
- struct DG::BasicTensor::quant_params_t::scale_t

Namespaces

- DG

  DG is DeGirum namespace which groups all DeGirum software declarations.

Typedefs

- using DG::BasicTensorVector = std::vector< BasicTensor >

  Collection of tensors.

Functions

- std::ostream & DG::operator<< (std::ostream &os, const BasicTensor &t)

  Print tensor to stream.

7.5.1 Detailed Description

DG tensor container classes.

This file contains declaration of tensor container classes

Index

~AIModelAsync
DG::AIModelAsync, 38

adopt
DG::BasicTensor, 44
AIModel
DG::AIModel, 35
AIModelAsync
DG::AIModelAsync, 38
alloc
DG::BasicTensor, 45, 46
ASIO
DG, 26

BasicTensor
DG::BasicTensor, 43, 44

callback_t
DG::AIModelAsync, 37
convert
DG::BasicTensor, 46
copy
DG::BasicTensor, 47

data
DG::BasicTensor, 47
dequantize
DG::BasicTensor, 47
detectHostnameServers
DG, 26
DetectionStatus
DG, 25
detectSubnetServers
DG, 27
devCtrl
DG, 27
DG, 23
ASIO, 26
detectHostnameServers, 26
DetectionStatus, 25
detectSubnetServers, 27
devCtrl, 27
errorCheck, 28
HostAlive, 26
HTTP, 26
jsonGetMandatoryValue, 28
jsonGetOptionalValue, 28
jsonKeyExist, 29
jsonSetOptionalValue, 29
labelDictionary, 30
messagePrepare, 30
messagePrepareJson, 30
MODEL_PARAMS_CURRENT_VERSION, 34
MODEL_PARAMS_MIN_COMPATIBLE_VERSION, 34
modelFind, 31
modelzooListGet, 31
modelZooManage, 32
OK, 26
ProtocolMismatch, 26
SECT_TOP, 34
serverPing, 32
ServerType, 26
shutdown, 32
systemInfo, 33
traceManage, 33
Unknown, 26
versionGet, 33
DG::AIModel, 35
AIModel, 35
predict, 36
DG::AIModelAsync, 37
~AIModelAsync, 38
AIModelAsync, 38
callback_t, 37
lastError, 39
predict, 39
setCallback, 39
waitCompletion, 40
DG::BasicTensor, 40
adopt, 44
alloc, 45, 46
BasicTensor, 43, 44
convert, 46
copy, 47
data, 47
dequantize, 47
isEqualData, 47, 48
isEqualDataShape, 48
isEqualStruct, 48
linearSizeCalc, 49
quantize, 49
quantParamsSet, 49
reinterpretShapeForYolo, 49
reinterpretShapeScaled, 49
reshapeCombineDims, 50
reshapeTo, 50
shapeStringGet, 50
DG::BasicTensor::quant_params_t, 70

isEqualData, 72
isEqualStruct, 73
quant_params_t, 71, 72
DG::BasicTensor::quant_params_t::scale_t, 73
DG::JsonHelper, 51
errorCheck, 52
jsonDeserialize, 52
jsonDeserializeStr, 52
jsonSerialize, 53
jsonSerializeStr, 53
parse, 53
parse_ignore_errors, 54
tensorDeserialize, 54
tensorSerialize, 55
DG::ModelInfo, 55
DG::ModelParams< Base, >, 56
ModelParams, 58, 59
DG::ModelParamsReadAccess, 59
fullJsonGet, 61
jsonGet, 61
modelHashGet, 61
ModelParamsReadAccess, 61
modelShapeGet, 62
operator const json &, 62
operator std::string, 62
paramExist, 62
paramGet, 63
sectionGet, 64
sectionSizeGet, 64
DG::ModelParamsSection, 65
DG::ModelParamsWriteAccess, 65
merge, 68
ModelParamsWriteAccess, 66
paramSet, 68
set_dirty, 68
DG::ModelQuery, 69
Dont_care, 70
No, 70
TriState, 69
Yes, 70
DG::ServerAddress, 73
fromHostname, 75
is_valid, 75
ServerAddress, 74
dg_client_structs.h, 77
dg_json_helpers.h, 79
dg_model_api.h, 81
dg_model_parameters.h, 82
dg_tensor_structs.h, 84
Dont_care
DG::ModelQuery, 70

errorCheck
DG, 28
DG::JsonHelper, 52

fromHostname
DG::ServerAddress, 75
fullJsonGet
DG::ModelParamsReadAccess, 61

HostAlive
DG, 26
HTTP
DG, 26

is_valid
DG::ServerAddress, 75
isEqualData
DG::BasicTensor, 47, 48
DG::BasicTensor::quant_params_t, 72
isEqualDataShape
DG::BasicTensor, 48
isEqualStruct
DG::BasicTensor, 48
DG::BasicTensor::quant_params_t, 73

jsonDeserialize
DG::JsonHelper, 52
jsonDeserializeStr
DG::JsonHelper, 52
jsonGet
DG::ModelParamsReadAccess, 61
jsonGetMandatoryValue
DG, 28
jsonGetOptionalValue
DG, 28
jsonKeyExist
DG, 29
jsonSerialize
DG::JsonHelper, 53
jsonSerializeStr
DG::JsonHelper, 53
jsonSetOptionalValue
DG, 29

labelDictionary
DG, 30
lastError
DG::AIModelAsync, 39
linearSizeCalc
DG::BasicTensor, 49

merge
DG::ModelParamsWriteAccess, 68
messagePrepare
DG, 30
messagePrepareJson
DG, 30
MODEL_PARAMS_CURRENT_VERSION
DG, 34
MODEL_PARAMS_MIN_COMPATIBLE_VERSION
DG, 34
modelFind
DG, 31
modelHashGet
DG::ModelParamsReadAccess, 61
ModelParams

DG::ModelParams< Base, >, 58, 59
ModelParamsReadAccess
DG::ModelParamsReadAccess, 61
ModelParamsWriteAccess
DG::ModelParamsWriteAccess, 66
modelShapeGet
DG::ModelParamsReadAccess, 62
modelzooListGet
DG, 31
modelZooManage
DG, 32

No
DG::ModelQuery, 70

OK
DG, 26
operator const json &
DG::ModelParamsReadAccess, 62
operator std::string
DG::ModelParamsReadAccess, 62

paramExist
DG::ModelParamsReadAccess, 62
paramGet
DG::ModelParamsReadAccess, 63
paramSet
DG::ModelParamsWriteAccess, 68
parse
DG::JsonHelper, 53
parse_ignore_errors
DG::JsonHelper, 54
predict
DG::AIModel, 36
DG::AIModelAsync, 39
ProtocolMismatch
DG, 26

quant_params_t
DG::BasicTensor::quant_params_t, 71, 72
quantize
DG::BasicTensor, 49
quantParamsSet
DG::BasicTensor, 49

reinterpretShapeForYolo
DG::BasicTensor, 49
reinterpretShapeScaled
DG::BasicTensor, 49
reshapeCombineDims
DG::BasicTensor, 50
reshapeTo
DG::BasicTensor, 50

SECT_TOP
DG, 34
sectionGet
DG::ModelParamsReadAccess, 64
sectionSizeGet
DG::ModelParamsReadAccess, 64
ServerAddress
DG::ServerAddress, 74
serverPing
DG, 32
ServerType
DG, 26
set_dirty
DG::ModelParamsWriteAccess, 68
setCallback
DG::AIModelAsync, 39
shapeStringGet
DG::BasicTensor, 50
shutdown
DG, 32
systemInfo
DG, 33

tensorDeserialize
DG::JsonHelper, 54
tensorSerialize
DG::JsonHelper, 55
traceManage
DG, 33
TriState
DG::ModelQuery, 69

Unknown
DG, 26

versionGet
DG, 33

waitCompletion
DG::AIModelAsync, 40

Yes
DG::ModelQuery, 70