

RSdash 2.3 Manual

Introduction

RSdash is a native application for the multimedia system of the Ford Focus RS mk3 – Sync 3 (3rd generation). It requires performing a jailbreak and installing the appropriate libraries, followed by installing the RSdash application itself.

Information regarding the jailbreak procedure, library installation, and the RSdash application for Sync 3 can be found here:

<https://www.fmods.net/community/> Scroll down to find more information at the end of this manual

Remember: to use RSdash, you must have a Nutron ESP32 Device microcontroller with the latest RSapp firmware installed in your car.



The application was developed solely for hobby and educational purposes. The authors take no responsibility for its operation or the consequences of its use. The authors do not ensure or guarantee that it functions correctly. Although we have dedicated a lot of time and effort to deliver a well-refined product, readings and parameter settings may still be faulty or deviate from real values.



Modifications of the Sync 3 system, including jailbreaking or installing/using unauthorized applications, violate the license of this software. You do so entirely at your own risk.

Launching

After installing the application correctly, go to Sync 3 settings and connect to the WiFi network whose name begins with “RS.” The password for this network is **Nutron123456**. Configure Sync 3 to connect to this network automatically.

The application icon can be found in the **Custom Apps** folder, which should appear at the end of the app icons list in the Sync 3 settings view.



Make sure to open the application only once Sync 3 has connected to the WiFi network.



For proper connection and operation of RSdash, we strongly recommend not connecting other devices (phones, tablets, computers, etc.) to the “RS” WiFi network same time.

Application Layout and Navigation

RSdash has three screens/views:

- Main view
- Secondary view
- Settings view

To switch between the main and secondary views, tap the Nutron logo.

To access the settings view, go from the secondary view by tapping the settings icon located in the upper-right corner. To exit the settings screen, tap the back arrow in the upper-left corner.

To exit RSdash and return to the original Sync 3 screen, go to the main view and press the **X** icon in the upper-left corner.


Main View

This is the primary working view of RSdash. It displays real-time values of several key vehicle parameters and allows you to enable or disable the automatic activation of **Launch Control** and **Drift Fury mode**.

- **RDU** – Rear differential oil temperature
- **Engine** - Engine oil temperature
- **PTU** – Front differential oil temperature
- **Lambda** – Air-fuel ratio / **NOT Alone** -
- **LC** – Enables/disables automatic Launch Control mode
- **Drift Fury** – Activates/deactivates the handbrake via the ABS system
- **TPMS / RDU** - Tire Pressure Monitor System / RDU clutch packs temperature and torque


Optimal ranges for **PTU** / **RDU** / **Engine** parameters are shown in **blue**. Non-optimal or undesirable ranges are shown in **red**.

For example, when starting a cold engine, these parameters will show red until they reach the optimal operating window (blue). If values exceed the upper limits of the optimal range, the color will switch back to red. This is our interpretation, and each user should assess and take responsibility for their own vehicle condition.

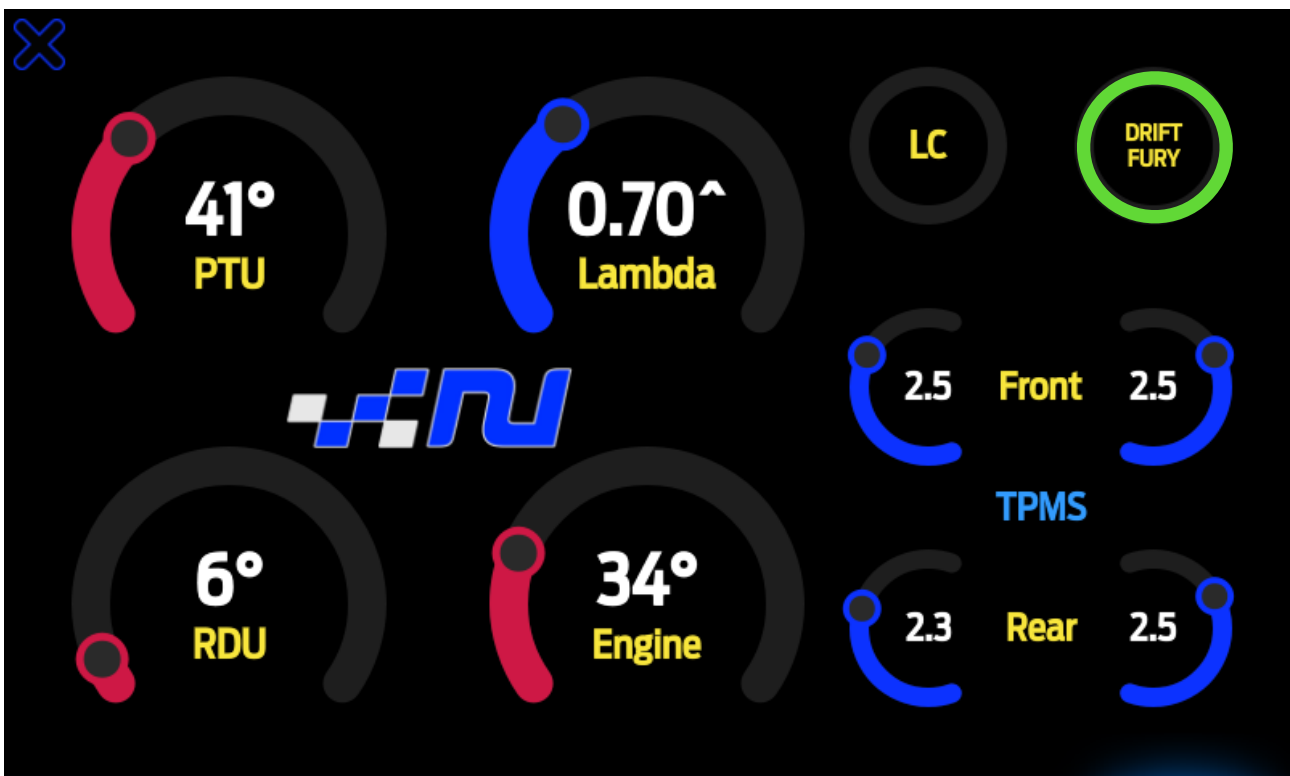

The **Lambda** value should generally stay near 1. However, during acceleration it will drop below this level, and during strong deceleration it will exceed 2.00. This behavior is natural, and a red Lambda reading is acceptable. As mentioned earlier, these values cannot be treated as fully accurate or binding.

If you are a user of a COBB Access Port or other devices connected to the OBD2 port (including diagnostic scanners used in car service centers), use the **NOT Alone** function by pressing the Lambda indicator. This will switch the Nutron ESP32 Device into a mode that does not interfere with the operation of these devices. To exit this mode and see the Lambda readings again, click on the **NOT Alone** label.

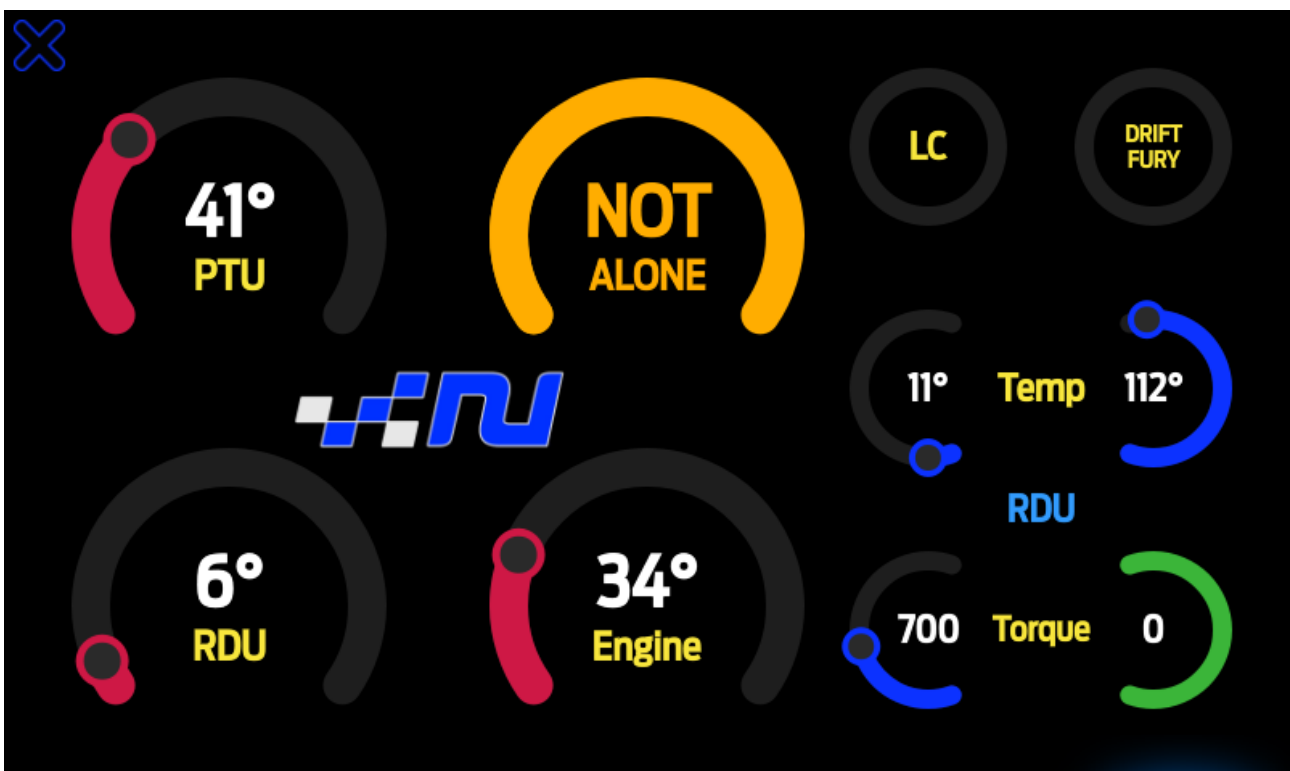

TPMS tire pressures in normal range are shown in blue. Non-optimal or dangerous conditions (e.g., punctured or overheated tire) are shown in red. These are only indicative thresholds—you are solely responsible for knowing and controlling the optimal values for your tires, driving style, and conditions.

Tapping on **TPMS** switches the display to **RDU** clutch temperatures and torque engagement values. To return, tap the **RDU** label. You can save which view (**TPMS** or **RDU**) appears by default in the settings menu.

NOT Alone mode, **Launch Control** and **Drift Fury** settings are saved simultaneously in **RSdash** and **RSapp**, meaning they persist across restarts. Changing them in one application will sync them with the other (feedback loop).



Keep automatic **Launch Control (LC)** activation disabled if this function is already enabled by your ECU tuner.




Drift Fury will only work after flashing the ABS module with the correct calibration file (Daft Racing Linux Tool).

Secondary View

This screen allows you to configure:

- The driving mode your car should start in (**DRIVE MODES**)
- Whether **Auto Start-Stop** should be disabled on startup (**ASS OFF**)
- Whether the car should start with **Sport Traction Control** enabled (**ESP Sport**)

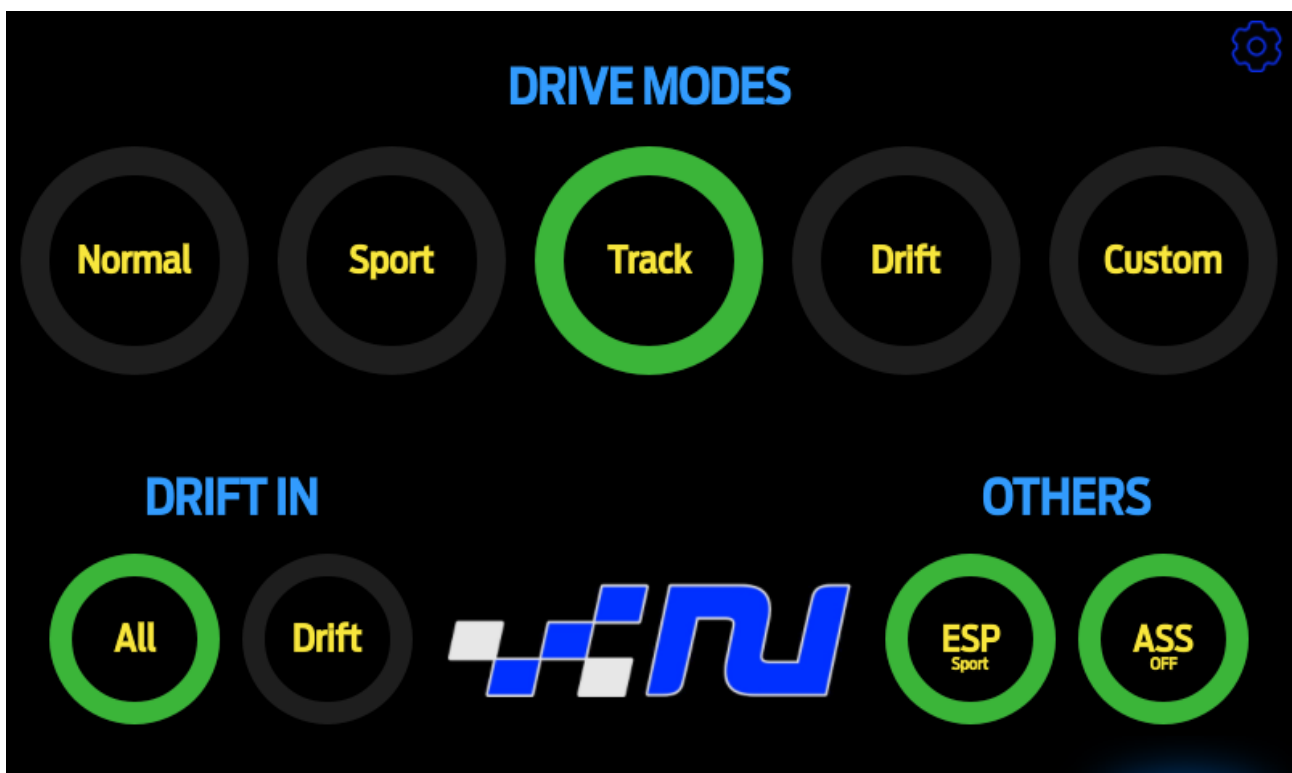

These are startup preferences. To change driving mode, Auto Start-Stop, or traction settings while driving, continue using the physical controls near the gear lever.

You can also configure ABS-based rear-wheels lock functionality here (**DRIFT IN**), choosing which driving modes it should work in. This setting works immediately. Anyway, ABS-based rear-wheels lock feature requires flashing the ABS module with the correct calibration (Daft Racing Tool).


As with the main view, these settings are stored in both RSdash and RSapp (feedback loop).



Keep automatic **Auto Start Stop (ASS)** activation disabled if this function is already enabled by your ECU tuner.

Settings View

Here you can configure the measurement units for displayed parameters in the main view. You can also choose whether the startup display (Main View) should show **TPMS** tire pressures or **RDU** clutch temperatures and torque engagement values.

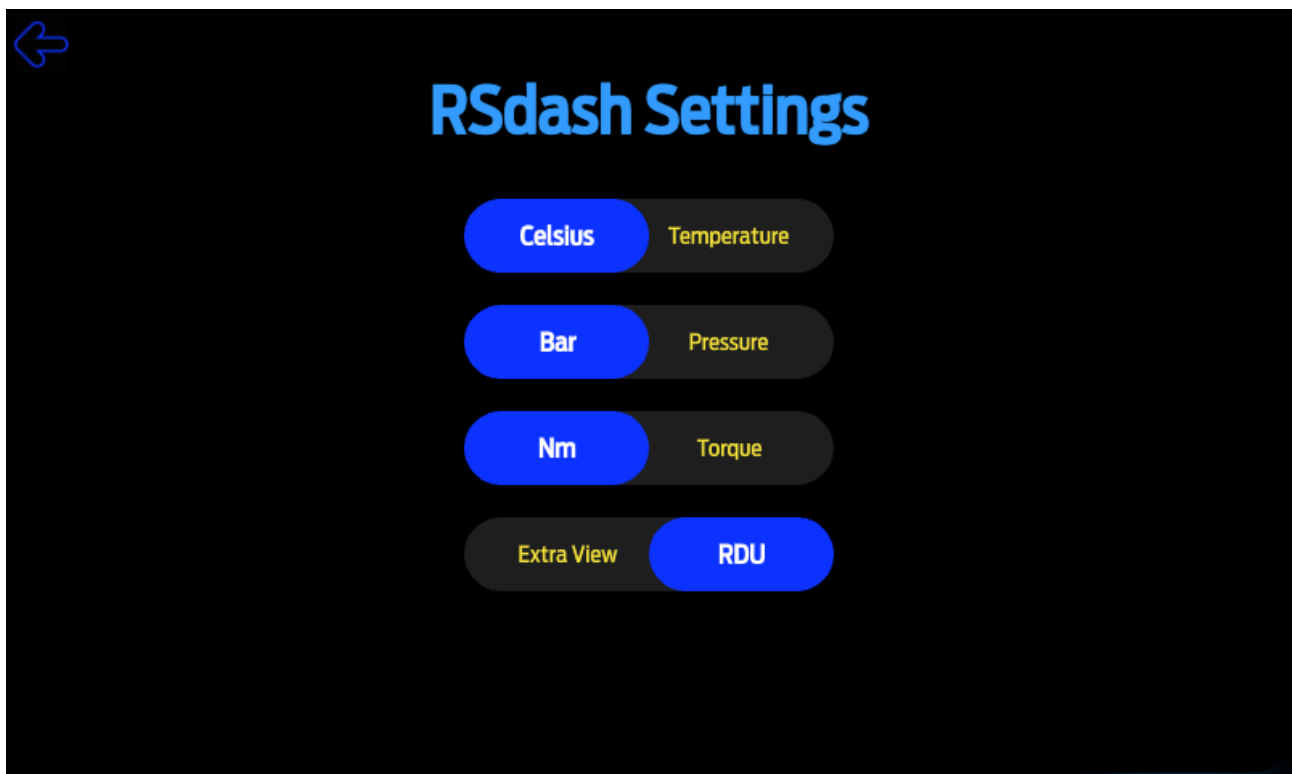

Installation

To use RSdash on Sync 3, the following conditions (software) must be met:

1. Installed appropriate Sync 3 software version (any 3.4 build that support Custom Apps Loader should be fine): Tools for updating Sync 3 software can be found here:

<https://cyanlabs.net/tutorials/sync-3-automated-method-update-to-3-4/>

2. Sync 3 must be jailbroken and have the FMods Installer (Daemon) and FMods Tools installed:

<https://www.fmods.net/community/viewtopic.php?t=1156>

3. The following mod must be installed on Sync 3:

https://www.fmods.net/community/dlxt/details?df_id=11

4. Install RSdash app

https://www.fmods.net/community/dlxt/details?df_id=70