

To

To whom it may concern

Date	Our reference		Number of pages
2026-05-13	001		10
Contact person	Direct line	E-mail	
Jan Mooiman	—	—	

Subject

Manual to plot result files of D-Flow FM in QGIS 4.0 (map- and history-files)

Version control information

Git repository : https://github.com/Deltares-research/qgis_umesh

Git branch : ----

Git revision (short) : dc985b2

Contents

1	Release Notes	2
2	Menu bar	2
2.1	File	2
2.1.1	Open GRID	3
2.1.2	Open HisCF	3
2.2	Output	3
2.2.1	Show map output	3
2.2.2	PlotCFTS	4
2.3	Map output settings	5
2.4	Help	7
2.4.1	User Manual	7
2.4.2	About	7
3	QGIS panels	7
3.1	Layer panel	8
3.2	Log messages panel	8
4	Examples figures	8
4.1	Example scalar field	8
4.2	Example vector field	9
5	Source	10

1 Release Notes

Release	Description
0.30.00	- Upgrade to QGIS4.
0.21.00	- Update for the menu option 'Trials', w.r.t. 1D structures. - Fixed wiers set into one layer-group.
0.20.01	- If no start_index is given in the netCDF-file, assume zero.
0.20.00	- Name of the 'Current View' in the layer panel changed to 'Variable' name.
0.19.00	- Using the spinbox for layers will invalidate (uncheck) the view of a layer.
0.18.00	- Determine the mesh 1D edge length after all variables are read. Other wise sometime a crash will appear.
0.17.00	- Transfer 3D layer data to QGIS vector layer.
0.16.00	- The unit after selection text of combobox for scalar in Map Output Animation window added.
0.15.00	- Set support point value(s) of colorramp in Map Output Animation window.
0.14.00	- Improved performance, no debug information anymore in release mode
0.13.00	- Showing 1D and 2D results at the same time if they are in one map-file. - Drawing 1D2D contact mesh
0.12.00	- Opacity can be set by color ramp slider.
0.11.00	- Reading <*_net.nc> file repaired.
0.10.00	- Export to QGIS layer enabled for scalar quantities.
0.00.00	- No information available.

2 Menu bar



Figure 1: The menu bar of the QGIS_UMESH plugin

2.1 File

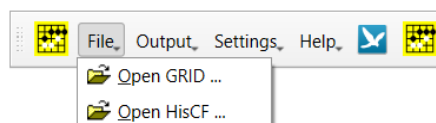


Figure 2: Menu → File

2.1.1 Open GRID

When selecting this option, you can choose netCDF files which meet the UGRID standard. Example files are the mesh- and map-files of the D-Flow FM program (<*_net.nc>, <*_map.nc>). Only the map-file could contain time series.

2.1.2 Open HisCF

When selecting this option, you can choose netCDF files that meet the Climate and Forecast (CF) history file standard. Example files are the history output files of the program D-Flow FM (<*_his.nc>).

2.2 Output


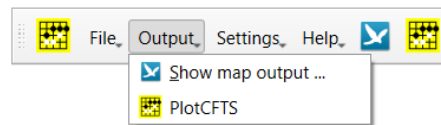


Figure 3: Menu → Output

2.2.1 Show map output

After selecting **Output**→**Show map output** the window **Map Output Animation** will open, see as example [Figure 4](#).

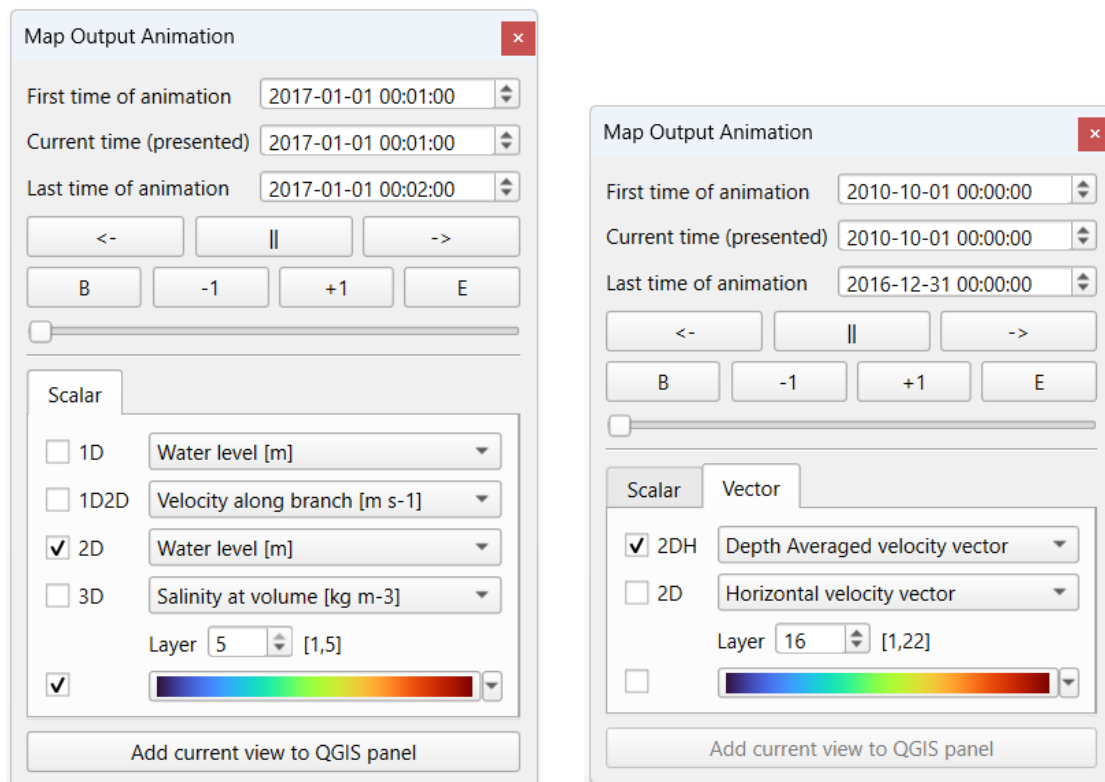

(a) Layout scalar quantities.

(b) Layout vector quantities.

Figure 4: Map Output Animation window for scalars and vector.

After pressing the **right** mouse button in this window, the window **Map Output Settings** will appear (see [section 2.3](#) and [Figure 8](#)).

The colorramp can be changed by using the QGIS standard operations on colorramps.

Add current view to QGIS layer panel

Note: This button is only enabled for scalar quantities.



After pressing the button *Add current view to QGIS panel* a window **Add current view to QGIS layer panel** will appear. In this window you can specify the layer name which will be presented in the QGIS layer panel, see [Figure 5](#)

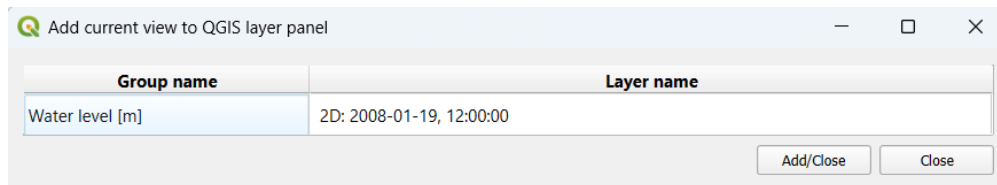


Figure 5: Window *Add current view to QGIS layer panel*

After pressing the button *Add* the layer will be added to the layer panel. Pressing the *Quit* button will close the window.

2.2.2 PlotCFTS

After selecting *Output*→*PlotCFTS* the program PlotCFTS will start, see as example [Figure 6](#). Select from the menubar of the PlotCFTS program menu option *Help* → *User Manual* to open the user manual for the program PlotCFTS.

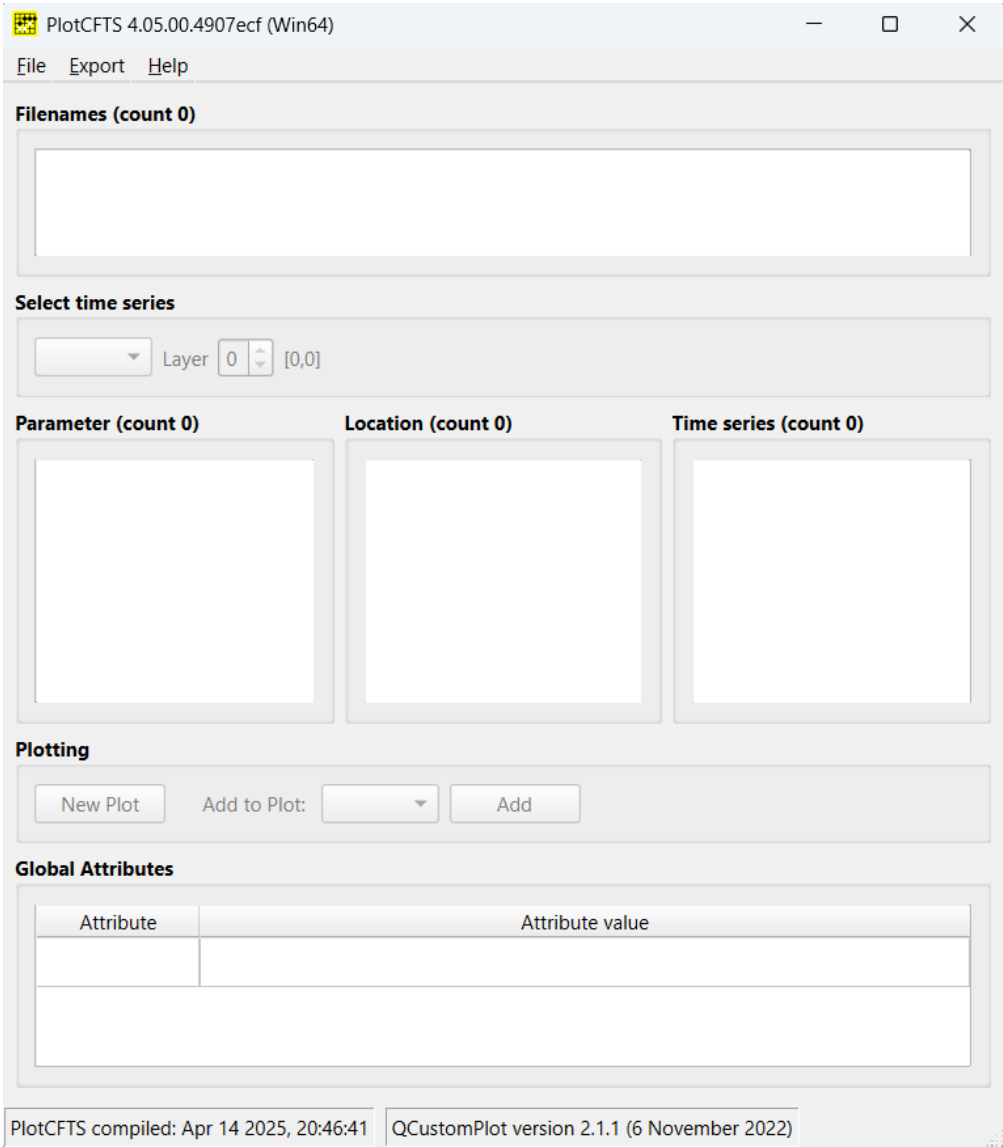


Figure 6: Main window of the PlotCFTS program.

2.3 Map output settings

Settings for the presentation of scalars and vectors.




Figure 7: Menu → Settings

When selecting this option some settings for the presentation of the variables via the window **Map Output Animation** can be set. This window will also pop up when using the right mouse button within the window **Map Output Animation**.

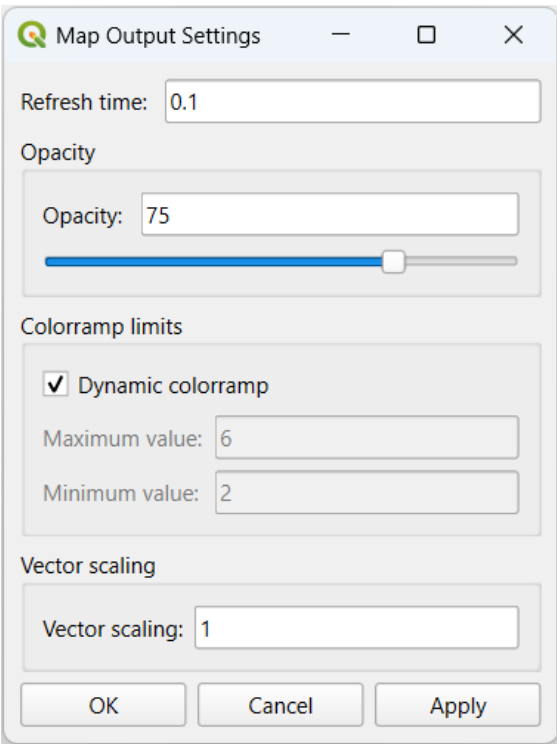


Figure 8: Window *Map Output Settings*

The following quantities can be specified in the window presented by [Figure 8](#):

Refresh rate	Specify the refresh rate, in seconds, of the images during animation.
Opacity	
Opacity	Specify the opacity of the iso patches for the scalars by a integer number [%] or by the slider, the range of the permitted values is: 0 - 100 [%]. Zero means fully transparent.
Colorramp limits	
<i>Dynamic colorramp</i>	
<u>checked</u>	Colorramp limits are determined by the minimum and maximum value of the scalar. These values reach their extreme values after all timestep are visualised.
<u>unchecked</u>	Maximum value: specify the maximum value for the scalar. Minimum value: specify the minimum value for the scalar.
Vector scaling	
Vector scaling	The vector of length 1 (ex. 1 [m/s]) is scaled with this factor. The drawing length is based on the averaged cell size.

2.4 Help

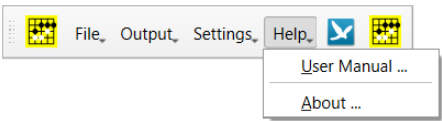


Figure 9: Menu → *Help*

2.4.1

User Manual

Shows the user manual

2

Memo



To

To whom it may concern

Date

2020-05-16

Contact person

Jan Mooiman

Our reference

001

Direct line

—

Number of pages

6

E-mail

jan.mooiman@deltares.nl

Subject

Manual to plot result files of D-Flow FM in QGIS 3.12 (map- and history-files)

Figure 10: QGIS_UMESH user manual

2.4.2

About

Shows the about box.

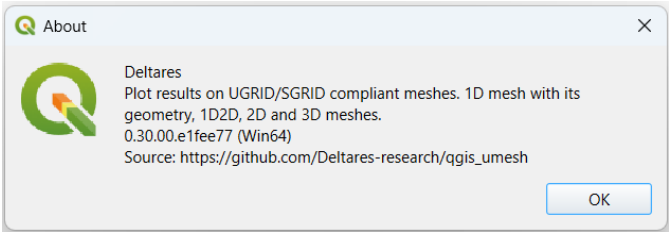


Figure 11: About box

3

QGIS panels

Some QGIS panels are shown after reading a netCDF map-file.

3.1

Layer panel

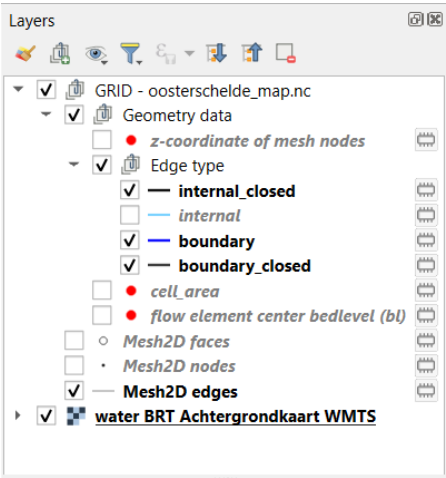


Figure 12: The QGIS layer panel after reading a netCDF map-file.

3.2 Log messages panel

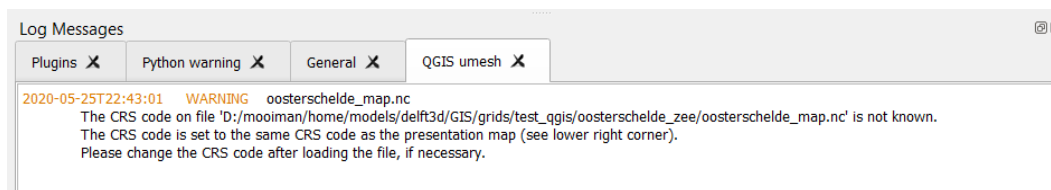


Figure 13: The QGIS layer panel after reading a netCDF map-file.

4 Examples figures

Examples are given for a scalar field (Depth averaged velocity magnitude) and the corresponding vector field (arrow and direction).

4.1 Example scalar field

These fields are given on the output files of D-Flow FM.

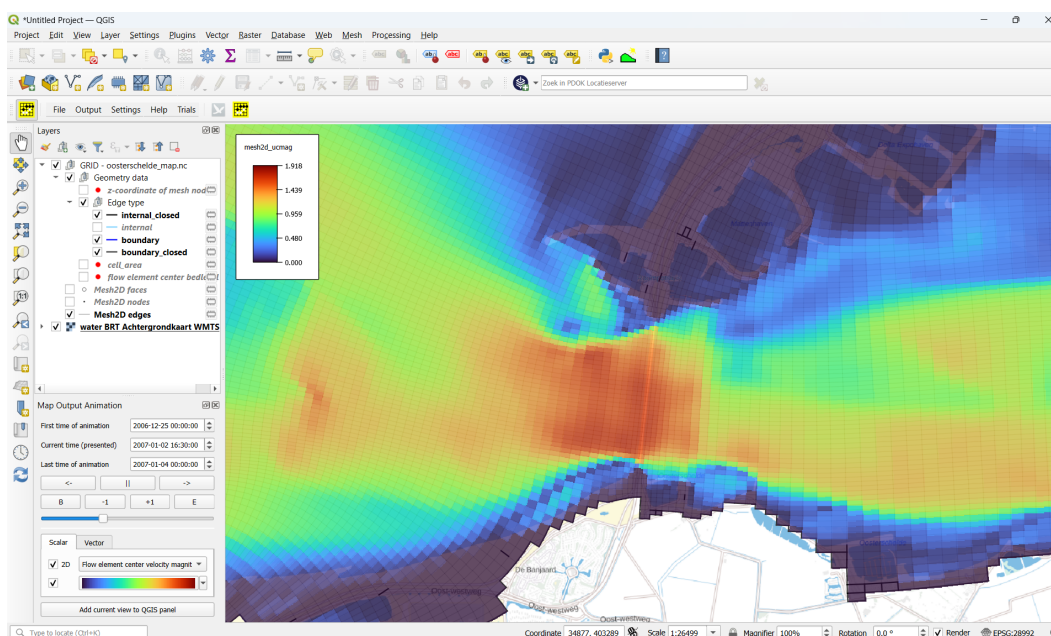


Figure 14: Depth averaged velocity, magnitude.

4.2 Example vector field

These fields are not given on the output files of D-Flow FM. So the postprocessing program (QGIS_UMESH) need to compute the quantities of the vector field, like vector arrows and vector direction.

Note: the "velocity magnitude" is given on the output file of D-Flow FM and thus computed by D-Flow FM. The quantity "velocity magnitude" is therefor available in the tab *Scalar*



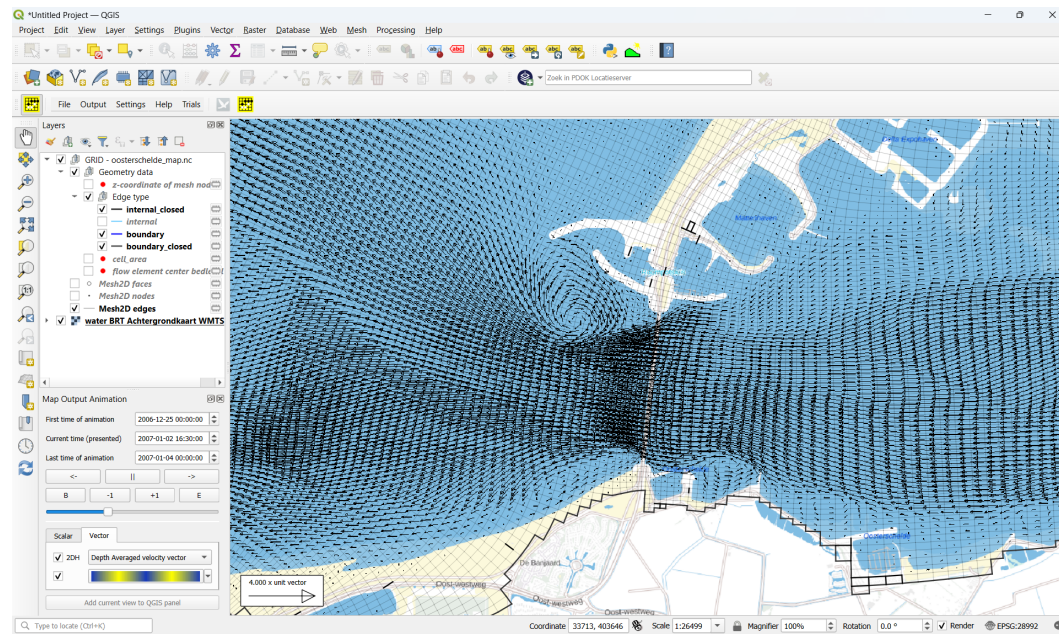


Figure 15: Depth averaged velocity, vector.

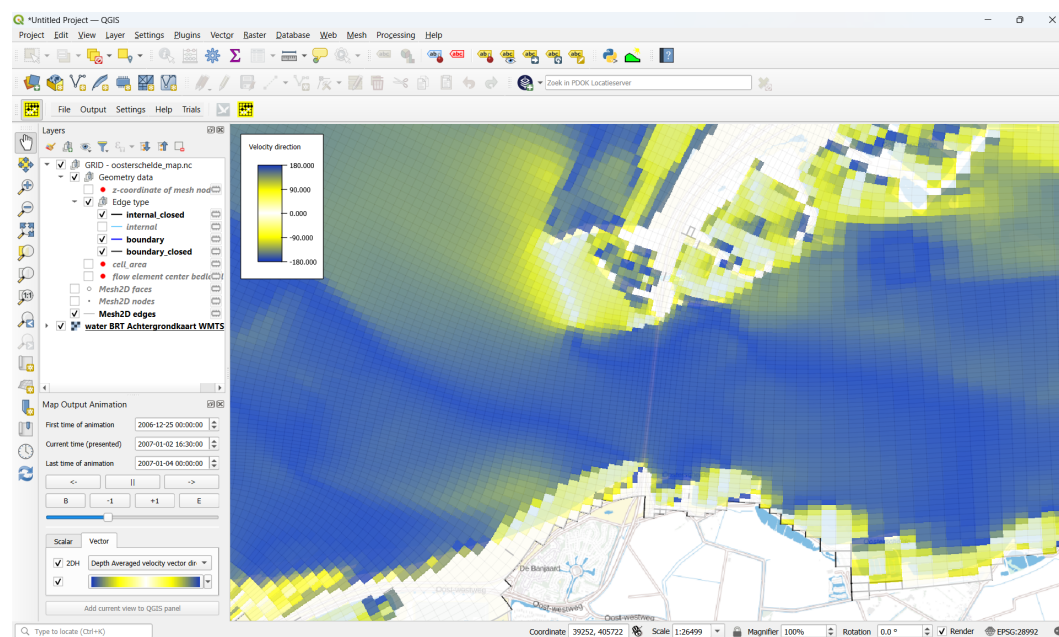


Figure 16: Depth averaged velocity, direction.

5 Source

The source code is available on GitHub:

https://github.com/Deltares/qgis_umesh