


Control Card Replacement Instructions

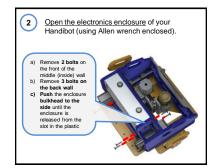



Remove the current Control Card (this is where you will need the cutters or a knife)
The Control Card is the smaller card that is connected to the larger, main Interface Board at the large connector ...


a) First remove the USB cable

1 Remove Control Card from packaging (be sure to save packaging)

Locate the Allen wrench and included wire ties (you won't need candy bar yet; but you will need wire cutters or a knife to clip some wire ties on your Handibot).

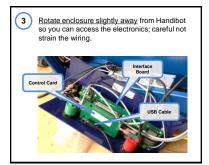

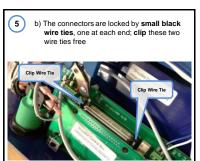

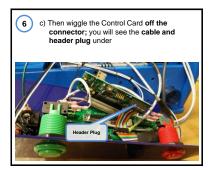




- a) Push the header plug in place over the pins on the new Control Card in the same orientation it came off (**it is very easy to miss-align this connection, so make sure the pins are correctly mated to the connector)
- b) Then insert the Control Card connector into the mating connector on the Interface Board (**insert fully, some force may be needed)





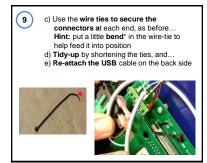

Now it's time for that candy bar!
... and your Handibot should be all ready to go!

Questions: 888.624.2658 (Toll Free)
Return Mailer included, or mail to:
Handibot
3120 Old Oxford Hwy
Durham, NC 27704