CATALOG

1 LOGIN 2

2 LANGUAGE SETTING 2

3 HOME PAGE GUIDE 3

4 CHECK THE AP'S STATE 3

5 DISPLAY THE ESL'S BASIC INFORMATION 4

6 CREATE THE ESL'S TEMPLATE 4

7 CREATE PRODUCT INFORMATION 8

8 BIND THE PRODUCT INFORMATION TO ESL 9

9 REFRESH THE ESL 10

10 LIGHT SETTINGS 11

11 GET THE SYSTEM'S API 12

12 ELECTRONIC ESL REAL-TIME MONITORING PLATFORM 12

13 RESET THE PASSWORD 13

14 PSM SETTINGS 13

15 SHOW MORE FIELDS 15

16 BLACKLIST AND WHITELIST SETTINGS 15

The Electronic shelf label user manual

1 Login

1.1 Open the web browser, then input the IP address: http://esl.greendisplay.cn/ , which is the same IP address of the branches and headquarters, with the different username and password.

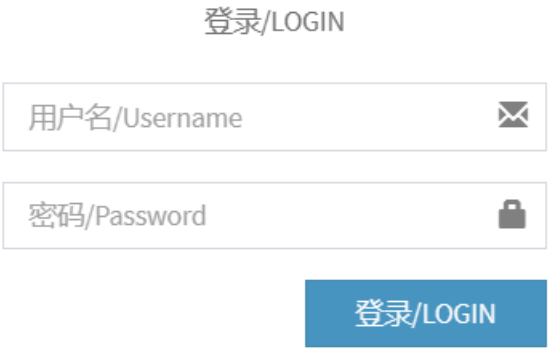

1.2 Input the corresponding username and password to enter into your store. By the way, the access of the super manager's username and password will be given to you after the software system was deployed. Then you can create accounts for your branches using the highest privilege.

2 Language Setting

2.1 Choose the needing language in the upper right corner after logging in to this system.

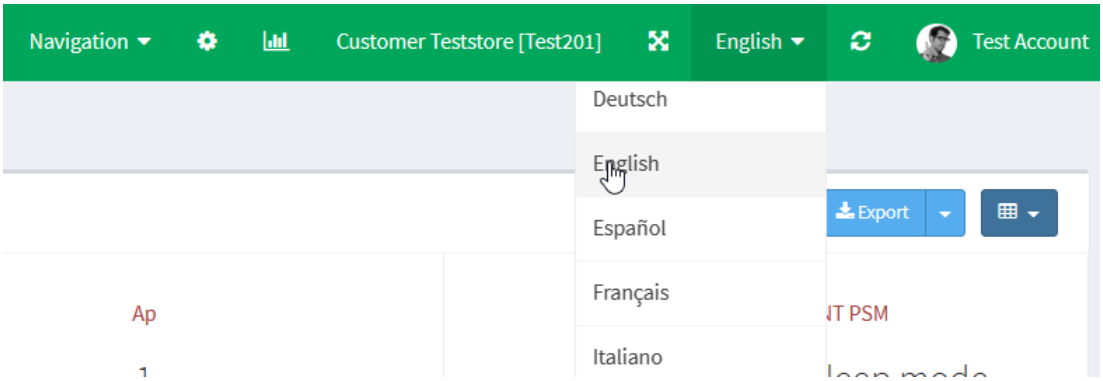

3 Home page guide

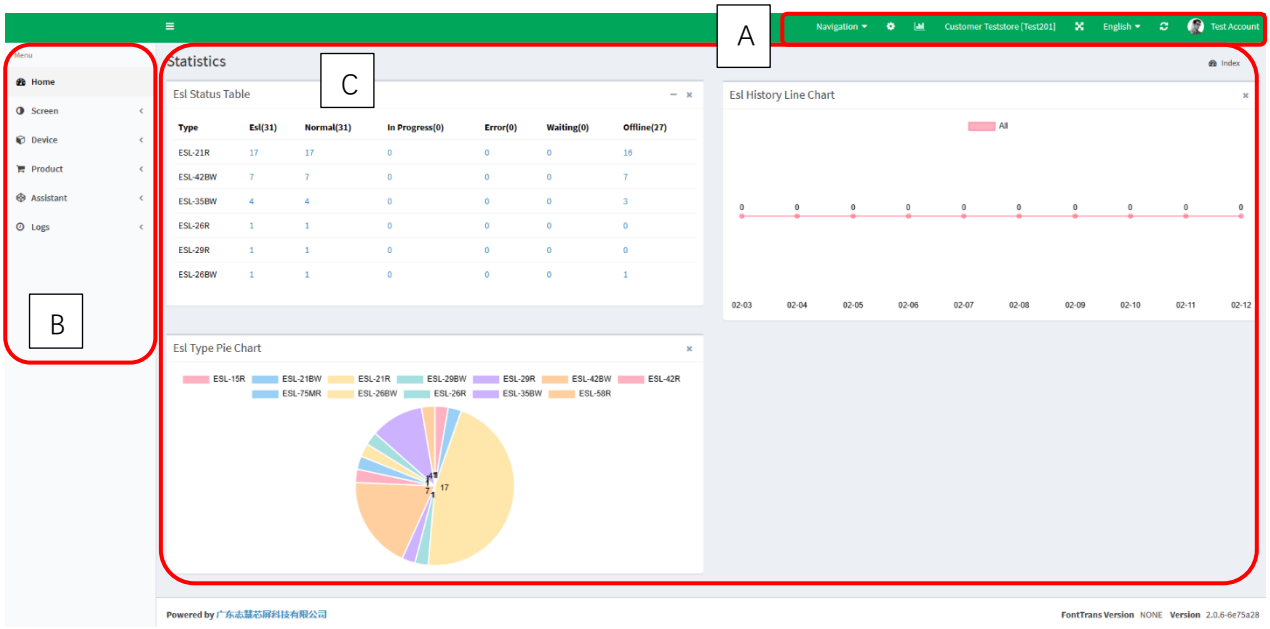

A: Quick selection area: you can quickly enter the electronic shelf label, AP, template, commodity operation interface; system language, store Settings, refresh, etc.

B: Navigation area: system function selection area, such as home page, template, picture, product Settings, etc.

C: Operation area: Display each function and operate.

4 Check the AP's state

4.1 click 【Navigation】-->【 AP】

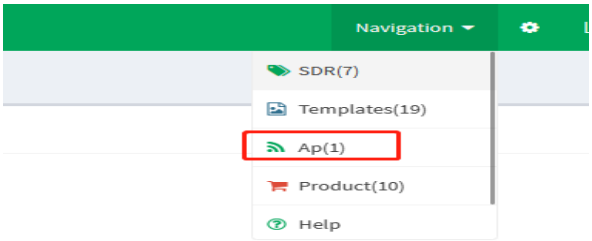

4.2 Enter in 【AP list】, you can check the AP's running state and Settings



5 Display the ESL's basic information

5.1 click 【Navigation】-->【 SDR】

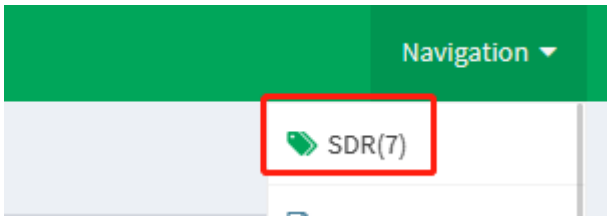

5.2 When in the 【SDR list】, you can check the ESL's running state and Settings. Such as the code of the ESL, and products' barcode which are bound to the ESL, and the remaining battery capacity and ESL's state, etc.

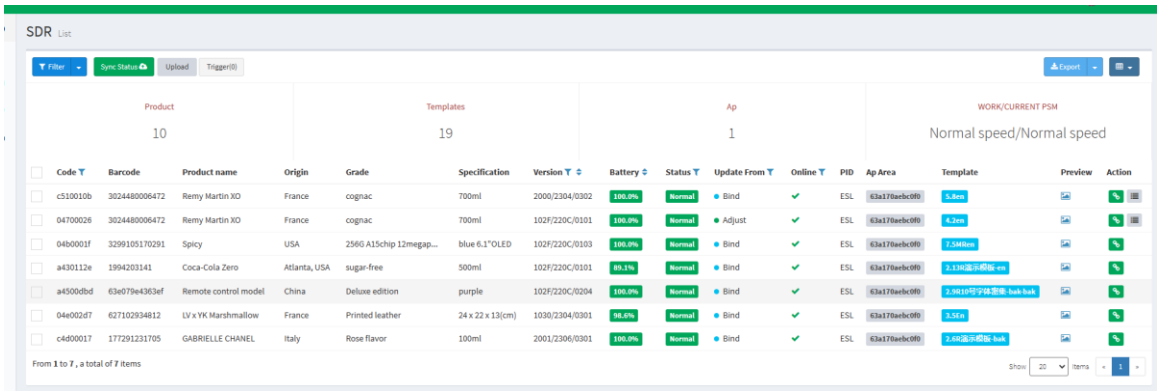

6 Create the ESL's template

6.1 Upload pictures to the store and process

After images are uploaded to the store and processed, it can be used directly in the edit of the template.

6.1.1 Upload picture

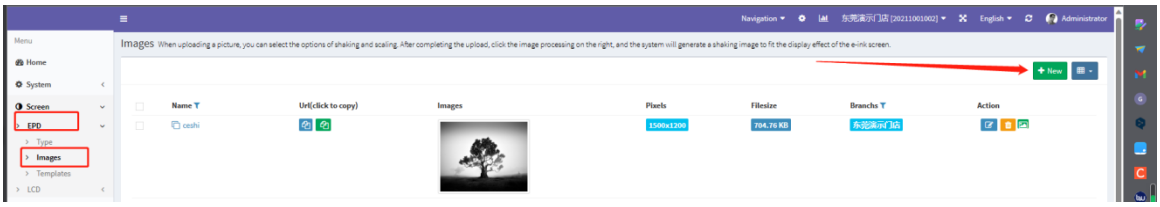

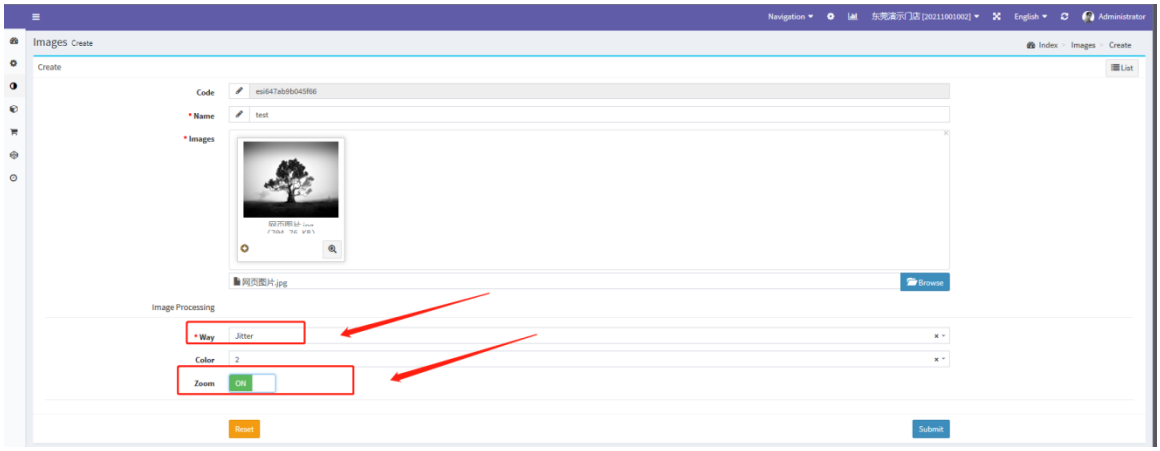

6.1.2 Process picture(not required)

Sometimes it's better without processing the picture.

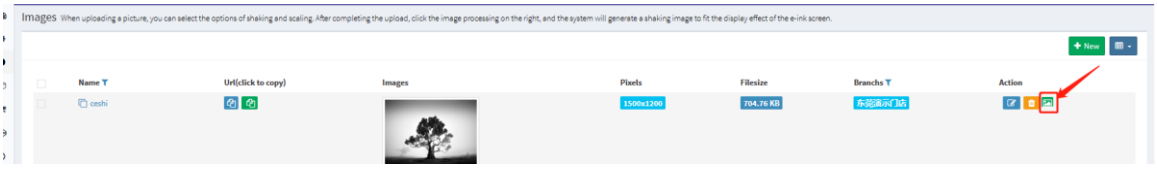

6.2 Before create a template of the ESL, you need to make sure the ESL's product specifications. For example, This ESL is 4.2-inch with black, white and red color. And the "ESL-XXBW" is the black and white ESL templates. ESL-XXR is the black and white and red ESL template.

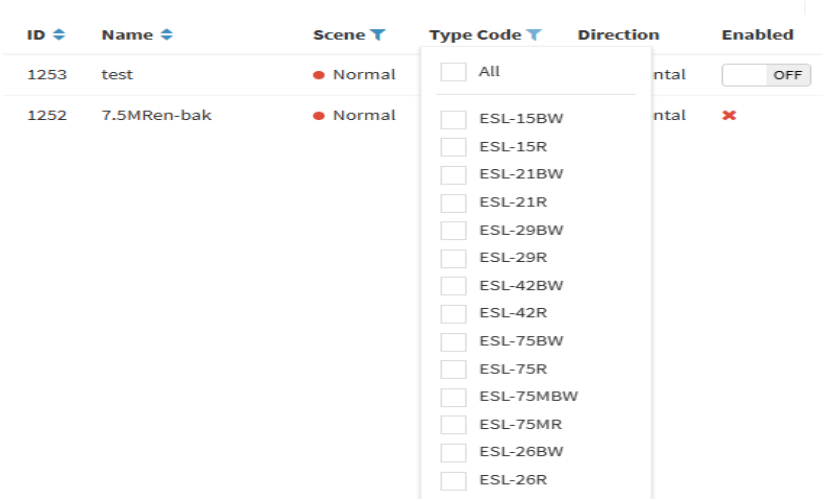

6.3 Choose "Templates" in 【Navigation】 at the home page.

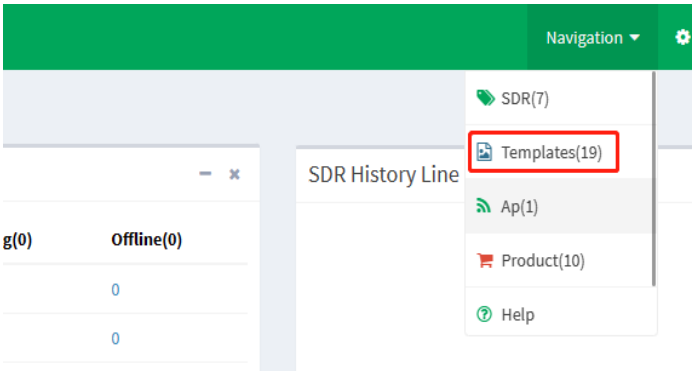

6.4 Click 【New】 in the upper of right corner to enter the template creation interface. After entering the name of the customized template, Select the corresponding size template "ESL-42R" in 【Type Code】, with 【Direction】 indicates the direction of the created template including landscape or portrait. and Select the appropriate price tag type【Scene Type】 .

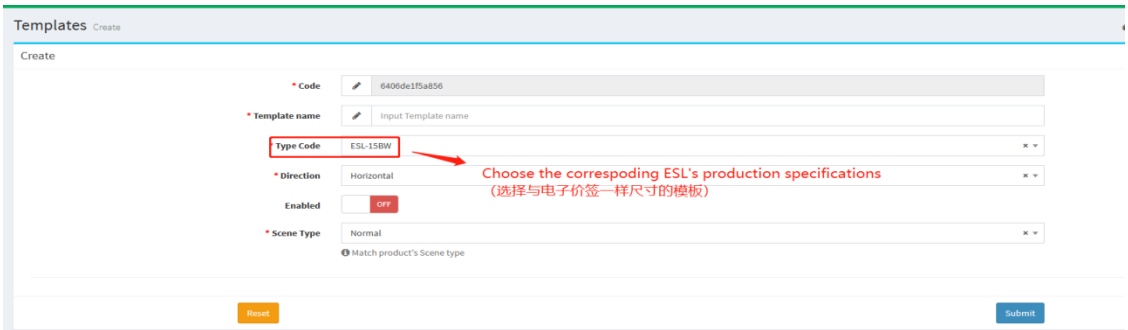

NOTE: when you choose the 【Scene Type】 which is related to the state of the product, That means when the state of the product is switched, the ESL's template can be automatically switched to a template consistent with the status of the item

6.5 You will back to the former page after you click【Submit】, where it displays the template you just created. You can click the third button【Design】in the right to enter the editing page.

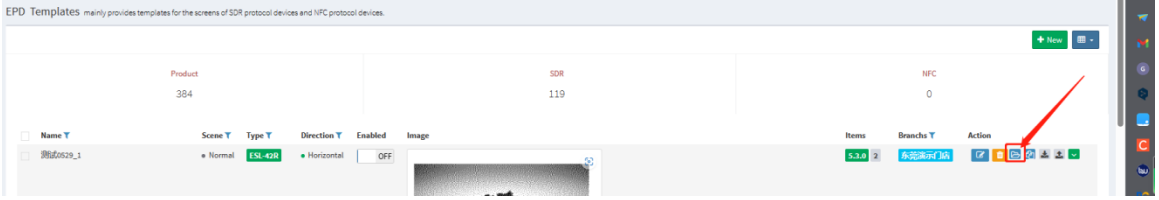

6.6 There are three main areas in the editing page, image operation area, element selection area and element attribute area. You can also copy an existing template for

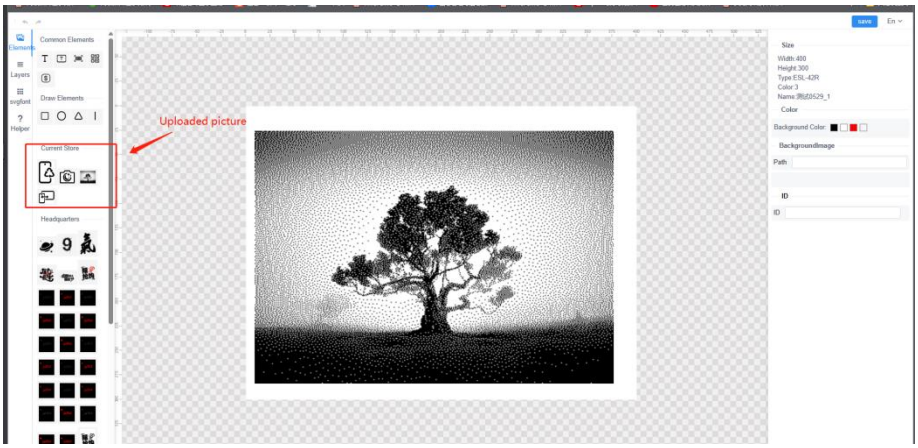

quick create identical template by selecting【Copy】from【Action】in Templates List.

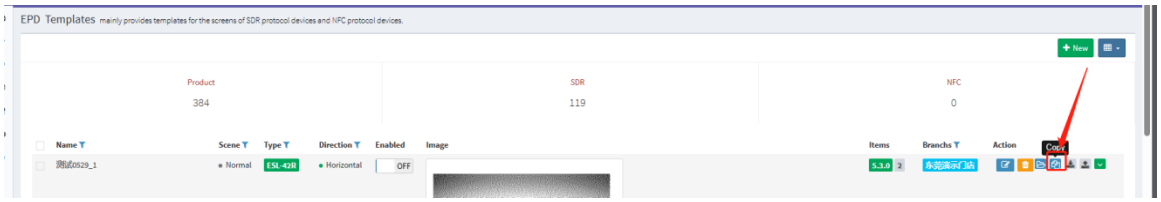

6.7 Set Templates to adapt to product changes

For example, if A or B ESL choose this template and bind it to ’a ’ or ‘b’ product, how can the name and specifications be automatically changed?

6.7.1 Enter a flag with a "#" in the text or textbox element to become the self-adaptive field which can change as the product's information change .For example, #pn is the adaptive field of the product name, referring to the corresponding attribute name in product creation.

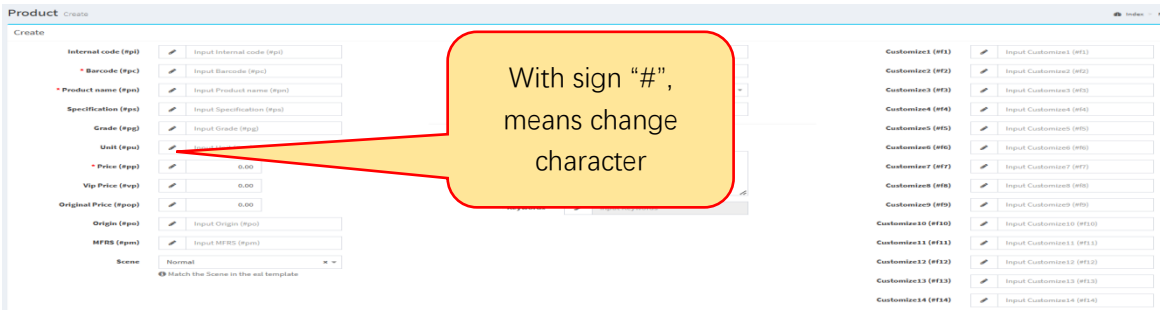

6.7.2 When you create a template, you can select corresponding elements (such as text, barcode, and QR code) in the element selection area, and edit

corresponding elements (such as size, location, and color) in the attribute area.

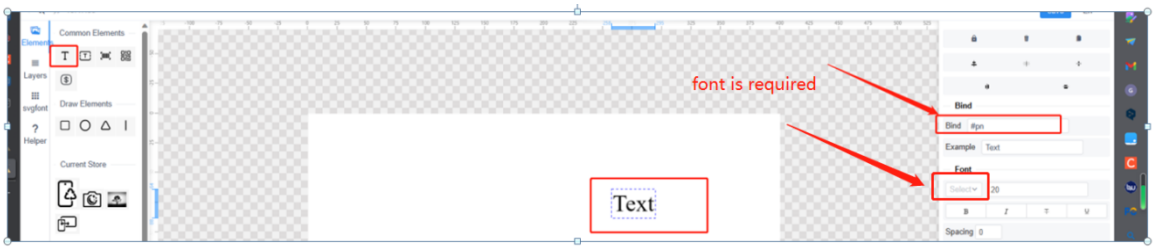

7 Create product information

7.1 Connect the ERP(or inventory)

When the ESL system needs to connect the ERP, it can synchronize the commodity information on the ERP (including the fields requiring ESL to show)

7.2 No connecting the ERP

Use the ESL software system to create commodity's information directly, such as creating for testing. There are two ways to create the commodity information:

7.2.1 By importing files

7.2.1.1 select [Navigation] of [Product] In the navigation bar, and click [Export] on the right to export the excel table. Input related product attributes according to the format of the exported table and save.

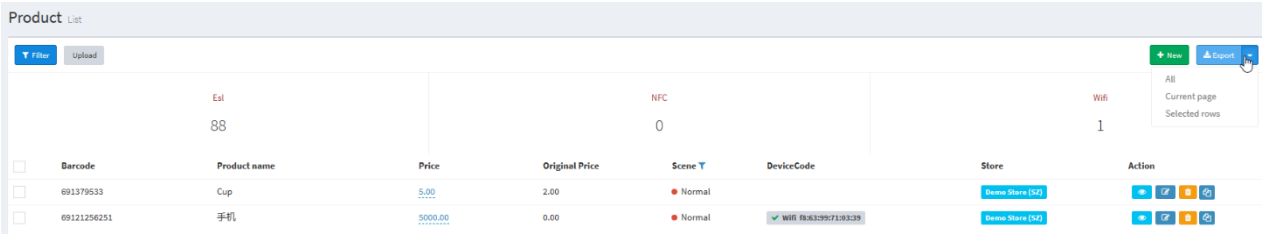

7.2.1.2 After inputting the products' information, Choose the right excel by clicking the【Upload】on the left. Then success

7.2.2 Increase product information in the management system alone.

7.2.2.1 click【New】in the product list to enter the page of creating product.



7.2.2.2 After inputting the corresponding product attributes, the product information is created when submitting, noting the "*" is the mandatory field.

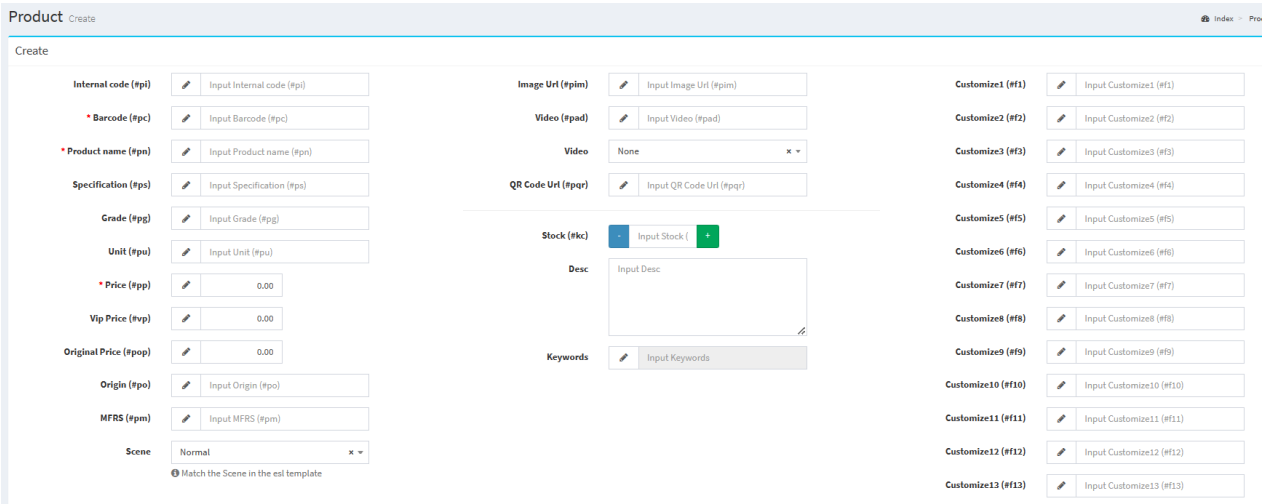

8 Bind the product information to ESL

You can refer to the <The guidance of the ESL's installation> to know how the PDA is related to the ESL system's product information. And you can know about how the ESL system background displays the product information.

8.1 Binding the product information to ESL's background

8.1.1 Click [SDR] in [Navigation] to enter the ESL list page, and click the 【Bind】 button under【Action】to bind the corresponding ESL.

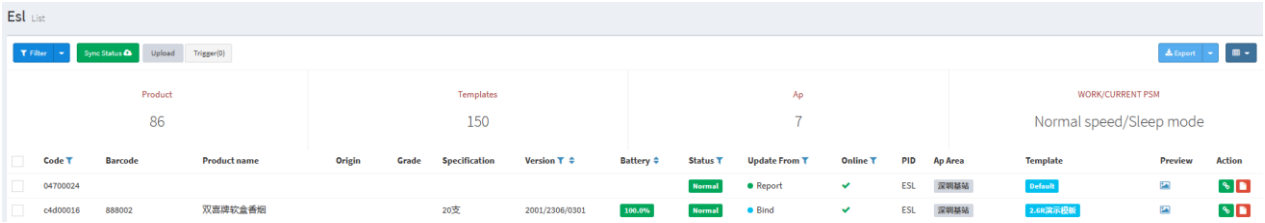

8.1.2 You need to input the barcode corresponding the product (you can copy the barcode in the product list first, and paste here directly); then choose the corresponding template in the【Template】,after that, click 【Submit】.

8.1.3 Update the ESL's list by clicking the 【Trigger】.

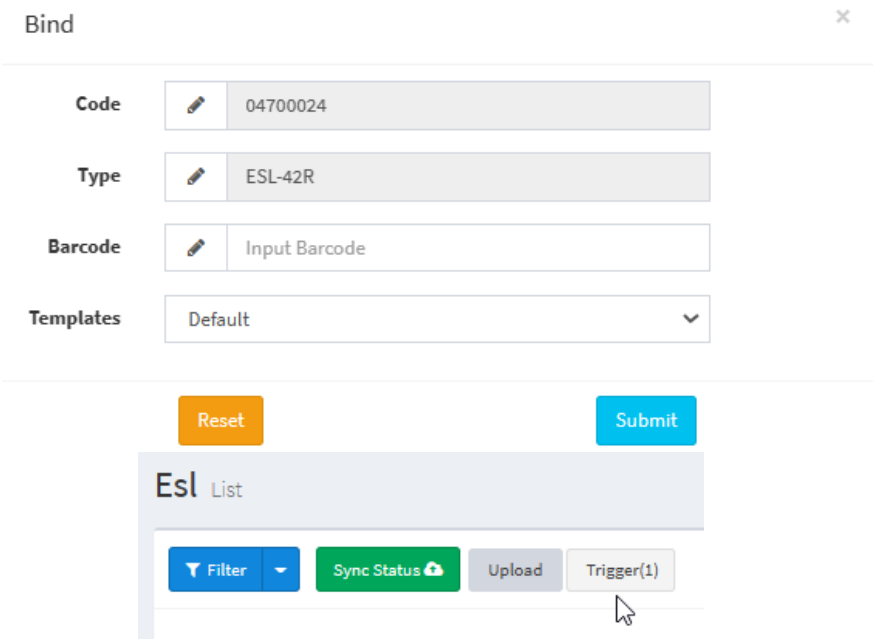

Note: the value of the trigger suffix means the number of the ESL waiting to be triggered.

9 Refresh the ESL

9.1 Trigger after updating the product information

You can trigger the updated product information in one time by monitoring the changed product information whether it is modified in the product list in the ESL background or changed in the ERP.

9.1.1 For example, modify the prices of two product , change the price of prodcut from $10 to $9.50 and $8.50 to $8.

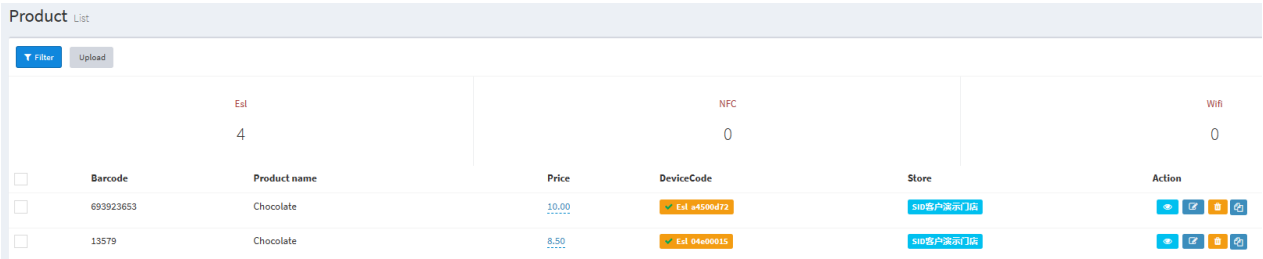

9.1.2 The revised price is shown below



9.1.3 You can see that there are two price tags in【Trigger】column Waiting to be triggered, and the state of the corresponding two ESLs is also displayed as [Waiting] when switching to【SDR List】.

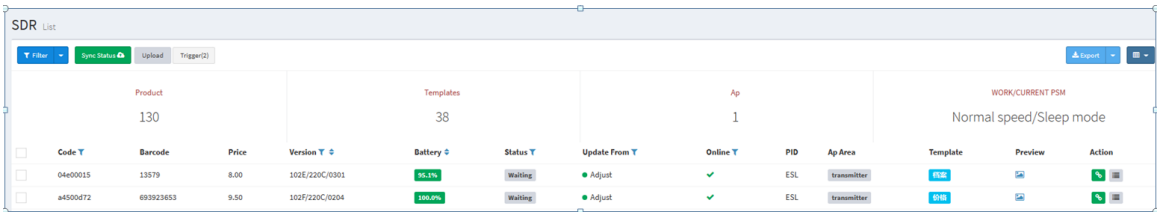

9.2 Trigger the ESL after modifying the ESL

Trigger the ESL after binding the template to the ESL or unbinding, even modifying the content of the ESL's template in the 【ESL list】.

10 light Settings

The corresponding ESL will be lit up according to the pre-set situation when executing searching function, with corresponding conditions having set already

10.1 Click【LED】under【Assistant】in the navigation bar to enter the Led list page

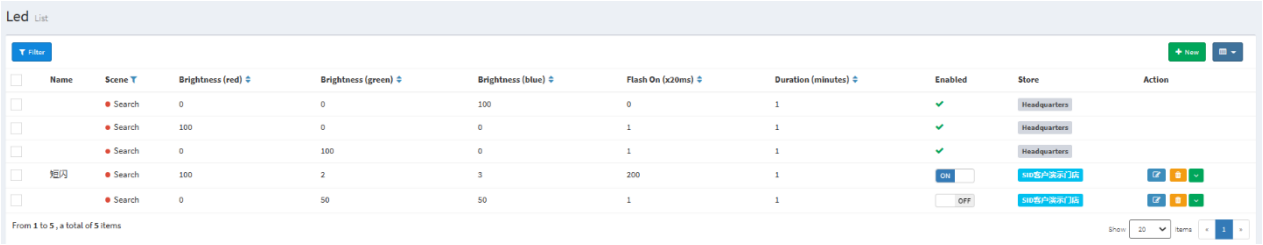

10.2 Click [New] to enter the new flash setting. The name can be selected as required, for example, setting the blinking property of the search function. The corresponding ESL will flash once the status of the goods is selected as VIP goods in 【Scene】. After finding the flashing Settings, you need to perform the flashing action at the 【ESL list】

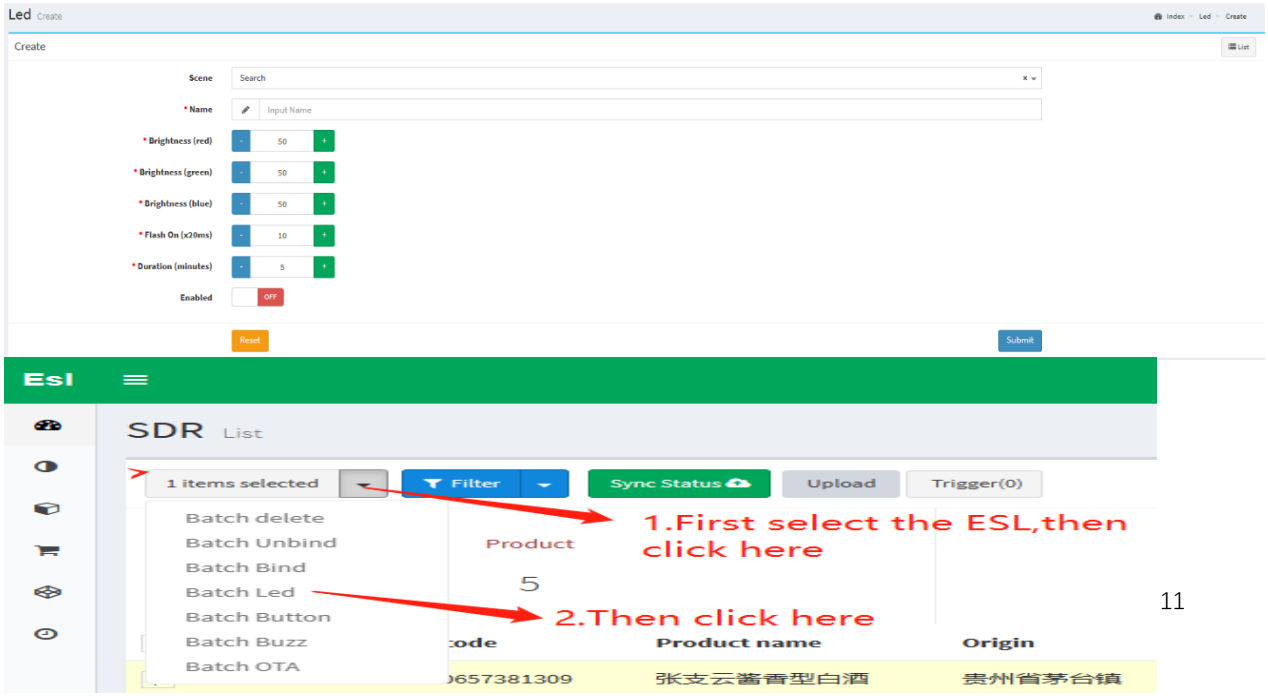

11 Get the system's API

The main function of the API is to connect the third system, such as the invoicing system, warehousing system, ERP system, and hospital management system.

11.1 Click [API] under the "Navigation" menu to enter the API interface page.

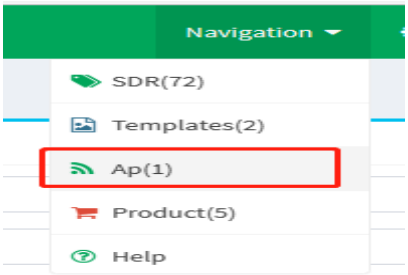

11.2 You can see kinds of parameter and corresponding code after enter the API interface,

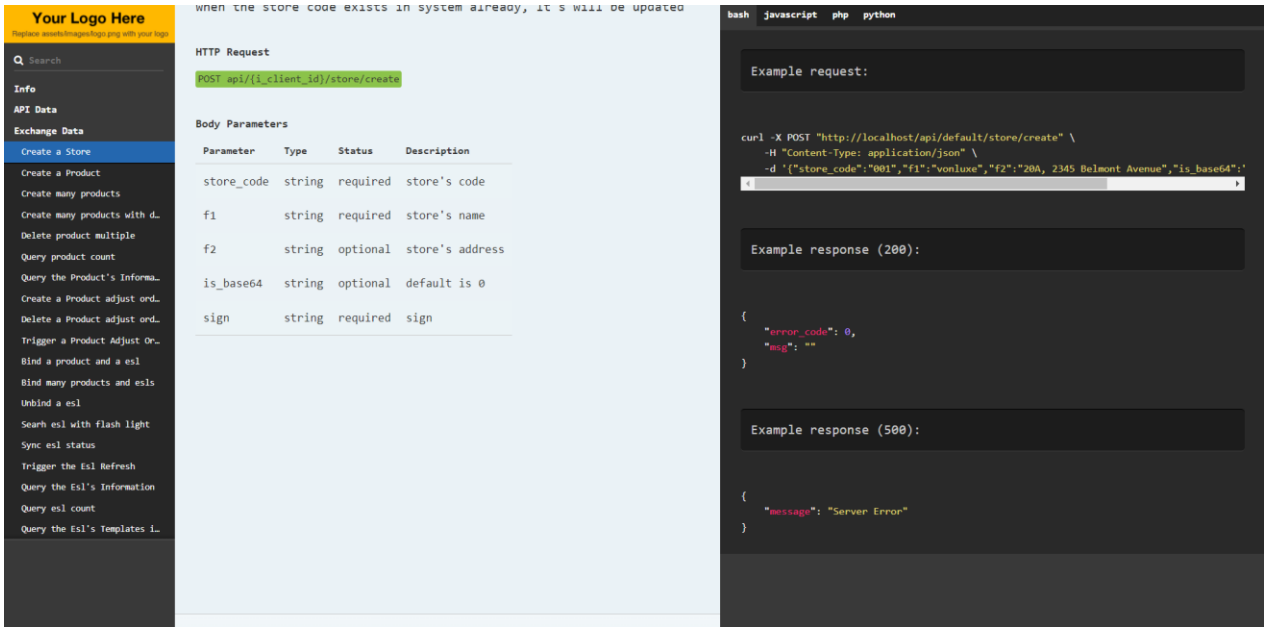

12 Electronic ESL real-time monitoring platform

12.1 click【Monitor】, 

to enter real-time monitoring platform.

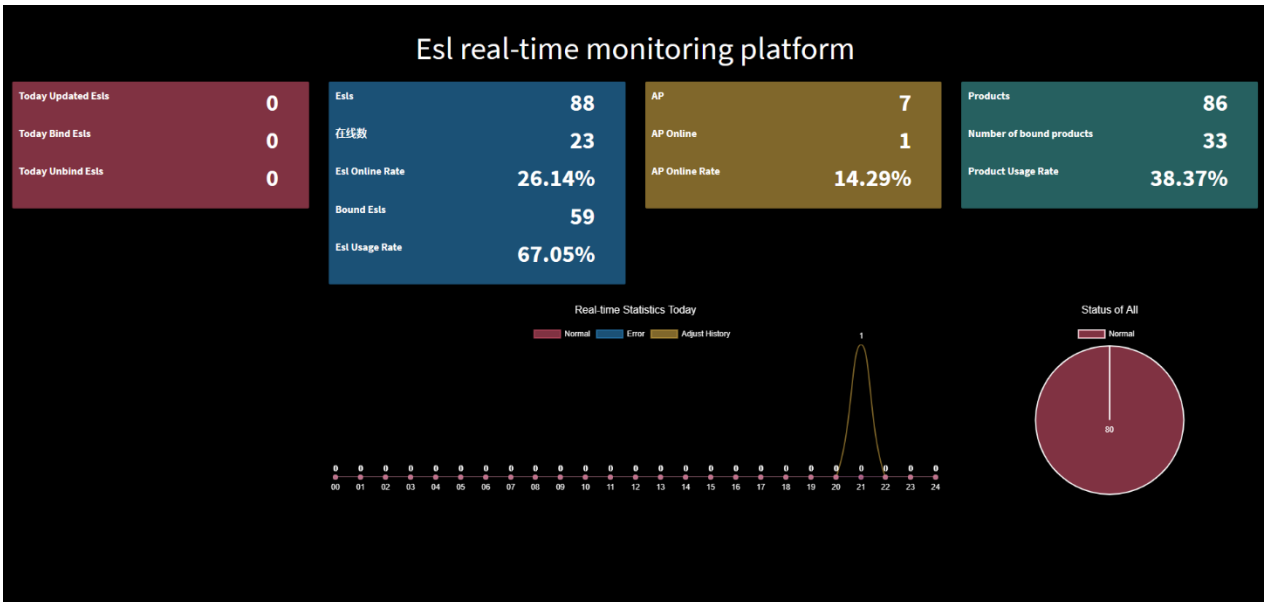

13 Reset the password

13.1 Click the user logo in the upper right corner, and then click [Settings] button to enter the user Settings page

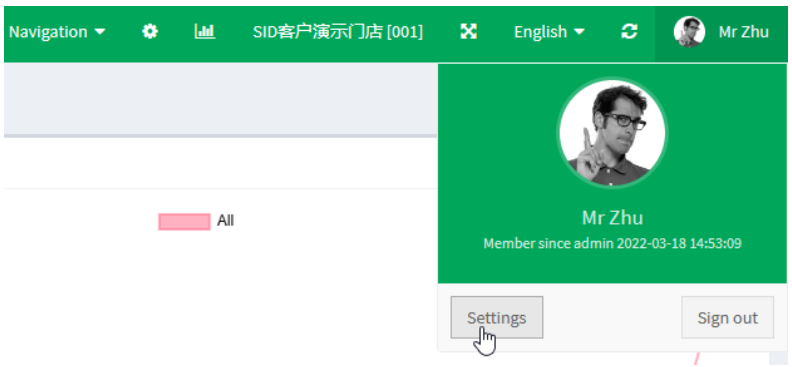

13.2 Set a new password on the User Settings page and click Submit.

14 PSM Settings

The main function of PSM setting is to monitor the refresh speed of the ESL for the AP.
When set in rocket mode, the update speed of the price tag is the fastest;
when set in snail mode, the update speed is the slowest. The faster the refresh rate, the faster the battery drain on the ESL device. The specific steps as following:

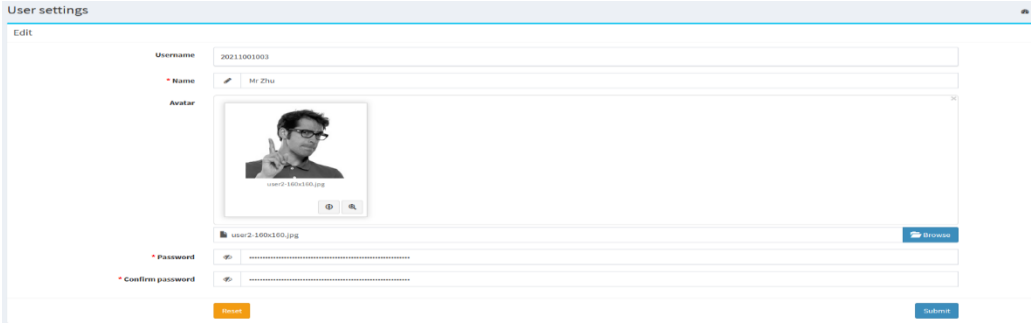

14.1 Click [Store] to enter the store setting interface on the navigation bar.

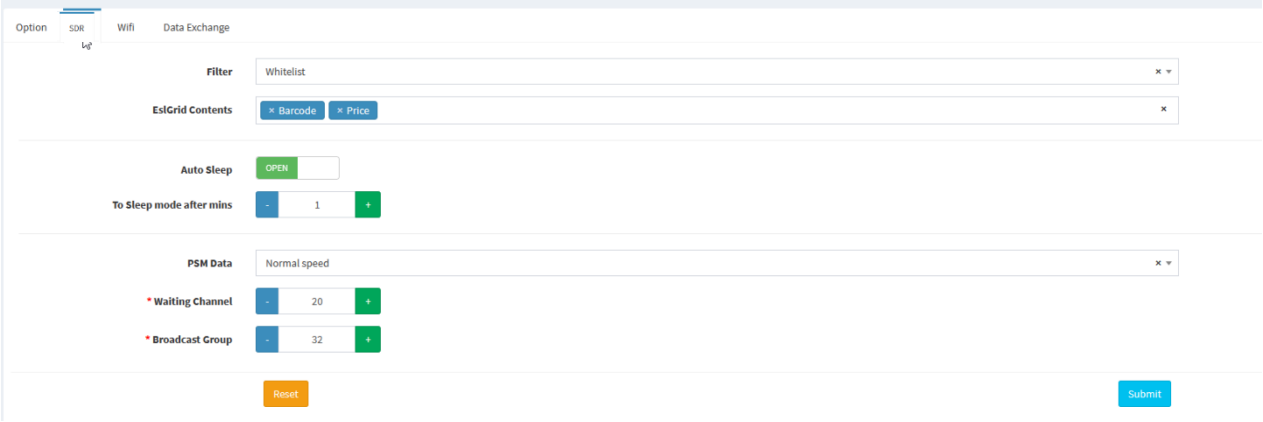

14.2 select the [SDR] on the left.select a PSM mode under PSM Data,It is recommended to use the default [Normal Speed].

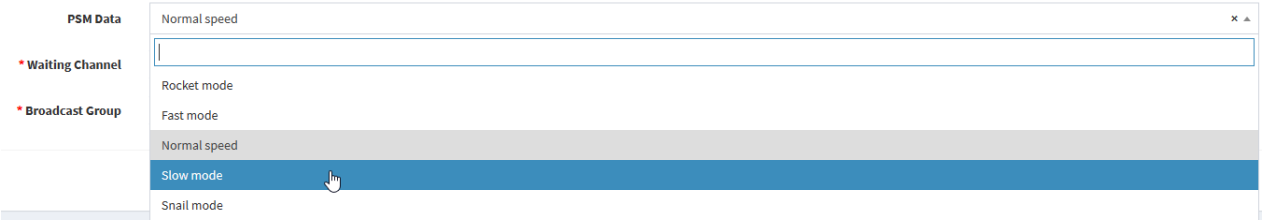

14.3 Set the ESL automatically enters the Hibernation state and the time to enter the hibernation state: click in "Auto Sleep" to switch to enter the hibernation state, then set the time for automatic sleep in [To Sleep Mode after hours]

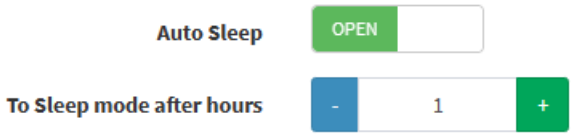

Note: When setting how much time it will cost for ESL automatically entering

hibernation, the ESL will be in hibernation state after hours if it doesn't update, which prevents more power consumption. However, it will take a long time to update after entering the hibernating for the first time, because the ESL device needs to be awakened first.

15 Show more fields

15.1 You can customize the Settings if more fields need to be displayed in the SDR list.

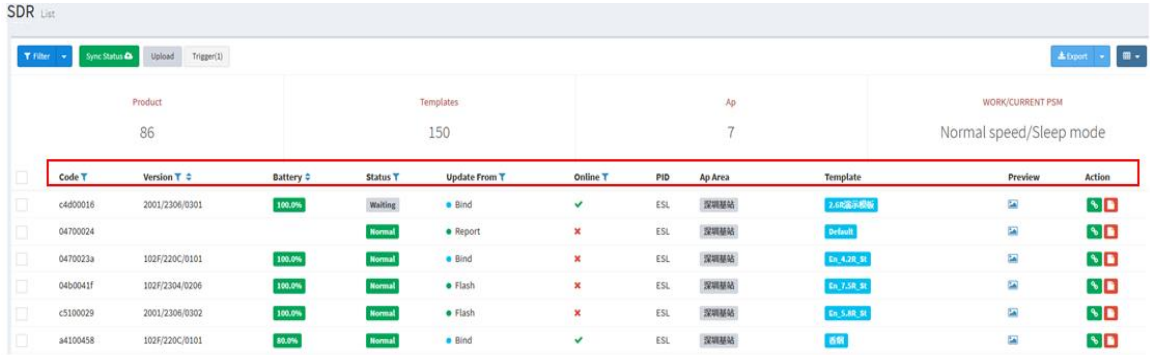

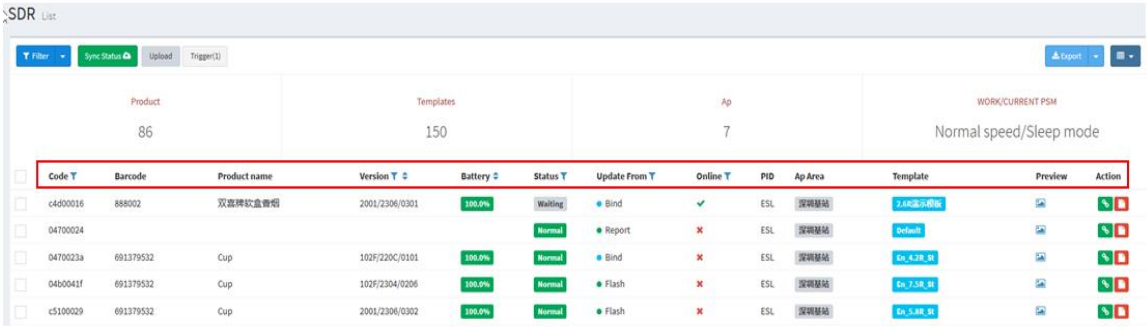

15.2 Click [Store] in the upper right corner to enter [SDR] of [Store Setting], and select product fields you want to display in the SDR list from " SDRGrid Contents".

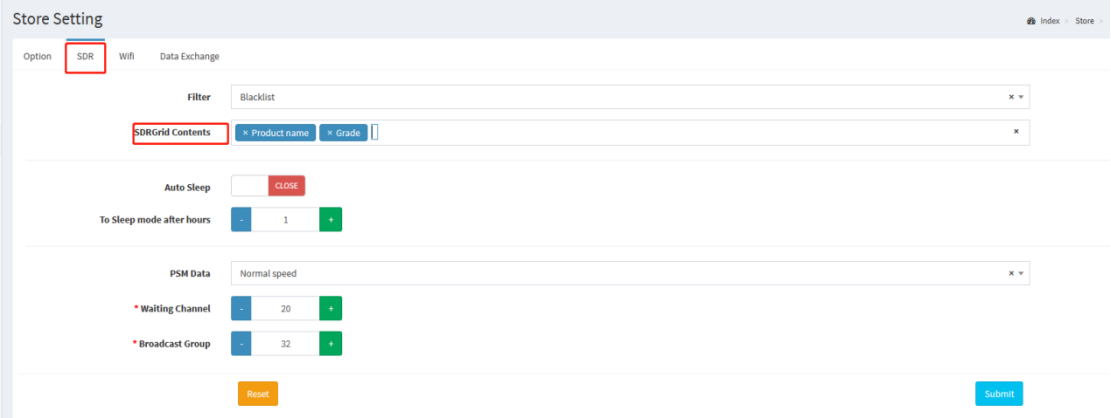

16 Blacklist and whitelist Settings

Blacklist explanation: When the store is set as the blacklist, the AP will not scan the electronic ESL by default after it is added to the blacklist, that is, the system background cannot see the ESL report. After it is deleted from the blacklist, the electronic ESL will be scanned and reported by the AP.

Explanation of whitelist: When the store is set as whitelist, the AP can only scan the ESL that is whitelist after the electronic ESL is added to the whitelist, and the ESL that is not included in the whitelist will not be scanned, that is, the system background cannot see the ESL report.

The Setting method is as follows: First click [Store] in the shortcut menu, then enter [SDR] of [Store Setting].select the required option from [Filter], and set the black/white list of the store.

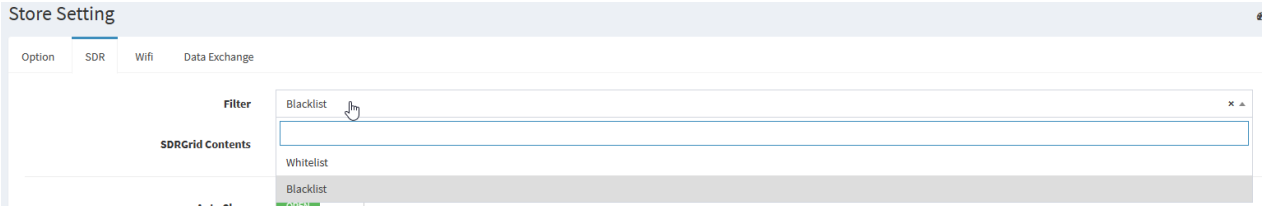

16.1 Add ESL to the black and white list: click [Batch Add] --> [Filter]--> [Device] in the navigation bar to enter the page of adding electronic ESL in batches.

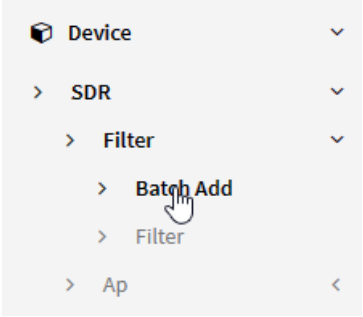

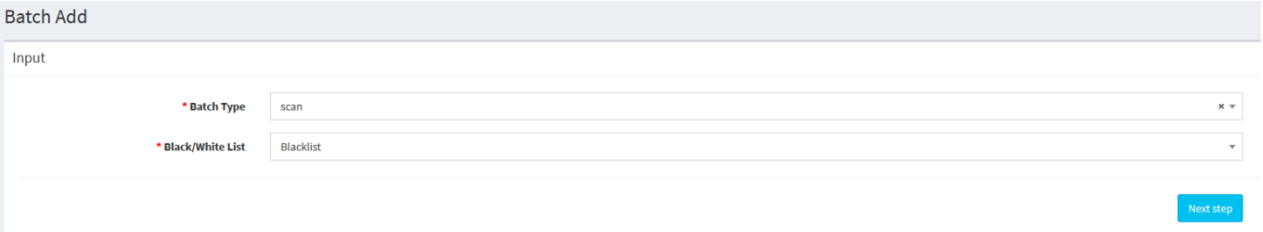

16.2 Scan the code at the number or manually enter the number of the ESL, and then click [Submit] to complete it.

Note: The number of the ESL is the barcode on the front of ESL.

16.3 Viewing the whitelist: Click [Filter] under [Device] on the navigation bar. When it is necessary to delete the corresponding ESL, click the Delete button [Action] at the list.

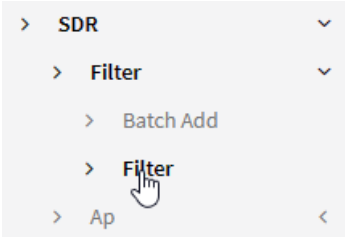

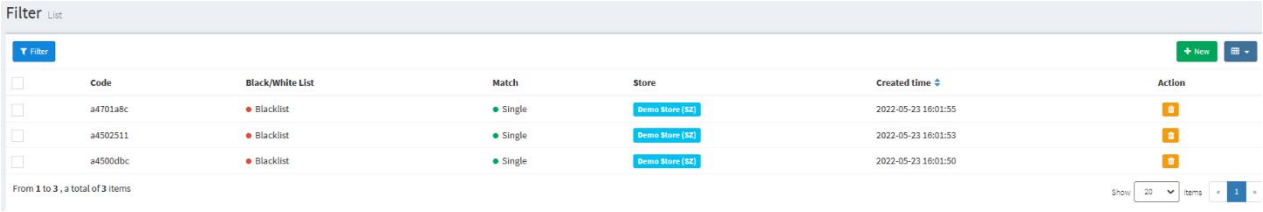

This is the end of this instruction manual, Thanks for reading.

17 Change the broadcast group

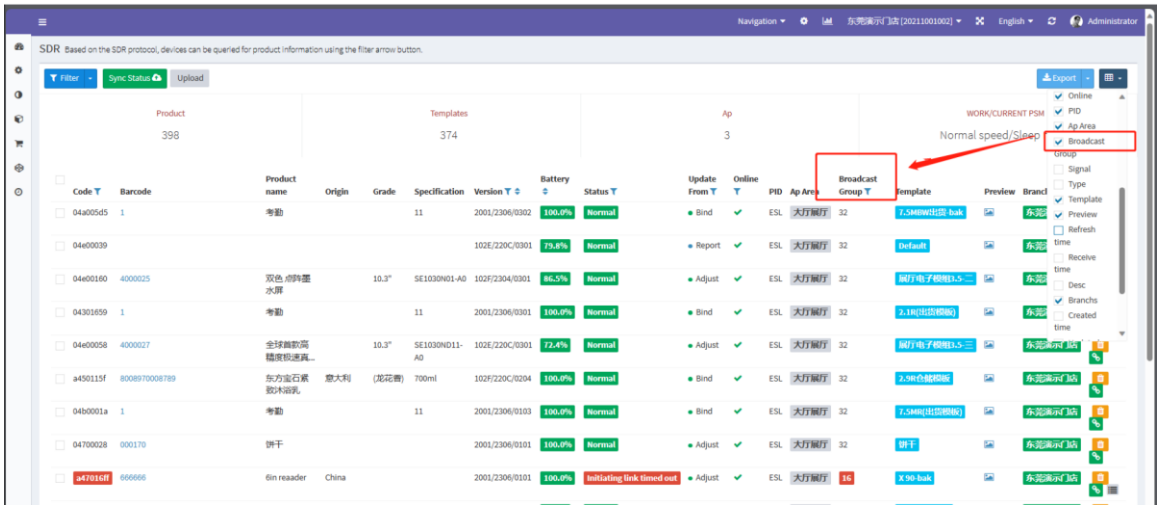

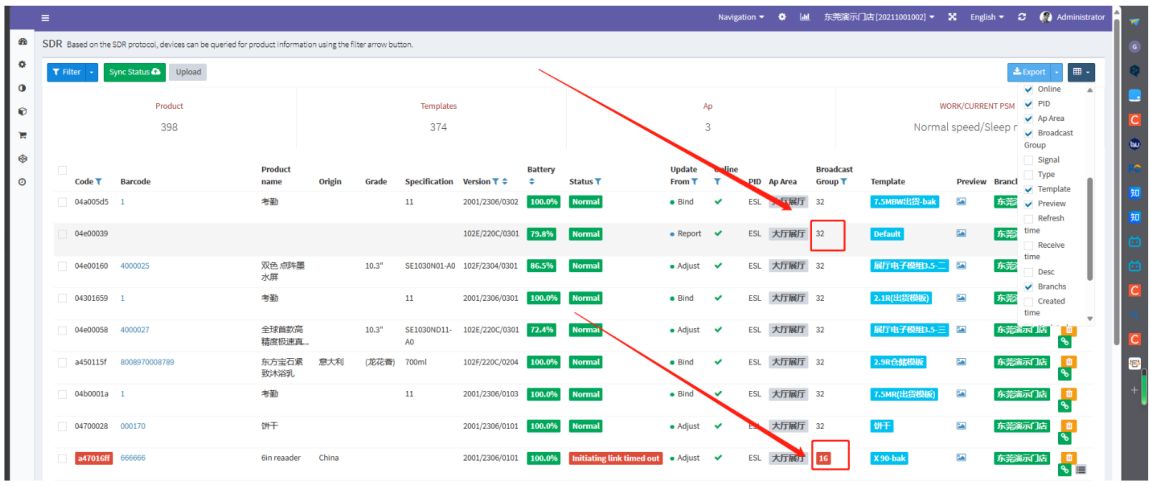

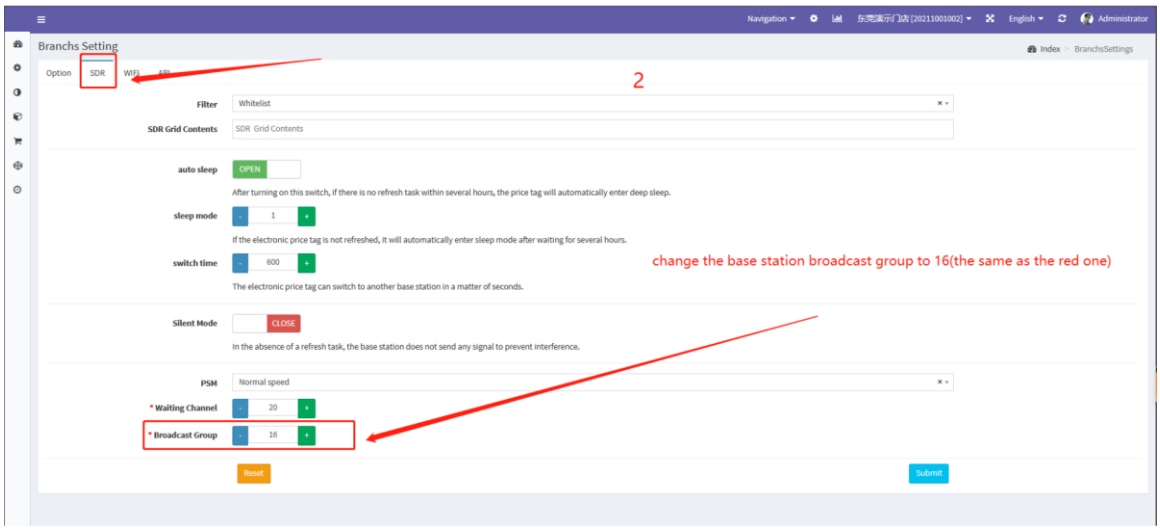
Branches Setting
Option
SDR
2
Filter
Whitelist
SDR Grid Contents
auto sleep
OPEN
After turning on this switch, if there is no refresh task within several hours, the price tag will automatically enter deep sleep.
sleep mode
If the electronic price tag is not refreshed, it will automatically enter sleep mode after waiting for several hours.
switch time
The electronic price tag can switch to another base station in a matter of seconds.
change the base station broadcast group to 16(the same as the red one)
Silent Mode
CLOSE
In the absence of a refresh task, the base station does not send any signal to prevent interference.
PSM
Normal speed
* Waiting Channel
* Broadcast Group
Reset
Submit

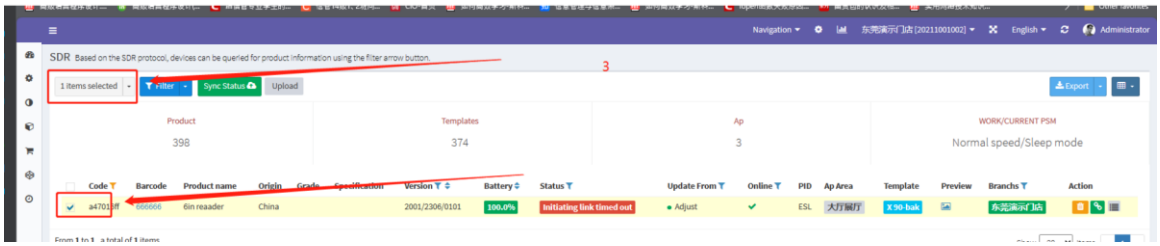
SDR Based on the SDR protocol, devices can be queried for product information using the filter arrow button.
3
1 items selected
Filter
Sync Status
Upload
Export
Product
398
Templates
374
Ap
3
WORK/CURRENT PSM
Normal speed/Sleep mode
Code
Barcode
Product name
Origin
Grade
Specification
Version
Battery
Status
Update From
Online
PID
Ap Area
Template
Preview
Branches
Action
a4701ff
666666
6in reaader
China
2001/2306/0101
100.0%
Initiating link timed out
Adjust
ESL
大厅厕厅
X 90-bak

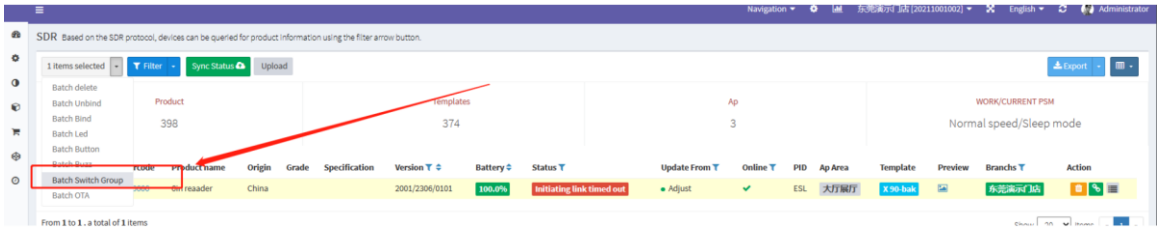
SDR Based on the SDR protocol, devices can be queried for product information using the filter arrow button.
1 items selected
Filter
Sync Status
Upload
Export
Batch delete
Batch Unbind
Batch Bind
Batch Led
Batch Button
Batch Switch Group
Batch OTA
Product
398
Templates
374
Ap
3
WORK/CURRENT PSM
Normal speed/Sleep mode
From 1 to 1 , a total of 1 items

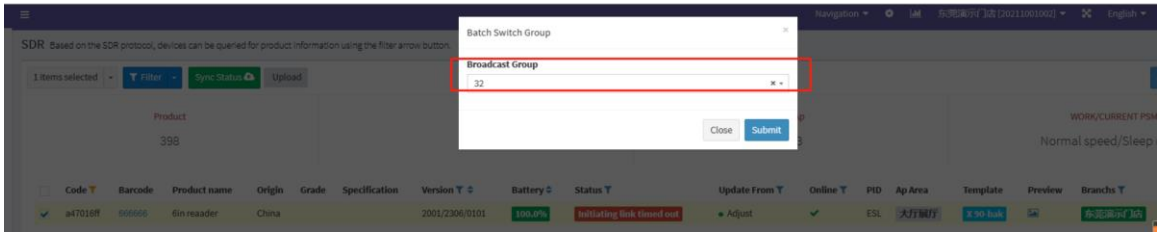
Batch Switch Group
Broadcast Group
32
Close
Submit

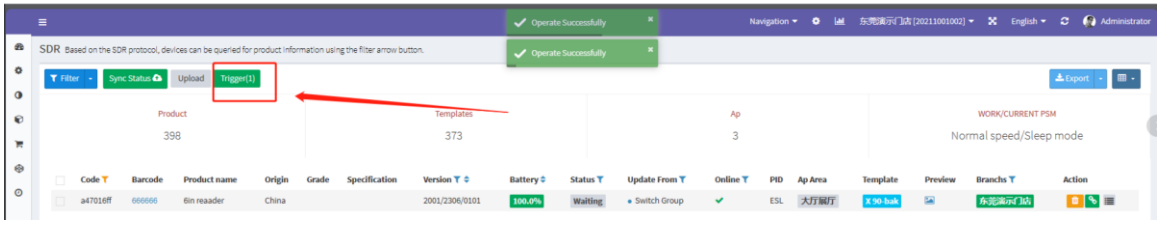
Operate Successfully
Operate Successfully
SDR Based on the SDR protocol, devices can be queried for product information using the filter arrow button.
Filter
Sync Status
Upload
Trigger(1)
Export
Product
398
Templates
373
Ap
3
WORK/CURRENT PSM
Normal speed/Sleep mode
a4701ff
666666
6in reaader
China
2001/2306/0101
100.0%
Waiting
Switch Group
ESL
大厅厕厅
X 90-bak

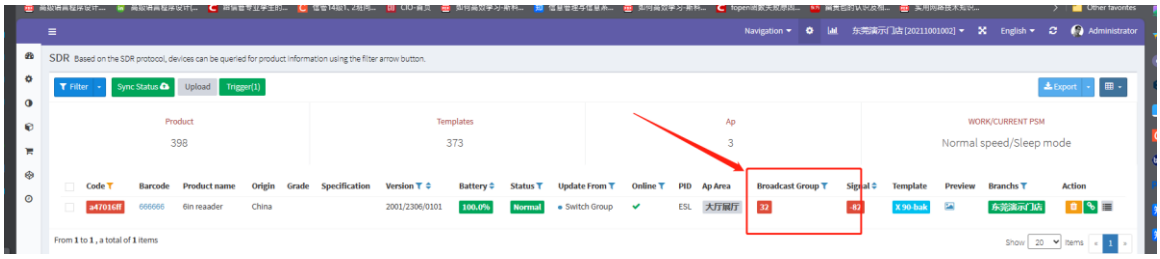
SDR Based on the SDR protocol, devices can be queried for product information using the filter arrow button.
Filter
Sync Status
Upload
Trigger(1)
Export
Product
398
Templates
373
Ap
3
WORK/CURRENT PSM
Normal speed/Sleep mode
Broadcast Group
Signal
a4701ff
666666
6in reaader
China
2001/2306/0101
100.0%
Normal
Switch Group
ESL
大厅厕厅
32
-82
X 90-bak
From 1 to 1 , a total of 1 items

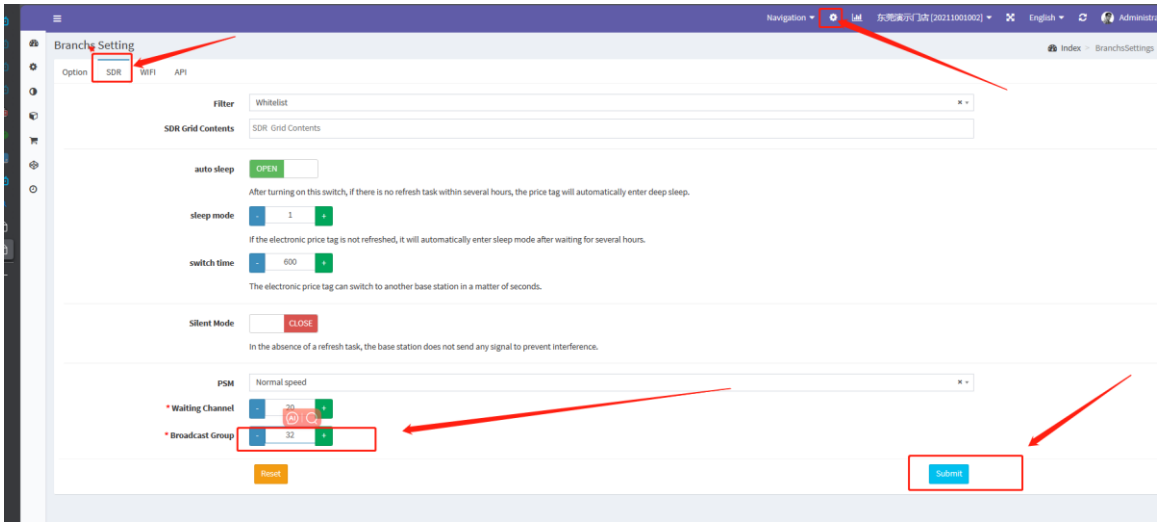
Navigation
English
Branchs Setting
Index
BranchsSettings
Option
SDR
WIFI
API
Filter
Whitelist
SDR Grid Contents
SDR Grid Contents
auto sleep
OPEN
After turning on this switch, if there is no refresh task within several hours, the price tag will automatically enter deep sleep.
sleep mode
1
If the electronic price tag is not refreshed, it will automatically enter sleep mode after waiting for several hours.
switch time
600
The electronic price tag can switch to another base station in a matter of seconds.
Silent Mode
CLOSE
In the absence of a refresh task, the base station does not send any signal to prevent interference.
PSM
Normal speed
* Waiting Channel
* Broadcast Group
32
Reset
Submit