
Divisible Workspace Blueprint

Cloud Registered Installation Guide

This document provides the installation instructions for the Divisible Workspace Blueprint. This blueprint leverages Cisco Pro Series Microphones, Catalyst Switches and Cisco Video Devices to provide a simplified, easy to deploy, scalable offering for Divisible Workspaces.

Premise registered devices should follow this guide: **Premise Installation Guide**

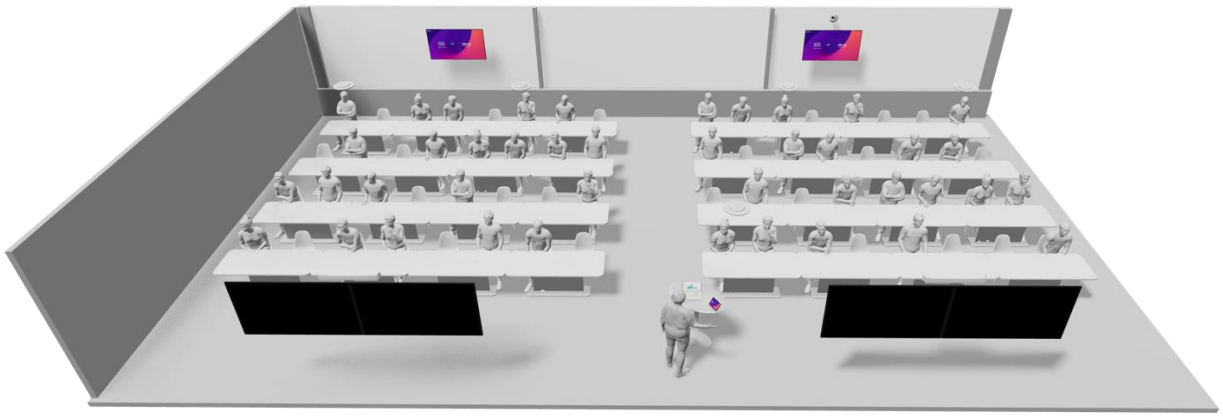

All other documentation is available on GitHub:
https://cs.co/divisibleworkspaceblueprint

Best effort and community level support provided via a Webex messaging space.
You can join using this URL: **https://eurl.io/#nakTe_Vn3**

You can find the User Guide documentation here: **User Guide**

Cisco Confidential


In-Room Installation

Physical Wiring

The blueprint provides several validated wiring schematics based on the Codecs selected, number of secondary room displays and the Catalyst 9K Switch.

Example Diagram:

Two Way (Pro) with Two Screens

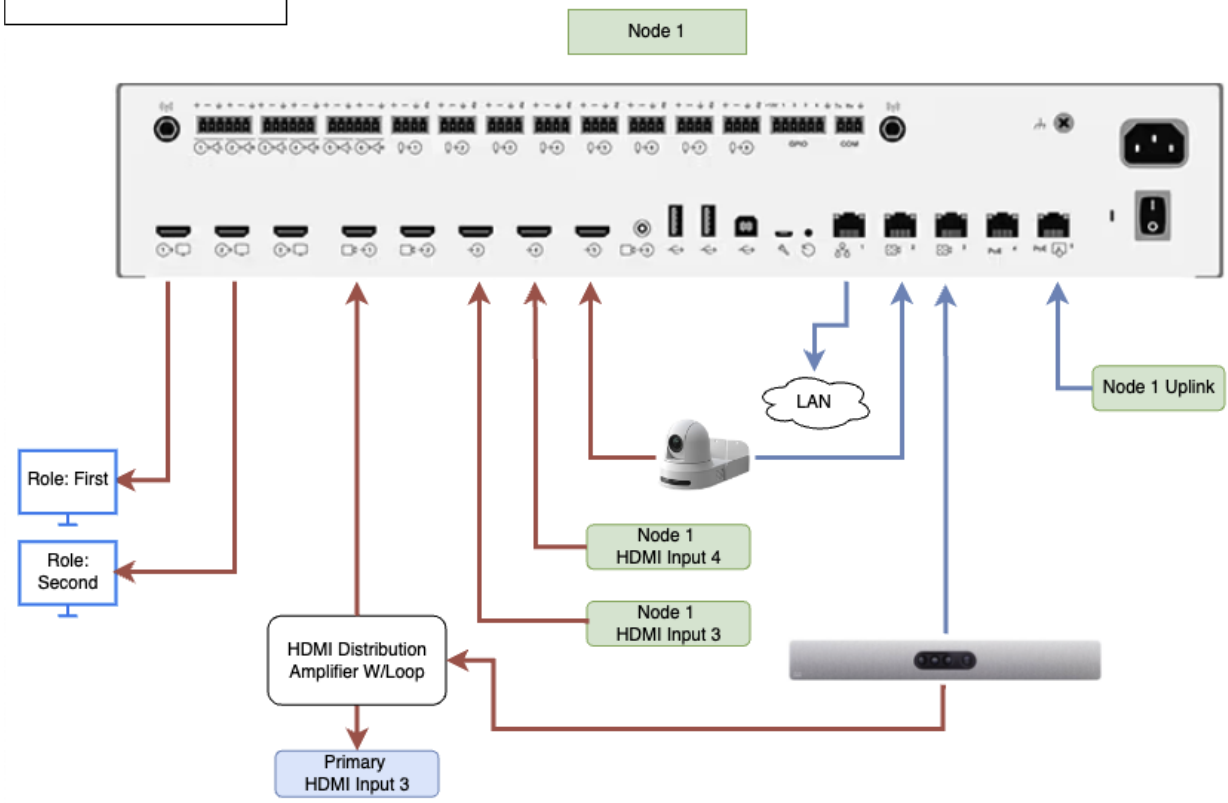


IMPORTANT

*Do **not** power on any Codecs, switch or connect Scheduler Panels until expressly instructed. The Blueprint leverages several mechanisms that rely on a pre-defined order of operations.*


Microphone Installation Guidance

When installing Ceiling Microphone Pros you will want to follow these core concepts:

1. Center the Audience Microphones over the middle of the audience area.

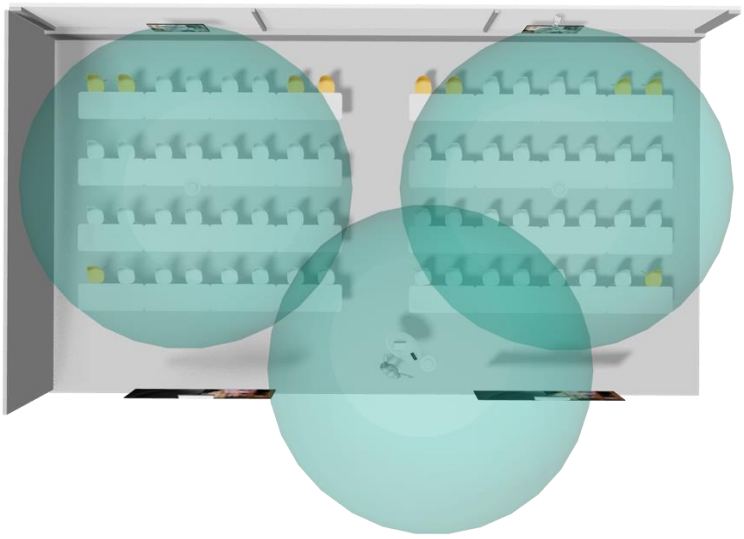

2. If required for room width, add a second microphone to the audience area.

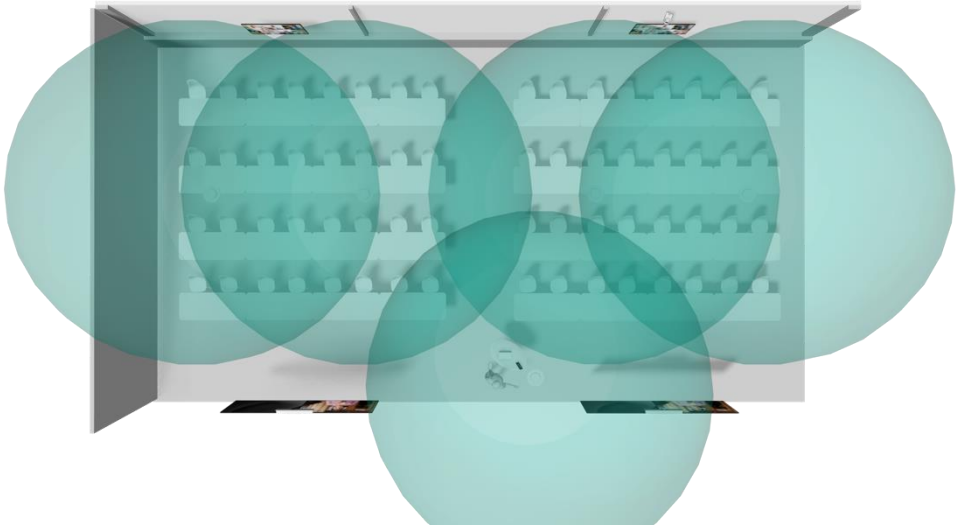

Cisco Confidential

3. Your presenter Microphone should be positioned towards the middle of the combined space as close to the center line area as possible. This allows for adequate coverage of the “Stage” area configured for Presenter Tracking.



Presenter Track Example Perspective

4. (Optional) Consider configuring Audio Exclusion Zones on your presenter microphone and any overlapping audience microphones to ensure they specifically capturing only their respective areas. Detailed on Audio Exclusion Zones can be found here: https://help.webex.com/en-us/article/ngtv51d/Audio-exclusion-zone-feature-for-Cisco-Ceiling-Microphone-Pro

Cisco Confidential

Configuration Tasks

---

*Please do **not** power on your Codecs or Switch until **Step 4**.*
*If you are deploying Scheduler Panels, do **not** connect them until **Step 5**.*

Step 1: Prepare the USB Key

Format a USB Key with a **4GB FAT32** partition.

Download the appropriate "**ciscortr.cfg"** file to match the n-way and switch model you are deploying from the GitHub Repository: Switch Configurations

Place the "**ciscortr.cfg"** file into the ***root directory*** of the USB Key.

---

*Please do **not** rename the file or place it into any subfolder.*

Step 2: Configure the Switch

Insert the USB key into the front port of the **Catalyst 9K Series**.

Power on the switch. Do **not** power on the Codecs.

---

*Switch auto-configuration will take **6 minutes.***

IMPORTANT: The switch configuration is **NOT** automatically written to memory. This is handled by the macro install process later in this guide.

Please do not power off the switch until setup is complete.

Cisco Confidential

Step 3: Control Hub Configuration

Log in to **Control Hub**.

Select **Devices** from the left-hand menu.


Click on **Templates** and then **Create Template**.

Provide a descriptive name, e.g., *"Divisible Workspaces"*.

Configure the Template with the following configurations and values:

Attribute	Value
HttpClient > AllowInsecureHTTPS	True
HttpClient > Mode	On
Macros > Mode	On
Video > Input > CameraConfigMode	Auto

Example Screenshot:

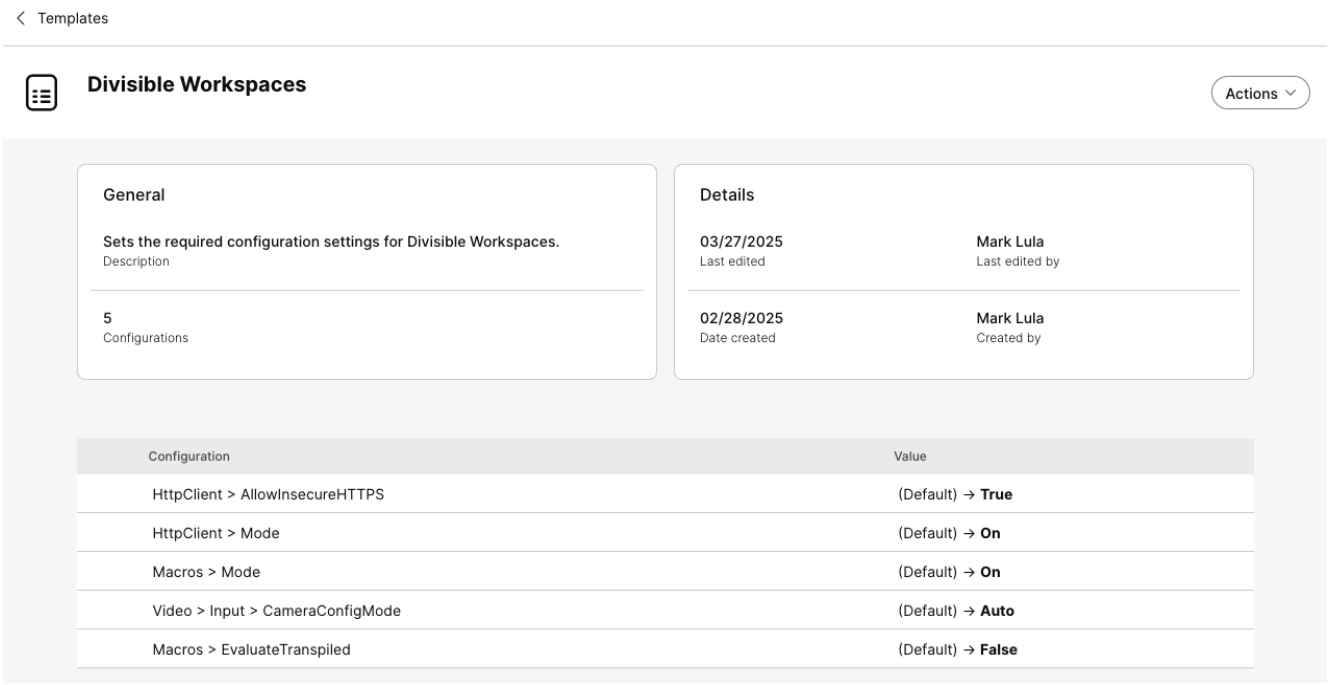

Step 4: Power on and Register Codecs

Power on your codecs.

Cisco Confidential

If not pre-configured, follow the steps documented here (https://help.webex.com/en-us/article/ndb7w0db/Generate-an-activation-code-for-a-device) to create new Control Hub Workspaces for each of the physical Divisible Workspaces.

Follow on the on-screen wizard to register the codecs in each physical workspace to their respective Control Hub Workspace using the 16-digit codes from above.

Step 5: Connect Scheduler Panels (Optional)

If deploying Scheduler Panels, connect the additional Room Navigators to their appropriate ports on the Catalyst 9K switch.


Step 6: Apply Configuration Template

Apply the previously created configuration template by following the steps documented here (https://help.webex.com/en-us/article/n5pqgcm/Device-configurations-for-Board,-Desk,-and-Room-Series-devices#Cisco_Task.dita_d08ea382-e100-4abb-87da-50bf62727953) to **all** Divisible Workspaces (Primary and Nodes).

Step 7: Configure the Node Room(s)


From the left-hand menu select Devices then search for the first **Node Room** and select it.

In the top right, Click **Actions** and select **Run xCommand**.

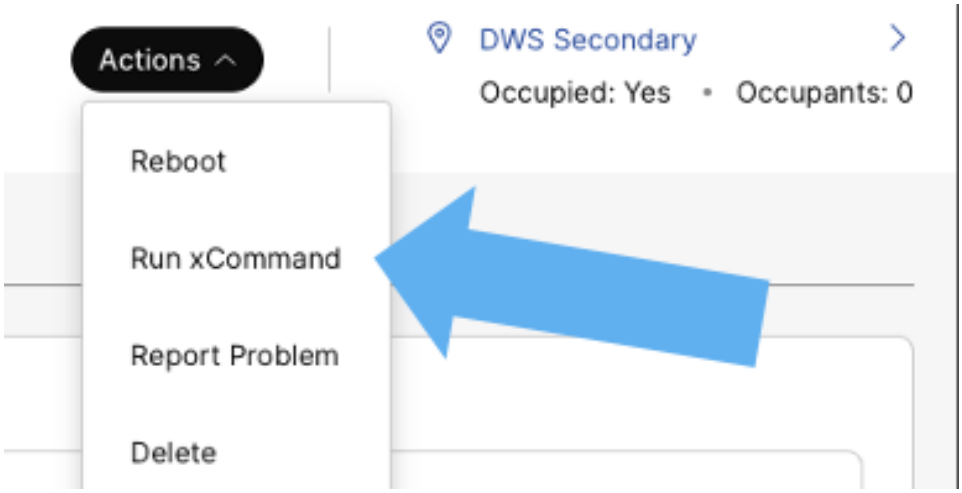


Navigate to **UserManagement** and select **Add**.

Cisco Confidential

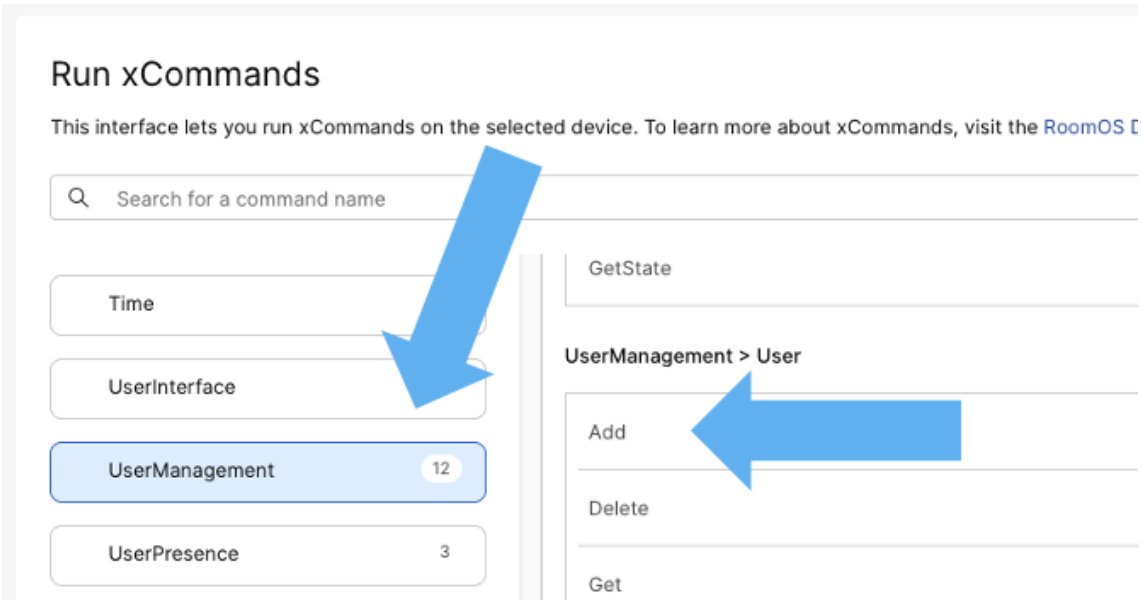

Complete the highlighted values:

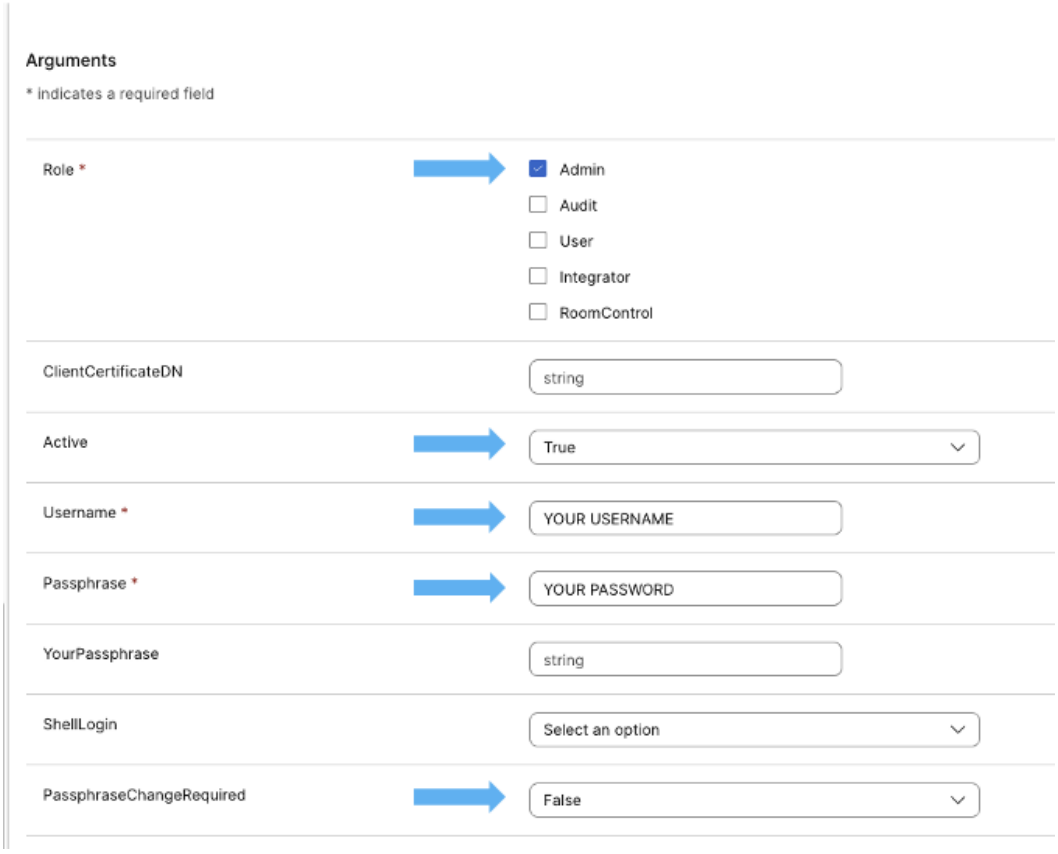

Click **Execute**.

Cisco Confidential

Step 8: Download the Macro files

Download all the files from the Macro directory of the “main” branch.

You should have the following files:
DWS_Wizard.js, DWS_Setup.js, DWS_Audio.js, DWS_Core.js, DWS_Images.js and **DWS_Node.js.**


Step 9: Deploy Macro on the Node Codec(s)

Log in your **Node** Codec(s) using its IP Address in your web browser. On the left-hand menu, select **Macro Editor**.

While in the editor window, install the macro by either drag and dropping the **DWS_Node.js** on the middle pane or select **Import from file**.

---

*(Important) Do **NOT** enable the DWS_Node macro.*

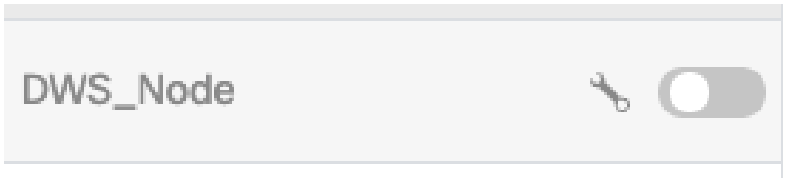


***Required:** Repeat step 8 for ALL Node codecs.*

Cisco Confidential

Step 10: Deploy the Macros to the Primary Room

Open the device page for the **Primary Room**.

Select **Macros**.

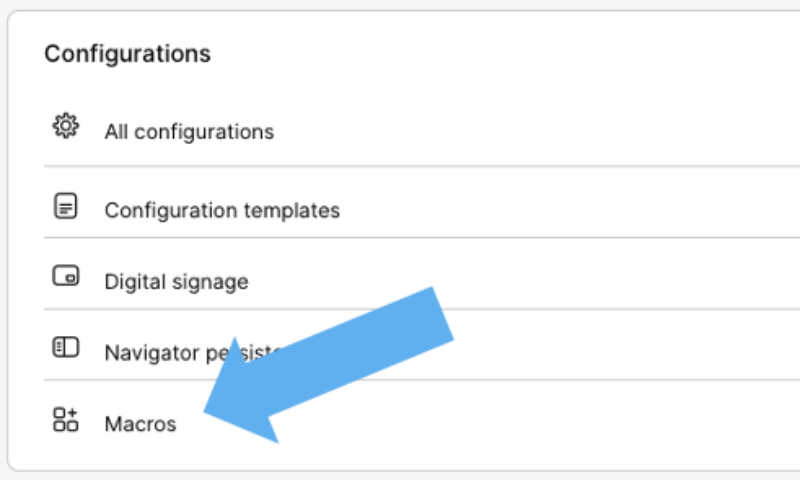

Click **Add Macro** than upload each of the **DWS_Setup.js, DWS_Audio.js, DWS_Core.js and DWS_Images.js** files.

---

*Do **not** rename the macros.*

*Do **not** enable Setup, Audio, Core or Images.*

Cisco Confidential


Then upload the **DWS_Wizard.js** file. Ensure the **Enabled** toggle is switched on.

Click **Save**.




Step 11: Complete the Setup Wizard

On the room Navigator, select **Setup Wizard** from the home screen.

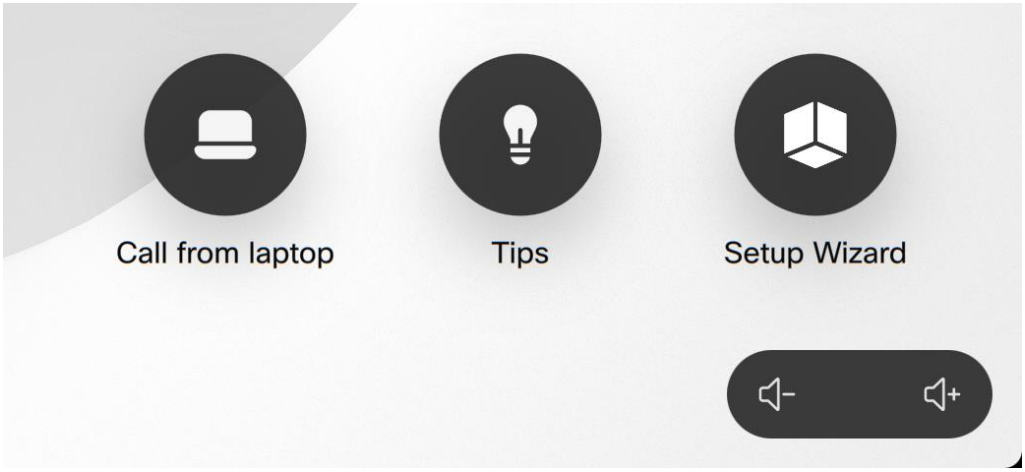


Cisco Confidential

Complete each step of the wizard.

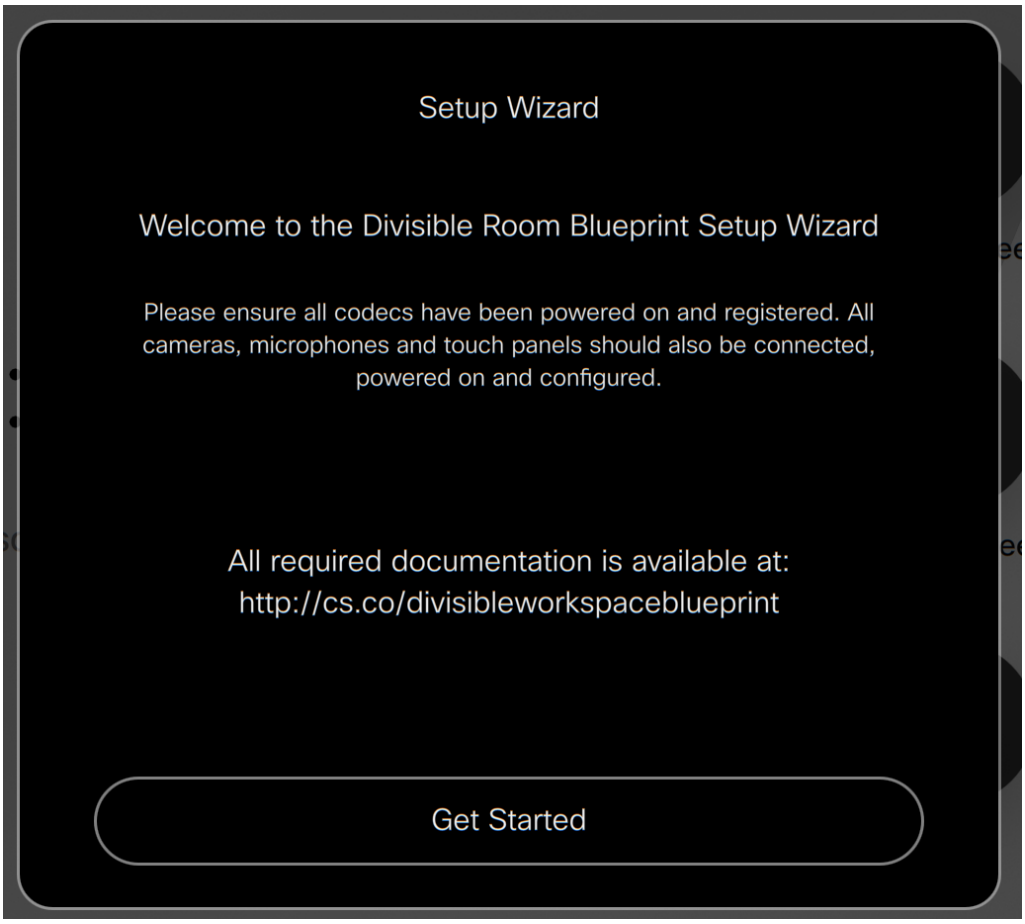


The first step is where your common settings will be configured. When entering the Username and Password, use the credentials you configured in Step 5.

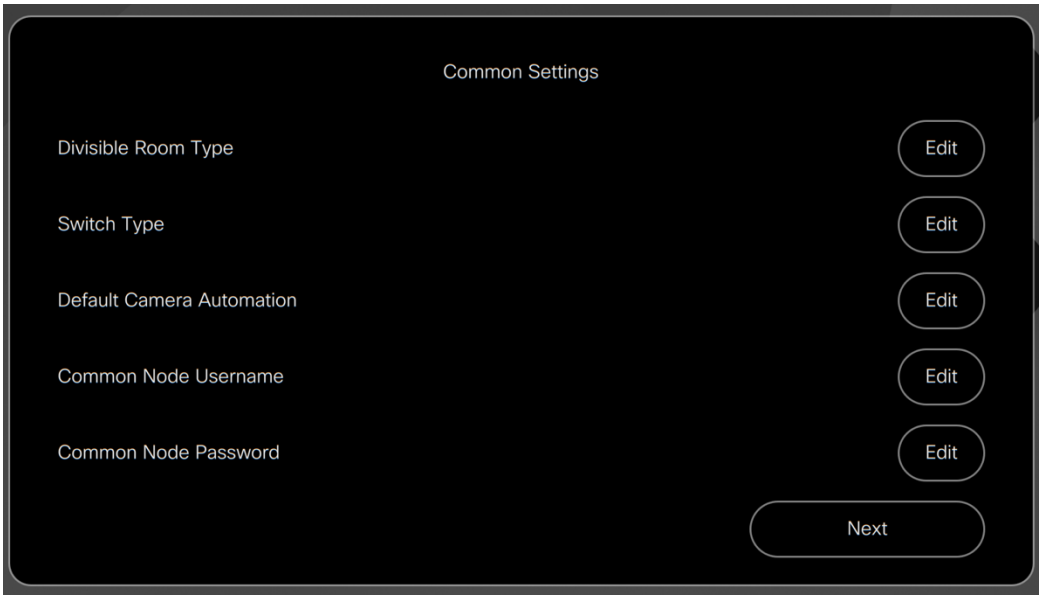


Cisco Confidential

You will then be asked to select the Presenter Microphone. Cisco IP Microphones will be shown as serial numbers.

If you are using a 3rd party microphone over USB or Analog for the presenter, you can set the default for Automatic Microphone Ducking of the Cisco Pro Series microphones to support Presenter Lift scenarios.

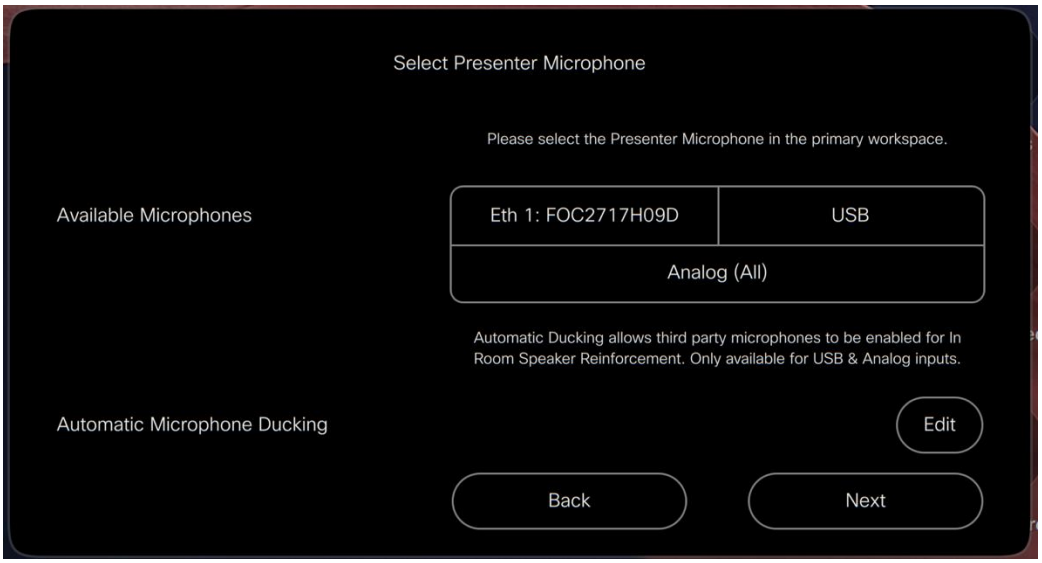


When you get to the Node Codec setting page, Enter the details and click **Connect**.

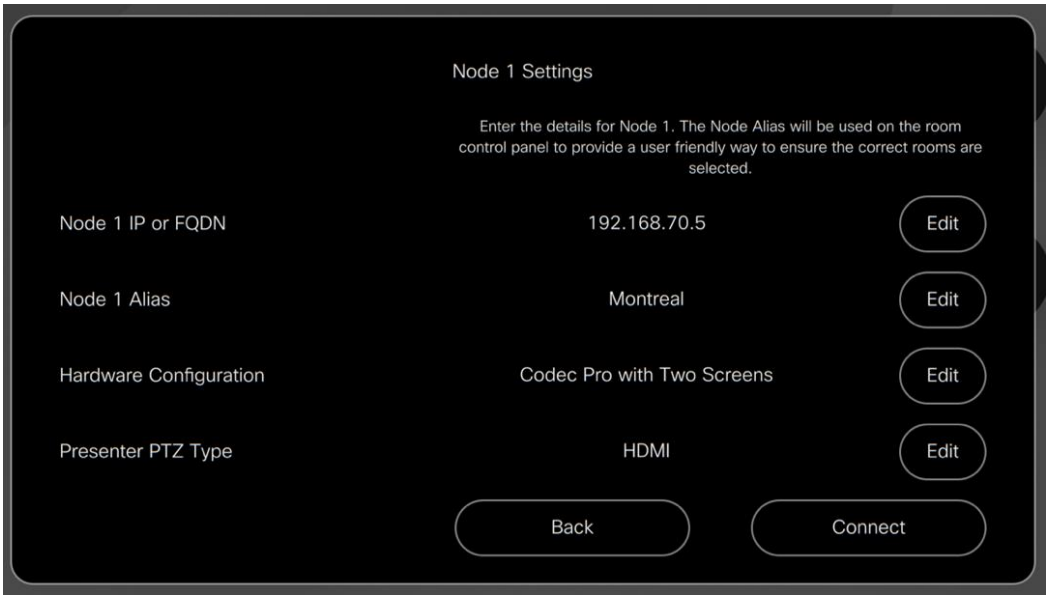

Cisco Confidential


The macro will connect to the Node Codec and gather all peripheral details. Please validate all expected peripherals have been found. If not detected, hit back, connect the peripheral and click **Connect** again.

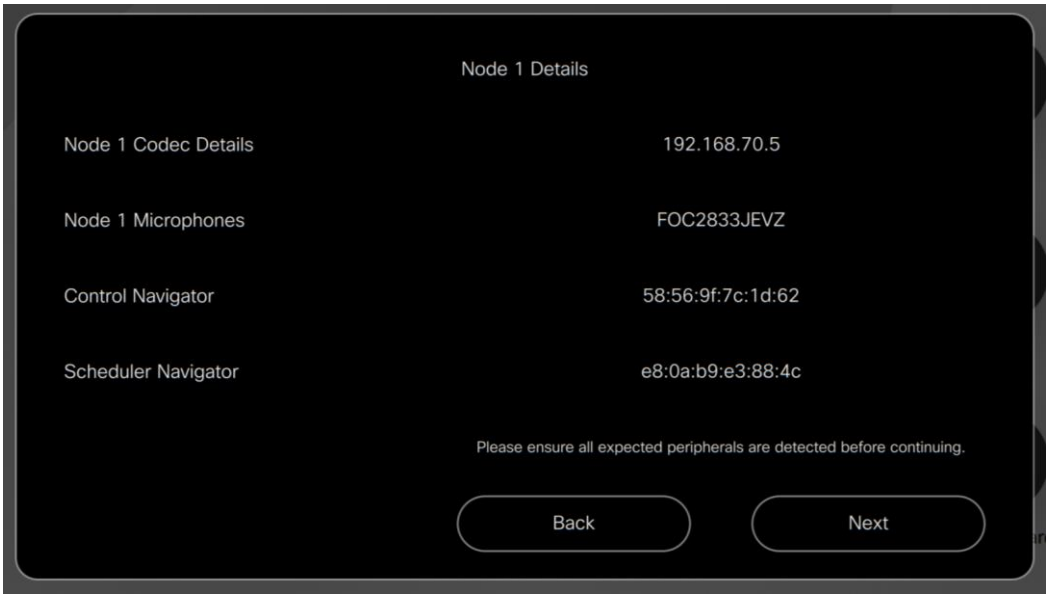


If you selected Three Way Divisible, you would repeat the steps above for Node 2.

Cisco Confidential

Click **Begin Setup** to finalize your configuration.

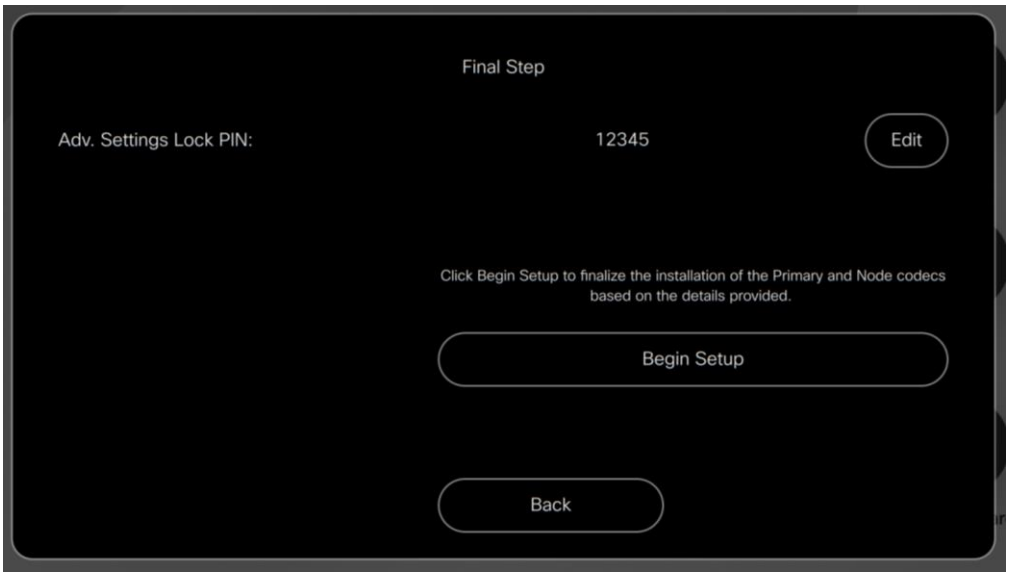


On the Room Navigator Home screen, you should now see the **Room Controls** button.

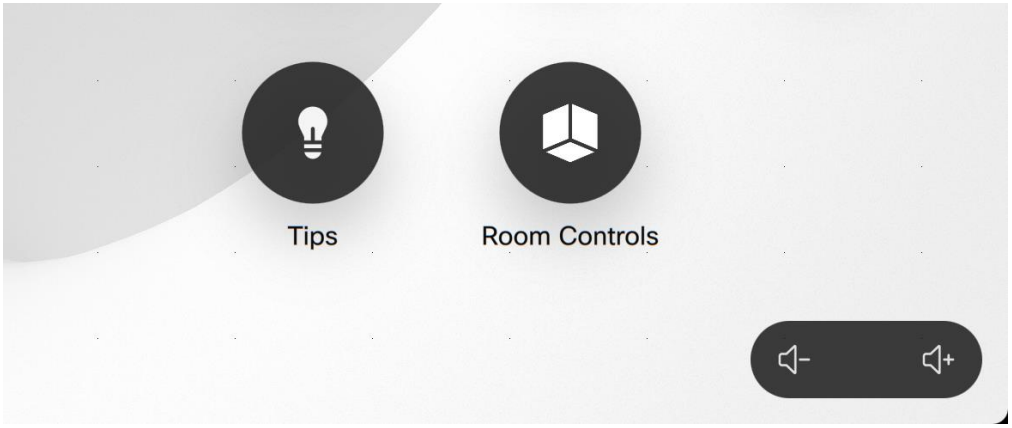

Cisco Confidential

Post Wizard Configuration

On the Primary Workspace you will be prompted to configure Presenter Track to enable the presenter-based camera automation capabilities in combined mode operations.

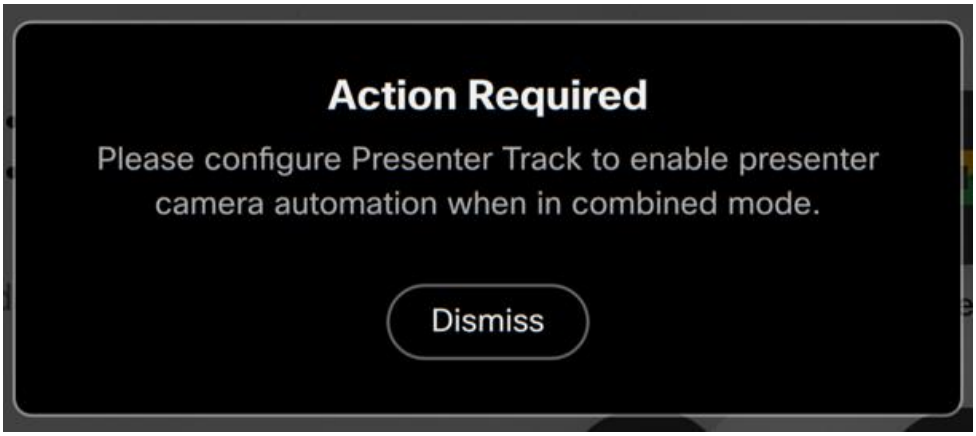

Installation Complete!

Cisco Confidential