



1 / 5 — Boot & Main Loop


setup() runs once then loop() repeats every 5 ms

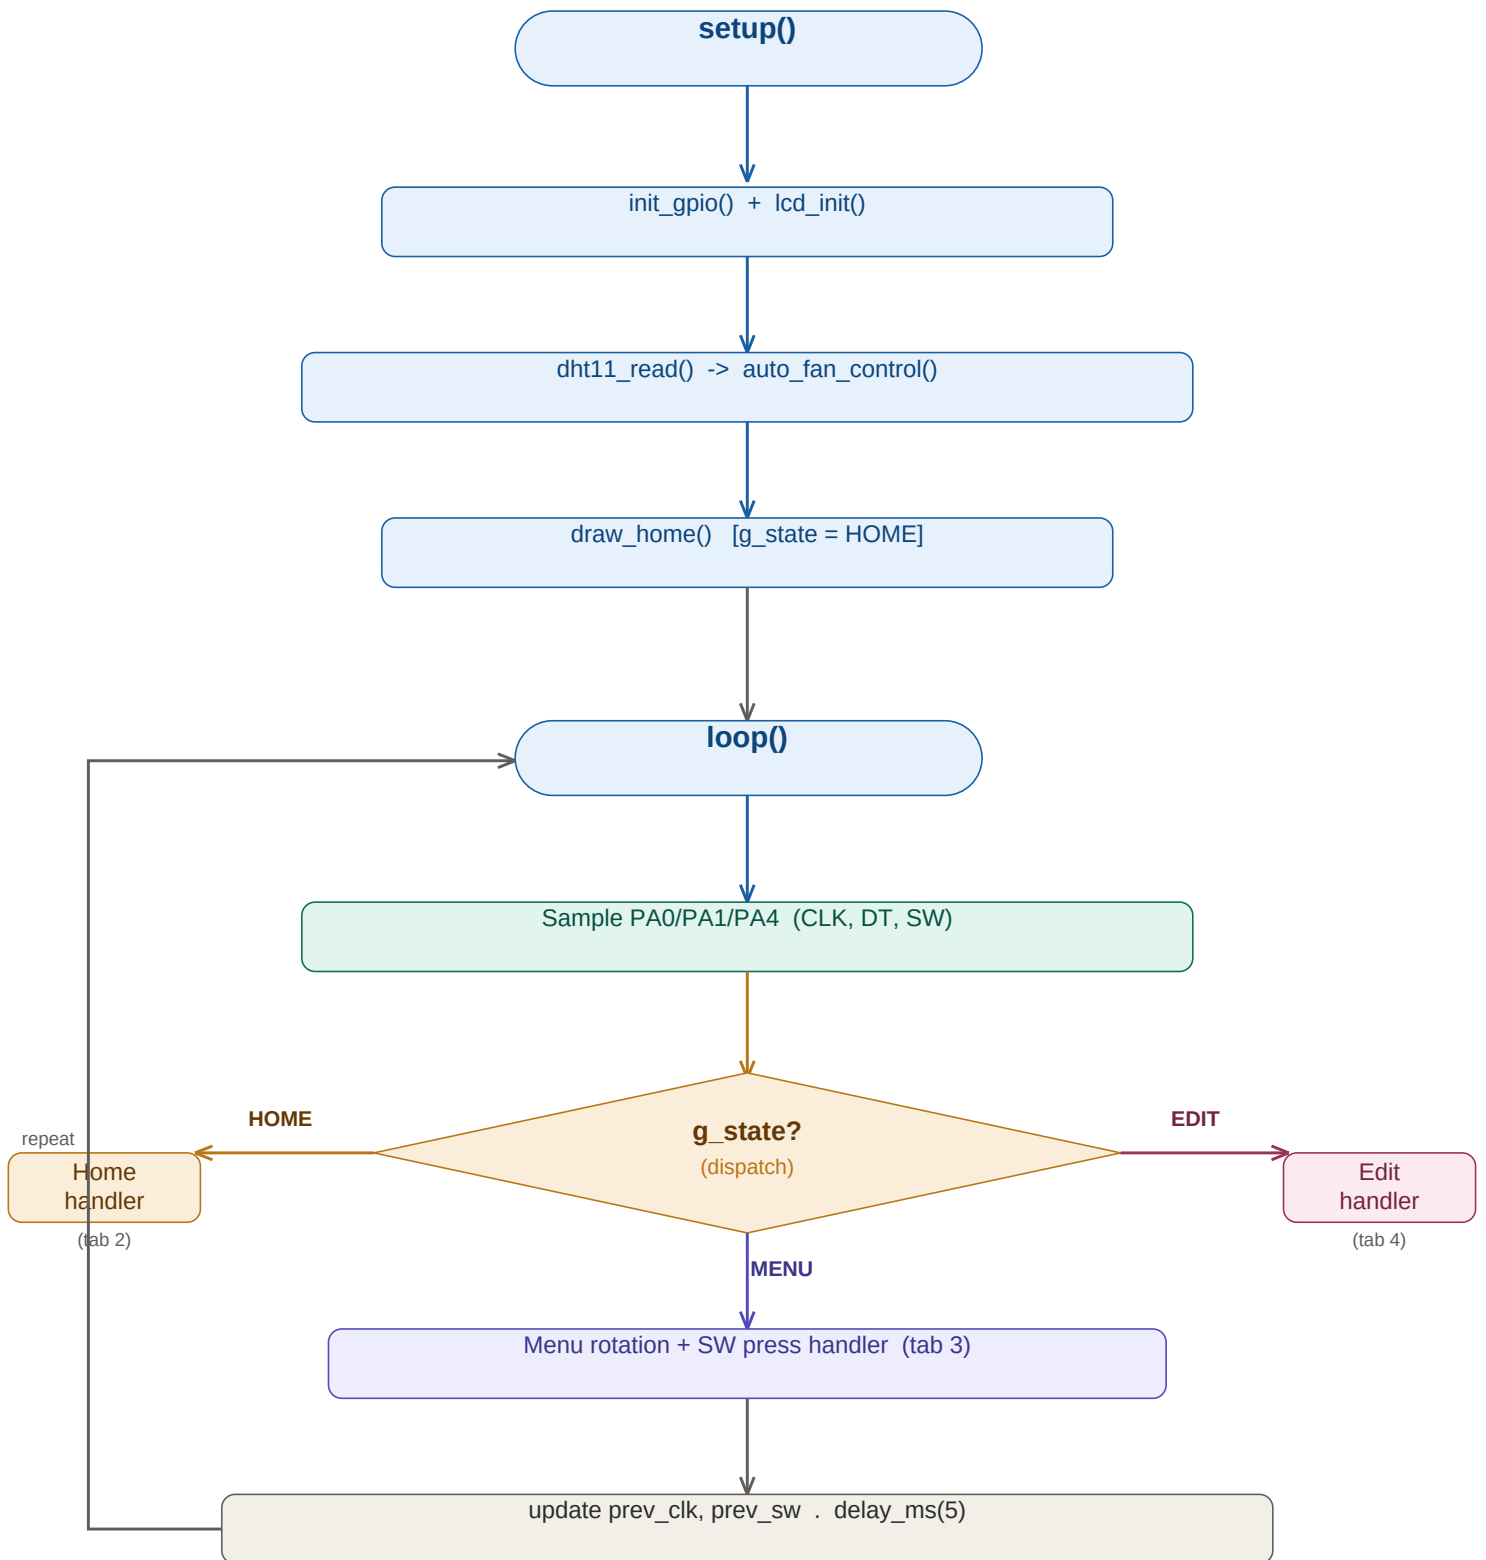

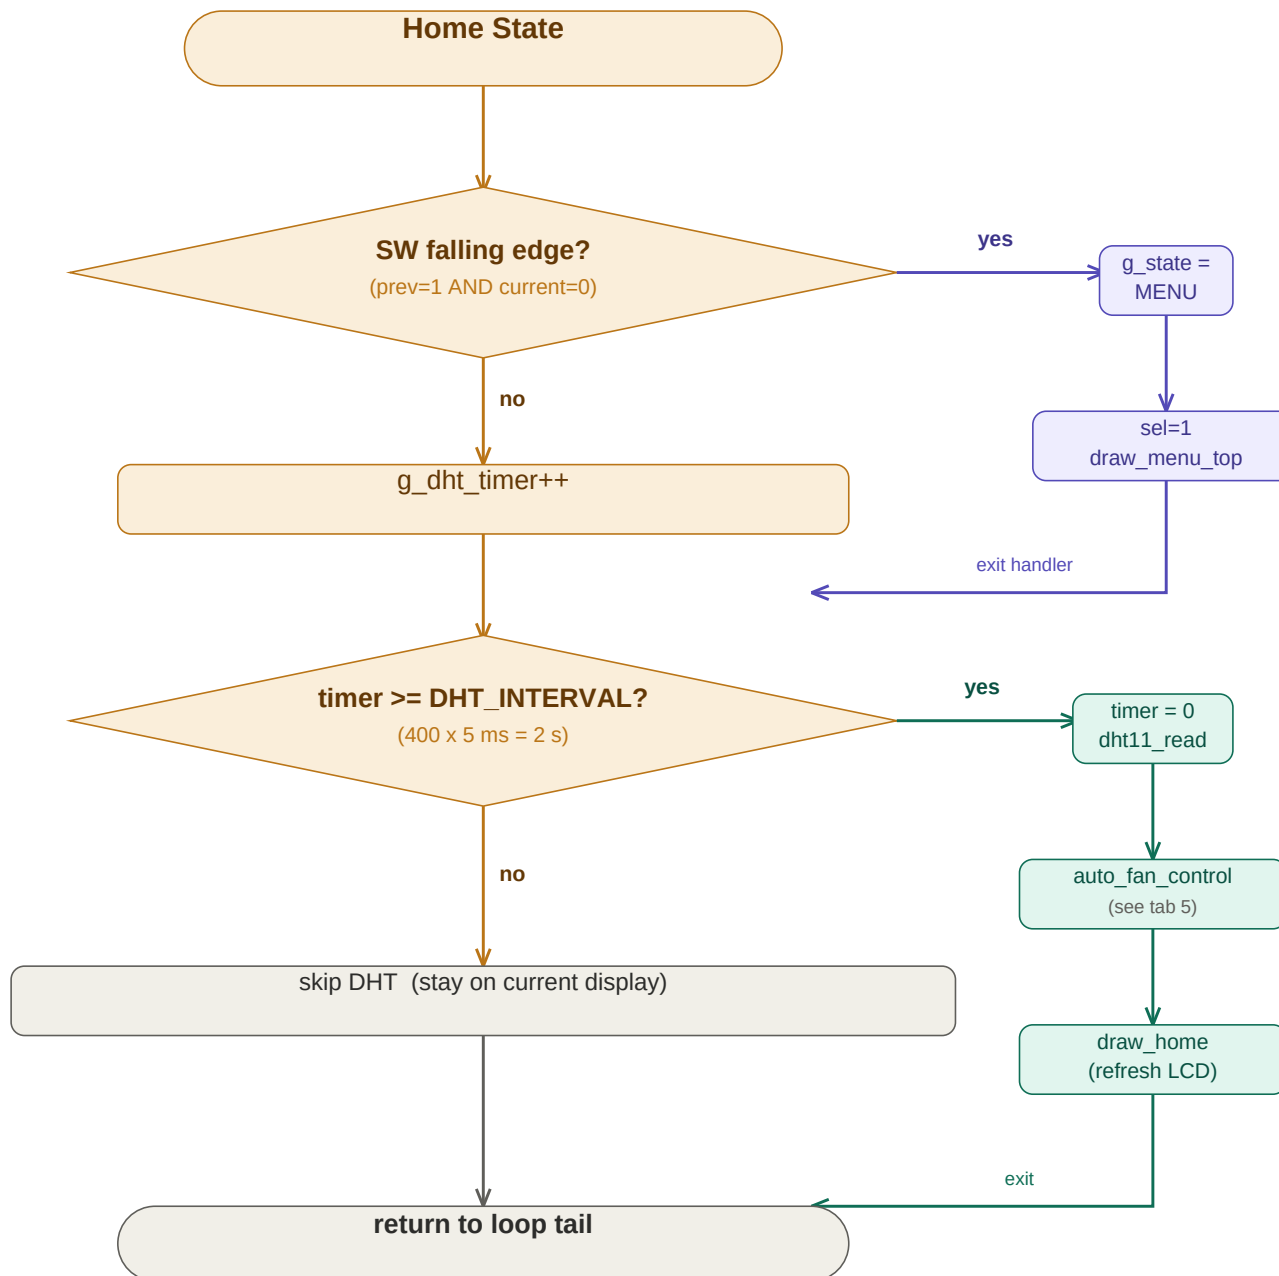

3 / 5 — Full Menu Navigation Tree


Rotation: CW=sel++ CCW=sel-- (clamped) . Press = select

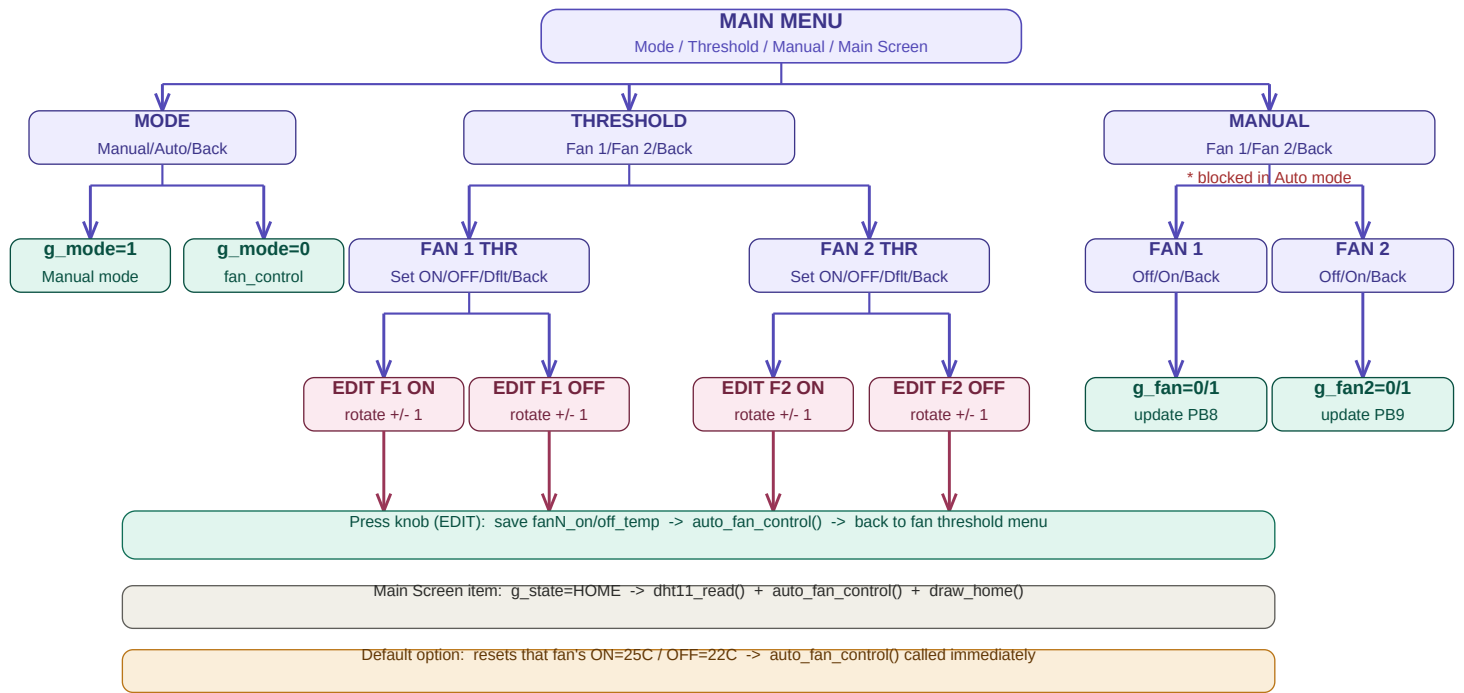

Rotation (any menu): CLK falling edge -> CW: sel++ (clamp at max) CCW: sel-- (clamp at 1) -> draw_current_menu()

4 / 5 — Threshold Edit State


EDIT_F1_ON / EDIT_F1_OFF / EDIT_F2_ON / EDIT_F2_OFF

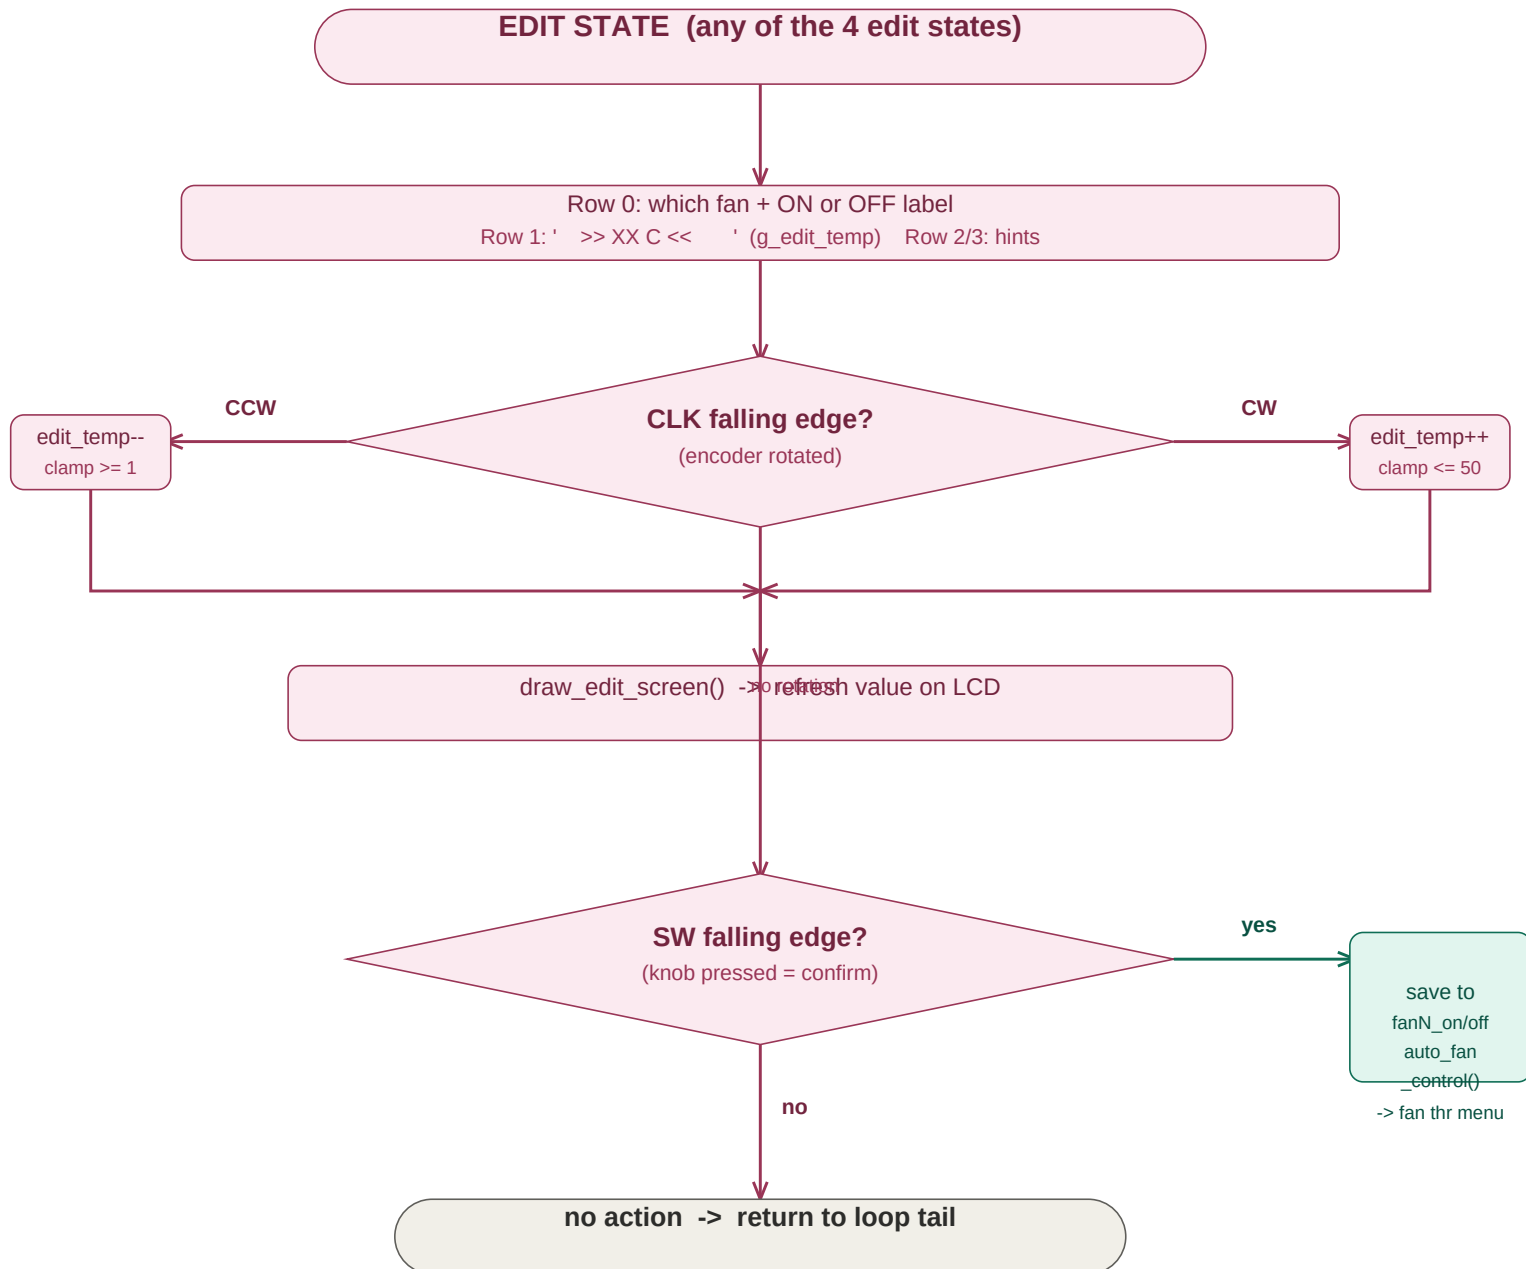

Valid range: 1 C (TEMP_MIN) to 50 C (TEMP_MAX) . each fan threshold set independently

5 / 5 — Auto Fan Control (auto_fan_control)

Called after every DHT read and when Auto mode is selected

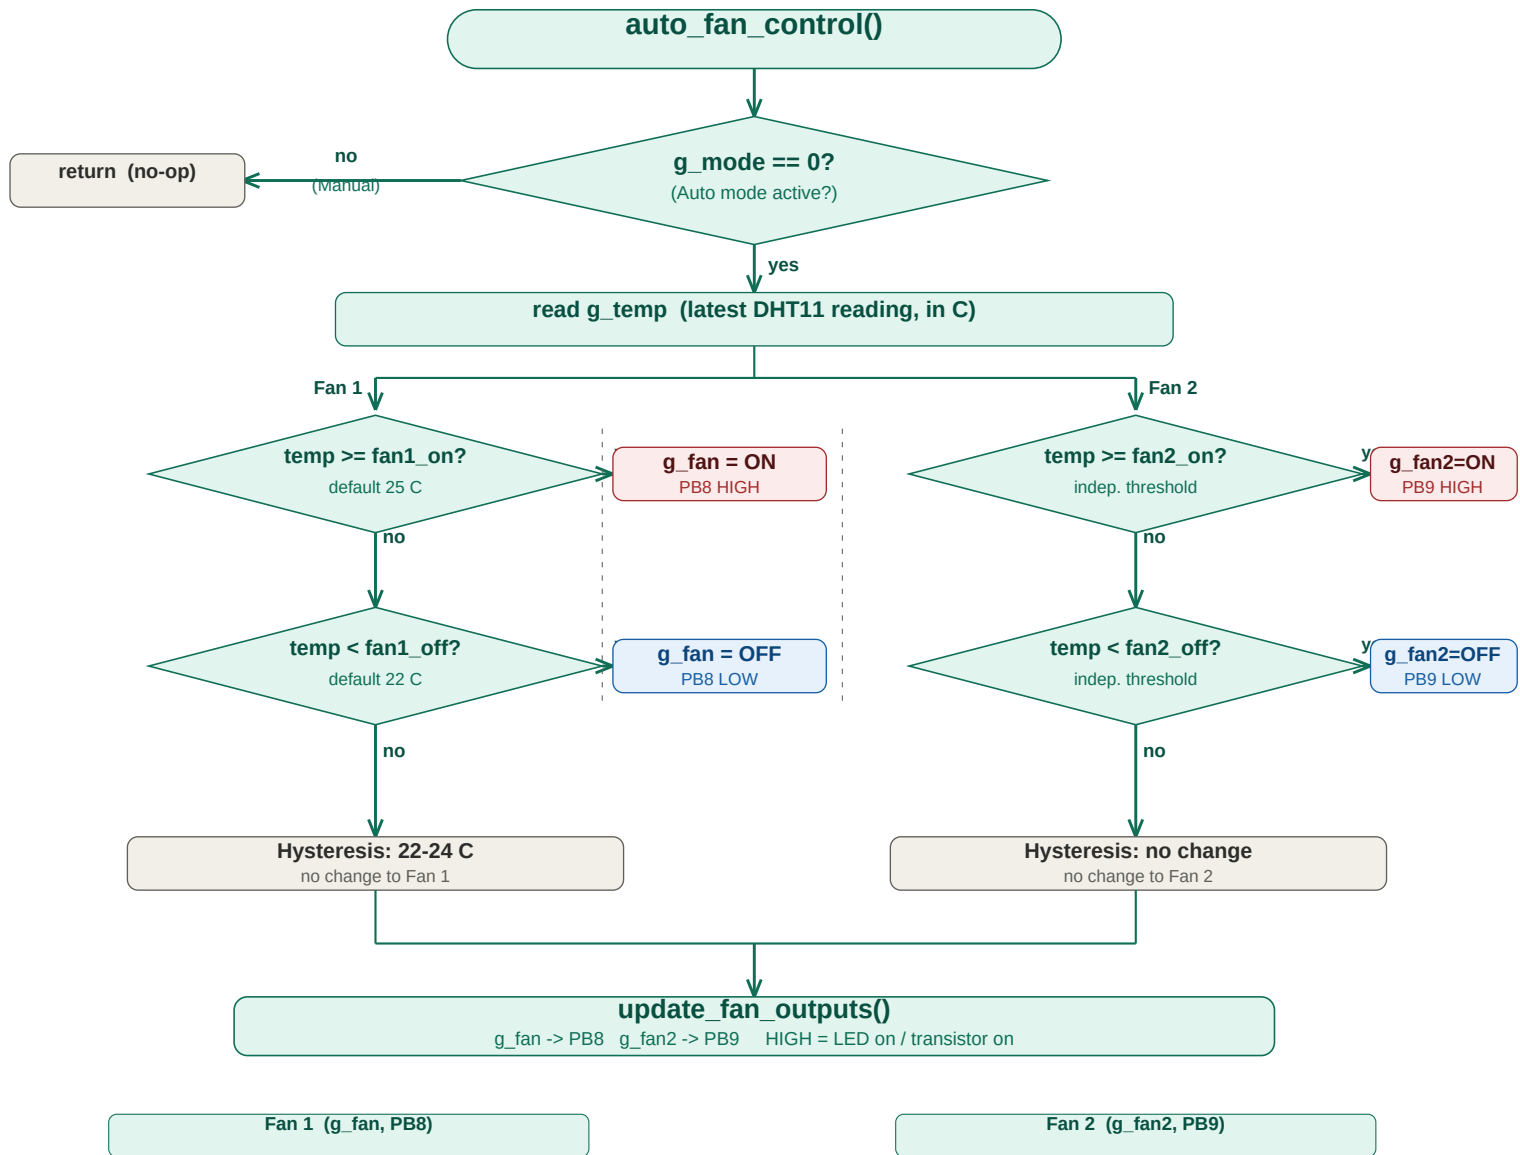

Hysteresis: fans only change state outside the dead zone to prevent rapid switching at the boundary
Fan 1 and Fan 2 each have independent ON and OFF thresholds set in the Threshold menu (see tab 3)