

3. Disassembly and Reassembly

3.1. Precautions when replacing parts

3.1.1. Precautions when assembling and disassembling

- Use only approved Samsung spare parts. Ensure that part number, product name, any voltage, current or temperature rating are correct. Failure to do so could result in damage to the machine, circuit overload, fire or electric shock.
- Do not make any unauthorized changes or additions to the printer, these could cause the printer to malfunction and create electric shock or fire hazards.
- Take care when dismantling the unit to note where each screw goes. There are 19 different screws. Use of the wrong screw could lead to system failure, short circuit or electric shock.
- Do not disassemble the LSU unit. Once it is disassembled dust is admitted to the mirror chamber and will seriously degrade print quality. There are no serviceable parts inside.
- Regularly check the condition of the power cord, plug and socket. Bad contacts could lead to overheating and fire. Damaged cables could lead to electric shock or unit malfunction.

3.1.2. Precautions when handling PBA


Static electricity can damage a PBA, always use approved anti-static precautions when handling or storing a PBA.

- **Precautions when moving and storing PBA**
 - 1) Please keep PBA in a conductive case, anti-static bag, or wrapped in aluminum foil.
 - 2) Do not store a PBA where it is exposed to direct sunlight.
- **Precautions when replacing PBA**
 - 1) Disconnect power connectors first, before disconnecting other cables.
 - 2) Do not touch any soldered connections, connector terminals or other electronic parts when handling insulated parts.
- **Precautions when checking PBA**
 - 1) Before touching a PBA, please touch other grounded areas of the chassis to discharge any static electrical charge on the body.
 - 2) Take care not to touch the PBA with your bare hands or metal objects as you could create a short circuit or get an electric shock. Take extra care when handling PBAs with moving parts fitted such as sensors, motors or lamps as they may get hot.
 - 3) Take care when fitting, or removing, screws. Look out for hidden screws. Always ensure that the correct screw is used and always ensure that when toothed washers are removed they are refitted in their original positions.

3.1.3. Releasing Plastic Latches

Many of the parts are held in place with plastic latches. The latches break easily; release them carefully.

To remove such parts, press the hook end of the latch away from the part to which it is latched.

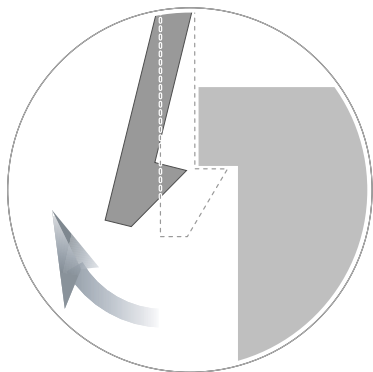

3.2. Maintenance


3.2.1. Machine Cleaning for maintenance

3.2.1.1. Cleaning the ACR/CTD sensor window

1. Open the side cover.



2. Clean the sensor window[A] by using a soft cloth.

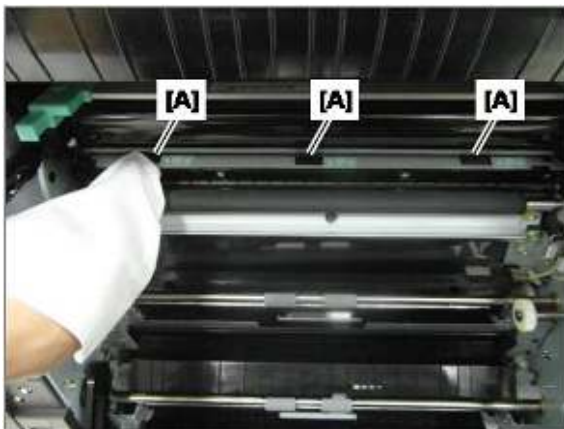

3. Close the side cover.
4. Enter the SVC mode. Select **“CTD Sensor Cleaning”**. (Diagnostics > Image Management > Auto Color Tone Adjustment Condition > CTD Sensor Cleaning)
5. When appearing the confirm popup menu, select **“Yes”** button on screen.

Are you sure about CTD sensor cleaning?

Yes

No



NOTE


If you don't execute “CTD sensor cleaning” menu on SVC mode after cleaning the sensor window, the error message will not disappear.

3.2.1.2. Cleaning the LSU window


1. Open the front cover. Remove the waste toner container[A].



2. Take out the LSU window cleaning tool that is located on the front cover.

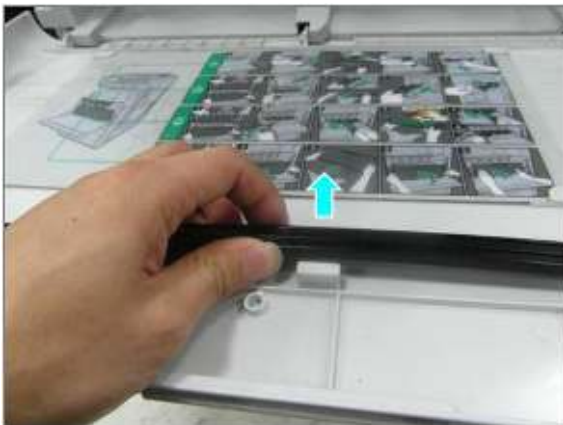

3. Insert the LSU window cleaning tool to each color hole.

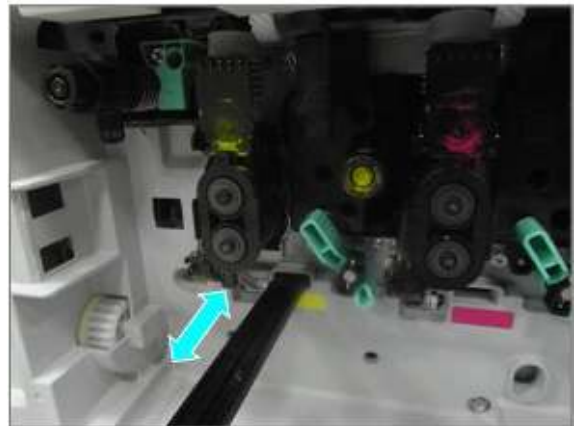


4. Slowly pull out and push the cleaning tool.
5. Repeat step 4 at least 5 times for each LSU window.

3.2.1.3. Cleaning the transfer roller

1. Open the side cover.



2. Clean the transfer roller[A] by using a soft cloth.

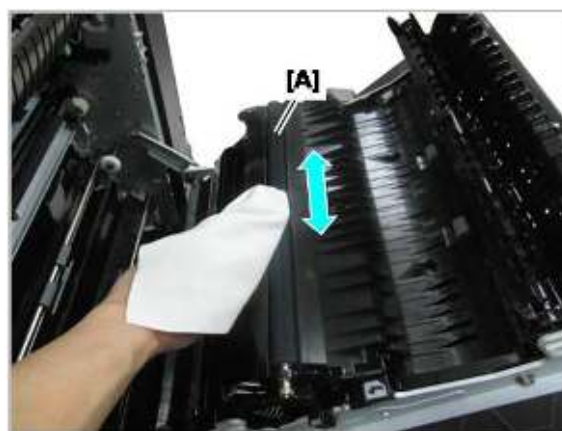


3.2.1.4. Cleaning the scan glass

1. Open the DADF Unit.




2. Clean the scan glass[A] by using a soft cloth.

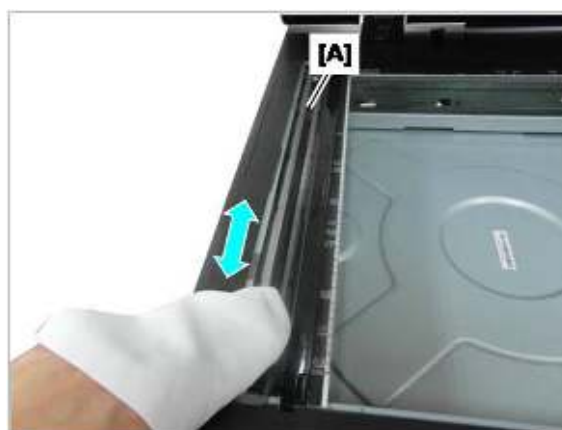


3.2.2. Replacing the maintenance part

3.2.2.1. Drum Unit


1. Open the front cover.

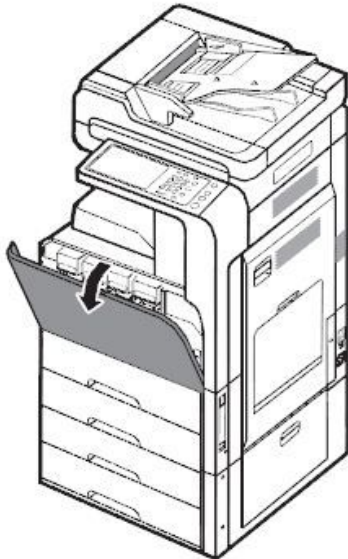

2. Remove the waste toner container.

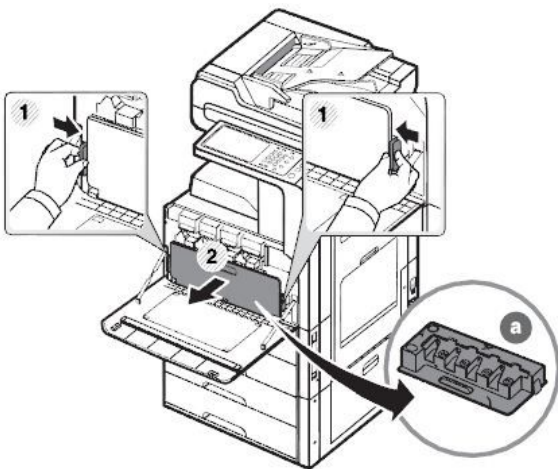

3. Turn the green lever counterclockwise.

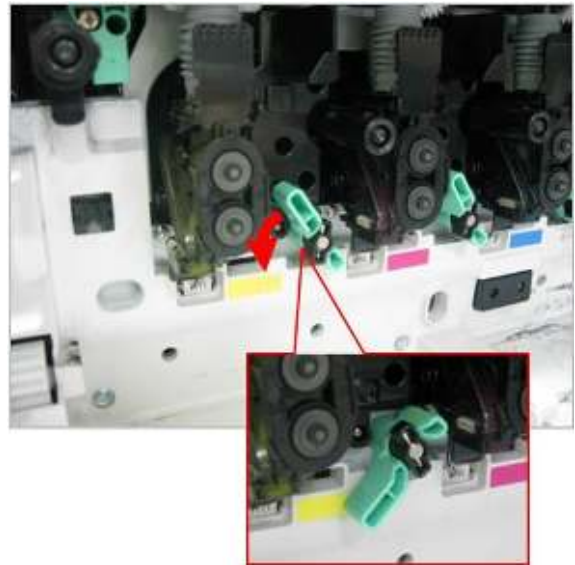

4. Hold the Drum unit and take it out.



3.2.2.2. Developer Unit


1. Turn the machine off. Then remove the corresponding drum unit. (Refer to 3.2.2.1)
2. Pull down the toner supply shutter.



3. Push the toner supply shutter to the direction of arrow. And then release the toner supply cap.



4. Remove the bracket[A] after removing 2 screws. Unplug the connector.

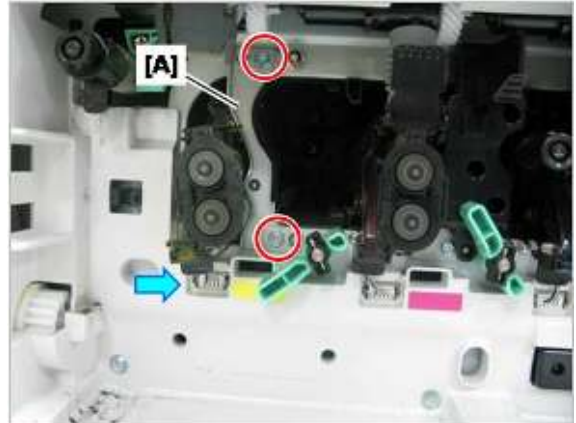

5. Remove the developer unit.



NOTE

It is not possible to change the carriers in developer unit for CLX-9201/9251/9301 series. You must replace the whole Developer Unit.

6. Install the new developer unit.
7. Turn the machine on while the front cover is opened.

NOTE

- 1) When replacing the developer unit, SVC engineer must execute "Life Count Update" and "TC calibration".
- 2) If you turn on the machine after closing the front cover, toner will be supplied without TC calibration. It may affect the image quality.

8. When the control panel is activated, select "Developer Unit" menu. (Information > supply Status > Field Replacement Unit > Developer Unit)

9. Select the “Developer Unit” for all colors that is replaced.

10. Push the OK button

11. Close the front cover.




NOTE

TC calibration will start. Please wait until warm-up operation is completed.

3.2.2.3. ITB Cleaner

1. Open the front cover.
2. Loosen a screw. (Note : Less than torque 6kgf.cm)

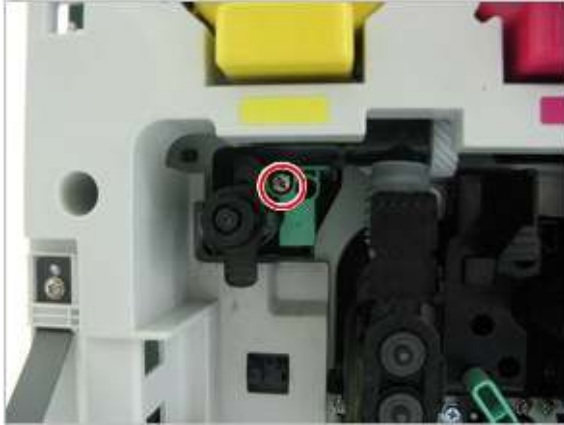

3. Release the ITB Cleaner.



3.2.2.4. ITB Unit


1. Remove the ITB cleaner. (Refer to 3.2.2.3)
2. Open the side cover.




4. Release the left stopper.



3. Release the right stopper.

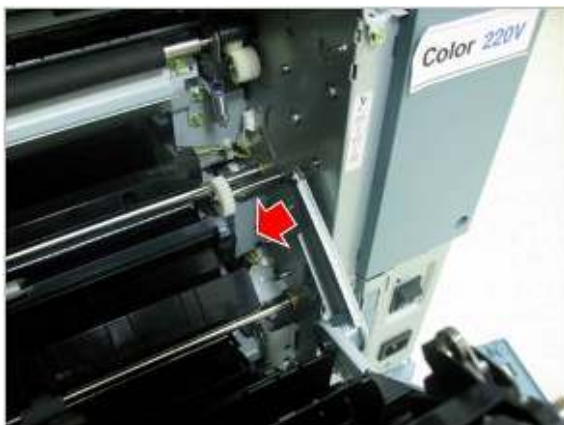

5. Unplug the ITB connector from the right. Pull the holder to the front.

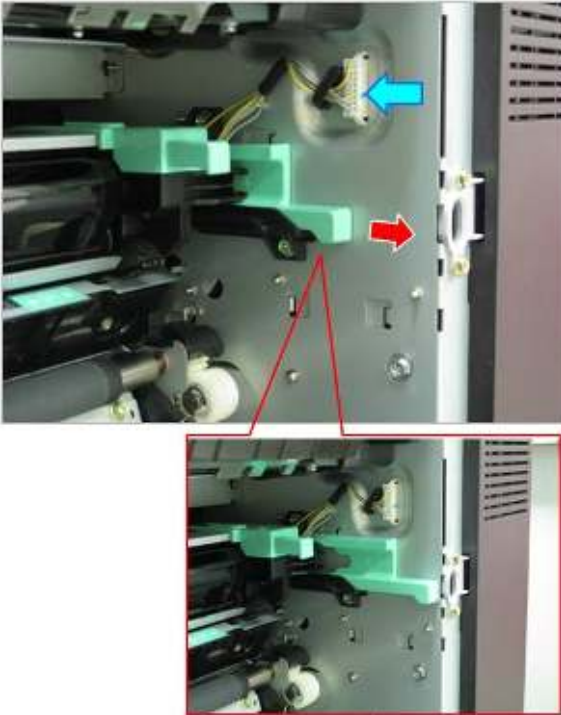


6. Remove 2 screws.



7. Pull out the ITB unit until the green handles are shown totally. Change your grip and release the ITB unit perfectly.



8. Before install the new ITB unit, align the CAM position. (Align 2 arrows)

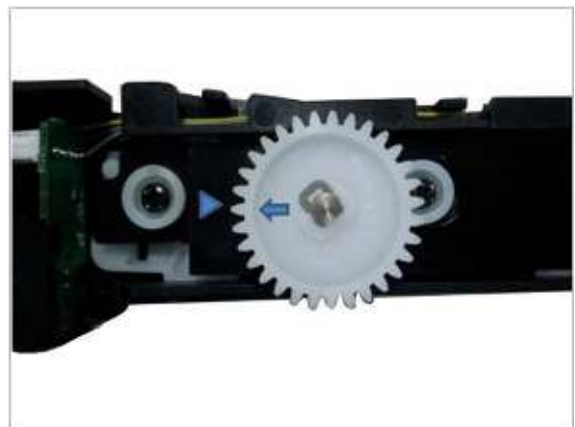

9. Install the new ITB unit. And then install the ITB cleaner. (Note : Less than torque 6kgf.cm)

3.2.2.5. Fuser unit

1. Open the side cover.
2. Remove the fuser unit after removing 2 screws.



3.2.2.6. Transfer roller

1. Open the side cover.
2. Hold and release the both sides of the transfer roller.




3.2.2.7. Pick-Up_Reverse_Forward roller

1. Open the side cover. Remove 2 cassettes.



2. Lift small tap, remove the pick up / reverse/ forward roller.

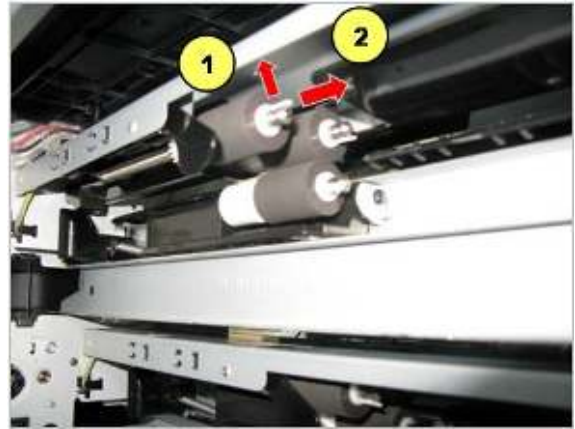


NOTE

When replacing these rollers, it is recommended that you replace all three rollers at the same time.


3. Enter SVC mode. Select the menu. (Information > Supply Status > Field Replacement Unit). Push “Reset” button to reset the current count to 0.

3.2.2.8. MP Pick up_Reverse_Forward roller

1. Open the MP tray. Remove the cover[A].

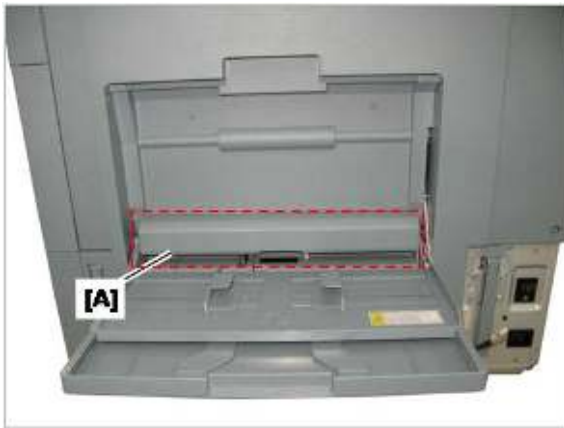

2. Remove the cover [B].

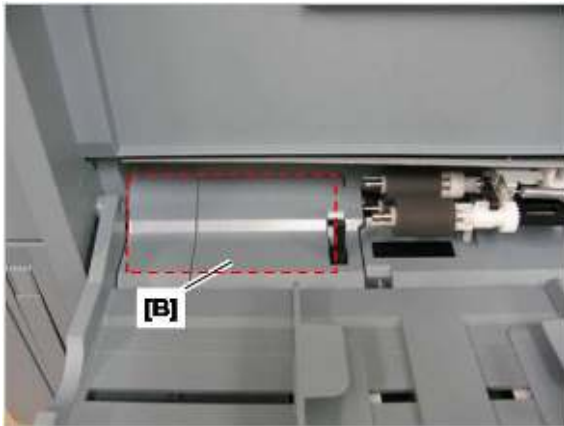

3. Lift small tap, remove the MP pick up / reverse/ forward roller.



NOTE

When replacing these rollers, it is recommended that you replace all three rollers at the same time.

4. Enter SVC mode. Select the menu. (Information > Supply Status > Field Replacement Unit). Push “Reset” button to reset the current count to 0.

3.2.2.9. DADF Pick-up roller Assy


1. Open the DADF-open cover.
2. Remove the spring.
3. Remove the DADF Pick-up roller Assy after releasing 2 hooks.



4. Enter SVC mode. Select the menu. (Information > Supply Status > Field Replacement Unit). Push “Reset” button to reset the current count to 0.

3.2.2.10. DADF friction pad

1. Open the DADF-open cover.
2. Remove the DADF friction pad.

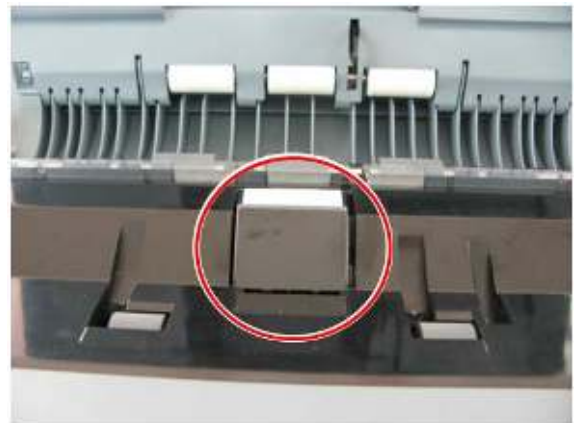

3.3. Replacing the main SVC part

3.3.1. Left Cover

1. Remove the left cover after removing 9 screws.



3.3.2. Rear Cover

1. Remove the rear cover after removing 10 screws.



3.3.3. HVPS board

1. Remove the left cover. (Refer to 3.3.1)
2. Remove 4 screws. Release the middle hook.
3. Unplug the connector. Remove the HVPS board.



3.3.4. Temperature Sensor

1. Remove the left cover. (Refer to 3.3.1)
2. Remove the sensor after unplugging the connector.



3.3.5. LSU

1. Remove the left cover. (Refer to 3.3.1)
2. Remove the HVPS board. (Refer to 3.3.3)
3. Remove the bracket after removing 2 screws.



4. Remove 2 screws. Take out the LSU slowly.



CAUTION

If you yank the LSU, the LSU harness may be damaged.

5. Unplug the LSU harness from the left. Remove the LSU.



3.3.6. OPE Unit


1. Remove the OPE overlay cover.



2. Remove the sticker covering the screw hole.



3. Remove the cover[A] after removing 2 screws.

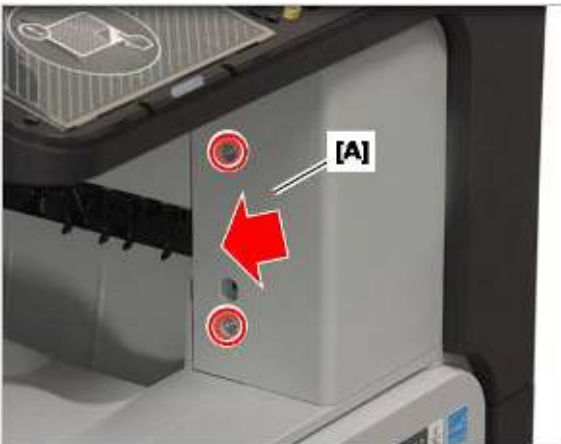


4. Remove 2 screws from the front.



5. Open the side cover. Remove 2 screws.



6. Remove the cover[B].

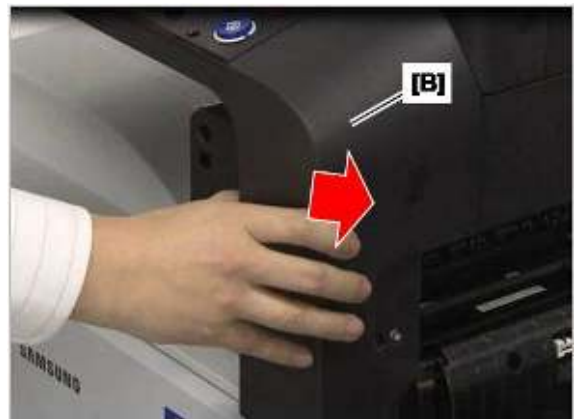

7. Open the DADF unit. Remove 5 screws.



8. Remove the cover [C].



9. Remove 5 screws.




10. Lift up the OPE unit.



11. Turn the OPE unit. Unplug all connectors connecting the machine.




12. Unplug all connectors on OPE Main PBA. Remove 4 screws. And then remove the OPE Main PBA.

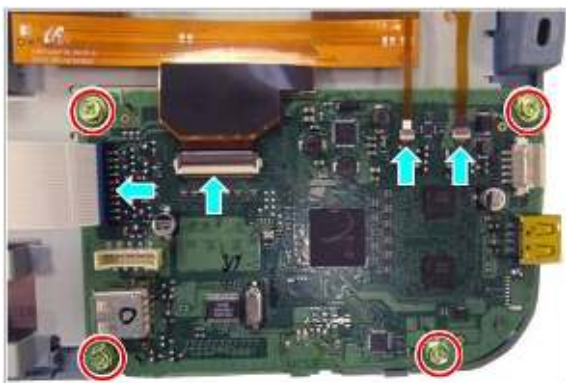

CAUTION

Be careful not to damage flat cables.

13. Remove 7 screws. Lift up the OPE bracket.

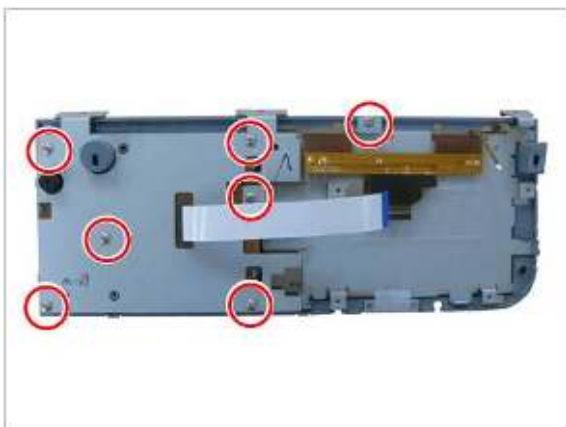

14. Remove the LCD.



15. Remove the OPE key PBA.



3.3.7. Main board

1. Remove the rear cover. (Refer to 3.3.2)
2. Unplug all connector on the main board.
3. Remove the main board after removing 9 screws.



4. Install the new main board and insert the MSOK and memory.




NOTE

When inserting the MSOK, be careful its direction.



CAUTION

When re-assembling the main board, be careful of swapping the MAIN BLDC connector[A] and DCF connector[B].

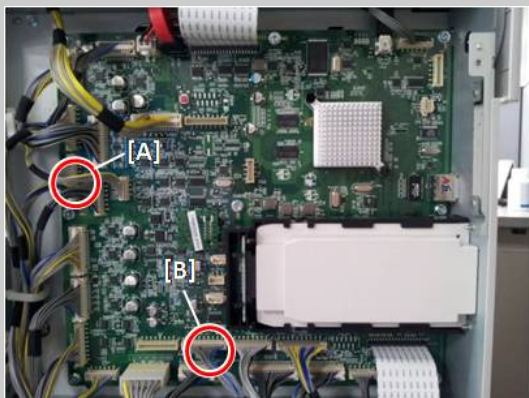


3.3.8. SMPS Fan

1. Remove the rear cover. (Refer to 3.3.2)
2. Unplug the connector. Remove 1 screw. And then remove the SMPS fan.



3.3.9. SMPS board

1. Remove the rear cover. (Refer to 3.3.2)
2. Unplug the connector. Remove 4 screws. And then remove the SMPS cover.

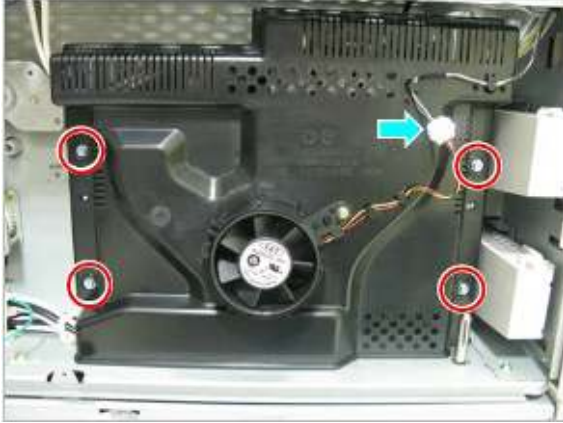

3. Unplug all connectors on SMPS board. Remove 4 screws. And then remove the SMPS board.




CAUTION

When replacing the SMPS board, please wait 5 minutes after unplugging the power cord, then replace it. You can get a shock by the electric discharge.

3.3.10. FDB board

1. Remove the rear cover. (Refer to 3.3.2)
2. Unplug the connector. Remove 4 screws. And then remove the SMPS cover.

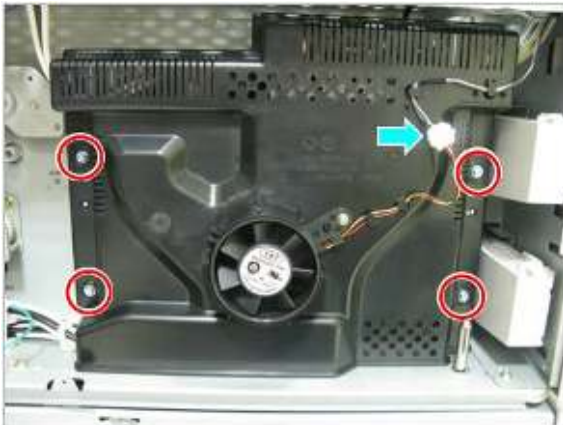

3. Unplug all connectors on FDB board. Remove 4 screws. And then remove the FDB board.




CAUTION

When replacing the FDB board, please wait 5 minutes after unplugging the power cord, then replace it. You can get a shock by the electric discharge.

3.3.11. Fuser-Duct Fan

1. Remove the rear cover. (Refer to 3.3.2)
2. Unplug the connector. Remove 3 screws. And the remove the Fuser-Duct.

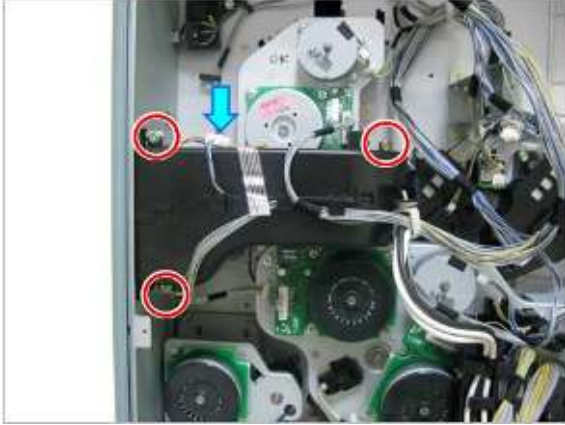

3. Release the fan by separating the Fuser-Duct.



CAUTION

When assembling the new fan, be careful not to change the fan direction. The label must be shown on the outside.


3.3.12. Main board shield

1. Remove the rear cover. (Refer to 3.3.2)
2. Unplug all connectors on the main board.
3. Remove the main board shield after removing 4 screws.




3.3.13. Main Drive unit

1. Remove all developer units and drum units.
2. Remove the rear cover. (Refer to 3.3.2)
3. Unplug all connectors connecting the main drive unit.
Release the harness from the holder.
4. Remove the main drive unit after removing 9 screws.

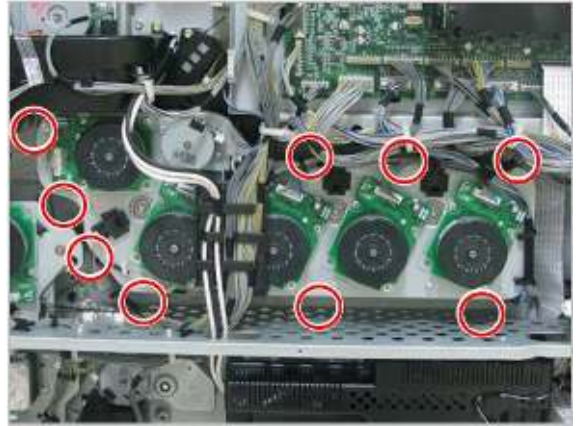


3.3.14. Fuser/Exit Drive unit

1. Remove the rear cover. (Refer to 3.3.2)
2. Unplug 2 motor connectors. Remove 3 screws. And then remove the Fuser/Exit Drive unit.

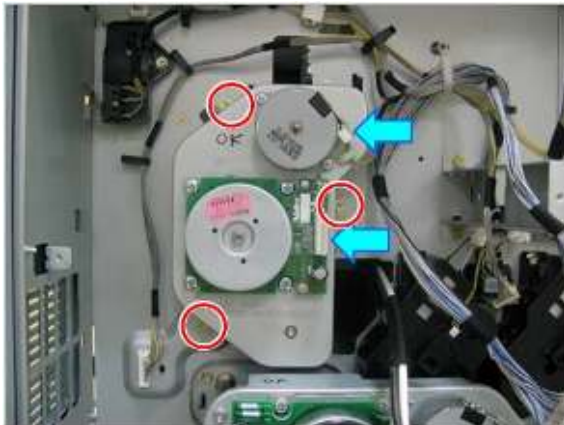


3.3.15. Pick-up Drive unit

1. Remove the rear cover. (Refer to 3.3.2)
2. Unplug the connector. Remove 3 screws. And then Pick-up Drive unit1.
3. Unplug the connector. Remove 3 screws. And then Pick-up Drive unit2.

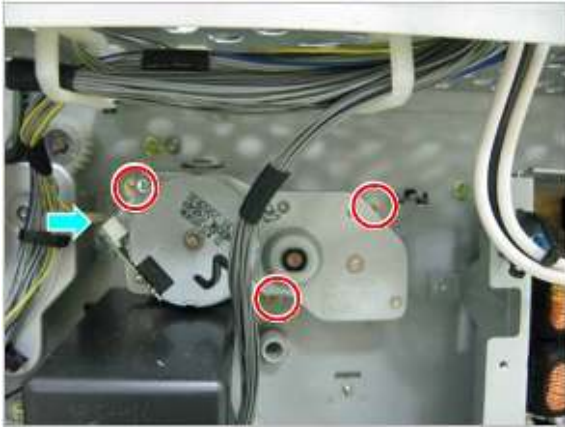


3.3.16. Feed Drive unit

1. Remove the rear cover. (Refer to 3.3.2)
2. Unplug the connector. Remove 3 screws. And then remove the Feed Drive Unit.

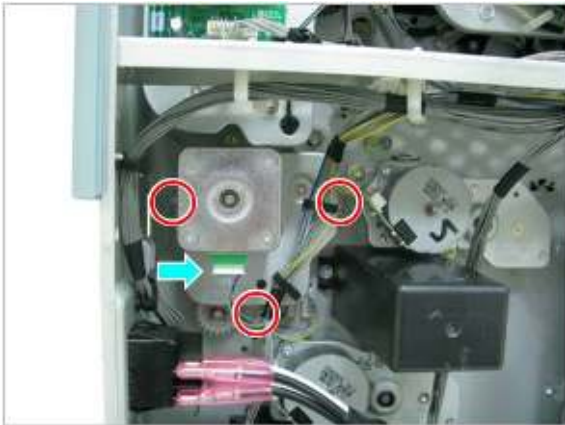


3.3.17. Regi_MP Drive unit

1. Remove the rear cover. (Refer to 3.3.2)
2. Unplug the connector. Remove 3 screws. And the remove the Regi_MP Drive Unit.

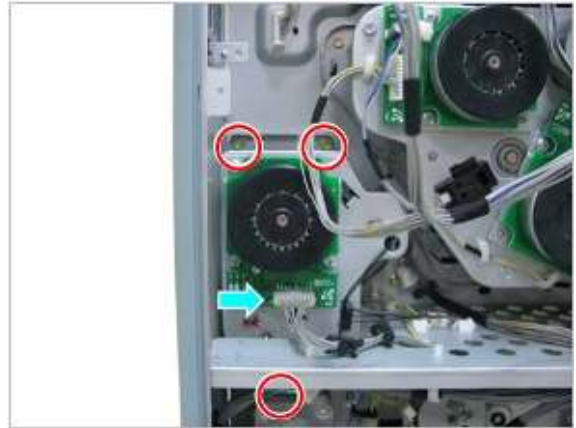

3.3.18. Toner Supply Drive unit

1. Remove the rear cover. (Refer to 3.3.2)
2. Remove the Main board shield. (Refer to 3.3.12)
3. Unplug the connector. Remove 2 screws. And then remove the Toner supply drive unit.


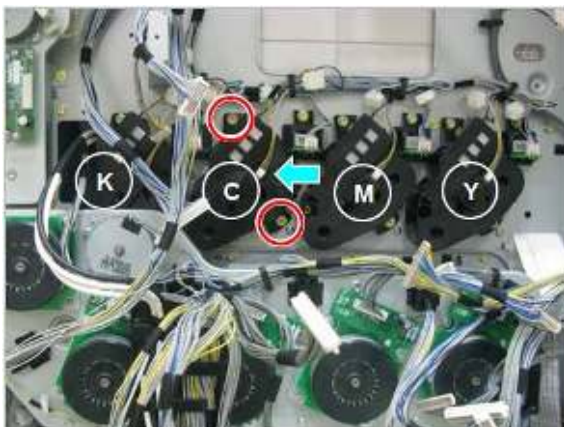


NOTE

- To remove K Toner supply drive unit, first remove the main drive unit.
- The toner supply drive units are exchangeable.


3.3.19. Waste toner container Drive unit

1. Open the front cover. Remove all toner cartridges.
2. Unplug 4 connectors connecting the developer units.
3. Remove the inner cover after removing 8 screws.
4. Unplug the connectors. Remove 2 screws. And then remove the Waste toner container drive unit.

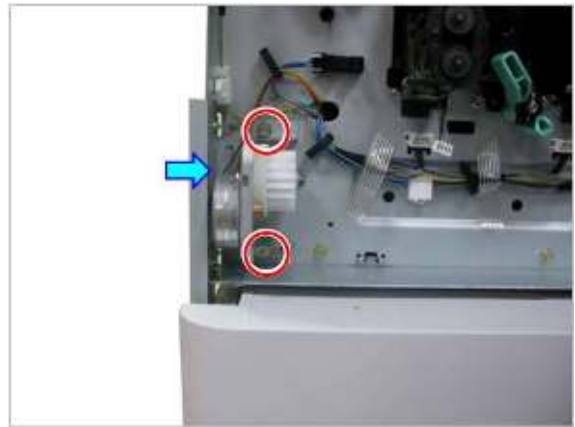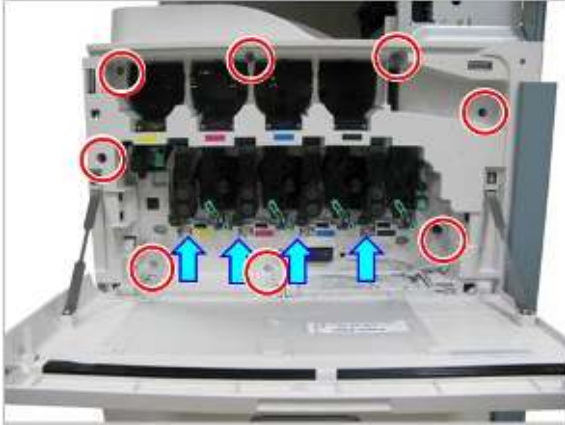

3.3.20. Auto Size sensor

1. Remove all cassettes. See the machine inside.
2. Unplug the connector. Remove 2 screws. And then remove the sensor.

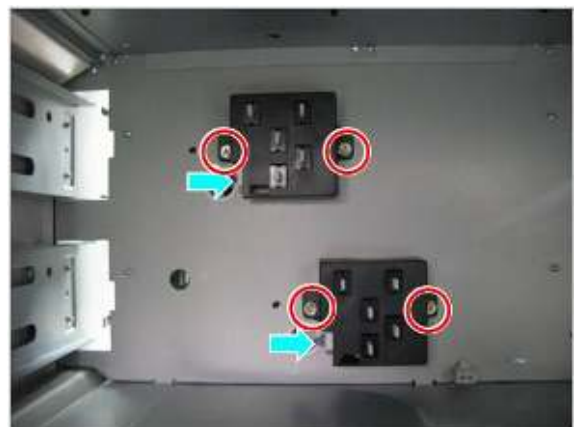

3.3.21. Exit Unit

1. Open the side cover. Unplug the Exit unit connector.



2. Remove the Exit unit after removing 3 screws.



3.3.22. Side Unit


1. Remove the cover [A] after removing 3 screws.



2. Unplug the side unit connector.



3. Release the right stopper.

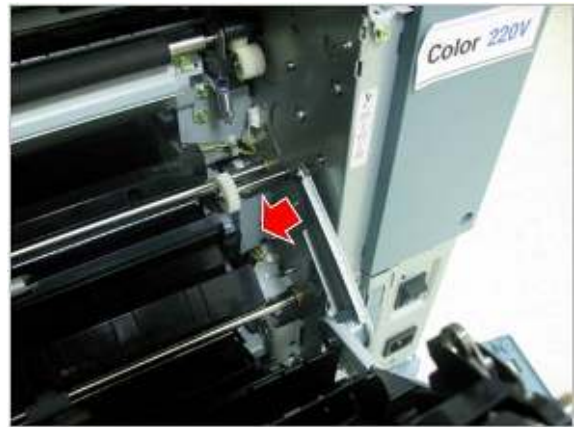

CAUTION

The spring tension for right stopper is strong. When releasing it, be careful not to hurt yourself.

4. Release the left stopper.



5. Remove the Side Unit.



3.3.22.1. Fuser out sensor

1. Remove 2 screws from the both sides. Lift up the Cover-side exit.



2. Remove the Cover-side exit after unplugging the connector.



3. Separate the Cover-side exit after removing 3 screws.



4. Remove the Fuser out sensor after unplugging the connector.




3.3.22.2. Duplex sensor and Curl sensor

1. Remove the transfer roller Assy.



3. Remove the Duplex sensor [A] and Curl sensor [B].

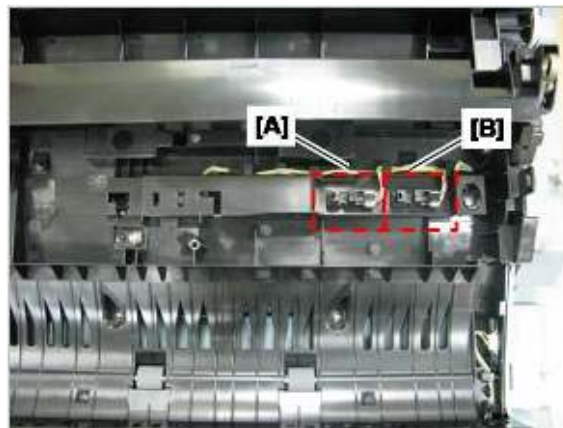


2. Remove 1 screw. Turn over the Guide-TR Upper.




3.3.22.3. MP unit

1. Remove the Harness-Cover [A] after removing 2 screws.

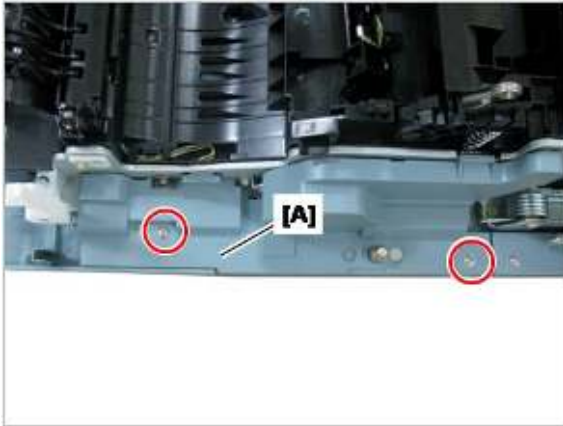

2. Remove the Harness-Cover Lower [B] after removing 2 screws.

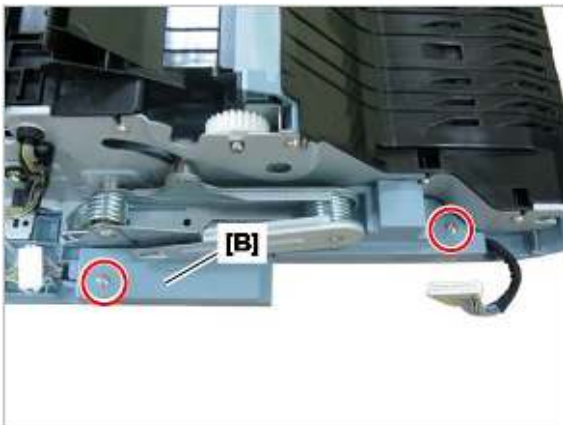

3. Remove 1 screw. Stand the stopper.



4. Remove 3 screws.



5. Remove 1 screw.



6. Remove 2 screws.




7. Remove 4 screws.




10. Remove 2 screws.



8. Remove the Cover-Side Guide Feed[C].

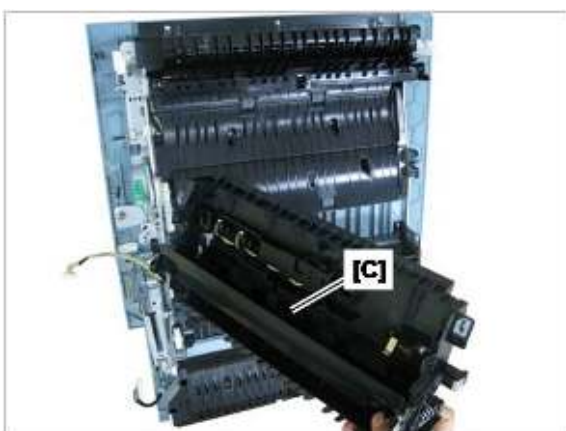

11. Unplug the connectors.

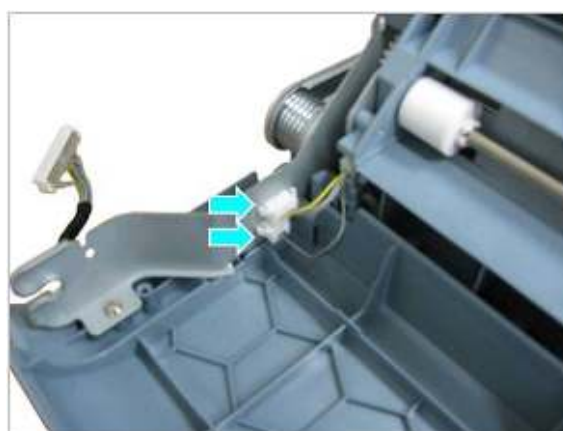

9. Lift up the Cover-Side Duplex Lower.




12. Remove the Cover-MP Front.



13. Release the Linker from the right of the MP tray.




16. Remove the gear [C] after removing the E-ring.

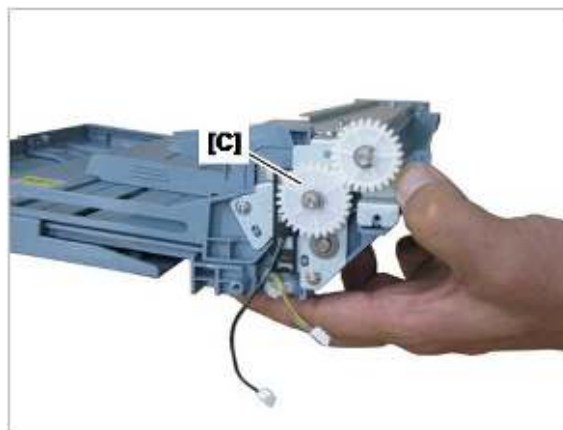

14. Remove the MP Unit.



17. Remove the Bush[D] after removing the E-ring.

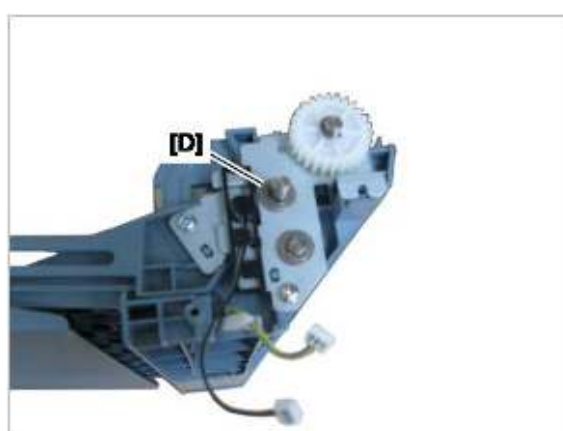

15. Remove the MP-cover base.



18. Remove the Bracket-Solenoid after removing 1 screw.



- 19.** Release the MP bracket pick-up after removing 4 screws.



- 20.** Remove the MP solenoid after removing 2 screws.



3.3.23. Fuser unit

1. Open the side cover.



2. Remove the fuser unit after removing 2 screws.




3. Remove the Frame-Fuser Front[A] after removing 3 screws.




4. Remove the Frame-Fuser Rear[B] after removing 3 screws.




5. Remove the Fuser-Guide Duplex[C] after removing 3 screws.

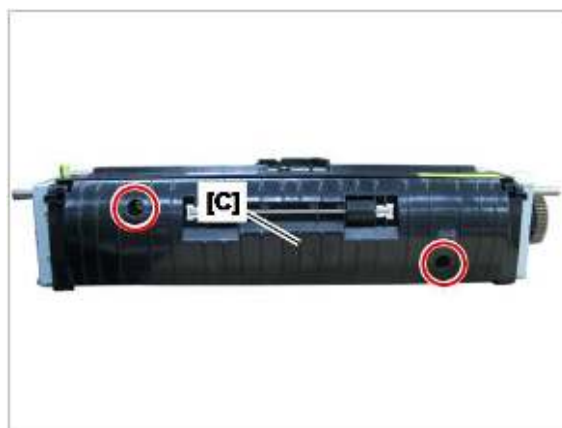

6. Remove the Fuser-Bracket Top after removing 5 screws.

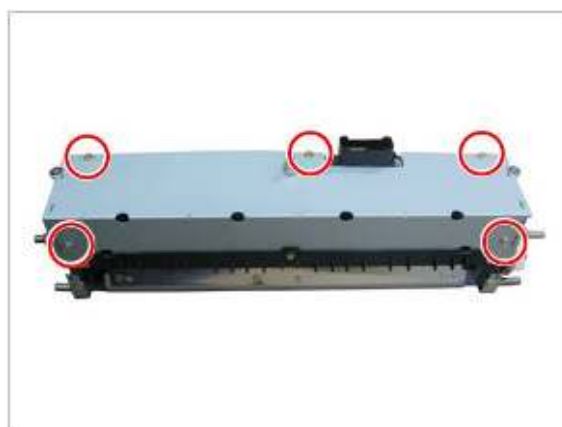


7. Remove 2 screws.

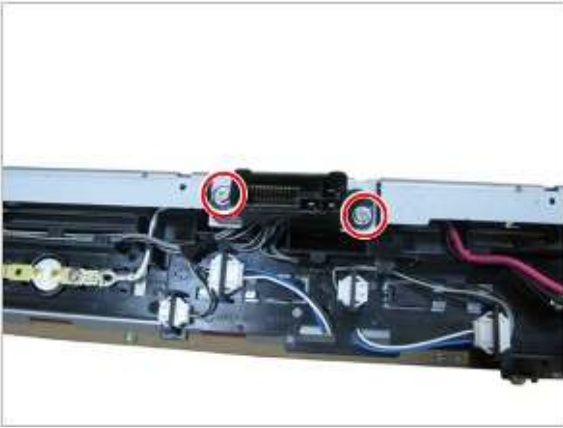


8. Remove 6 screws. Remove the Holder-Bias. And remove the Bracket-Fuser Bottom.



9. Remove 2 screws. Unplug the thermostat connector.

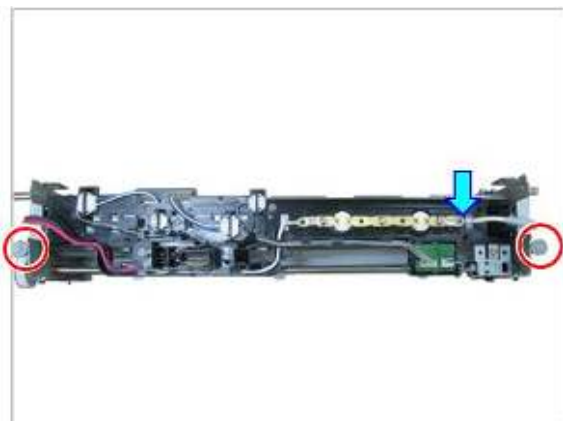


10. Release the pin connector with the tweezers.

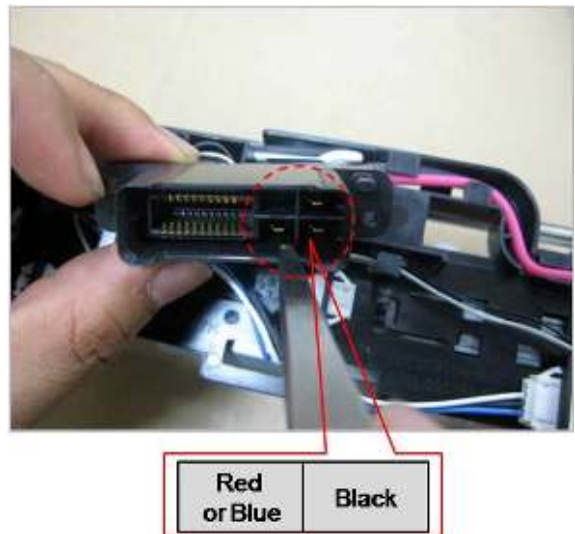


CAUTION

- When reassembling the pin connector, make sure the colors are positioned as shown above.
- Check the connector assembly status. If there is a wrong connection, a operation error or a fire can happen.
- Be careful not to bend the connector.


11. Lift up the thermostat holder Assy.

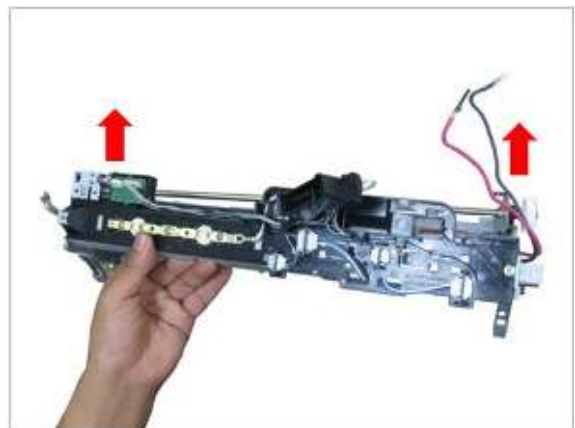

12. Remove 3 screws. Lift up and release the thermostat holder.

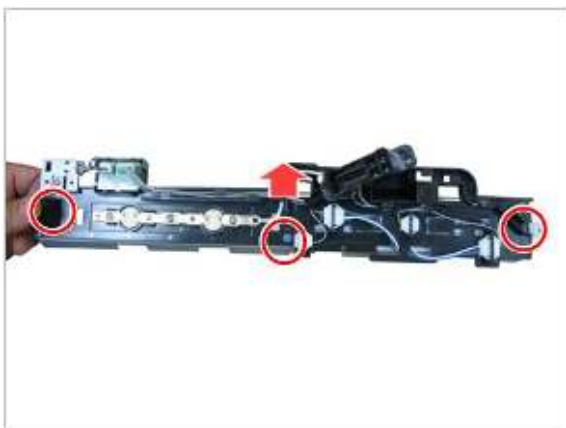


13. Release the NC sensor.

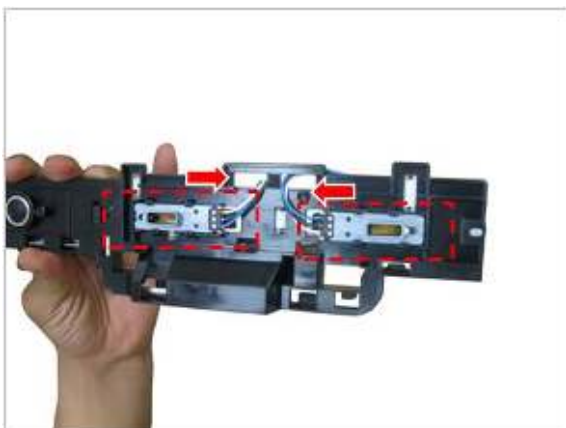

14. Remove 1 screw.



15. Straighten the bent thermostat harness.

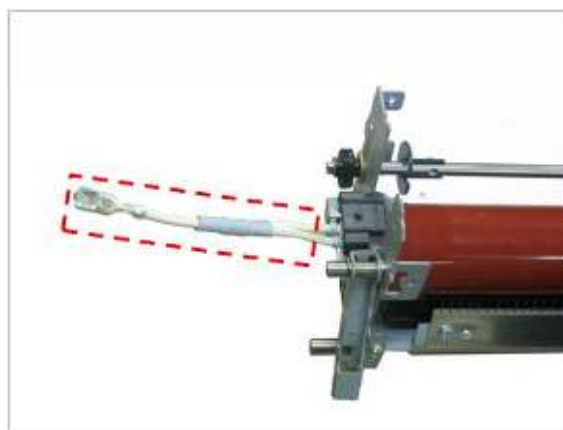

16. Take out the halogen lamp carefully.




3.3.24. Pick-up Unit and sensor

1. Remove the Side Unit. (Refer to 3.3.22)
2. Remove the Pick-up Unit1,2 after removing 2 screws.




3. Release the sensor after unplugging the connector. (Empty sensor[A], Level sensor[B])

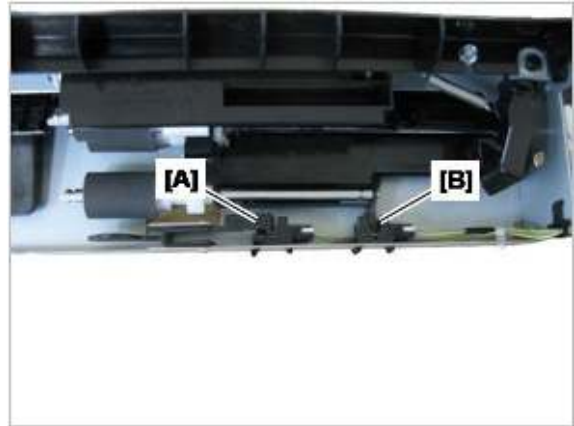

3.3.25. Feed sensor

1. Remove the Side Unit. (Refer to 3.3.22)
2. Remove the sensor cover after removing 2 screws.

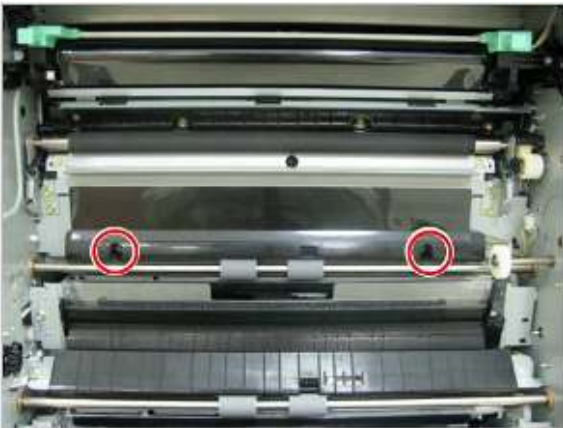


4. Remove the Feed sensor after unplugging connector.




3. Release the sensor holder after removing 1 screw.

3.3.26. Feed Unit

1. Remove the Side Unit. (Refer to 3.3.22)
2. Remove the Feed Unit[A] after removing 1 screw.
4. Remove the feed sensor after unplugging the connector.

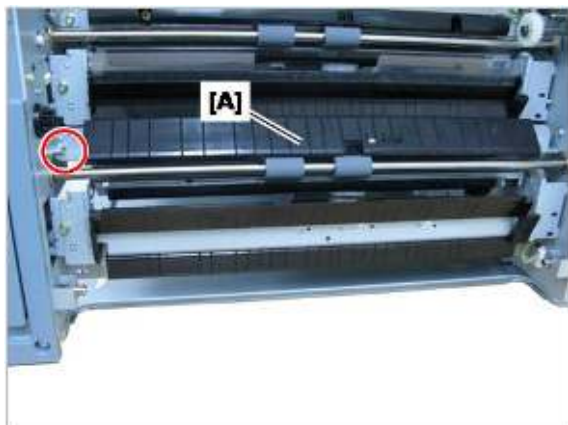

3. Remove the bracket[B] after removing 3 screws.

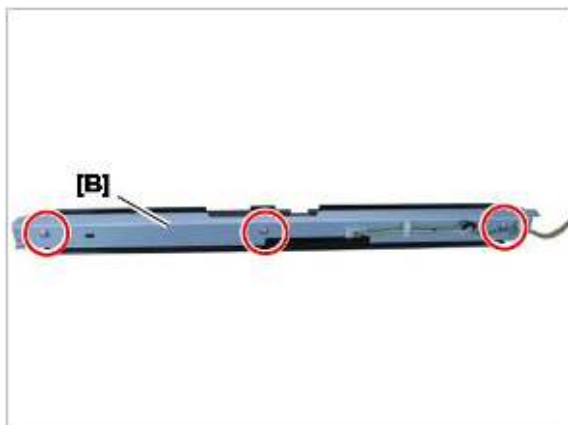

3.3.27. Registration Unit

1. Remove the Side Unit. (Refer to 3.3.23)
2. Remove the Regi.unit [A] after removing 2 screws.
4. Remove the Regi. sensor after unplugging the connector.




3. Remove the bracket[B] after removing 3 screws.



3.3.28. DADF Unit

1. Remove the DADF connector cover.

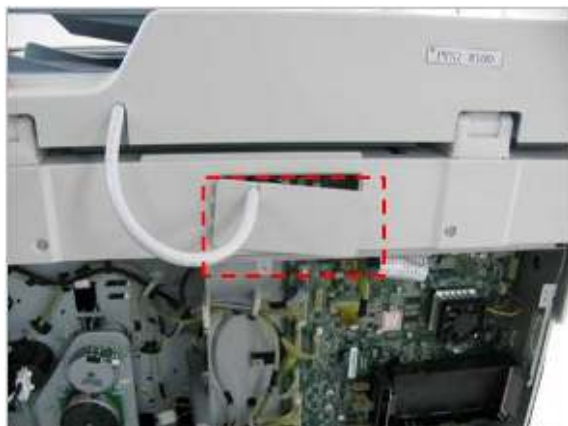

2. Remove 1 screw. Unplug the connector.




3. Lift up the DADF unit and release it to diagonal direction.



3.3.28.1. DADF Cover


1. Open the Stacker and Cover-Open. Remove 2 screws.

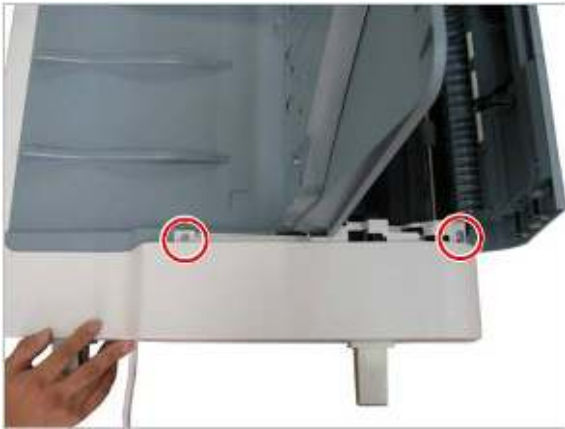

4. Remove the Cover-Deco F.



2. Remove the Cover-Side R by releasing the bottom hooks.

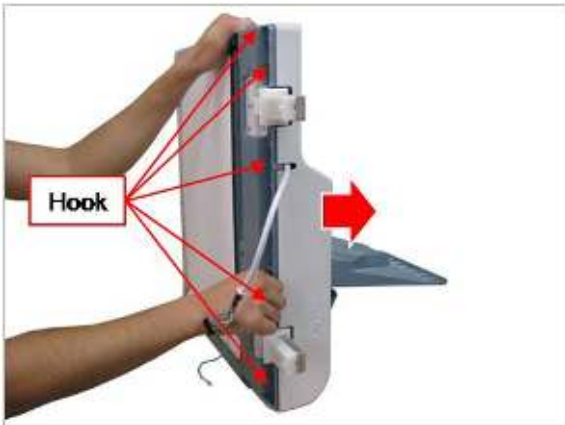

5. Remove 2 screw.



3. Remove 3 screws.



6. Release the hook from the bottom.



7. Remove the Cover-Side F.



3.3.28.2. DADF Open Cover

1. Remove the DADF cover. (Refer to 3.3.28.1)
2. Release the DADF Open Cover by pushing it to the direction of arrow.



3.3.28.3. DADF Stacker

1. Remove the DADF cover. (Refer to 3.3.28.1)
2. Release the Stacker by pushing it and its holder in the opposite direction.



3.3.28.4. DADF main board

1. Remove the Cover-Side R. (Refer to 3.3.28.1)
2. Unplug all connectors on the board.
3. Remove the DADF main board after removing 2 screws.



3.3.28.5. DADF motor_solenoid_clutch

1. Remove the DADF cover. (Refer to 3.3.28.1)
2. Unplug all connectors on the DADF board.




3. Remove 1 screw.




4. Remove 2 screws.




5. Lift up and release the DADF Frame Main after removing 2 screws.

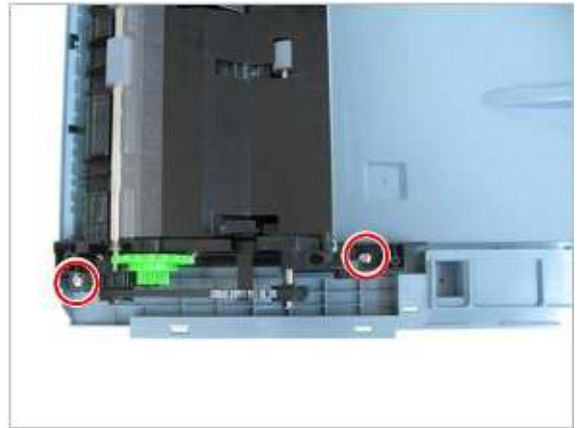


6. Release the harness holder after removing 2 screw.

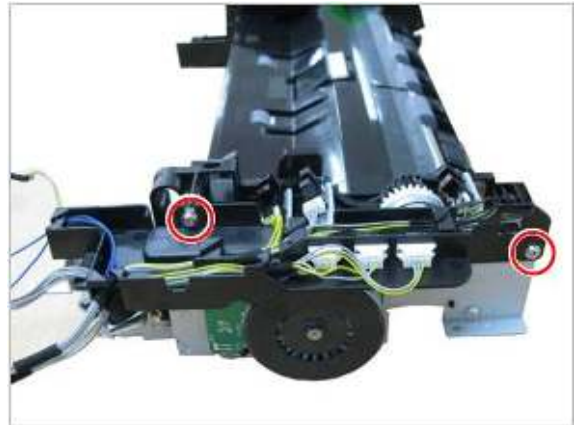

7. Unplug the connector. Remove 4 screws. And release the motor.

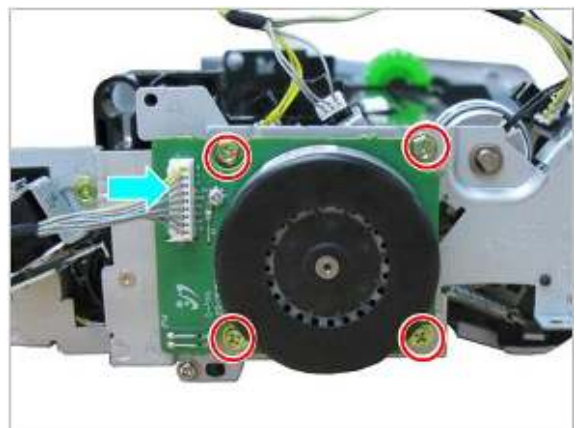


8. Release the solenoid after removing 2 screws.

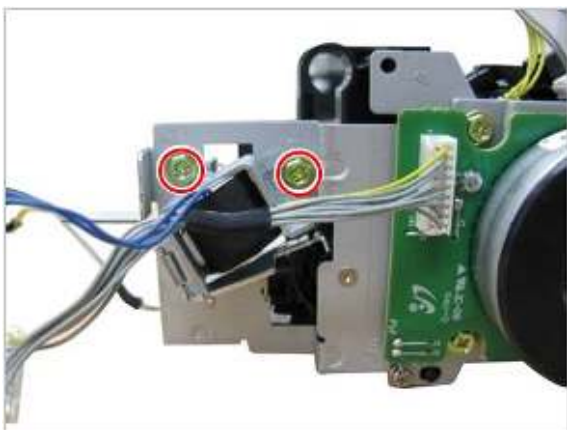

10. Remove the clutch.




9. Remove 2 springs. Remove 2 screws. And release the bracket.

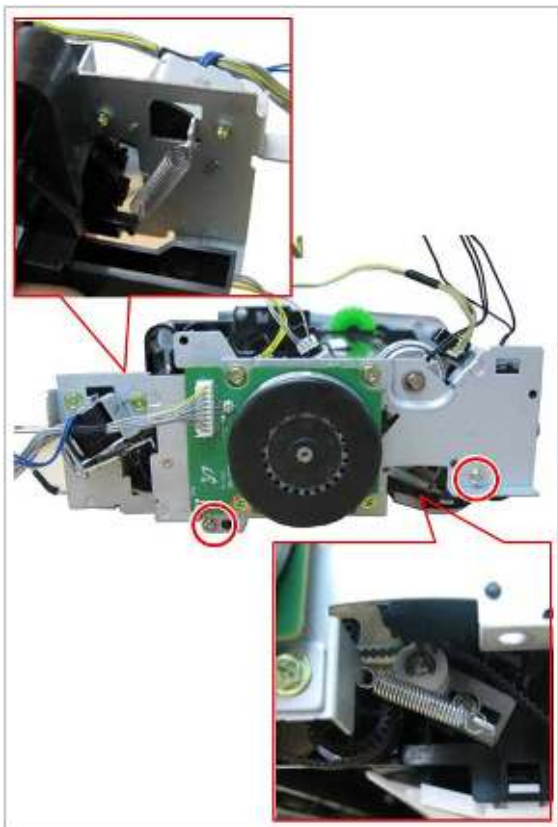

3.3.28.6. DADF Regi_Cover_Detect sensor

1. Release the corresponding sensor after unplugging connector.

- A : Detect sensor
- B : Cover sensor
- C : Registration sensor

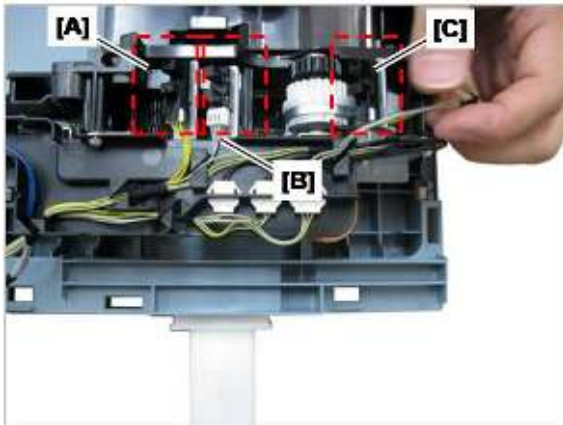

3.3.28.7. DADF Exit Idle sensor

1. Remove the motor bracket. (Refer to 3.3.28.4)
2. Remove the sensor after unplugging the connector.




3.3.28.8. DADF Exit sensor

1. Remove the DADF Frame-Main. (Refer to 3.3.28.4)
2. Remove the sensor after unplugging the connector.



3.3.28.9. DADF Length_Width sensor


1. Remove the DADF Stacker. (Refer to 3.3.28.3)
2. Release the sensor cover after removing 3 screws.
3. Remove the defective sensor after unplugging the connector.
 - A, B : Paper Length sensor
 - C, D, E : Paper Width sensor

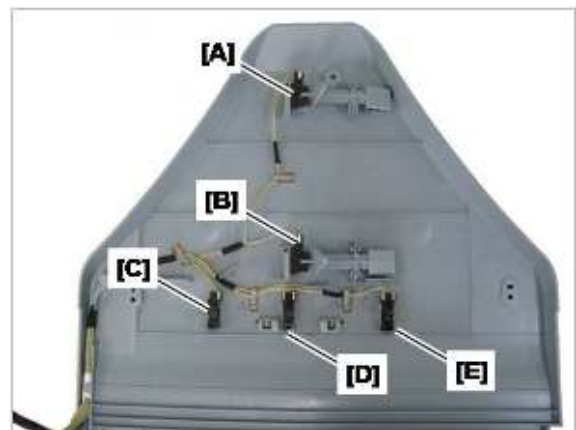

3.3.29. Scanner Unit


3.3.29.1. Scanner joint board

1. Remove the DADF unit. (Refer to 3.3.28)
2. Remove the Scan-Rear cover after removing 7 screws.
3. Unplug all connector. Remove 2 screws. And release the scanner joint board.

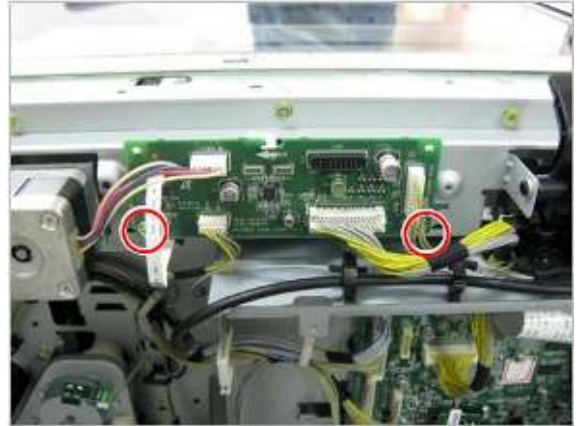

3.3.29.2. Scan glass

1. Open and stand the DADF unit at 90 degree angle.
2. Remove 5 screws.

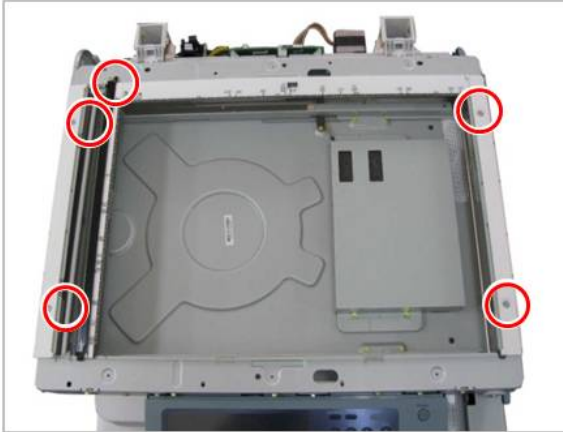

3. Remove the COVER-GLASS and ADF GLASS.




4. Lift up and release the scan glass.



3.3.29.3. APS sensor


1. Remove the scan glass. (Refer to 3.3.29.2)
2. Remove the align cover after removing 4 screws.

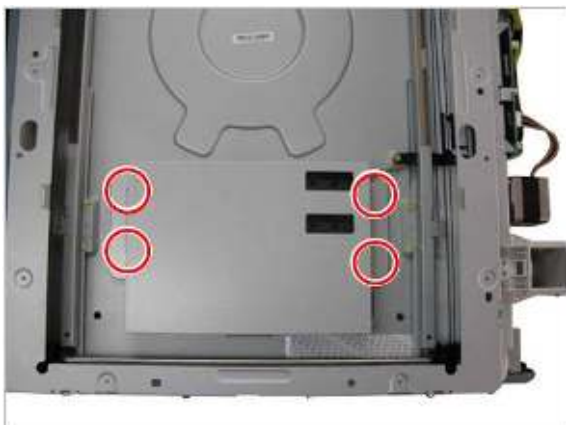

3. Remove 1 screw. Turn over the holder.



4. Release the APS sensor after remove 2 screws.

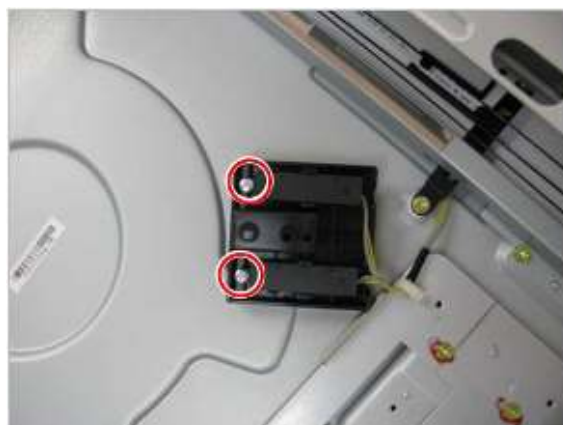

3.3.29.4. FR module

1. Remove the scan glass. (Refer to 3.3.29.2)
2. Remove 2 screws.



NOTE

Before removing the below screw, mark the current gradation position to tighten the screw in the same position.



3. Release the FR module.



4. Unplug the harness.



3.3.29.5. Scanner Assy

1. Remove the DADF unit and OPE unit. (Refer to 3.3.7 and 3.3.28)
2. Unplug all connectors on the main board.



3. Remove 3 screws from the left.



4. Remove 2 screws from the right.



5. Lift up and release the scanner Assy.




3.3.30. Side Cover Open Switch

1. Remove the rear cover. Remove 1 screw securing the sensor.




2. Remove the micro-switch.

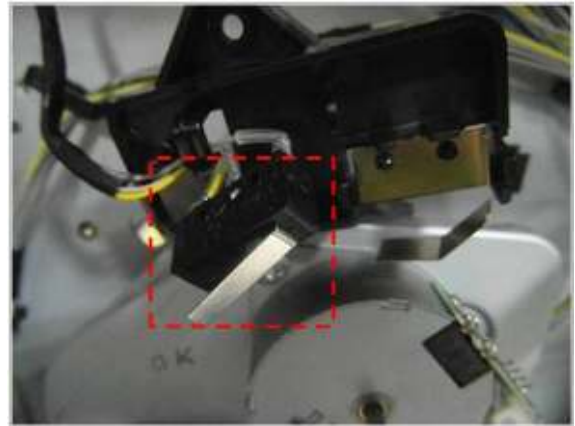


3.3.31. Front Cover Open Switch

1. Remove the COVER FRONT TOP[A] and COVER FRONT TOP DECO[B]. (Refer to 3.3.6 OPE unit)

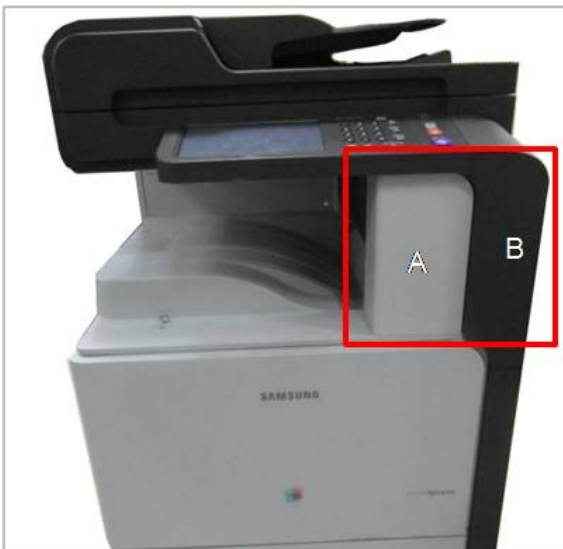

4. Remove the inner cover.

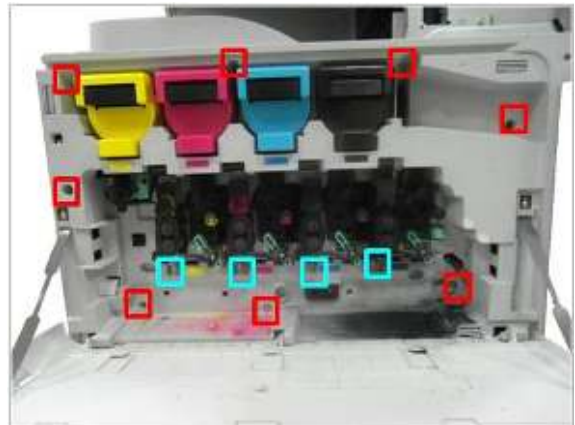

2. Remove all toner cartridges.
3. Unplug 4 connectors and 8 screws.

5. Remove the cover open switch.



3.3.32. Replacing the HDD

1. Remove the screw cover sheet.



2. Remove the Exit-Cover [B].



3. Remove the COVER-EXIT REAR [C] after removing 5 screws.



4. Remove 4 screws. Unplug the cable. And remove the HDD Assy.




5. Install the new HDD Assy.

3.3.33. DCF (Double Cassette Feeder)

3.3.33.1. DCF main board

1. Remove the Bracket Rear Cover after removing 6 screws.

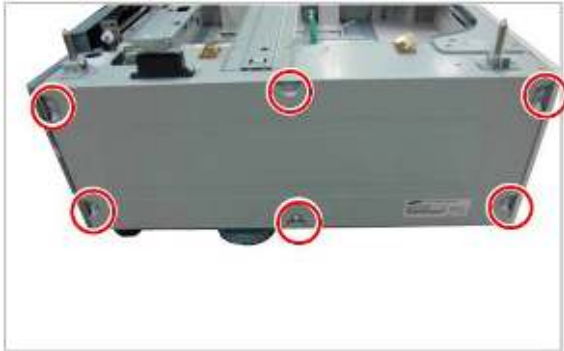


2. Unplug all connectors. Remove 4 screws. And release the DCF main board.




3.3.33.2. DCF Feed Motor


1. Remove the Bracket Rear Cover after removing 6 screws.

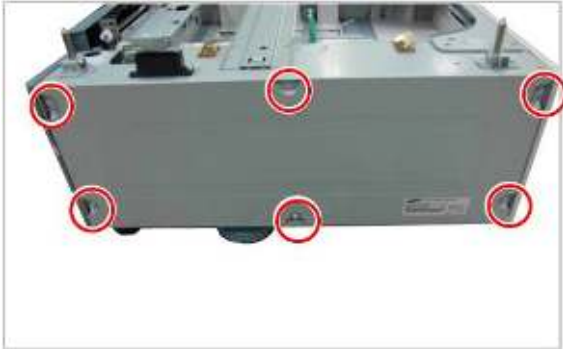

2. Unplug the connector. Remove 3 screws. And release the Feed Drive unit.

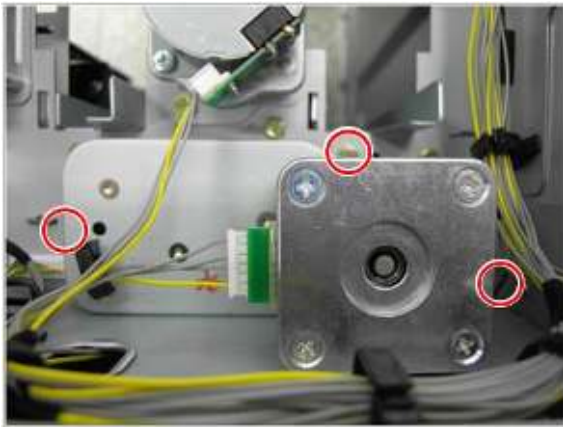

3. Remove 3 E-rings and 3 gears. Remove 2 screws. And release the feed motor.

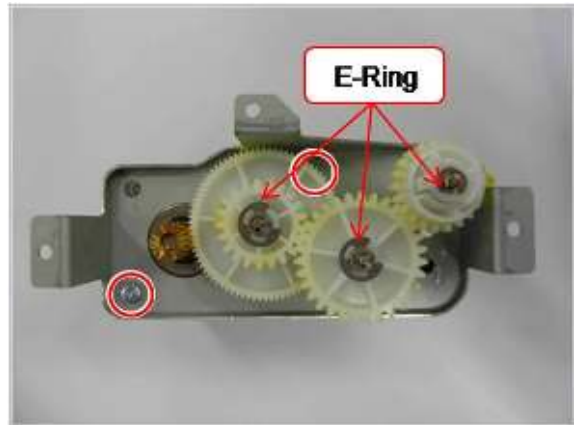

3.3.33.3. DCF Pick Up Motor

1. Remove the Bracket Rear Cover after removing 6 screws.



2. Unplug the pick up motor connector. Remove 2 screws. And release the DCF pick up motor.




3.3.34. Finisher

3.3.34.1. Finisher Main Motor

1. Remove the rear cover after 3 screws.



3. Remove 2 screws.

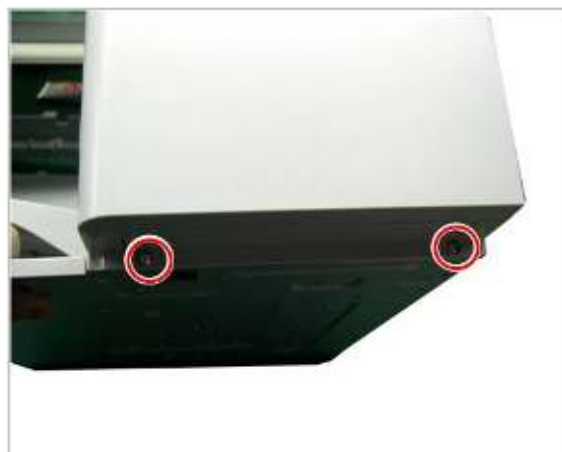

4. Remove the jam cover.



2. Remove 2 screws.




5. Remove 5 screws



6. Remove the Top-Tray.

**NOTE**

When reassembling the Top-Tray, check that the suppresser is in right position.

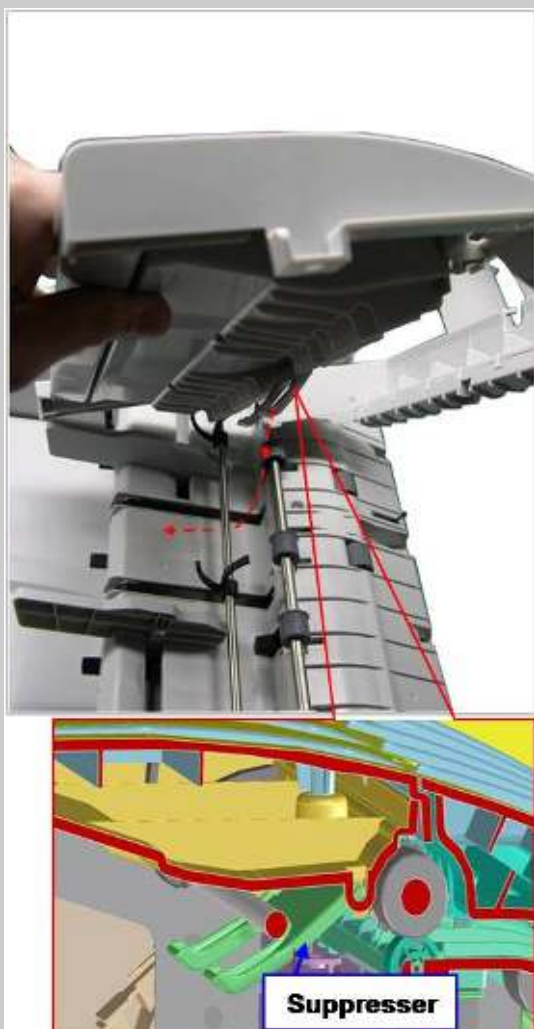


7. Remove the drive gear after removing the E-ring.




8. Release the exit roller.



9. Remove the Bottom-Guide after removing 4 screws.

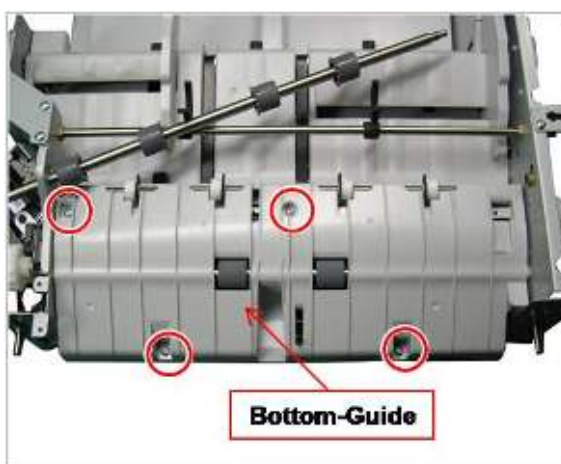

10. Remove the Main motor after removing 2 screws.

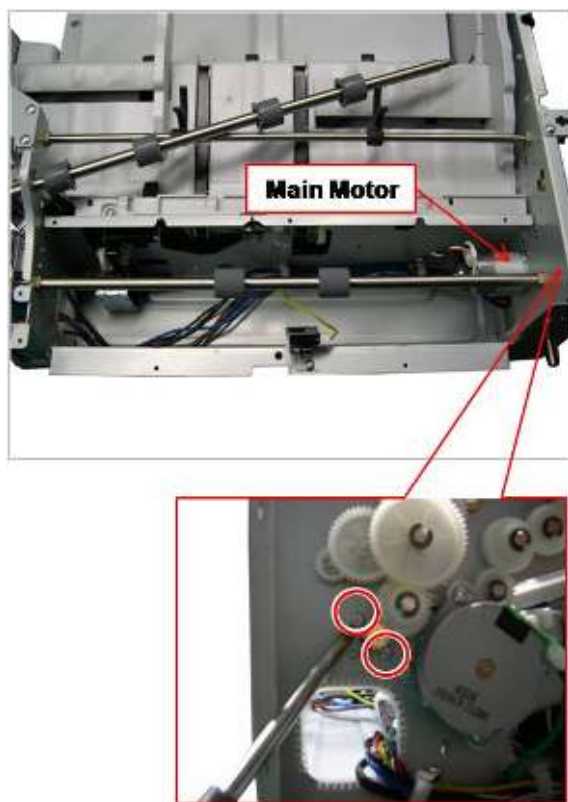

3.3.34.2. Finisher Board

1. Remove the rear cover after removing 3 screws.



2. Disconnect all cables on finisher board.



3. Remove the finisher board after removing 4 screws.

