

3. Disassembly and Reassembly

3.1 Precautions when replacing parts

3.1.1 Precautions when assembling and disassembling

- * Use only approved Samsung spare parts. Ensure that part number, product name, any voltage, current or temperature rating are correct. Failure to do so could result in damage to the machine, circuit overload, fire or electric shock.
- * Do not make any unauthorized changes or additions to the printer, these could cause the printer to malfunction and create electric shock or fire hazards.
- * Take care when dismantling the unit to note where each screw goes. There are 19 different screws. Use of the wrong screw could lead to system failure, short circuit or electric shock.
- * Do not disassemble the LSU unit. Once it is disassembled dust is admitted to the mirror chamber and will seriously degrade print quality. There are no serviceable parts inside.
- * Regularly check the condition of the power cord, plug and socket. Bad contacts could lead to overheating and fire. Damaged cables could lead to electric shock or unit malfunction.

3.1.2 Precautions when handling PBA

Static electricity can damage a PBA, always use approved anti-static precautions when handling or storing a PBA.

>> Precautions when moving and storing PBA

1. Please keep PBA in a conductive case, anti-static bag, or wrapped in aluminum foil.
2. Do not store a PBA where it is exposed to direct sunlight.

>> Precautions when replacing PBA

1. Disconnect power connectors first, before disconnecting other cables
2. Do not touch any soldered connections, connector terminals or other electronic parts when handling insulated parts.


>> Precautions when checking PBA

1. Before touching a PBA, please touch other grounded areas of the chassis to discharge any static electrical charge on the body.
2. Take care not to touch the PBA with your bare hands or metal objects as you could create a short circuit or get an electric shock. Take extra care when handling PBAs with moving parts fitted such as sensors, motors or lamps as they may get hot.
3. Take care when fitting, or removing, screws. Look out for hidden screws. Always ensure that the correct screw is used and always ensure that when toothed washers are removed they are refitted in their original positions.

3.1.3 Releasing Plastic Latches

Many of the parts are held in place with plastic latches. The latches break easily; release them carefully.

To remove such parts, press the hook end of the latch away from the part to which it is latched.

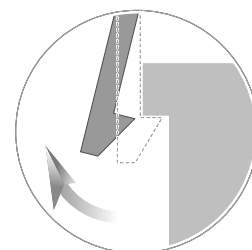

3.2 Replacing a Maintenance Parts


To avoid print quality and paper feed problems resulting from worn parts and to maintain your machine in top working condition, the following parts will need to be replaced after printing the specified number of pages or when the life span of each item has expired.

3.2.1 Fuser Unit

1. Open the Top cover.




3. Lift the fuser unit up while push the green lever.

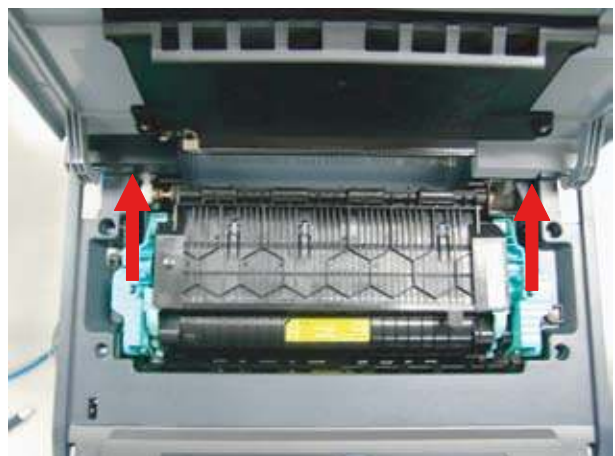

Caution

The fuser is very hot. So turn the printer off and wait until the printer to cool before replacing it.

2. Release the fuser fixer after removing 1 screw.

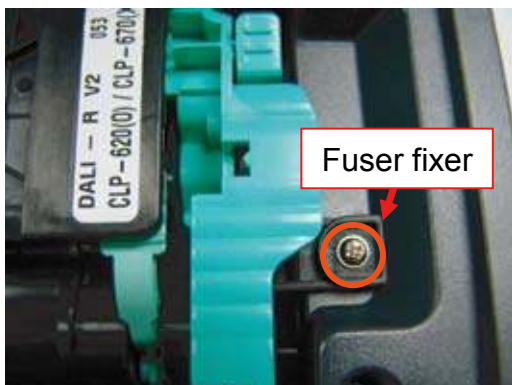

Fuser fixer




3.2.2 Pick up roller

1. Remove the Cassette Unit.



2. Pull the pick up roller to the direction of arrow.

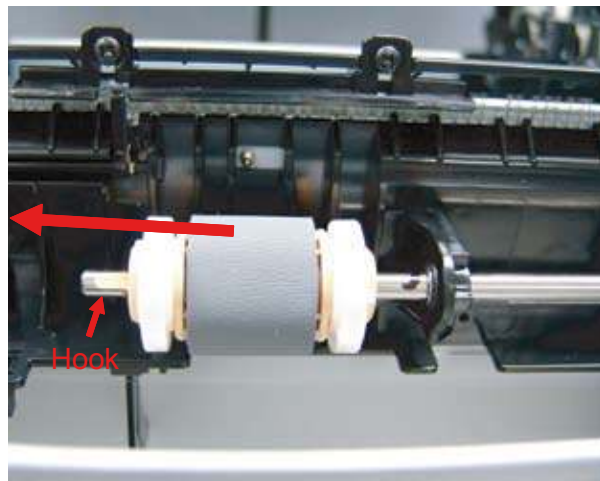

3.3 General Disassembly


3.3.1 Cover Unit

-Before disassembling the cover unit, remove all toner cartridges.

1. Remove 2 screws from the rear.




3. Remove one hook with any tool.

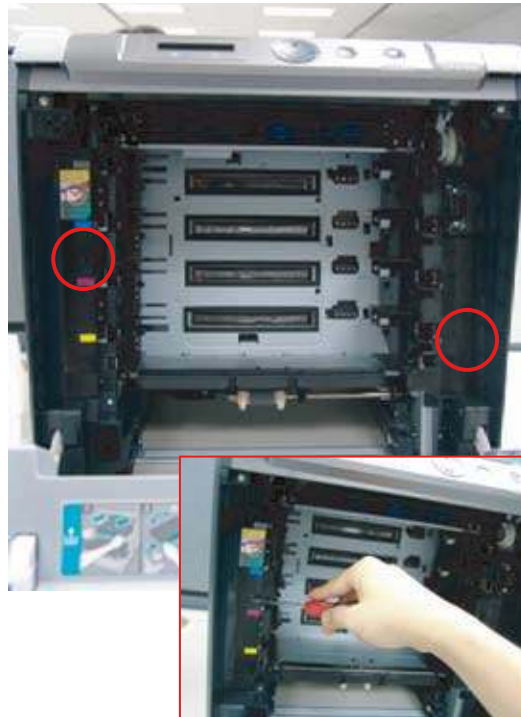

2. Open the front cover. And remove 2 screws.



4. Remove 4 hooks from the bottom of both side cover. And remove the right/left cover.

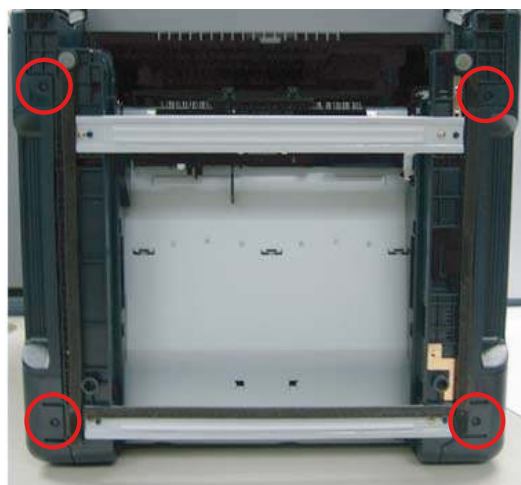


5. Release the rear cover after remove 7 screws.



7. Remove the dummy cover after release the lever.





6. Remove 6 screws.

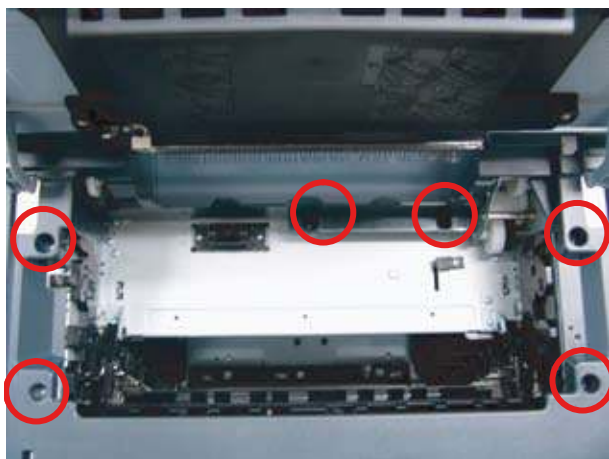

8. Remove 2 screws from both side of top cover.




9. Unplug the 2 connectors.
Lift up and release the top cover.

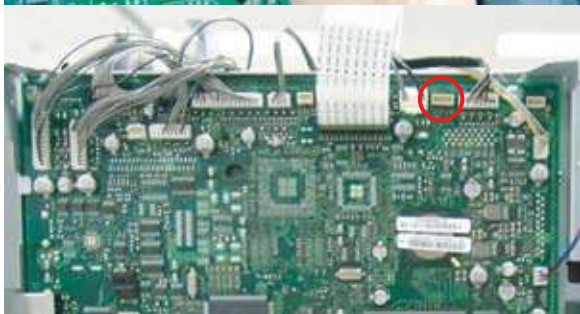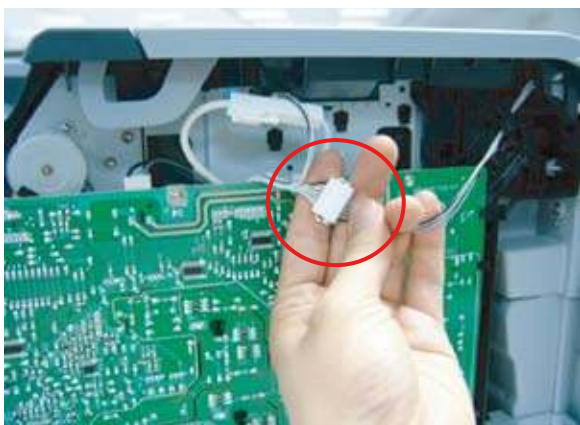

11. Remove 4 screws from both side.




10. Remove the left/right link.

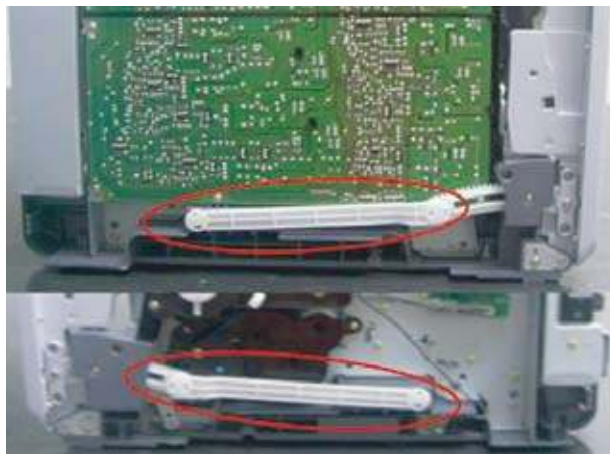

12. Remove the Bracket hinge with any tool after remove one screw.




13. Remove the Damper hinge. (2 EA)
And release the front cover.

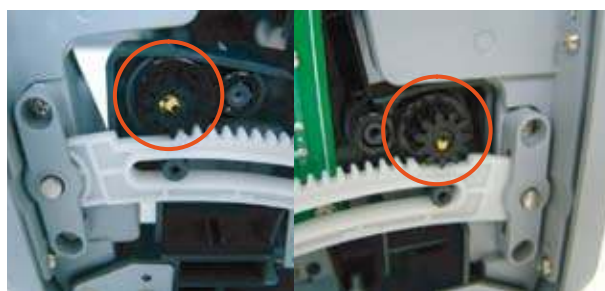

3.3.2 Front Cover Unit


The following method describes how to disassemble the front cover without removing both side cover.

1. Open the Front Cover. Remove 2 screws.
And remove the shaft.

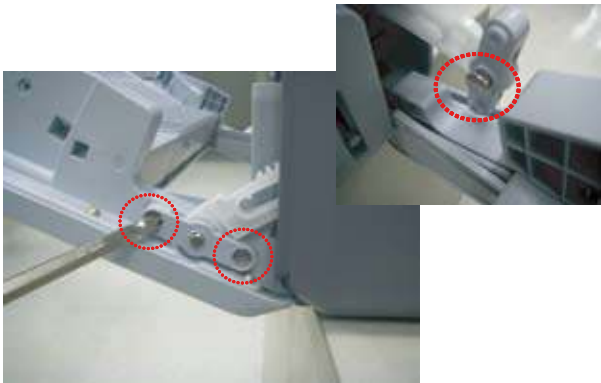


Caution : When reassembling, be careful the shaft head direction.

2. For the opposite side, remove 2 screws and the shaft.

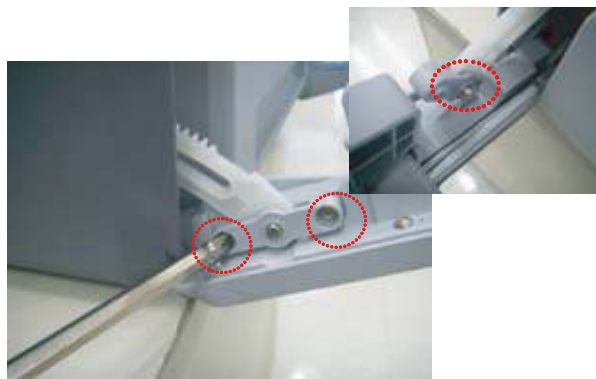

Caution : When reassembling, be careful the shaft head direction.

3. Remove 6 screws from both side.

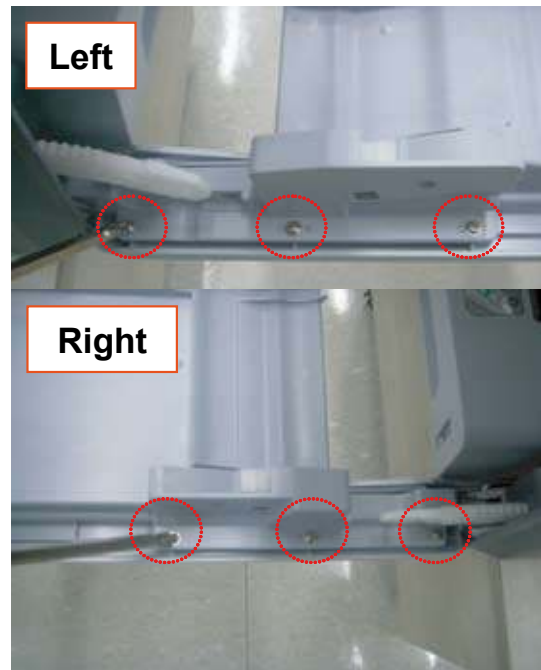

4. Release the Front cover unit.



3.3.3 OPE Unit

- Before disassembling the OPE unit, remove the Top cover.

1. Remove 2 screws from both side of the top cover.




2. Remove 5 screws.




3.3.4 HVPS Board

- Before disassembling the HVPS board, remove all cover.

1. Unplug the harness from the top/bottom of the HVPS Board.

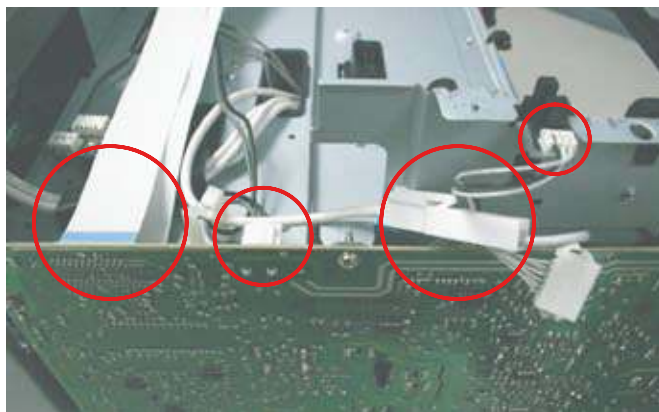

2. Remove 8 screws and unlatch 4 hooks.

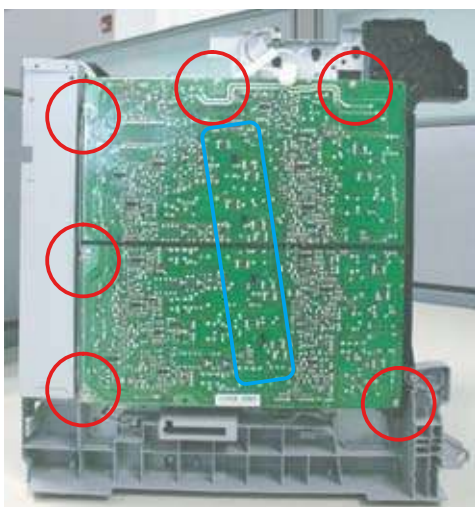


Caution : When replacing the HVSPS board, be careful 16 High voltage terminals on it.

3.3.5 Main PBA

- Before disassembling the Main PBA, remove the rear cover.

1. Unplug all harness from Main PBA.
2. Remove 4 screws and release the Main PBA.

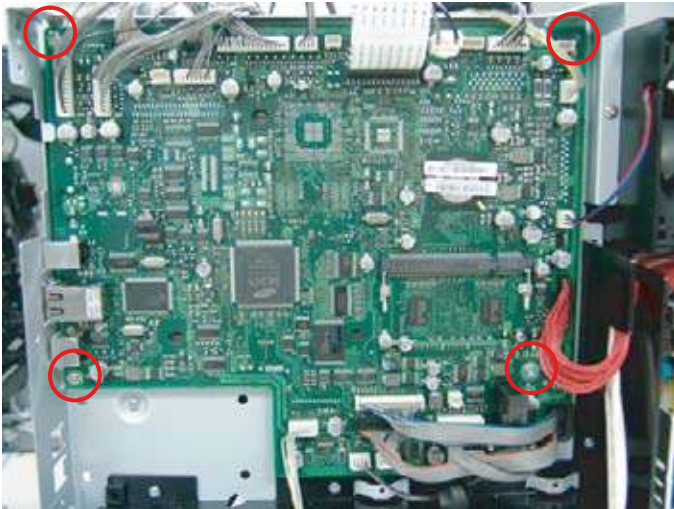

3.3.6 SMPS Board

- Before disassembling the SMPS board, remove the rear cover.


1. Unplug the harness from the SMPS board.
2. Remove 4 screws and release the SMPS board.



3.3.7 Fuser Control Board


- Before disassembling the Fuser control board, remove the cover unit.

1. Unplug the harness from the Fuser control board.
2. Remove 4 screws and release the Fuser control board.

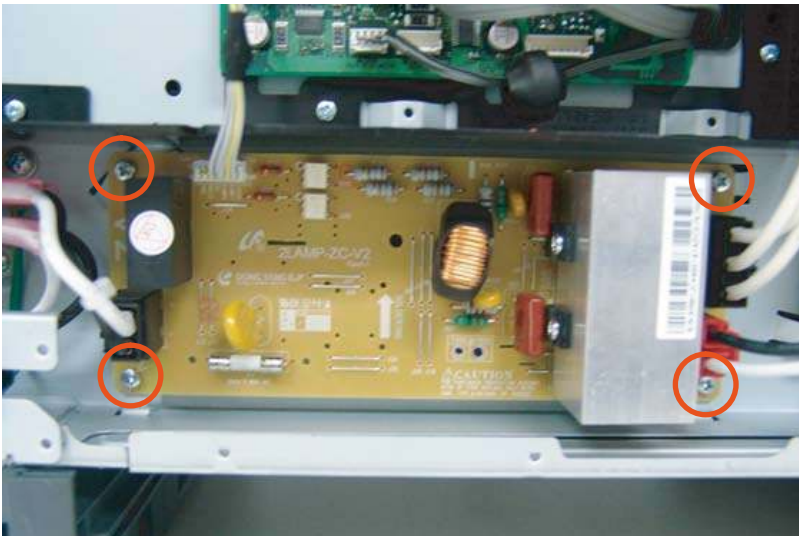


3.3.8 LSU

1. To remove the Bracket main & Duct, remove the 7 screws and release it.

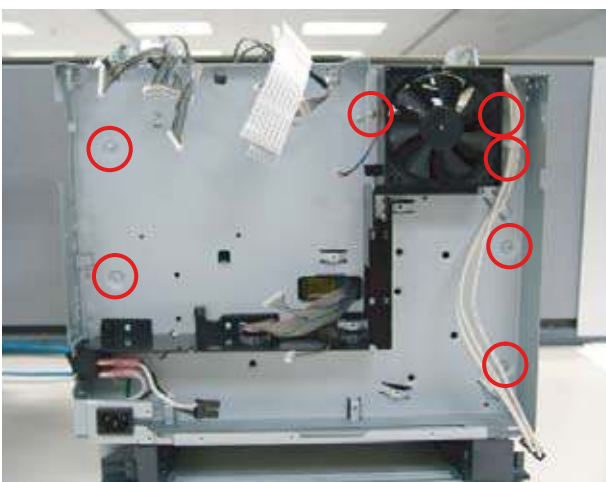


2. Remove the 4 screws and remove the LSU Unit.

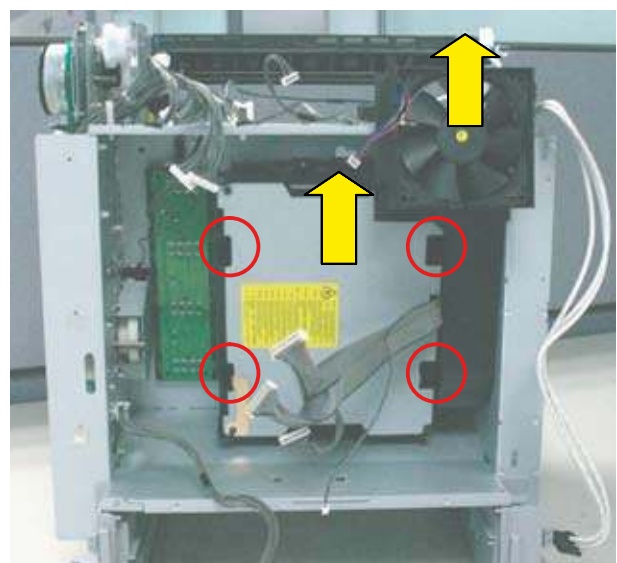


3.3.9 SOLENOID


1. Remove 2 screws and release the CAP-PICK UP GEAR.

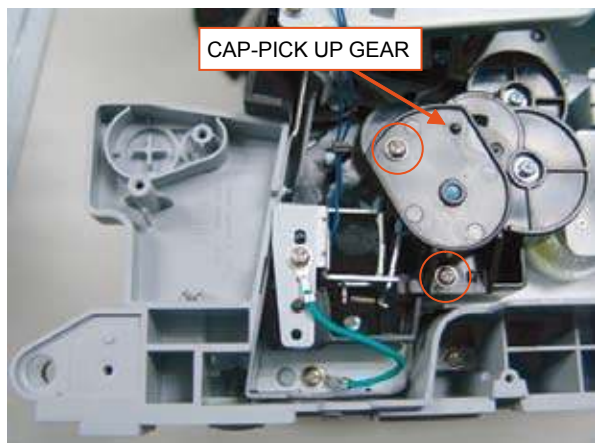

3. Release the SOLENOID-PICK_UP.

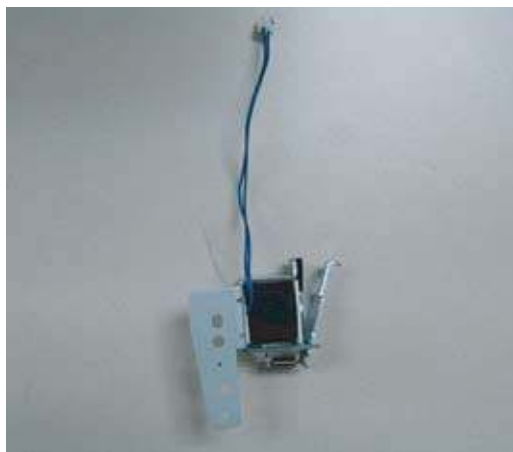



2. Remove the MEA-GEAR PICK UP.
And remove 1 screw.

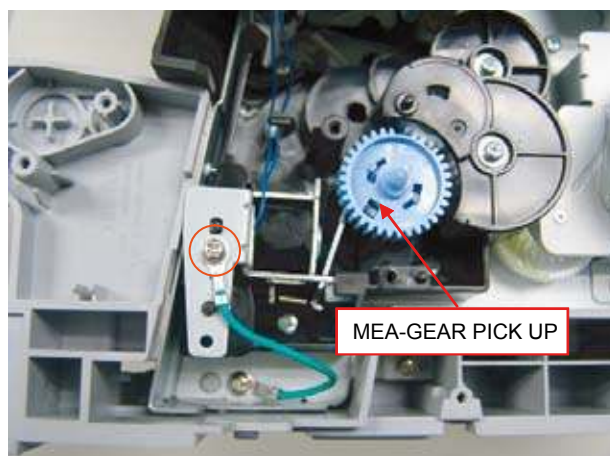

3.3.10 Drive-Exit Bracket

- Before disassembling the drive-exit bracket, remove the middle cover, HVPS board.



1. Unplug the harness connecting the motor.
2. Remove 3 screws.
3. Release the drive-exit bracket from the frame assy.

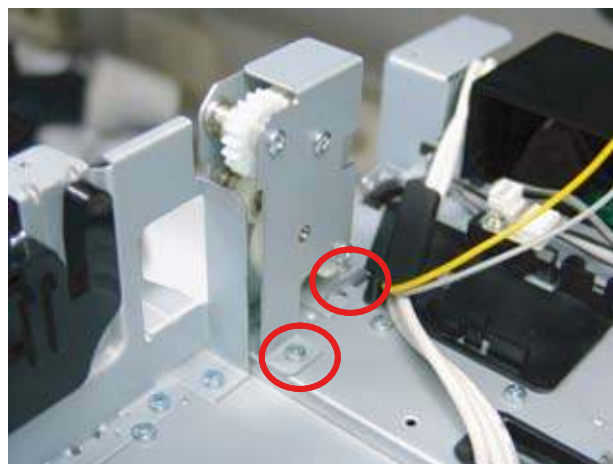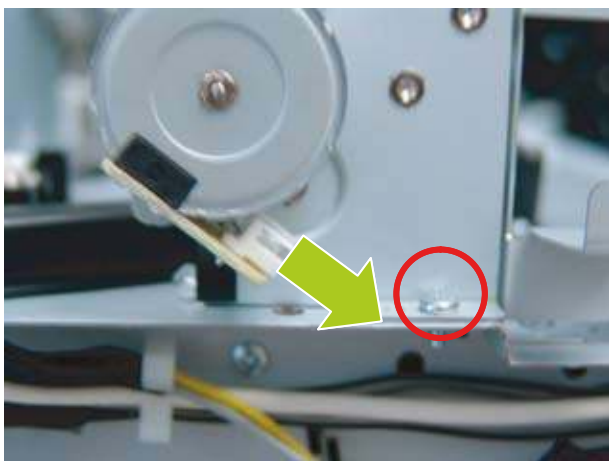

3.3.11 Drive-Fuser Bracket

- Before disassembling the drive-exit bracket, remove the middle cover.

1. Unplug 2 harness connecting the motor and clutch.

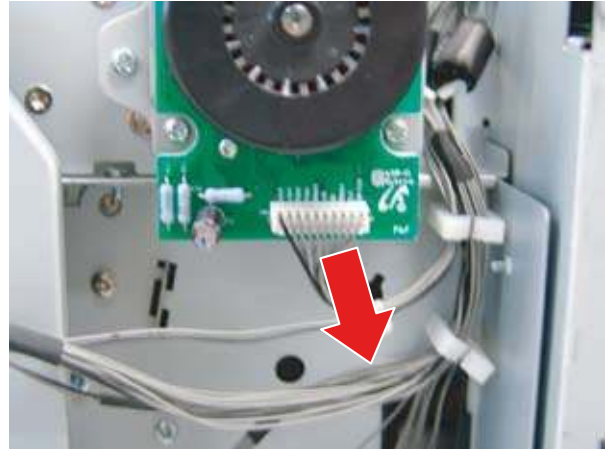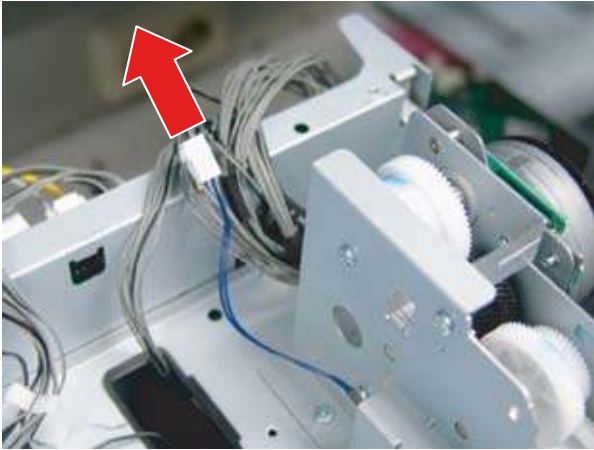

2. Remove 6 screws. Release the drive-fuser bracket from the frame assy.

