Interface "graph" between object and PlcPgm



Backup

Functionobject
Start/Stop, Manual/Auto, Local/Remote

Class-CompModeDFo-Code		
W	Proview	
09-MAR-2010 10:51		1 (5)

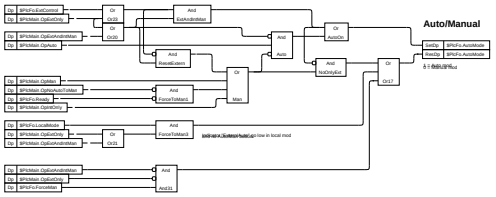

Auto/Manual

Functionobject
Start/Stop, Manual/Auto, Local/Remote

Class-CompModeDFo-Code		
W	Proview	
09-MAR-2010 10:51		2

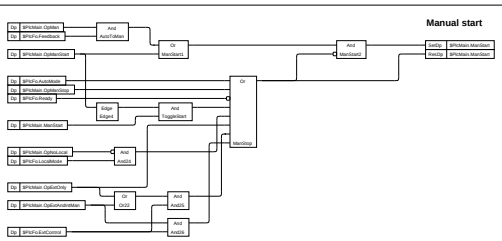

Manual start

Order

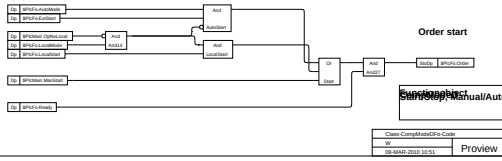

Order start

Functionobject
Start/Stop, Manual/Auto, Local/Remote

Class-CompModeDFo-Code		
W	Proview	
09-MAR-2010 10:51		3

Alarm and text

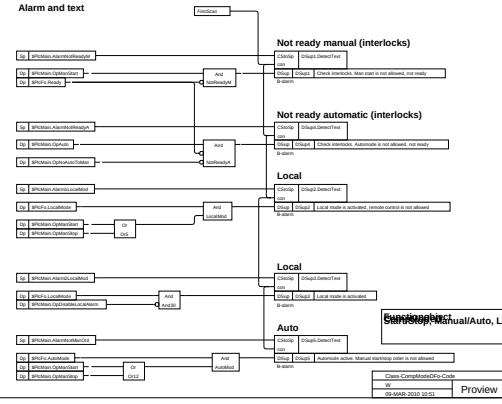

Not ready manual (interlocks)

Not ready automatic (interlocks)

Local

Local

Functionobject
Start/Stop, Manual/Auto, Local/Remote

Auto

Class-CompModeDFo-Code		
W	Proview	
09-MAR-2010 10:51		4

Dim pushbuttons and indicators in HMI

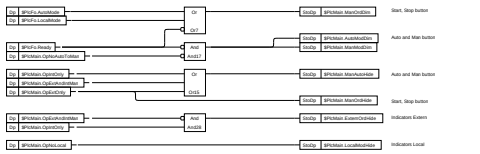

Show manual and local in HMI

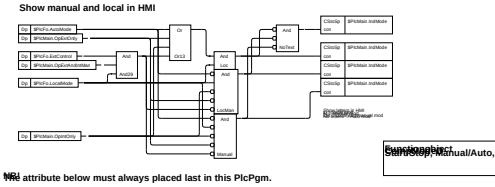

Functionobject
Start/Stop, Manual/Auto, Local/Remote

The attribute below must always placed last in this PlcPgm.

Class-CompModeDFo-Code		
W	Proview	
09-MAR-2010 10:51		5