Interface "graph" between object and PicPgm

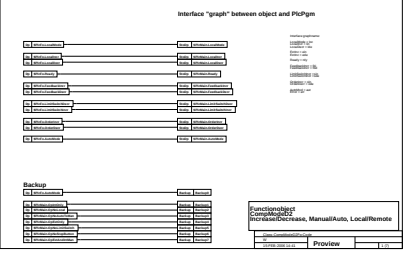

Functionobject
CompModb2
Increase/Decrease, Manual/Auto, Local/Remote

Proview

Auto/Manual

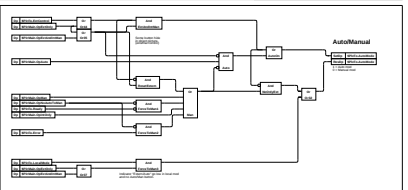

Functionobject
CompModb2
Increase/Decrease, Manual/Auto, Local/Remote

Proview

Manual Increase

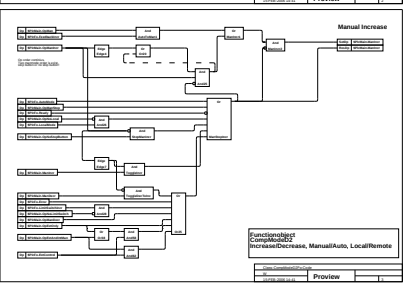

Functionobject
CompModb2
Increase/Decrease, Manual/Auto, Local/Remote

Proview

Manual Decrease

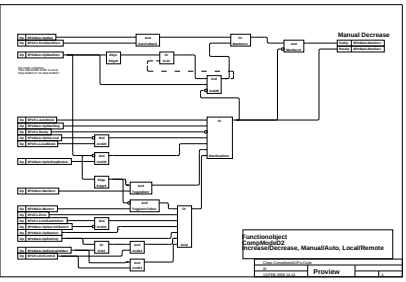

Functionobject
CompModb2
Increase/Decrease, Manual/Auto, Local/Remote

Proview

Order Increase

Order Decrease

Error

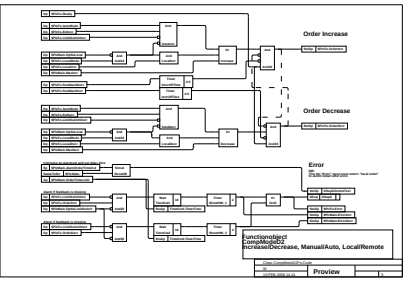

Functionobject
CompModb2
Increase/Decrease, Manual/Auto, Local/Remote

Proview

Alarm and text

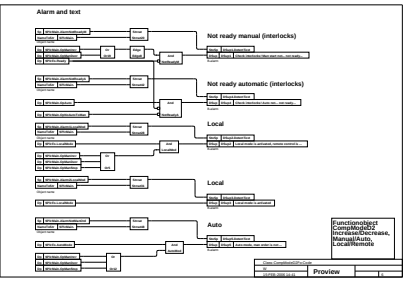

Functionobject
CompModb2
Increase/Decrease, Manual/Auto, Local/Remote

Proview

Dim pushbuttons and indicators in HMI

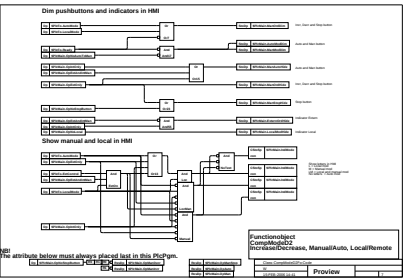

Functionobject
CompModb2
Increase/Decrease, Manual/Auto, Local/Remote

Proview

HMI
The attribute below must always placed last in this PicPgm.