


OX
INSTRUMENTS
ONE

USER GUIDE

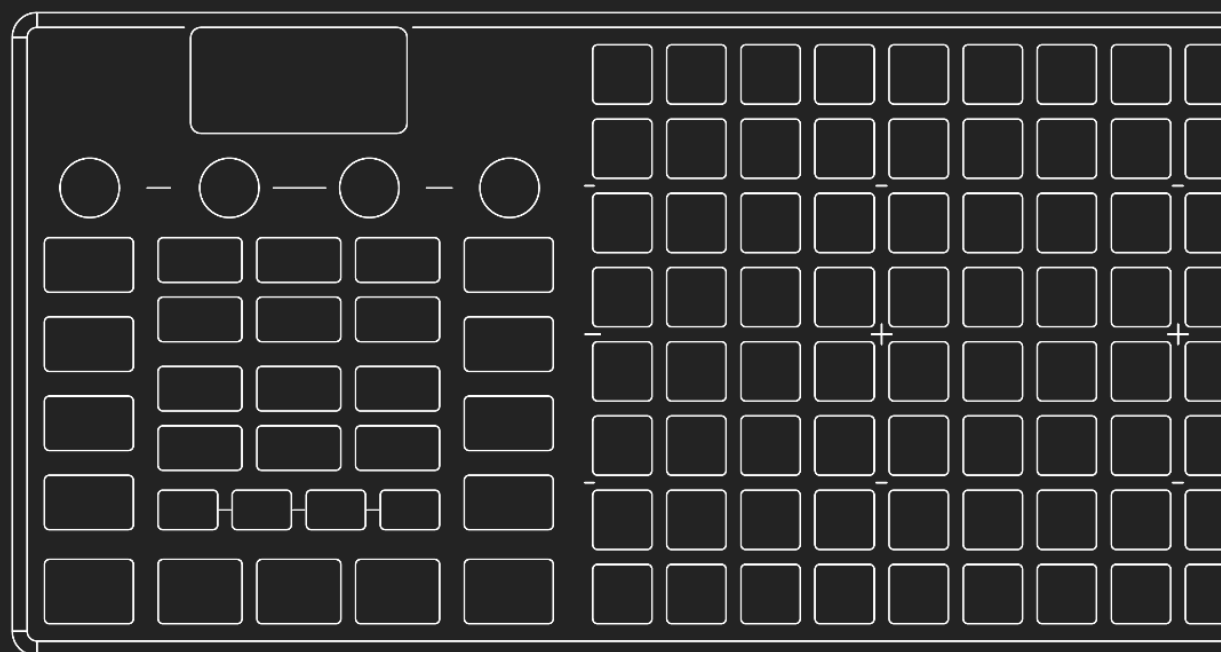

V 1.0

© OXI ELECTRONIC INSTRUMENTS SLU – 2021 – All rights reserved.

Polígono Industrial Porto do Molle
36350 Pontevedra
Spain

www.oxiinstruments.com

Information contained in this manual is subject to change without notice and does not represent a commitment on the part of OXI ELECTRONIC INSTRUMENTS SLU, hereby OXI Instruments. The software described in this manual is provided under the terms of a license agreement or non-disclosure agreement. The software license agreement specifies the terms and conditions for its lawful use. No part of this manual may be reproduced or transmitted in any form or by any purpose other than purchaser's personal use, without the express written permission of OXI INSTRUMENTS.

All other products, logos or company names quoted in this manual are trademarks or registered trademarks of their respective owners.

Manual version: 1.0

Revision date: 3 January 2022

Product version: OXI ONE v1.0

Manufacturer: OXI Instruments

Specifications Subject to Change:

The information contained in this manual is believed to be correct at the time of printing. However, OXI Instruments reserves the right to change or modify any of the specifications without notice or obligation to update the hardware that has been purchased.

WELCOME


Thank you for purchasing **OXI One**.

This is the result of a couple musicians in need of a more inspiring sequencer.

By supporting us, you are helping to keep this instrument up to date and bring new features for a long period of time and also to develop other instruments and tools that will come soon.

This is our *Opera Prima* and we hope you enjoy it as much as we did developing, broadcasting, manufacturing and shipping it to your door.

— **OXI team**

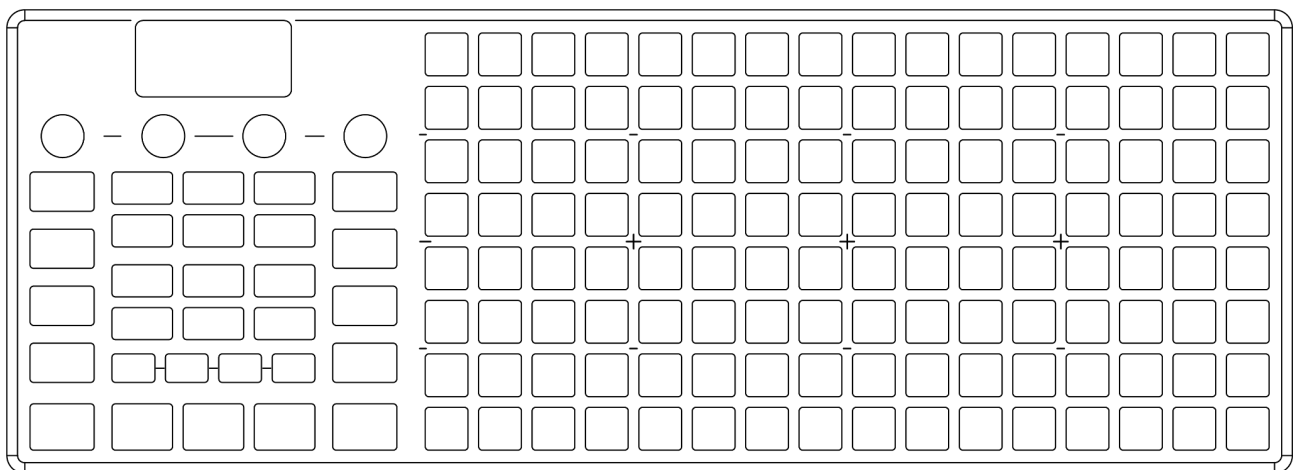

PRECAUTIONS

PLEASE READ CAREFULLY BEFORE PROCEEDING

* Please keep these precautions in a safe place for future reference.

Plug your unit to a USB power supply and do a full battery charge before using it for the first time. The battery is fully charged when the  icon stops blinking.

WARNING:

Always follow the basic precautions listed below to avoid the possibility of serious injury or even death from electrical shock, short-circuiting, damages, fire or other hazards. These precautions include, but are not limited to, the following:

- Do not open the instrument or attempt to disassemble the internal parts or modify them in any way. The instrument contains no user-serviceable parts. If it should appear to be malfunctioning, discontinue use immediately and have it inspected by qualified OXI Instruments service personnel.
- Do not expose the instrument to rain, use it near water or in damp or wet conditions, or place containers on it containing liquids which might spill into any openings.
- Use the specified cable provided by OXI Instruments only (or another one with same specifications) to plug your OXI One to a computer or to charge OXI One's battery.
- Use only a 5V supply to power or charge your OXI One. Using the wrong power supply will damage your OXI One and it won't be covered by the product warranty.
- Do not connect any TV or monitor to the Pipe interface (HDMI Micro connector) as this could damage both devices. Use ONLY with compatible accessories like the OXI Pipe. Any damage caused by a wrong operation won't be covered by the product warranty.
- Do not connect any headphone or amplification line directly to any of the TRS jack plugs as this may damage both devices. Any damage caused by a wrong operation won't be covered by the product warranty.
- Before cleaning the instrument, always remove the electric plug from the outlet. Never insert or remove an electric plug with wet hands.
- Keep this product always out of reach of children. It is not a toy.
- The instrument, when used in combination with an amplifier, headphones or speakers, may be able to produce sound levels that could cause permanent hearing loss. DO NOT operate for long periods of time at a high level or at a level that is uncomfortable, or a level that exceeds prevailing safety standards for hearing exposure. Always follow the basic precautions listed below to avoid the possibility of serious injury or even death from electrical shock, damages, fire or other risks. If you encounter any hearing loss or ringing in the ears, consult an audiologist immediately. It is also a good idea to have your ears and hearing checked annually.
- Do not place the product and the cable charger near heat sources such as heaters or radiators, and do not excessively bend or otherwise damage the cord, place heavy objects on it, or place it in a position where anyone could walk on, trip over, or roll anything over it.

- When removing the cable charger from the instrument or an outlet, always hold the plug itself and not the cord.
- Do not expose the instrument to excessive dust or vibrations, or extreme cold or heat (such as in direct sunlight, near a heater, or in a car during the day) to prevent the possibility of damage to the internal components.
- Do not place the instrument in an unstable position where it might accidentally fall over.
- Before moving the instrument, remove all connected cables.
- When cleaning the instrument, use a soft brush or a soft and dry cloth. Do not use paint thinners, solvents, cleaning fluids, or chemical-impregnated wiping cloths. Also, do not place vinyl or plastic objects on the instrument, since this might discolor the keyboard.
- Do not rest your weight on, or place heavy objects on the instrument, and do not use excessive force on the buttons, switches or connectors.
- Do not operate the instrument for a long period of time at a high or uncomfortable volume level, since this can cause permanent hearing loss. If you experience any hearing loss or ringing in the ears, consult a physician.
- Always turn the power off when the instrument is not in use.
- The OXI One should not be exposed to water (dripping or splashing) and no objects filled with liquids, such as vases, should be placed on the apparatus.
- Do not use the OXI One in conditions with extremely low air pressure.

OXI Instruments cannot be held responsible for damage caused by improper use or modifications to the instrument, or data that is lost or destroyed.

INTRODUCTION

Along the journey of learning any new instrument, having access to a complete guide can be a very valuable tool. You can rest assured knowing that all of the information needed to quickly get the most out of your OXI One sequencer has been assembled here for convenient referencing.

Exploring a new instrument and manual for the first time can be very fun and informative indeed, but take your time! There's a lot going on in the OXI One and attempting to master every aspect of it should not be the goal right off the bat. Feel free to gloss over this manual in its entirety or jump straight to the chapters that excite you the most. If you'd prefer to figure things out on your own, no problem! With OXI One, exploration is encouraged. The important thing is that you're having fun! An initial read-through of a manual can build a strong base of information that will be helpful moving forward. This is when you'll first become acquainted with the parameters of your new instrument; the tools at your disposal and how they interact with each other.

Regardless of where you are on the journey to mastering the OXI One sequencer, this manual has something to offer for every user level. Day 1 or day 1,000. Each subsequent read-through has the potential to add upon the knowledge that you have obtained and invite you to dive in a bit deeper. Has an update brought new features to explore and investigate? Perhaps you'd like to refresh your memory on a feature that you haven't used often? Revisiting a manual with a good understanding of the base subject allows us to interpret the ideas and information within its pages differently, from a more informed stance. This is when new doors start opening. We are now using the guide less as a source for information and more as a source of inspiration.

ENJOY.

SPECIFICATIONS

Electrical specifications:

5V DC 1.7A (USB type C supply)

Li-Po Battery 2200mAh

Radio equipment:

Bluetooth 5.0, 2.4GHz, Tx Max: 4 dBm

Mechanical specifications:


Aluminum chassis & Silicone buttons

Dimensions: 36 x 13 x 3 cm

Weight: 890 gr.

Operating temperature:

10 °C to 36 °C

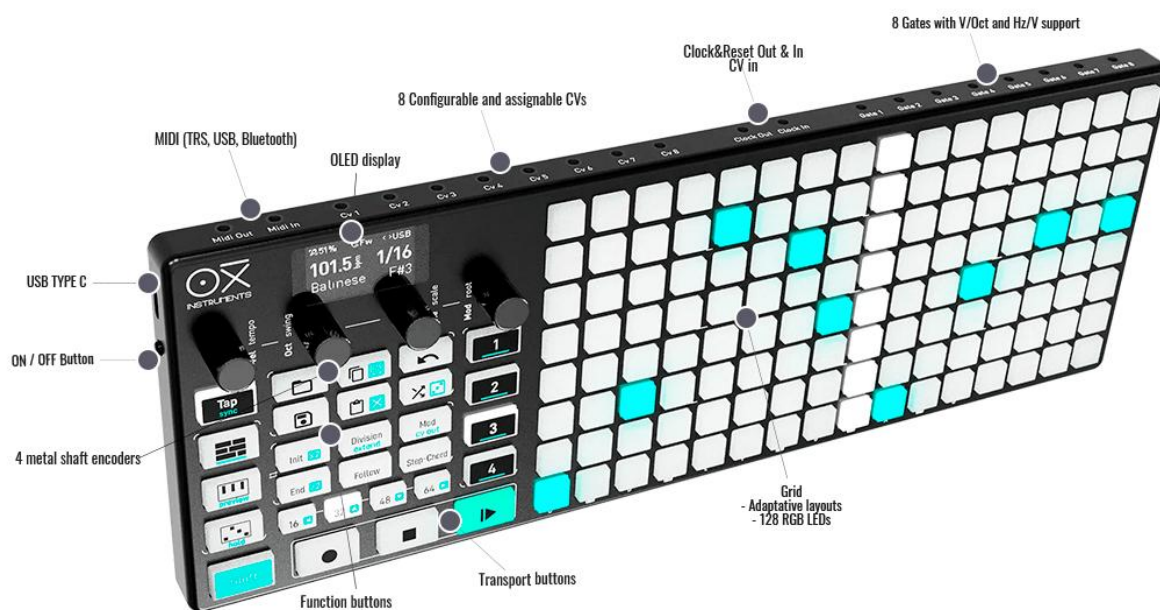

INPUTS AND OUTPUTS

- USB C for 5V power and MIDI USB. It also charges the internal Li battery
- MIDI TRS input and output (Din adapter included)
- MIDI Bluetooth BLE 5.0 bidirectional, peripheral and central roles.
- CV 1 to 8. From -3V to 8V
- GATE 1 to 8. 5V or 10V configurable
- Clock Out and Clock/CV In (can be independent with a splitter)



INCLUDED IN THE PACKAGE

- USB C to A cable
- MIDI DIN to TRS adapter (Black color)

INDEX

- ❑ **WELCOME**
- ❑ **PRECAUTIONS**
- ❑ **INTRODUCTION**
- ❑ **SPECIFICATIONS**
- ❑ **VERY QUICK START**
 - ❑ Battery
- ❑ **SIGHT AND TOUCH**
 - ❑ Grid
 - ❑ Screen
 - ❑ Sequencers
 - ❑ Encoders
- ❑ **FUNCTION BUTTONS**
 - ❑ Transport
 - ❑ Recording Menu
 - ❑ Sync
 - ❑ Pages
 - ❑ Preview
 - ❑ Load and Save
 - ❑ Copy and Paste
 - ❑ Undo and Redo
 - ❑ Init, End and Loop
 - ❑ Y Div
 - ❑ Follow
 - ❑ Random
 - ❑ Random Generator
 - ❑ LFO
 - ❑ Configuration
- ❑ **LAYOUTS**
 - ❑ Keyboard
 - ❑ ARP
 - ❑ CV Out
 - ❑ Trig Envelopes
 - ❑ MIDI to CV
 - ❑ CV to MIDI
 - ❑ Arranger
 - ❑ Clip Launch
 - ❑ CC Perform
 - ❑ Motion Recording
- ❑ **SEQUENCER MODES**
 - ❑ Mono
 - ❑ Chord
 - ❑ Multitrack

- ☐ Polyphonic
- ☐ Harmonizer

- ☐ **MIDI ROUTING**
- ☐ **OXI SPLIT**
- ☐ **MIDI BLUETOOTH**
- ☐ **DESIGN NOTES**
- ☐ **MONOME GRID**
- ☐ **OXI APP**
- ☐ **CALIBRATION**
- ☐ **DECLARATION OF CONFORMITY**
- ☐ **PRECAUTIONS**
- ☐ **TERMS OF WARRANTY**

VERY QUICK START

OXI One is a battery powered performative sequencer, controller and composition instrument that has 4 fully independent **Sequencers** that can be configured to any of the modes available that can play simultaneously. Also, different aspects of OXI One can be configured so it adapts to your workflow, not the other way around. Settings that are normally imposed are an option instead.

The interface in OXI One is based on horizontal movement between buttons, avoiding nested menus thus making it very intuitive to use, not only without sacrificing functionality but adding innovative layers for performance.

Turn **ON** your OXI One pressing the power button on the left side. You will be in the main view: the **Piano Roll** or **Sequencer layout**. To start playing, press the **Play** button indeed. The transport bar will start moving and loop on the grid. Be sure to have the selected **Sequencer** (1 to 4 buttons) active. For this, press **MUTE + 1-4**. The number button will blink white and blue indicating the Sequencer is selected and active for playback. This is a nice way to launch or stop each Sequencer from playback without stopping the rest.

You can edit each Sequencers toggling the view between them, by pressing their button 1-4

In this view the grid pads recognise two types of pulsation:

- Doing a short press-release, activates or deactivates steps.
- Making a long pulsation you will access the step parameters.
- SHIFT + press any step momentarily shows extra step parameters.
- A long (TIED) note can be entered by pressing two pads in the same row.

In general bottom to top is lower to higher note, and left to right the order in the time sequence. To access higher and lower notes other than the 8 rows displayed, press the **Division** button and turn the leftmost encoder 

To select a Sequencer, press its corresponding button number; the Function buttons, the screen and the grid will show the parameters of this selected sequencer.

SHIFT + Sequencer button (1-4) to enter its **configuration**, you can change the sequencer mode between Mono, Chord, Polyphonic or Multitrack; also the color for that Sequencer, global MIDI channel and quantization for punch-in. There will be more exciting modes to choose from in future updates, subscribe to [our newsletter](#) to be up to date.

Note: some of the available colors may provide better visual feedback than others.

Each sequencer mode focuses on several tasks that it does best; for example, a **Mono** sequencer has an instant visual feedback of the melody and more compositional centered tools, meanwhile in **Multitrack** mode you have 8 mono tracks with instant mute and solo buttons per track. **Chord** mode is a great tool to write the foundation chord progression of a song, meanwhile **Polyphonic** mode offers total freedom up to 7 notes per step. We'll cover more in detail how each works in the Sequencer modes section.

It's possible to have any combination of the existing sequencer modes on the 4 available sequencer slots.

Turn **OFF** OXI One by holding the power button for at least 2 seconds. It will remember its last state after the next startup: loaded project and configuration.
Clock settings won't be remembered, auto-sync will be implemented in future firmware releases.

• BATTERY

The battery icon shows a rough estimation of the battery status.

The battery is charging when the  icon is blinking, and fully charged when it is steady and not blinking. The OXI One battery should last between 5 and 8 hours depending on the usage and the LEDs consumption.

When the status icon is , it means that the battery voltage has dropped to around 3.7V which is the nominal voltage of the battery. The OXI One will still have plenty of hours of use left.

SIGHT AND TOUCH

The information displayed by the following elements refers to the selected Sequencer.

• GRID

The grid has 128 RGB LED lit pads. On power up, the **Piano Roll** view is displayed. Here, each column of pads represents a step of the sequence and each row represents a note (depending on selected scale) or a track (in Multitrack mode). The grid also shows Keyboard, Arranger and CV Out layouts that will be explained later.

Independently of the grid layout or screen menu, you can reach the main Piano Roll by pressing BACK button. Other functions buttons like Keyboard  or Arranger , will toggle between their view and the main Sequencer view.

In Mono, Poly and Chord modes you can move the grid vertically in order to work with higher or lower notes. To do so, go to the Division menu by pressing **Division**. The leftmost encoder then moves the Piano Roll vertically one row at a time, one row being a grade of your scale or a semitone in chromatic. The highlighted rows when scrolling indicate the position of the root note.

• SCREEN


The screen shows information or parameter values depending on the function button or mode selected. The default view is the **Sequencer view**, shown on power up.

From left to right the top line indicates: active sequencer mode, playback direction, swing, (track number in Multitrack mode), clock source, BLE connection and battery state.

Second line: BPM and Sequencer time division or track time division of the last selected track in the Multitrack mode.

Third line: scale, root note and global octave.

Specific screen interfaces will be later explained.

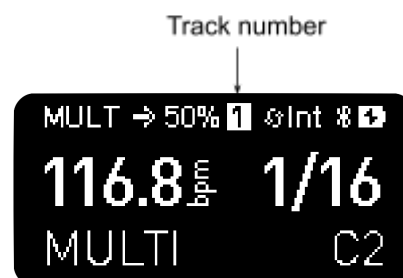

SHIFT. Hold it and press a button to access secondary functions, the ones printed in turquoise.

• SEQUENCERS 1-4

Each number selects the displayed sequencer on the grid and the function buttons will show its parameters.

MUTE + 1-4 activates/deactivates the specific sequencer for playback.

It is possible to activate/deactivate several sequencers at once.


SHIFT + Sequencer button (1-4) to access the Sequencer Setup menu. From left to right you can change:

Global MIDI channel of the Sequencer (it can be different per track in Multitrack)

Punch-In quantization, it sets the countdown for the sequencer to be launched (un**MUTE**d) when playback is active.

Sequencer Mode (Mono, Chord, Polyphonic and Multitrack)

Color for the sequencer notes on the grid, Piano Roll, Keyboard, Patterns and Arranger Lanes

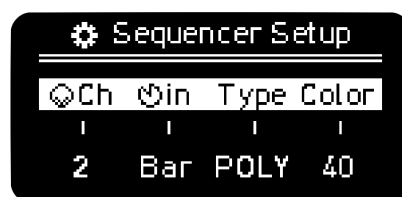

Each **Sequencer** (1 to 4) has their own dedicated interface and global parameters that are configurable **independently** per Sequencer:

- **Piano Roll** view and pages
- **MIDI** channel configuration (up to 32 tracks on different channels, 32 channels available for the USB output in two separated virtual ports and up to 48 MIDI channels using the OXI Split).
- Keyboard layout, designed for each mode
- **Tracks**, depending on mode
- 16 Pattern slot memory per **Sequencer** (**64** slots per **Project**)
- Arranger lanes (4)
- **Scale**
- Arpeggiator (per track)
- Loop (per track)
- Swing
- Randomizer engine
- Initial and End steps (per track)
- Time Division signature (per track)
- CC configuration (up to 8)
- LFO

· ENCODERS 1-4

They are the path to all parameter changes.

We will be referring from now on as “CW” to clockwise turns and “CCW” to counter clockwise turns of the encoders.

In **Sequencer view**, the parameters each one modify apply to the selected Sequencer (1-4):

VELocity (secondary function: **Tempo**)


OCTave (secondary function: **Swing**)

GATE (secondary function: **Scale**)

MODulation (secondary function: **Root**)

Their value appears as a pop-up on the screen.

For most of the **function buttons** and secondary functions, the screen will show 4 parameters, like the example on the right. The encoders modify the corresponding parameter position on the screen. For that, hold or click the function button, move the encoders and press the encoder button to select value.

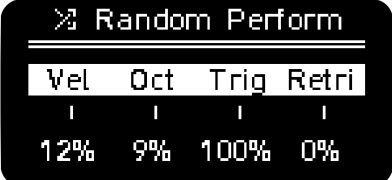

⌘ Random Perform			
Vel	Oct	Trig	Retri
12%	9%	100%	0%

- Most parameters don't require being selected by pressing the encoder button, just release the function button or Shift after highlighting it on the screen. Some require confirmation.

- Pressing the encoder button resets the corresponding parameter to its default value in most of the menus.

Velocity

It changes the velocity value for all the steps of the selected Sequencer or currently selected track in Multitrack. If there are different velocity values on steps, the screen will show the minimum and maximum values. Turning the encoder offsets each step value.

If we press the VEL encoder button while we keep pressing a step button in the grid, the velocity of the selected step is set to its default value.

Holding a grid button will show the Step menu, in which you can change the Velocity per step. By holding several grid buttons and turning this knob, you can modify the velocity of them at once.

Velocity affects the amplitude of the AD trig envelope in CV Out by default.

Octave

By default, the octave is C 2. Turn the 2nd encoder to change the base octave for all the sequence. This base octave serves as a reference point of the notes of the grid. This won't affect the octave value of the single steps.

Gate

This parameter sets the duration of the note, determined by the % of the total length of every step depending on the selected division. Thus, if the sequence is set to 1/16th, and gate is 50, the note will last half of a 1/16th note

Same as velocity, if there's different gate values on steps, it shows maximum and minimum value. It acts as a global control. After gate = 99 you have TIE and LEGato. Note that you can change this parameter per step as well.

- **TIE** holds the current note for a number of steps. It can also be introduced by holding a step on the grid and pressing another step on the same row depending on the desired length. Wait for the second press (half of a second) in order to be recognized as a Tie, faster gestures toggles multipress selection to edit several steps at once.

Tied steps are indicated with a white light. The steps must be on the same row and octave to be tied, otherwise they would be considered as different notes.



- **LEGato** creates a smooth transition between consecutive notes, so there's no time gap between them.

Gate affects directly the Decay time of the AD trig envelope in CV Out.

MOD

Same as velocity and gate, MOD parameter shows minimum and maximum value if steps have different values. By default MOD sends Mod Wheel messages. You can change this on the CC Perform menus later explained.

Tempo

It affects all the Sequencers. To modify it, press Shift + turn the 1st encoder. The default tempo value can be modified in the config menu. It only works when the OXI One is in **INT** (internal) synchronization mode (see Synchronization section).

Press SHIFT + Play repeatedly to TAP the tempo to the desired beat.

Swing

Press SHIFT and turn the encoder 2 to modify it. Every sequence has its own Swing value. Since every sequence may have its different time signature or time division, the swing value must be set carefully according to every sequence in order to get musical results. By pressing SHIFT and the encoder 2 button, Swing is reset to default value, 50.

Scale

You can choose among several different scales, the notes in the corresponding Sequencer will be quantized to the selected scale. Press SHIFT and turn encoder 3 to modify it. By pressing SHIFT and the encoder 3 button, scale is set to the default value which is Chromatic.

There's a very nice feature that we will cover in the HARMONIZER mode section, in which notes in a Sequencer follow harmonically the notes of the chord played on another Sequencer. This ensures that all your instruments stay not only in key but inversion too and follow your chord changes.

Root

The default root note is C, but we can easily change it by pressing SHIFT and turning encoder 4. As with the previous parameters, by pressing SHIFT and the encoder button, root is set to the default value, C.

Both Scale and Root can be locked on the Configuration menu, this prevents any unwanted changes to be made during a performance.

TIP: Jump to the Sequencer Mode section and skip the Function Buttons if you want to start working with Mono, Chord, Multitrack or Polyphonic sequences right away. There are links to bookmarks to help you navigate when a Function Button is mentioned.

However, reading the function buttons first helps to get familiar with the general workflow through all the sequencers.

FUNCTION BUTTONS

• TRANSPORT

The following behavior applies to Internal Sync:

Rec enables recording from the Keyboard view or from any MIDI input..

Stop halts and resets all the Sequencers to step 1.

Play/Pause works as expected.

Recording: the sequencers will receive the incoming MIDI information depending on the **MIDI In channel filtering** configuration option.

If **MIDI In channel filtering** is ON, every sequencer will listen to its own MIDI channel. If OFF, the selected sequencer will listen to any channel.

Press **Shift + Rec** to access **Recording Menu**, parameters from left to right:

Countdown before starting recording. It only works when the active sequencer is inactive. Otherwise it will start recording immediately.


Time Quantization. Percentage of quantization to the division of the selected sequencer. To apply the quantization, a confirmation by pressing the same encoder is required.

Overdub, recording behavior. If ON, the sequencer will keep the already existing notes adding new ones. If OFF, the transport bar will delete the events of the sequencer that are in its path.

Looping, 1-Shot or Extend.

Three different behaviours that work as follows.

- **Looping** will continue recording events inside the actual track length; the initial and end steps will remain unchanged.
- **1-Shot** will stop the recording once the transport bar reaches the final track step.
- **Extend**, the length of the track is increased until you stop the recording or the transport bar reaches the maximum possible track size. This behavior allows **MIDI Live Looping** using external MIDI input or the OXI One Keyboard layout.

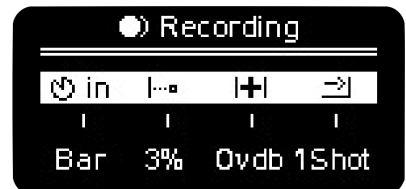

- Long press **Shift + Play** for more than 3 seconds to take a rest from sequencing ;)

Shift + MUTE opens the Nudge menu - **NOT IMPLEMENTED**

In Config menu you can choose to enable Rec Listen, this way pressing Rec arms the track and start recording once a note is activated, being in One Keyboard or any MIDI input - **NOT IMPLEMENTED**

Synchronization:


When the OXI One starts up, Sequencer 1 is selected by default and Internal synchronization mode is set.

The following sync options can be changed by tapping **SHIFT + STOP** (sync) button when the sequencer is stopped:

- **INT**: OXI One follows internal timing, according to the selected tempo.
- **USB**: OXI One follows the clock timing received only through the MIDI USB port.
- **MIDI**: OXI One follows the clock timing received only through the MIDI TRS jack.
- **BLE**: OXI One follows the clock timing received only through the MIDI BLE. (Not implemented, at the moment it's the same as set to MIDI)
- **CLK**: OXI One follows the clock timing received through the clock input.
- **AUTO**: Not implemented

OXI One reads and outputs MIDI clock according to a 24 ppq timing. The analog clock input and output resolutions can be changed on Configuration.

When OXI One is synchronized with a DAW in which either of them act as a master clock, remember to adjust the **MIDI clock sync delay** in your DAW settings to correct the latency generated by the DAW.

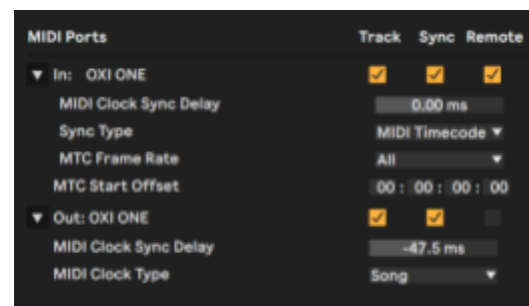

Ableton Live settings

• PREVIEW

Shift + Preview activates/deactivates playback on the grid Piano Roll view when you press a step (or change the chord type or the step note with an encoder), this way you get instant feedback through MIDI and CV if configured, of notes and chords you add to the sequences.

• PAGES

Press **16**, **32**, **48** or **64** to select which step page the grid displays. To access the **80**, **96**, **114** and **128** pages, hold the corresponding Sequencer button (1-4) and desired page number or double tap the page number: 16 will show 80, 32 96 and so on, the page button will be lit up in blue in this case.

Shift + Page moves the sequence on the grid according to the arrows displayed. Move the sequence left, up, down and right one step at a time to **rotate** horizontally or **transpose** vertically.



· LOAD AND SAVE - Memory access

STORE UP TO 15 PROJECTS

PROJECT INFO

- Name
- 12 Arrangements / Songs
- Tempo
- Song Names

16 PATTERNS PER SEQUENCER

64 PATTERNS IN TOTAL PER PROJECT




LOAD or SAVE from the Menu

- 1st Encoder selects **project**
- 2nd Encoder selects **pattern**



You can QUICKLOAD/SAVE patterns directly from the Grid.

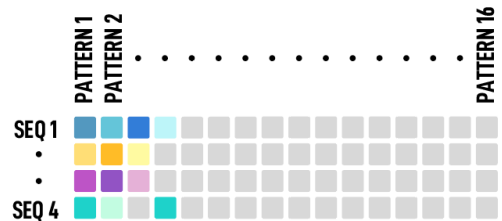

4 FIRST ROWS show the project patterns.
Unlit positions are empty.

OXI One can store **15 Projects**, each **Project** stores up to **16 Patterns** per **Sequencer**, for a total of **64** patterns per project. Each pattern stores all sequencer data, including its mode (Mono, Chord, etc.), and different patterns for a sequencer can be for different modes. To save a sequence, hold the **Save** button, **Memory Access** view for the current project will show up on the grid. This layout is independent of the Sequencer you have selected.

The 4 top rows of pads of the grid show the Pattern slots per Sequencer. The slots are saved individually per Sequencer per Pattern, not the 4 Sequencers at the same time in one Pattern. Each Sequencer can load and play any of its 16 patterns independently of which pattern the other sequencers are playing, so we've arranged the Memory Access with a matrix style correlation to tidy up the structure.

Having many patterns displayed linearly is ugly and it's easy to lose track. This way we have a better laid out structure to address more patterns in an intuitive way, if you use it to your advantage.

In OXI One all loading events, being Pattern, Song or Project changes, are done without playback interruption. Also when possible, the transport bar keeps its position.

This behavior virtually removes all boundaries of songs, patterns and steps limits.

Press any pad on the row of the **selected Sequencer** to save a sequence in the corresponding Pattern slot.

IMPORTANT NOTES:

- Remember that each row stores the patterns for each sequencer. Upper row 1 = sequencer 1, row 2 = sequencer 2, etc.
- Every slot can store one pattern. The **sequencer MODE** (Mono, Chord, etc.) is part of the stored data, so different patterns of the same sequencer could be in different modes. The sequencer will automatically change its mode when the pattern is loaded.
- Other information like **MIDI channel and CC assignments** is also **stored per pattern**.

In order to maintain consistency between patterns, we recommend configuring everything necessary such as MODE, MIDI channel and CC assignments in a first pattern. Then save this pattern in successive memory slots as a template.

You can also save by turning the encoder **2** to select a Pattern slot in the screen and press the encoder button.

To load a Pattern hold **Load** button. The Memory access layout will show up in the grid. You can load 4 patterns (1 per Sequencer) on the grid INDEPENDENTLY of the selected sequencer (1-4). You can also load by holding the Load button and turning the encoder **2** to select a Pattern slot in the screen and press the encoder button.

To **Save** a pattern, the procedure is the same as for loading but it's only possible for the selected sequencer to avoid unintentionally overwriting patterns from other sequencers. Saving a pattern means that the information of the project like BPM and songs are also updated in the memory.

When a Pattern is loaded, any changes made to it won't be saved unless done manually

To load a **Project**, hold the **Load** button and move encoder **1** to highlight the target Project, then push the encoder button.

To save a **Project**, hold the **Save** button and move encoder **1** to highlight the target Project, then push the encoder button. Saving a project means all 4 sequencer states and patterns will be saved, plus the current BPM and all the arrangements/songs of the project.



· COPY AND PASTE

In OXI One you can copy or paste a Sequencer by holding **Copy** or **Paste** and Sequencer buttons (1-4), corresponding to the Sequencer that you want to copy or paste. For Multitrack mode, the active track will be copied or pasted, unless pressing its sequencer button, then it copies all tracks.

- You can also copy/paste whole Mono tracks into Multitrack tracks by pressing the first column pad corresponding to the desired track (1-8). This is very useful to use Mono mode power to compose and Multitrack as a storage to free up a Sequencer slot.

- Pasting from a Poly sequencer will overwrite the Sequencer mode
- Pasting from a Chord sequencer will overwrite the sequencer mode except pasting in Poly, which you can use to fine tune your chord sequences by note.
- You can copy/paste pages of 16 steps (32, 48, etc.) onto another page.
- You can copy/paste single steps with all its parameters

Shift + **Copy** duplicates the current sequence's pages onto the next ones, doubling the length of the sequence. If the sequence is for example 80 steps long, only the remaining 48 steps would be copied until the maximum length of 128 steps.

Shift + **Paste** activates **Clear**, it deletes all the notes and resets all parameter values to default on the current Sequencer. What the clear resets can be modified on the Configuration screen.



· UNDO AND REDO

Undo has the last x states stored, press it repeatedly to undo unwanted takes. Press **Shift** + **Redo** repeatedly to undo the undo... right?

- Step input doesn't create an undo state
- A new undo state is created with Randomizer, Extend, Clear, Duplicate, Copy and Paste.

· INIT, END and LOOP

Change the initial and final step of the active Sequencer or per track in Multitrack. You can hold **Init** or **End** and either press any step on the grid, turn encoder 2 and 3, or press the pages buttons 16 , 32 , 48  and 64 . In Mono and Chord modes, double click on the page buttons to select pages **80, 96, 114** and **128**.

Shift + **Init**  or **End**  changes the time division of the selected Sequencer  or .

To activate **LOOP** , hold both **Init** and **End** buttons and then press any two steps of two different columns, those will become the looping points (or the same column and different rows to loop 1 single step). For Multitrack mode do the same in two steps of the same track (row). It'll loop until you press **Init** and **End** again. **Loop** will still be **on** until it is manually disabled. When so, the sequence will continue to play in sync.

With a LOOP activated, hold the number of the active Sequencer and press a pad below or above the notes played to transpose the LOOP without affecting the steps outside of it.

In Multitrack mode, you can change Init and End steps of all the tracks at once by holding its Sequencer number button + Init or End and the desired step.

• Y DIV - **EXPAND**

It activates the Division menu. From left to right:

- **Grid Vertical Scroll**
- **Playback direction**
- **Random Time Division**
- **Time Division**



The Piano Roll view on the grid is set to the octave selected by Oct and the root note being the lower row. To move the view up or down to reach higher or lower octaves and further edit steps, use the **Vertical Scroll**. When you move vertically through the grid, you'll see the rows highlighted, those indicate the position of your root note. Vertical Scroll is deactivated in Multitrack, you can select the active track instead.

Playback direction being forward, backward, pendulum and random. In Multitrack mode, this parameter is independent for each track.

Random Time Division introduces division changes to give more or less unpredictable rhythms to your sequence. If active, the Sequencer will be out of sync but it still follows the BPM as clock. In Multitrack mode, this parameter affects ALL tracks.

Time Division. In Multitrack mode, this parameter affects the selected track only.

Shift + Division activates **Expand**. It works as a zoom in on the sequence: length duplicates and time division halves. Active notes TIE to following steps to keep its duration.

Use expand to quickly increase resolution.

The opposite of Expand is the **Condense** function.

· RANDOM & GENERATORS

RANDOM PERFORM

An easy and musical way to create non destructive variations on a sequence is to use **Random Perform**. The parameters affect all the steps per track. From left to right: Rand **Velocity**, rand **Octave** (In higher values it adds not only more probability of playing the note in different octaves, but also increases the octave range of the randomization), rand **Probability** of notes being triggered, and **Retrigger** probability, which introduces ratcheting effect on steps.

⌘ Random Perform			
Vel	Oct	Trig	Retri
12%	9%	100%	0%

In Mono and Multitrack modes it also affects **Skip** (step parameter) the following way:

- With negative values, add **skips** to the steps.
- 0% to 32%, steps set to Skip start to be triggered, some **retriggers** might appear as well.
- 33% to 100%, increase the probability of retriggers appearing. Steps set to Skip have more chance of being triggered.

In Multitrack mode instead of Random Octave you have Random Gate, it doesn't affect the TIEs. Random function can be enabled/disabled on individual tracks in Multitrack mode: the first column will light up orange, press a pad from the respective track to stop Random from affecting it.

RANDOM GENERATOR

Shift + Random activates the **Random Generator** menu. It allows you to generate a sequence based on different parameters you can fine tune to come up with melodic and rhythmic ideas in any Sequencer mode.

⌘ Random Generator			
Scal	Hum	Rand	Dens
Yes	10	64	75

In Multitrack mode **Shift + Random** toggles between the **Euclidean Generator** and the **Random Generator**. (Euclidean Generator is explained below).

Random scale: if "Yes", it randomizes the scale and root note of the sequencer;

Humanize introduces time offset, gate and velocity variations

(Note: in the current implementation it also applies octave randomization per step. The more of this value, the more steps get their octave randomized and in greater amount);

Rand adjusts the amount of variation and spread between steps, low values are good for arpeggios and high values for less repetitive sequences;

*When **Rand** value is fully CCW, **Order** appears. If selected, instead of generating a new sequence from scratch, Randomizer shuffles the notes of the actual sequence, creating variations of it. **Undo** returns to the original sequence.*

Dens changes the amount (density) of notes generated.

*When **Dens** value is fully CCW, **Pitch** appears. If selected, instead of generating a new sequence from scratch, Randomizer shuffles the pitch of the active steps of the current sequence.*

EUCLIDEAN GENERATOR

The **Euclidean Generator** is only available in Multitrack mode. Press **Shift + Random** to get into its menu.

The options are:

Len: length of the phrase;

Puls: number of equally spaced pulses for the defined phrase length;

Rot: number of steps that the pulses are shifted to the right (for positive values) and to the left (for negative values).

Inv: inverts the result of the algorithm toggling the active steps into inactive steps and viceversa.

Note that Init/End step and division, won't be affected by any Generator engine.

• LFO - CV OUT

Another great way to create variation on your sequences is to automate parameters with the LFOs. There's one LFO per Sequencer and it can modify one parameter of the list.
(There will be two independent LFOs per sequencer).

Waveform, there are many to choose from, even unusual shapes.

Rate can be clocked up to 2 bars moving the encoder to the left. Moving to the right will get you to free running LFO. Synced modes only work when the OXI One is running.

Amount, sets the modification range of the automated parameter. The bigger, the more drastic changes you will get.

Destination, these are: Velocity, Note (quantized to scale), Octave, Gate, Mod Wheel, Pitch Bend, Time Division, Param (glide on Mono, Polyphonic and Multitrack modes and strum on Chord mode), Global probability of notes being played and CC number, this way you can automate parameters in DAWs, hardware synths or mobile apps.

LFOs can be routed to any CVs out as well. This routing is independent of the Destination parameter above, so you can have the LFO as internal modulation plus CV out modulation.

LFO can be enabled/disabled on individual tracks in **Multitrack** mode: the first column will light up orange, press a pad from the respective track to stop LFO from affecting it.


Access to the **CV GATE** routing layout by pressing **Shift + LFO button**. This layout is explained in the CV Gate section.

• STEP-CHORD - CONDENSE

This button allows you to enter additional parameters of the sequence steps.

The available options depend on the Sequencer Mode so they are explained in the respective MODEs section.

In general a brief press toggles it on or off. When it is toggled on and you press any step, the screen will show these additional parameters.

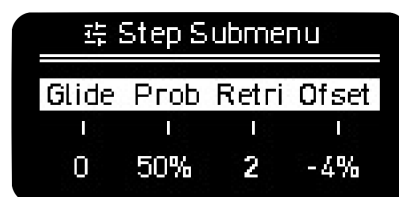

Shift + Step Chord: CONDENSE, collapses the current sequence into a lower resolution. 1/4 notes become 1/2 notes. It is a destructive function that can be undone.

• MOD - FOLLOW

MOD (modulation) toggles the CC Perform menu. This feature is deep enough to be placed in its own section: CC Perform.

Shift + MOD to toggle the **Follow** function. Press it to automatically change the displayed page on the grid and to keep track of the steps pages with the play head. Turn it off to keep the selected page static so you can make changes in specific pages even with the Sequencer running.

If Follow is active and you have at least one step pressed, the page will remain static.

• BACK - CONFIG

Back gets you back to the previous screen.

CONFIGURATION

This menu shows global parameters that affect OXI One as a whole. Many of them are presented as customization options so the user has the best experience with the instrument. You can choose what options adapt best to your workflow.

Shift + Back to activate config. To navigate through the list, use encoder 2. To change the setting use encoder 3 and push its button to confirm setting.

- **Randomize scale and root by default.** If ON, the Random Generator scale and root will be On-Yes when booting, or vice versa.
- **Lock root and scale during playback.** If activated, the scale and the root won't be modifiable during playback to avoid unintentional changes.
- **OXI Split enabled.** If activated, MIDI TRS would be compatible with the OXI Split increased bandwidth. (Note: in the current HW version it is mandatory as well for Bluetooth to work)
- **Send MIDI Clock.** If activated, MIDI clock will be sent through TRS, USB and Bluetooth.
- **Ignore MIDI Start Stop.** If activated, OXI One transport won't be controlled externally.
- **PPQ MIDI Out.** Changes the pulses per quarter note OXI One sends through MIDI.
- **PPQ MIDI In.** Changes the pulses per quarter note OXI One receives through MIDI.
- **PPQ Clock Out.** Changes the pulses per quarter note OXI One sends through analog Clock Out.
- **PPQ Clock In.** Changes the pulses per quarter note OXI One sends through analog Clock In. (48, 24, 8, 4, 1)
- **Send CC of muted tracks.** If activated, muted tracks will still send CC information.
- **TRS MIDI Thru.** If activated, OXI will echo the MIDI messages received through TRS.
- **USB MIDI Thru.** If activated, OXI will echo the MIDI messages received through USB.
- **MIDI In channel filtering.** If ON, every sequencer will listen to its own MIDI channel. If OFF, the selected sequencer will listen to any channel.
- **MIDI scale note filtering.** Input notes are quantized to the scale of the sequencer that receives the event.
- **MIDI CC Smoothing.** If activated, CC values will be interpolated between consecutive steps. If deactivated, CC values will be sent per step (stepped behavior).
- **MIDI CC Smooth Factor.** Changes the response curve of the interpolated CC values. The greater this value, the smoother the modulation curves will be.
- **Keyboard Arpeggiator velocity per note played.** If ON, the keyboard arpeggiator will respect the velocity of the notes at the time they were played. If OFF, the keyboard arpeggiator will apply the current keyboard velocity when playing the notes.
- **Loop Sync on release.** Changes the behavior of the LOOP function when it's released, SYNC BAR: the sequence will continue on the next bar; SYNC BEAT, the sequence will continue on the next beat or step; NO SYNC, the sequence will continue exactly when it's released.
- **Reset track length when clearing.** If activated, the Sequencer or track length will be reseted to 16 steps when pressing Clear.
- **Reset track time division when clearing.** If activated, the Sequencer or track time division will be reseted to 1/16 when pressing Clear.
- **Pause enabled.** If activated, OXI One transport will have Pause/Play behavior, if not, only Play.
- **ARP behavior.** Latched (or sequencer mode) or Normal (Non Latched)

LAYOUTS



preview

· KEYBOARD

It shows the keyboard layout on the grid. Each Sequencer mode has its own dedicated Keyboard layout.

Different columns of pads will be highlighted on the grid depending on the scale selected, to act as a visual guide of filtered notes. Each column represents a semitone, moving vertically jumps an octave up and down. The encoders in this mode modifies:

Keyboard			
Vel	Bend	Pres	Expr
70	0	0	12

Velocity

Pitch Bend

Pressure/Aftertouch for the configured **Cv outputs**. Pressure knob also works as a GLIDE control for better performability with modular gear over CV.

Mod Wheel by default or the selected active **CC**.

Press **Rec** to record notes when **Play** is active. You can adjust quantization and other parameters pressing **Shift + Rec**.

Keyboard, including arpeggios, sends any number of notes pressed. This means the Mono keyboard can be used to perform over polyphonic synths without issues, the limit is set by the synth or sound engine being controlled.


Specific Keyboard layouts for Chords and Multitrack modes will be explained on their sections.



ARP:

In Keyboard view, press **Arp** to enter the arpeggio menu. Each Sequencer has one arpeggio that can be playing independently of what is playing on the Sequencer.

Turn it ON with encoder 1 and continue turning CW to choose the arpeggio algorithm. The name is displayed on top of the screen.

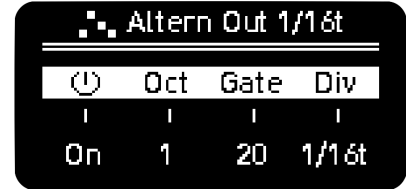

Encoder 2 changes octave range. Positive values add upper octaves, negative values can change octaves up and down.

Encoder 3 changes gate length.

Encoder 4 for time division.

- Arpeggio only works when **Play** is on, independently if the Sequencer is active or not.

Press **Rec** to record the arpeggio on the Sequencer (it does not work for arpeggiated chords in Chord mode).

*In a Polyphonic Sequencer and with overdub on,
you can record several layers of the arpeggios played.*

Shift + Arp activates **Hold**. This way you can add and remove notes of the arpeggio without having to hold them manually. If an arpeggio is held, exiting the Keyboard view or changing Sequencer won't turn it off, this way you can have 4 arpeggios held at the same time.

*Use **Hold** with ARP off to create **drones**.*

*If an arpeggio is held, exiting the Keyboard view or changing Sequencer won't turn it off, this way you can have **4 arpeggios** on at the same time, independent of the sequences.*


CV GATE

Shift + LFO opens the **CV Gate** grid layout.

This mode is shared by all Sequencers to avoid overlapping routings.

There're 8 cvs and 8 gates that can be fully configurable in real time with playback on, this means you can use this layout as an innovative tool for performance. You can turn on/off outputs, change voice or Sequencer, modulation source or clock division with the press of a button.

The diagram below explains how the layout it's distributed.

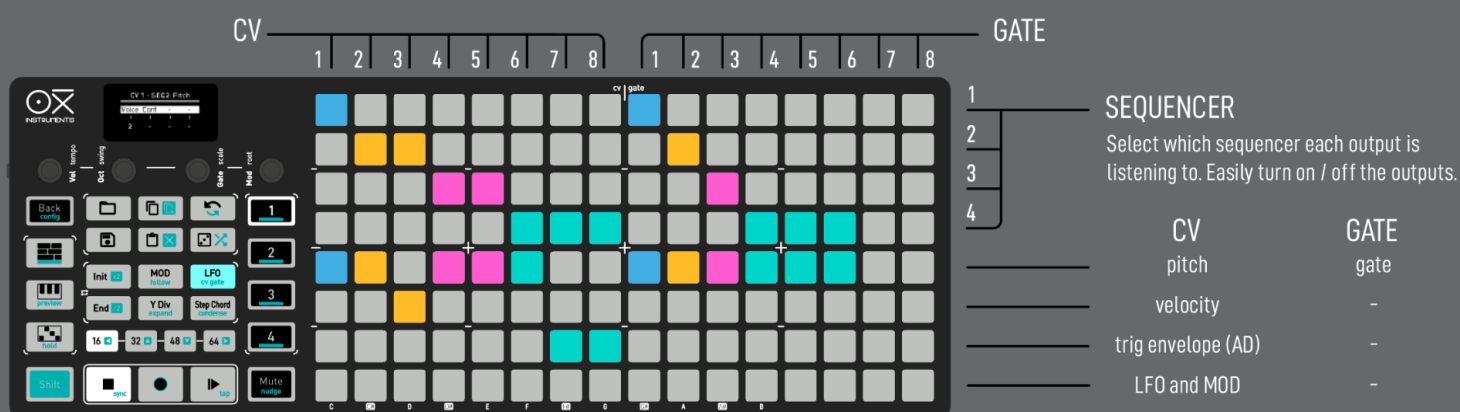

WORKFLOW

1- Sequencer selection:

The first 4 top rows select which Sequencer is providing the source, 1 to 4. Pressing again on the active pad will turn off the corresponding output.

Tip: you can use this layout to create transitions in your performances adding and removing voices and rhythms. Pressing on a highlighted sequencer turns it OFF.

2- Control signal selection:

Once you have selected the sequencer that will be sending information through this CV or Gate, you need to choose which type of control signal this CV or Gate will output.

There are the following available options:

ROW from the top	CVs	GATEs
5	Pitch	Gate
6	Velocity	-
7	Trig Envelope	-
8	Modulation	-
	- Sequencer LFO	
	- Sequencer Modulation lanes	

By default, the pitch of the first voice (or track if it's a Multitrack mode sequencer) is selected when activating one CV or the Gate of the first voice/track when activating one Gate.

The selection is remembered if you change the sequencer source but it's cleared when you remove the sequencer.

Pitch routing

Each Sequencer mode has a different amount of voices available that you can route to the CVs and Gates:

- Mono 1 voice
- Chord up to 8 voices
- Polyphonic up to 7 voices
- Multitrack up to 8 voices (1 per track)


Pitch, Gate, Velocity and **Trig Envelopes** modulation sources are correlated by **voice number**. After selecting one of these sources you can choose which voice it reads from with the first encoder, for example:



If the cv is set to pitch, the second parameter offsets the note per semitones and the fourth parameter specifies the cv voltage format.

To carry a typical modular voice you need to choose the same Sequencer and voice number for Pitch and Gate, velocity and Trig Envelope.

Example: to output three independent chord voices in the sequencer 2, if we start from the mostleft CVs and Gates, the CV routing layout will look like this:

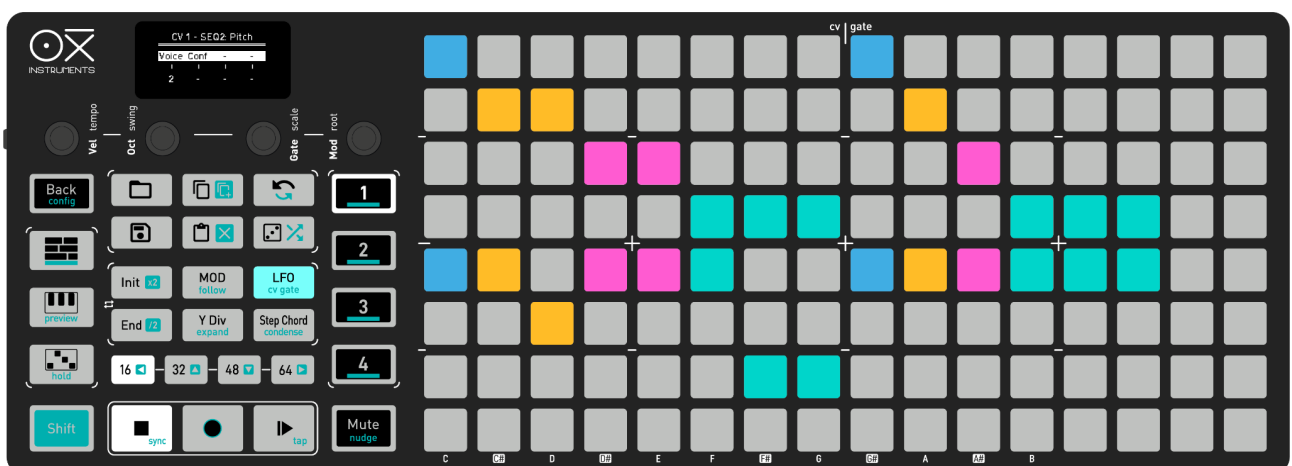

One of each CVs and Gates requires a different voice selected, from 1 to 3. CV1-3 have voices 1-3 of sequencer 2 assigned.

This method allows you to choose the amount of voices and which CVs do you want to route them through. Sequencing chords and polyphonic melodies on your modular synth is very straightforward and as flexible as it can get because you can select the number of voices you want to output. In case of having fewer CVs than the total available voices for Polyphonic and Chord modes, the voices will be sorted by the last played.

You can also output the same signal through different CVs , for example the Trig Envelope of the same voice through 2 different CVs and each envelope with different attack or modulation parameters.

Velocity routing

Same as pitch but for the voice velocity information. Velocity is assigned to the CVs the same way as pitch but with the 7th column starting from top.

CV 4 - SEQ1: Vel				
Voice Gated				
1	2	3	4	5
1	Off	-	-	-

If the cv is set to vel, the second parameter chooses if gated behaviour or not:

- Gated: the voltage is proportional to the note velocity until the end of the note, when it goes back to 0V.
- Not Gated: the voltage of this output is always proportional to the velocity of the last note.

TRIG ENVELOPE

In OXI One we have introduced Trig Envelopes, an Attack-Decay envelope that changes dynamically with the Velocity and Gate of the step. By default, the amplitude of the envelope is proportional to MIDI velocity and its Decay is proportional to MIDI gate length. The Attack can be modified.


CV 1 - SEQ3: Trig Env				
Voice Attk AmpM AtkM				
1	2	3	4	5
1	7	-	-	-

This implementation tends a bridge between MIDI and CV messages, by having a dynamic envelope ready to modulate parameters of your modular synth like VCA, LPG, LPF and any other fun acronyms on your rack.

*You can apply modulation and/or randomization to Gate and Velocity
to also modulate Amplitude and Decay of the Trig Envelope.*

MODULATION

The last source for modulation, at the bottom row, are the **LFOs** and the **Modulation Lanes**. When selected, the 1st encoder lets you choose from the LFO or Mod 1 to 4 (1 to 8 on Multitrack sequencers) as source. These are configured respectively on the LFO and the CC Configuration screens, visit their respective sections to know more.

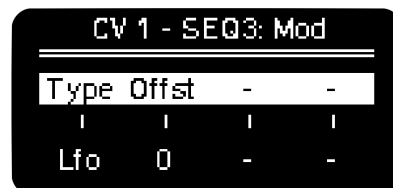

CV 1 - SEQ3: Mod	
Type	Offset
Lfo	0

LFO works independently of the parameter destination set on its configuration screen, and Mod responds to CC per step value, motion recording and On/Off behavior.

You can perform over your LFOs and CCs routed to MIDI (USB, TRS and BLE) and CVs at the same time, that means you can create automation, record envelopes manually, offset them and turn them On/Off affecting all MIDI parameters and CV outputs you want.

By default LFO is bipolar centered on 0V and the Mods are unipolar.

Additionally, both the LFO and the Mod Lanes have an Offset control using the 2nd encoder, with it you can raise or lower the voltage range of action, independently of the amplitude until you reach either -3V or +5V.

MIDI to CV conversion

OXI One does **MIDI to CV** conversion from external MIDI being TRS, USB or Bluetooth. To do so, just configure the MIDI channel of the Sequencer routed to the CV and Gate outputs you want to use.

To convert external (MIDI in) or internal (OXI One) CC messages to CV, configure the desired CV output in the bottom row of CV Out layout, where you can select the internal LFO or Mod number as modulation source. Mod is linked to a CC number you can select. To know which CC number corresponds to each Mod see CC Configuration.

CVs and gates come calibrated, but if you need to recalibrate, please follow the instructions on Calibration.

CV to MIDI conversion

OXI One has one CV input (Clock In) that can be routed to either internal parameters or be sent to external CC. Double press **MOD** button to access this menu and select the destination.




ARRANGER & STORAGE

This is the place to create your Songs, link several patterns or launch them manually.


To activate the Arranger playback hold **Shift + Arranger**, you'll see "Arranger ON" on the screen.

The Arranger is then ready for playback. Turn OFF Arranger from playing with the same command.

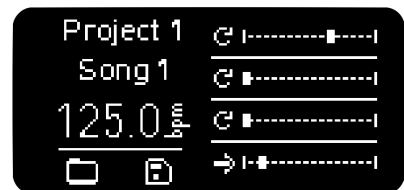

The bottom 4 rows of the grid are a 16 position sequence for each Sequencer respectively, so you have 4 lanes of pattern playback. The top 4 rows are the Memory Access where you can see the saved patterns of the 4 Sequencers.

To add a pattern on the arranger, simply hold its slot pad and press a pad in the desired position of the corresponding Sequencer lane of the arranger.

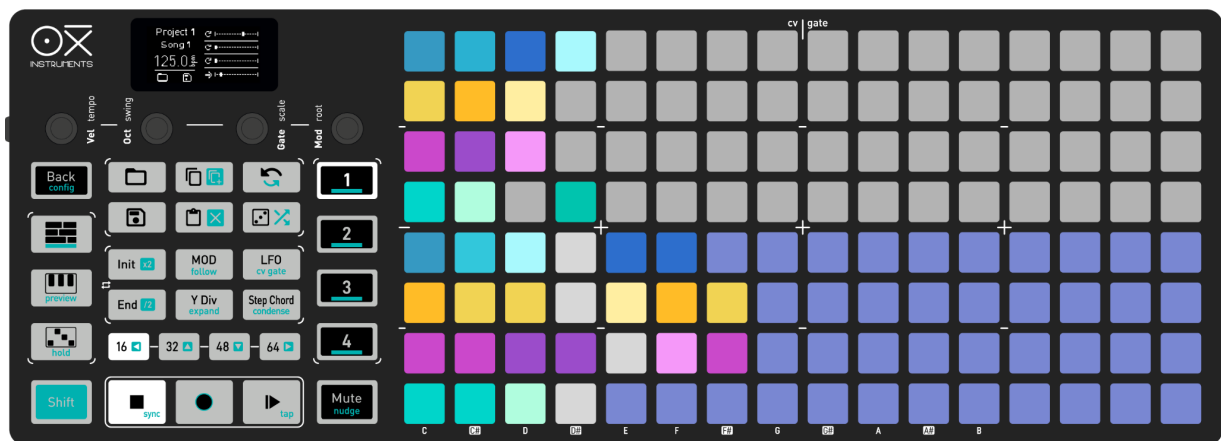


If there's a gap between the last arranger slot when adding a new pattern, the middle slots will be filled with blank patterns. **Blank patterns** don't play any notes or modulation and serve as silence or separation between patterns. Their duration is one bar (16 steps at 1/16th) and the number of repetitions of it can be changed, so one single blank pattern can be set to a number of repetitions or loop to infinity. Blank patterns are highlighted in white.

Setting blank patterns on a lane with infinite repetitions allows you to have parts where one sequencer stops sending notes until you manually launch the next pattern of your song.

Empty slots, that is any patterns with 0 repetitions, will be simply skipped.

Hold a pad of the arranger to see the parameters of the pattern step, that is **Program Change**, **Color** changes the color for all the pads that plays the same stored pattern so you can easily spot them,

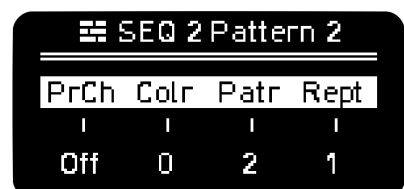

Pattern being played and **Repeats** of that pattern in that position, up until **infinite** repeats of the pattern (after 19 you will see the infinite icon displayed).

*To set the Arranger ready for playback press **Shift** + **Arranger**, you'll see "Arranger ON" on the screen. The Arranger then ready for playback. Turn OFF Arranger from playing with the same combination of buttons.*

On the main screen you can see on the right the countdown for each arrangement track pattern to change to the next one and a progress bar of it. If the current pattern is looped a round arrow will indicate this.

Songs are saved states of the Arranger, that means you can save and recall structures of sequenced patterns per Project. Any unsaved changes to the patterns being played won't be saved on your Songs.

Any time you save a Pattern or a Project, the current Song will be also saved.

IMPORTANT: Be sure to save all your changes in your patterns because every time a new pattern is automatically loaded by the arranger, changes are lost.

CLIP LAUNCH

Hold Shift and press one pad per arrangement track to launch that pattern when the current one ends. This is helpful to have patterns looping until you want to launch a new part of your song in real time.

• MOD - CC PERFORM

Press the **MOD** (modulation) button to enter **CC Perform** mode. This mode is independent and configurable per Sequencer. On it, the encoders send values over MIDI CC values, so you can control with the 4 encoders at the same time any external parameters of any DAW, hardware synthesizer or sampler, modular synth or mobile apps. We call it **Modulation Lanes**.



In this mode, press the **encoder button** to turn ON/OFF that CC, preventing it from sending messages, the CC will keep its current value. Any twist of the encoder will turn it ON again and jump to the previous value.

Press **Shift + encoder turn** to choose which CC number that encoder sends. Each encoder modifies **Mod 1-4**. The set of CCs is different per Sequencer Mode, up to 32 CCs in total.

In Multitrack mode there are 8 modulation lanes, one per track. How can you modify the 8 values? If the selected track is one of the first four (1 - 4), the CC Perform menu will show the modulation lanes information of the tracks 1 to 4. And if the selected track is one of the last four (5 - 8), it will show the information of these last four.

The last selected/touched modulation will be the one assigned to the Mod control (encoder 4) in the main Sequencer screen and also in Keyboard layout. In Multitrack mode the last selected track prevails and its modulation lane will be the one assigned to this 4th knob.

In the step menu, as well as the velocity, octave, and gate, the value of this selected modulation lane can be edited.

In addition, when in CC Perform screen, holding a step on the sequence lets you modify all 4 CC values in that step.

You can also edit CC step values in a more performative way with Motion Recording.

MOTION RECORDING

The value changes of the CC values can be recorded in real time by pressing the **Rec** button on CC Perform mode. Play along the sequence to record the movement of the encoders. This will create a looping automation envelope as long as your sequence goes.

Moving the encoder offsets the range of the motion: if the range was 30-100, turning the encoder 20 to the left will result in a 10-80 rang

Same as above, press any of the encoder buttons turn OFF that motion, the CC value . Twist the encoder to turn ON and continue the motion.

In Multitrack mode, each track has 1 CC available, making a total of 8 that can be recorded.

The CC automation can be routed to any CV output (see CV Out configuration)

The CC automation is set by step. To avoid having jumps on values, the CCs are smoothed with interpolated values. The curve that defines the smoothing can be adjusted in configuration.

SEQUENCER MODES

GLOBAL PARAMETERS

In any mode and in general, there are global parameters and per step parameters. To modify the global parameters, use the encoders, adjusting the **Velocity**, **Octave**, **Gate** and **Mod**; **Swing**, **Scale** and **Root** with SHIFT + encoder.

The global parameters Velocity, Octave, Gate and Mod act as an offset of the step parameters when the steps have different settings, showing instead the minimum and maximum step values. For example, the velocity of your sequence ranges from 50 to 110 (MIDI values range from 0 to 127), then moving the global velocity CW will give you +1 increments on all the steps (51-111, 52-112 ...).

When the maximum or minimum value is met and passed, the extreme values will be limited and this range will be reduced, from our example before that would be 100-127 with an increment of 50 points. Reducing the global value again will keep the new range, returning to the example that'd be 80-107 with a decrease of 20 points.

With this implementation you can perform over global parameters without overwriting individual values per step, and by reaching extreme values with the opposite one, you can quickly set the same value for all steps again.

This behavior happens also when the values are automated with randomization and LFOs, so it acts as an extra offset/limiting control.


In Gate values, after the maximum value of 100 you have LEGato, in which consecutive notes will play with virtually no time separation between each other. After it you have TIE to set a step as a tied note alternatively to the method seen above.

MODULATION LANES

Every Sequencer has 4 Modulation Lanes except for Multitrack that has 8 (1 per track in 2 banks of 4), to access them press the 4th encoder that shows CC Perform. These 4 modifiers can be configured in the CC Configuration screen. Each Lane has a value per step that would be saved with each Pattern.

In CC Perform each encoder acts as a global control of each modulation lane. When playback is active, you can hit the **Rec** button to record per step changes live by turning the encoders. When recording is stopped, the encoder acts as an offset of the automation recorded, this way you can perform over your manually recorded envelopes.

The last Modulation Lane used before exiting CC Perform screen will be set as the global Mod control of the 4th encoder, so you still have access to one modulation lane on Sequencer view and it's user configurable so you are not stuck with Mod Wheel as a mapped control if you don't need it. **Mod Wheel** is the default Mod.

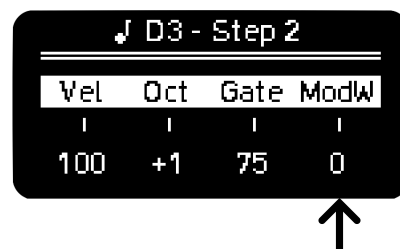

This configured **Mod** can then be edited **per step** manually, and you can iterate between each mode to edit them per step.

In Multitrack, CCs are linked to each track with independent length and division, this allows to create odd timing modulations that can be sent to any MIDI or CV output.

• MONO

Mono mode is a great place to create the leads of your song, perform or automate them.

In Mono mode, every row represents the note position according to the selected scale, starting from the selected root note. For example, in the C Major scale, steps would be C, D, E, F, G, A, B and C in a higher octave.

There's up to 128 steps, review [Init and End](#) function buttons to recall how to change the length.


To enter notes, short press on the pad you want to set on. To remove them, short press on the active pad. You may enter or remove several notes at once by doing this.

- Remember to use **DIV** and first encoder to scroll up/down to reach higher/lower notes. The row being highlighted is your root note.

When one note is on a higher or lower octave, a led will light up on the top or bottom row indicating the higher or lower pitch, the note will be also visible on its respective row, so it helps you to have all the notes at sight and controlled.

You can have notes that are longer than a single step by adding **TIEs**. To enter a TIEd note, hold the first step you want to activate, and press the last step you want the TIE to be active on the same row (note that this action requires to hold the first note for a bit of time before pressing the second, otherwise you activate Multipress edition, see below). The same action also removes TIEd notes.


You can quickly **transpose** the whole sequence by holding the respective Sequencer button and pressing an empty note higher or lower than an active one. The distance from the active note to your pressed pad in the column will dictate the transposition direction and distance.

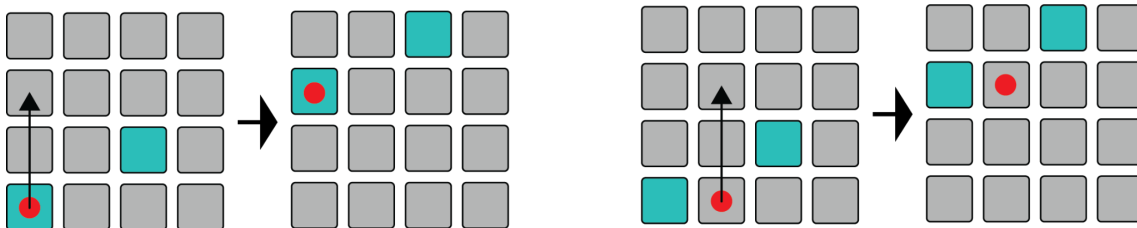

STEP PARAMETERS

Hold one or more notes at the same time (active or not) to see their step parameters and the note information. You can change with each encoder the **Velocity**, **Octave** (a pad will light up on the edge of the column as indication of decentralised octave),

Gate and the **Mod** defined in the section above, by default it sends ModWheel.

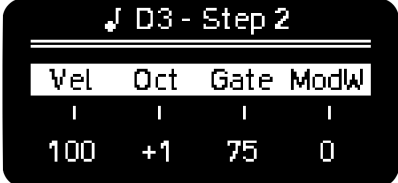


D3 - Step 2			
Vel	Oct	Gate	ModW
100	+1	75	0

- You can copy/paste parameters between steps.

With **Step-Chord** activated, holding a step will take you to the Step Submenu.

In this screen you can modify the following parameters:

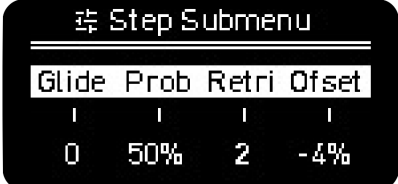

Step Submenu			
Glide	Prob	Retri	Offset
0	50%	2	-4%

Glide, it sets the time of the pitch to change continuously between two consecutive notes.

Trig, or how we call it **Trigger Logic**. There's two behaviors:

- By default it's set to 100%, that means that the step has a 100% chance of playing when triggered. Turning the second encoder CCW lowers the probability of the step being triggered at each pass of the transport bar.
- Turning the encoder CW will take you to **A | B** logic triggering. **A** and **B** are numbers in which B sets the number of bars and A in which of those bars the note is triggered. For example 3 | 4 means that the note will be triggered on the 3rd of each 4 bars. This tool is handy to create longer patterns or launching samples every once in a while and not in every loop.

Retrig, sets the times the note is triggered during the step duration, up to 5 times. For better resolution change the Time Division of the Sequencer or Track.

When fully CCW you get to **SKIP**, if selected the step timing will be ignored by the transport bar, thus making the sequence length shorter.

*Use **Skip** to abruptly change the timing and feel of the pattern.*

Randomize Skip steps to get different sequence lengths every bar by adding and removing notes, in Retrig on Random Perform screen.

Offset, sets the time deviation of the note from -40% to 40% of the current time division. $\pm 25\%$ is a quarter deviation from the duration of the step.

When recording live from the keyboard or using external MIDI, the quantization percentage on the Recording menu sets the time offset of the notes. If quantization is set to 100% the offset will be 0%, other than that it'll be more or less exact to the grid.

KEYBOARD

Check the [keyboard](#) and [ARP](#) section to know more.


• CHORD

In Chord mode, each pad triggers an up to 8 notes chord, every grid row represents by default, each degree of the selected scale. For example, in the C Major scale, from bottom to top the rows would represent Cmaj, Dmin, Emin, Fmaj, Gmaj, Amin, Bdim.

CHORD EDITING

Chord mode was built around the premise of being an inspirational and learning playground. You can create from simple triad progressions to complex chord progressions with all kinds of tensions, inversions and all that related to the scale degrees, in a very intuitive manner.

You can quickly **transpose** the whole chord progression by holding the respective Sequencer button and pressing an empty pad higher or lower than an active one. The distance from the active note to your pressed pad in the column will dictate the transposition direction and distance.

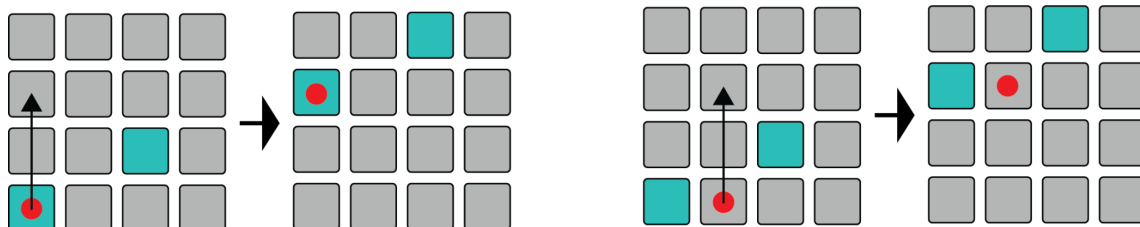

STEP PARAMETERS

Hold one or more pads at the same time (active or not) to see their main step parameters and the chord information. You can change with each encoder the **Velocity**, **Octave** (a pad will light up on the edge of the column as indication of decentralized octave), **Gate** and **Mod**, by default it sends Modulation Wheel and can be changed on CC Configuration.

↓ E3 minor			
Vel	Oct	Gate	ModW
100	+1	75	0

You can change the chord of every step in the chord menu. In order to do so, press the **Step-Chord** button (blue light) and press the desired step, the chord menu will show up.

The second encoder sets the chord **Type**, by default it has the triad of the corresponding degree. The inversions are then set for every degree to ensure the chord voices are more musically balanced. Chords are ordered from less to more complexity (with complexity we mean the number of voices and tensions). Suspended 2, suspended 4 chords and fifths and octave intervals appear later.

Type	Voicing
E 7 sus4	Open Voic
E 7/9 sus4	I Invr
E min 11	I Open

The third encoder, sets the inversion or **Voicing**. The options are no inversion, Open, Open 1st and 2nd and Inversion 1st and 2nd.

A second press on **Step-Chord** button (white light) will enable the step submenu, which can be seen by holding one or several steps at once. In this screen the parameters available for edition are:

Strum, it ranges from -100 to 100. Positive values introduce a time separation between notes that goes from lower to upper notes, in negative values it goes from upper to lower notes. This effect sounds like strumming guitar strings.

⚙ Step Submenu			
Strm	Prob	Retri	Offset
6	2 4	No	-4%

Trig, or **Trigger Logic** explained [above](#).

Retrig, sets the times the note is triggered during the step duration, up to 5 times. For better resolution change the Time Division of the Sequencer or Track. When fully CCW you get to **SKIP**, if selected the step timing will be ignored by the transport bar, thus making the sequence length shorter.

Offset, sets the time deviation of the note from -40% to 40% of the current time division. 25% is a quarter deviation from the duration of the step and $\pm 50\%$ is half the step.


SHIFT + Step-Chord takes back to main step screen editing

STEP-CHORD BEHAVIOR

- First press -> enables chord menu
- Second press if there hasn't been any chord modification in the menu -> Substep menu
- Second press if there has been any chord change from the menu -> Back to normal step editing
- Shift + Step-Chord: Back to normal step editing

KEYBOARD

The keyboard layout includes a large amount of intuitive shortcuts and tools to make playing chords equally fulfilling for the experienced music theorist as for the inexperienced ones, learn and explore without barriers.

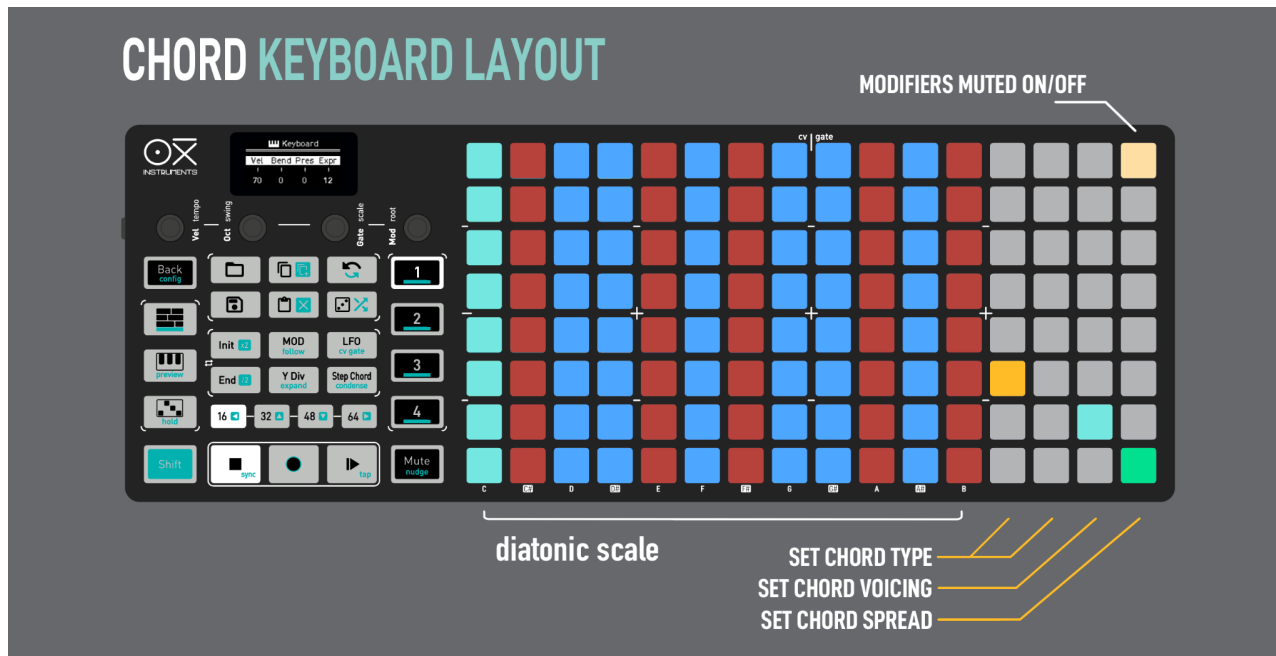

The keyboard is split in two sections, the first 12 columns of the Grid are the perform area that triggers the chords. Each pad is defined by the root note of the chord it triggers. Each column is a semitone filtered by scale, moving vertically is an octave up or down.

The second section is from the 13th column to the end.

13th and **14th** columns select the chord given the scale and the root note played.

15th column selects the voicing of the played chord.

16th selects the spread of notes in the chord. Remember you can play up to 8 notes.

Top right pad toggles between the modifiers of this section to trigger chords when pressed or not.

You can **arpeggiate** the played chords on the **ARP** screen.

Hold **Step-Chord** button while in Keyboard to access Global Chord settings, the parameters are the following:



Spread affects the sequence globally, it increases the voices of all the chords (limit of 8 notes) with higher octave notes of each grade by ascendant order.


Type affects the sequence globally, it changes the type of all the chords, offsetting them depending on their position per step.

Voicing affects the sequence globally, it changes the voicing of all the chords, offsetting them depending on their position per step.

Bass affects the sequence and the keyboard globally, it adds a lower octave note of the root of all chords. The bass note has preference over spread on the 8 note limit.

▪ MULTITRACK

The Multitrack Sequencer is one of the biggest values of the OXI ONE, with its 8 separate tracks it's perfect for drawing drum patterns or monophonic melodies as well to have direct control of them in one layout.

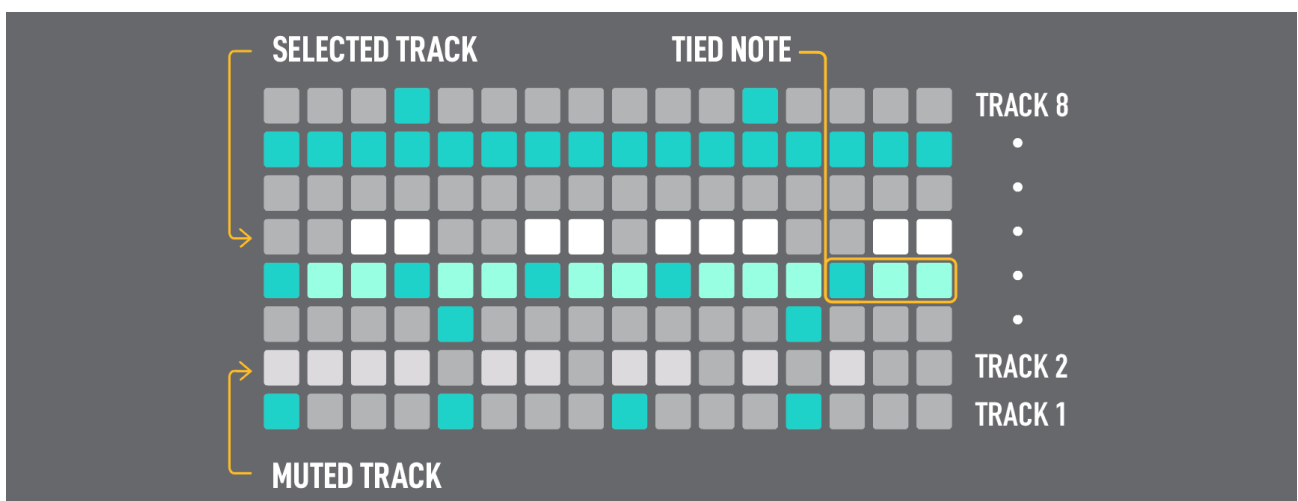

Every row represents a separate track, which is a monophonic sequence with independent Init/End steps and length, up to 128 steps. A MIDI channel can be assigned to any of the tracks and several tracks can share the same midi channel. The pads can be used to trigger a Drum Kit or samples in general, or even extra melodic lines. This means several up to 8 steps can be activated per column.

There are shortcuts for **Mute** and **Solo** tracks, as well as to enable/disable tracks from being affected by random and LFO modulation:

- MUTE + 1st column: Mute/Unmute the respective tracks
- MUTE + 16th column: Solo/group Solo/no Solo the respective tracks


By holding the **RANDOM** or the **LFO** button the grid will show the 1st step of every track in yellow and orange respectively, this indicates which tracks are affected by Randomization and LFO parameter changes. By default all tracks are enabled.

In Multitrack mode instead of Random Octave you have Random Gate, it doesn't affect the TIEs.

For example, this is handy to use the LFO to send pitch modulation on a hi-hat track and not affect other tracks.

MULTITRACK EDITION

In this mode, the function buttons affect the selected track. This way you can copy, paste, duplicate, extend, clear, x2 / /2 the time division, activate the randomizer, rotate and transpose per track.

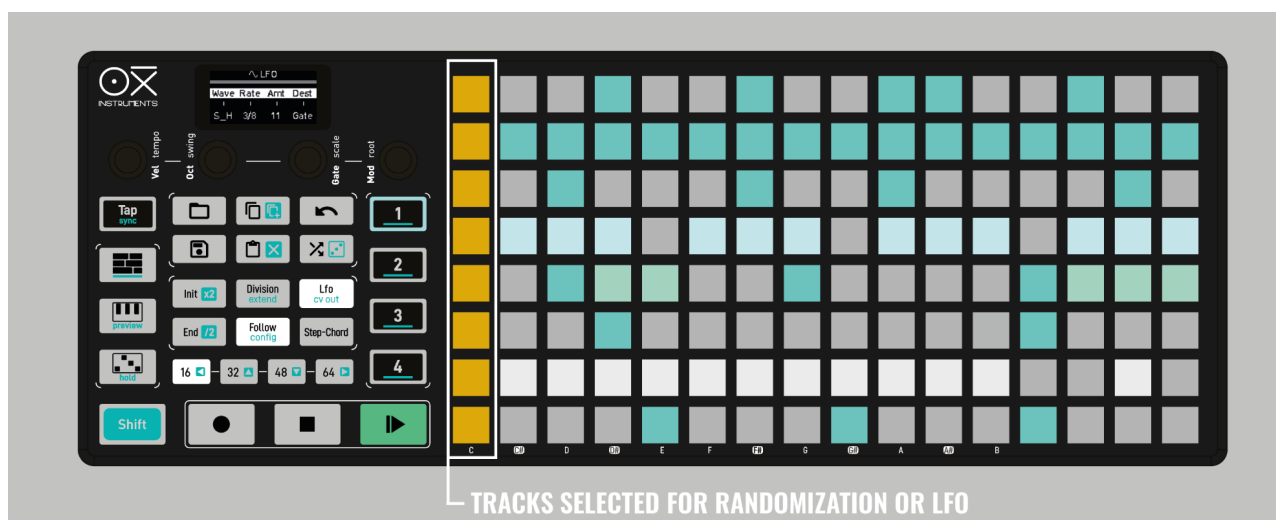


In the case you want to use these functions **to affect ALL tracks** at once, this means clear all tracks, extend all tracks, randomize all tracks, rotate all tracks, etc. **press FIRST** the respective **Sequencer button** and then the regular button commands.

For example, **Randomizer** (Random generator) on a track (SHIFT + Random) creates a Mono sequence on the selected track by randomizing the pitch, gate, velocity and time offset; Randomizer on ALL tracks (Seq button + SHIFT + Random) creates a rhythmic pattern on all tracks, keeping the same note per track, ideal for drum kit use. It randomizes the triggers, gates and offsets of all tracks.

A row pad + SHIFT + Random: randomizes the velocity of the steps of the selected track.

TRACK PARAMETERS

Each Track has its own Init and End points, with individual length and time divisions. Review [Init and End](#).

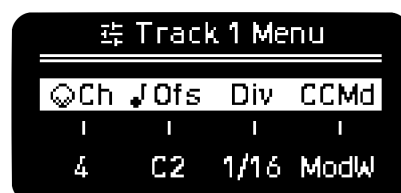

To access Track parameters hold any pad on the desired track and hold the Sequencer button in which Multitrack is active. This menu is momentary while the keys are being pressed so you are back as soon as you make changes and release the buttons. We recommend using your right hand to press the two buttons and the left to turn the encoders. In this screen you can modify:

Track MIDI Channel. By default all tracks are routed to the global MIDI channel of the Multitrack Sequencer, change this parameter to send each track on individual or grouped MIDI channels to have total flexibility.

Note Offset changes the base note of all the steps of the track, by semitone on chromatic or by degree in any other scale. It's useful for setting drum racks or samplers.

Time Division per track. We'll expand this later on.

Modulation assigned to the track. You can scroll through all CC assignments, the default is Mod Wheel. The selected Mod will be then modifiable on the 4th encoder in the Sequencer view as a step parameter, or you can motion record the encoder movement on CC Perform screen.

DIVISION

In Multitrack, Division menu parameters are set per track. This means you can select:

Track Selection to choose which track you are editing on the same screen.

Playback Direction of the track, being Forward, Backward, Pendulum and Random.

Division Randomization of the track, from 0 to 100% of probability each step that the track's Time Division is going to change.

Time Division of the track. This is the same value that the Track Menu screen seen above.

You change **all** track's Time Division at once by holding the Sequencer button and then press SHIFT + **Init** **x2** or **End** **/2** to duplicate or split all the Time Divisions by two with each press.

Hold **Init** and **End** and any two steps to create a **LOOP** of all tracks between those steps. The different time divisions will create rhythmic and melodic variations.

MUTE + double press the Sequencer button will reset all tracks to step 1 following the Punch In quantization timing selected.

If Punch In is Off, the reset will be instant.

STEP PARAMETERS

Hold any step of any track to access its parameters. Here you can modify per step:

Velocity and **Gate** as in other modes.

Note, as we don't have a Piano Roll view, you can edit the notes manually, the values depend on the active scale.

Step 2 - Track 3			
Vel	Note	Gate	ModW
100	D2	75	0

Modulation, here you can change the selected CC on Track Menu screen per step, by default is Mod Wheel.

When **Step-Chord** button is active, holding a step will take you to the **Step Submenu**, here you can edit:

Tglid or Track Glide. As the name suggests, this is a track parameter. It changes the time it takes for the continuous pitch to reach the next note.

Note that the sound engine must support pitch bend in order to work.

Trig or **Trigger Logic**, same as explained before.

Retrig sets the times the note is triggered during the step duration, up to 5 times. For better resolution change the Time Division of the Sequencer or Track.

When fully CCW you get to **SKIP**, if selected the step timing will be ignored by the transport bar, thus making the sequence length shorter.

*Use **Skip** to abruptly change the timing and feel of the pattern.
Randomize Skip steps to get different sequence lengths every bar and adding and removing notes,
in Retrig on Random Perform screen.*


Offset, sets the time deviation of the note from -40% to 40% of the current time division. $\pm 25\%$ is a quarter deviation from the duration of the step.

KEYBOARD

In Multitrack Keyboard you can perform all tracks at once as a drum kit or each track individually with the full keyboard with the press of a button. There's also handy shortcuts for soloing and muting individual tracks.

1st to **12th** column is the perform area. It changes from 8 pads highlighted, one per track, to play as a drum kit; or a full keyboard when Arm Track is active (14th column).

MULTITRACK KEYBOARD LAYOUT

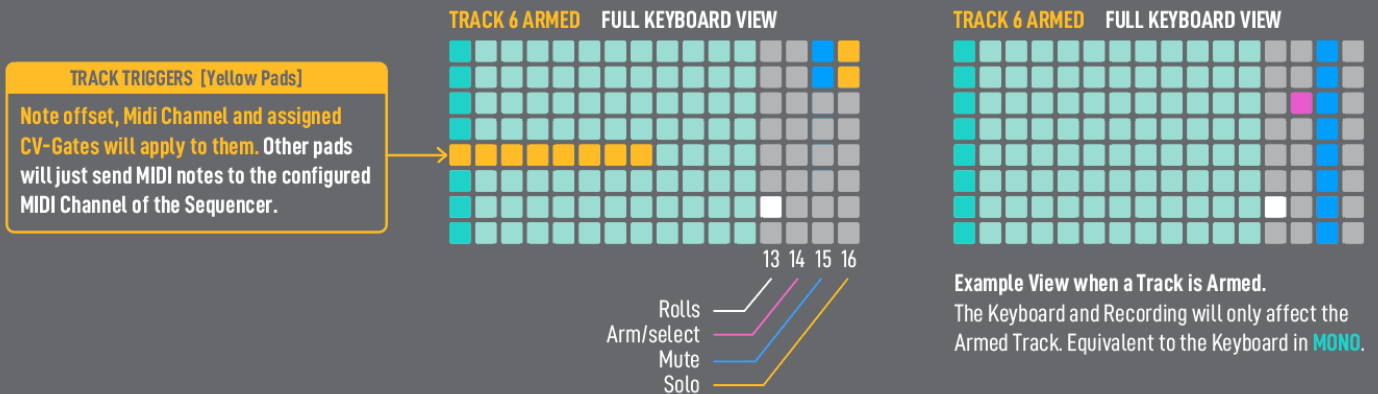

13th column is **Roll** rate selection. From bottom to top the rate of the rolls increase:

14th column selects **Arm Track**. Without any selection and by default, the 8 highlighted pads play each track (track trigger). If you select one track in this column, the keyboard will play as a regular full keyboard on that track (remember MIDI channel can be set differently per track).

Activate Recording without any armed track to record with the track triggers as a drum pad. Arm a track to play over polyphonic synths. Review the [Rec menu](#) to take full advantage of the features.

15th column is **Mute** per track.

16th column is **Solo** per track, pressing several pads of the column makes Solo groups.

*With HOLD active, you can arpeggiate each track indepently of each other
and from the sequence played at the same time,
making OXI One capable of having up to 32 tracks plus 32 arpeggios.*

• POLYPHONIC

Polyphonic allows you to have total freedom of up to 7 notes per step and up to 128 steps.

STEP PARAMETERS

- Glide (only affects the cv outputs set to pitch)
- Probability per note
- Retrigger per note
- Micro offset per note
- Velocity per note
- Octave offset per note
- Gate per note
- 4 modulation lanes per step

Notes can be TIED through different steps.

To enter the same note with different octave offsets you will need to get into the **Y Div** menu and use the first encoder to move the grid vertically.

You can copy chord Sequencers into polyphonic ones to fine tune your chord progressions.

• HARMONIZER

Harmonizer mode is a scale setting for Mono, Polyphonic and Multitrack Sequencer modes (Followers), in which the pitch of the notes is taken from the active chord on a Chord Sequencer (Leader) instead of their Sequencer itself. This works as follows: the rhythm and the pitch trend is set on the Piano Roll of the Follower Sequencer, but the final pitch is based on the active chord progression of the Leader

In this mode you are not only in key, but any changes applied to the chord sequencer will affect the rest of the sequencers with Harmonizer on, for example, changing the scale, transposing the chord sequence, or playing directly on the powerful Chord Keyboard. Transposing the Followers also keeps the harmony.

To access it, set a Chord mode in any Sequencer, this becomes the leading chord sequence. When you meet the condition above, the rest of the Sequencers will show **HARMON** as a scale option on the leftmost slot, followed by "sq #" # being the number of the Sequencer with the Chord mode; (note that the octave parameter is shown on the bottom right corner of the screen). Change the scale to it and the respective Sequencer will follow the notes of the active chord progression on. To change the "Leader" sequencer on any track, press SHIFT + turn the 4th knob (like for root note).

In order to keep the last chord played from the keyboard, the "Leader" Chord Sequencer has to be deactivated/off. Keyboard hold works as expected.

If the "Leader" Chord Sequencer is running, playing a set of chords and the user triggers a chord in the keyboard mode, the latter will have preference over the chords of the sequence.

SHORTCUTS

Turquoise represents the secondary color, all secondary functions are triggered/accessed by **SHIFT button.**

GENERAL

- Long press Sequencer 1-4: Sequencer configuration screen
- MUTE + Sequencer 1-4: Turn On/Off the sequencer for playback
- **SHIFT** + Keys (Preview): Turn On/Off preview to listen the pressed notes on the sequencer view
- Step + Copy: Copy selected step parameters
- Step + Paste: Paste selected step parameters
- Sequencer 1-4 + Copy: Copy selected Sequencer
- Sequencer 1-4 + Paste: Paste selected Sequencer (It behaves differently depending on which modes are both the copied and the pasted Sequencers)
- Page button (16, 32...) + Copy: copy page (16 steps)
- Page button (16, 32...) + Paste: paste a previously copied page
- **SHIFT** + Mute: Nudge Menu

ENCODERS

- 1st encoder turn: Set Global Velocity
- 2nd encoder turn: Set Global Octave Offset
- 3rd encoder turn: Set Global Gate
- 4th encoder turn: Set Global CC Modulation
- **SHIFT** + 1st encoder turn: Change tempo
- **SHIFT** + 2nd encoder turn: Change sequencer swing
- **SHIFT** + 3rd encoder turn: Change sequencer scale
- **SHIFT** + 4th encoder turn: Change sequencer root note of the scale
- **SHIFT** + 1st encoder press: Back to the stored project tempo
- **SHIFT** + 2nd encoder press: Reset swing (no swing)
- **SHIFT** + 3rd encoder press: Reset scale to default: chromatic
- **SHIFT** + 4th encoder press: Reset root note to default: C

MONOPHONIC, CHORD AND POLYPHONIC

Piano Roll

- Sequencer 1-4 + any pad not active : Transpose the sequence (MONO & CHORDS) distance and direction set by the pad pressed (NOT IN POLY)
- Init + End + two steps: LOOP activated between the pressed steps.
- Double click Page number: Access to 80, 96, 112 and 128 Pages respectively
- Init + Page button (16, 32..., press twice to access longer Pages; 80, 96...): Select the first step of the selected page as the initial step of the sequencer.
- End + Page button (16, 32..., press twice to access longer Pages; 80, 96...): Select the last step of the selected page as the end step of the sequencer.

CHORD

Keyboard

- 13th and 14th column: Chord inversion
- 15th column: Chord voicing
- Top right pad: Modifier triggering On/Off
- 16th column: Chord spread

MULTITRACK

- Sequencer 1-4 +  : Delete all tracks
- Sequencer 1-4 + any step of a track: Track configuration

Piano Roll

- MUTE + 1st column: Mute/Unmute the respective tracks
- MUTE + 16th column: Solo/group Solo/no Solo the respective tracks
- Hold Random, LFO or MOD (in ext Mod menu): 1st column toggles which track is affected by Random, LFO or external Modulation
- Paste + Step: Paste a copied Mono sequence into the respective track of that row

Keyboard

- 14th column: arm the respective track to have full keyboard for that track
- 15th column: Mute/Unmute respective track
- **SHIFT** + Random: randomizes pitch, gate, velocity, time offset of the last selected track
- Sequencer 1-4 + **SHIFT** + Random: randomizes the triggers, gates and offsets of all tracks
- Row pad + **SHIFT** + Random: randomizes the velocity of the selected track
- Sequencer 1-4 + Init / End + Step: Select the initial and end steps of ALL the tracks.
- Init + Page button (16, 32..., press twice to access longer Pages; 80, 96...): Select the first step of the pressed page as the initial step of the selected/highlighted track.
- End + Page button (16, 32..., press twice to access longer Pages; 80, 96...): Select the last step of the pressed page as the end step of the selected/highlighted track.

ARRANGER

- **SHIFT** + Arranger: Arranger On/Off
- **SHIFT** + Pattern Step(s): Jump to that Pattern(s) on the next bar

CC PERFORM

- Encoder 4 button: Enter CC Perform
- Encoder button: Turn On/Off the respective CC from sending messages

- Long press Encoder 4 button: Enter CC selection. Once inside, any encoder click selects the modulation

To exit CC perform o CC selection, press any function button.

RANDOM

- **SHIFT** + Random: randomize the whole sequencer.
- In Multitrack mode it randomizes the last selected track. Randomized parameters: pitch (& octave), gate, velocity and time offset.
- Use Sequencer button 1-4 + **SHIFT** + RANDOM to randomize all 8 tracks in Multitrack mode. Randomized parameters: Gate, velocity and time offset.

MIDI ROUTING

By default OXI One will *MIDI Thru* messages from one source to another. For example, the MIDI data received via Bluetooth MIDI (BLE MIDI) will be output through USB MIDI, TRS MIDI output and, if any CV/gate assigned to a sequencer, to the respective CVs or gates.

This means OXI One can act as a MIDI hub and-or a MIDI to CV converter for all kinds of setups and situations!

Thru messages from one source to another can be deactivated from the Configuration menu.

The MIDI data generated by OXI One will be sent to the corresponding MIDI channel through all the communication vias, say MIDI USB, MIDI TRS and MIDI BLE. This behaviour cannot be configured in the current firmware.

Each sequencer will listen to input MIDI data depending on the global configuration set in Config:

- If “MIDI In channel filtering” is **ON**, each sequencer will listen only to its **assigned MIDI channel**. This applies to recording, MIDI to CV conversion or MIDI transformations like note scale filtering, chord triggering or arpeggiation.
- If “MIDI In channel filtering” is **OFF**, only the **selected sequencer** will listen to the MIDI input messages and it will listen to **ALL MIDI channels**.
-

In case of a MULTITRACK sequencer, each track will listen to their assigned MIDI channel independently if channel filtering is ON.

OXI SPLIT

To use your OXI Split, first you have to enable it in the Config menu.
Go to the “OXI Split selection” option and choose “Enable”.

When the OXI Split is connected and set up, you can choose which port messages will be sent to.

MIDI Channels from **1A to 16A** will be outputted from the **PORT 1** of the OXI Split.
MIDI Channels from **1B to 16B** will be outputted from the **PORT 2** of the OXI Split.
MIDI Channels from **1C to 16C** will be outputted from the **PORT 3** of the OXI Split.

This way you have 48 MIDI channels at your disposal.

All received MIDI information will be sent through the **THRU port** of the OXI Split if the **Thru Setting** of that MIDI source (USB, TRS or BLE) is active in settings. (Not yet implemented).

The Split MIDI outputs are 3.3V. The TRS ones are Type A like the main OXI One's midi output port.

MIDI BLUETOOTH

OXI One incorporates MIDI over Bluetooth (BLE) and it is a dual role device. There are two ways of using it.

For optimal performance, we recommend using any kind of dongle like the WIDI Master or the WIDI Jack.

CENTRAL ROLE

OXI One can act as a hub for other MIDI Bluetooth peripherals like:

- Piano keyboards (ROLI Seaboard, CME Xkey Air, etc.)
- BLE dongles (CME WIDI BUD, DORE MIDI cable, etc.)
- BLE MIDI adaptors (WIDI Jack, WIDI Master, etc.)
- Controllers (AKAI LPD8, Korg nanoKEY, etc.)
- Others like the OP-Z
- Upcoming OXI Instruments products

OXI One will automatically connect (“pair”) to one peripheral device if it is on and advertising (which means it’s looking for some central device to pair with them).

Only one connection at a time is currently supported.


PERIPHERAL ROLE

On the other hand, OXI One can be connected to other central devices like iOS or Android devices, computers (Mac and Win natively support MIDI Bluetooth in their recent versions) and other Central devices like CME WIDI Master.

The process of pairing the OXI One is different depending on the other device.

MAC OS X

You should open the native application Audio MIDI Setup and open the Bluetooth settings on the *MIDI Studio* window:

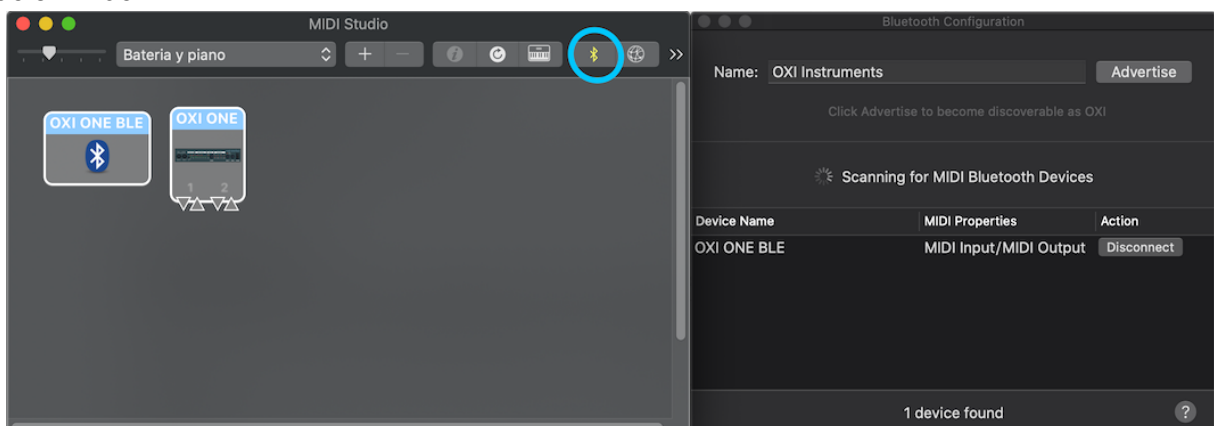

Press the Bluetooth icon and press “connect” on the Bluetooth Configuration Window and that’s it. Your OXI One will be shown in your audio-MIDI apps as a MIDI device like **OXI ONE BLE**.

WINDOWS (Windows 8.1 or above)

First you must connect Windows with the Bluetooth MIDI device.

Click the Bluetooth icon in the task tray, and choose “Show Bluetooth Devices”.

In the Bluetooth device management screen, choose a device indicated as “Ready to pair” and click “Pair.”

When the indication shows “Connected,” pairing is completed.

Last step is to download the MIDIberry app which makes the Bluetooth MIDI ports available for other apps.


Start your MIDI application, and select the MIDI IN port and MIDI OUT port as necessary.

iOS

The connection has to be established from MIDI and Bluetooth settings of the app itself.

Let's use the free iOS app Synth One for this example.

Go to the Bluetooth settings by clicking on the Bluetooth icon. (Sometimes this menu is found inside other menus, like the MIDI settings menu).

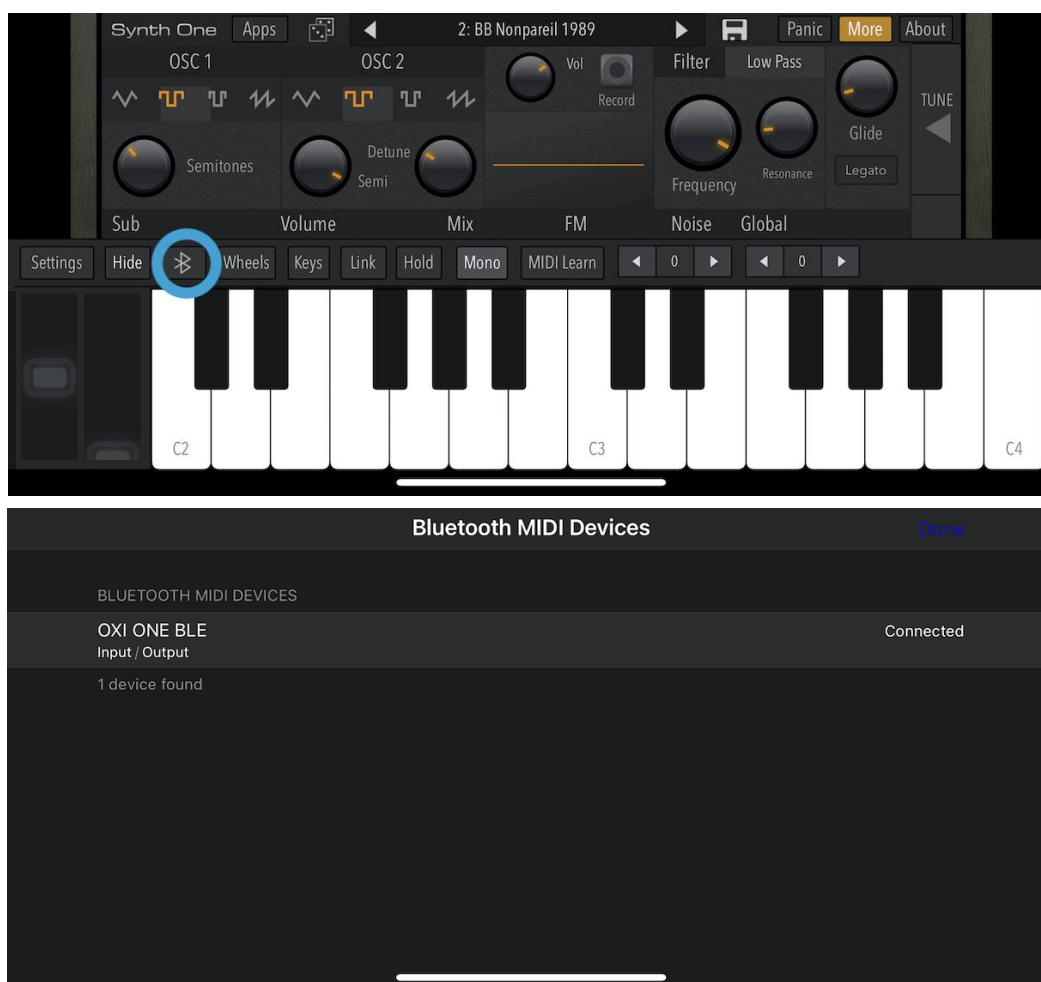

Select **OXI ONE BLE** and give it a few seconds to establish the connection. It will be ready to use!

ANDROID

The process is equivalent to the one described for iOS.

You can try with a free app like FluidSynth MIDI for Android. Once in the app, click in the menu (dots icon), open MIDI Bluetooth and select OXI ONE BLE.

OXI ONE BLE will appear as a MIDI device in the MIDI settings of the app (tap MIDI inside FluidSynth to open this menu).

Notes:

You can turn the Bluetooth ON/OFF from the global settings **Conf:** "Bluetooth ON/OFF".

Your selection will be remembered after rebooting so make sure you have it ON if you want to play via BLE MIDI.

DESIGN NOTES

MODES DIFFERENCES

MONO vs POLY ?

Both are 128 steps long.

Both have 4 modulation lanes.

Mono can only have one active note per step meanwhile Poly can have up to 7 active notes per step. Then, why would you use a Mono track? Since a mono track can only have one active note per step at a time, it is convenient for quick changes on the melody, when for example you have a one-voice lead or when you are sequencing a mono synth.

For the rest of the situations, a poly track gives you more freedom.

It is possible to transpose in both modes by pressing the sequencer button and any of the pads of the grid. The poly sequence will be transposed according to the lowest note.

CHORD vs POLY ?

Both are 128 steps long.

Both have 4 modulation lanes.

These two modes work totally differently. Chord mode allows you to enter chords from a predefined palette with different types and voicings.

Meanwhile Poly gives more freedom since you can enter notes as you wish, chord provides instant inspiration with a set of well organised chords in different scales (only diatonic scales are currently supported).

If you started writing a chord progression in Chord mode, and you feel you need further adjustments, bridge notes or other flouritures that chord doesn't provide, you can go for a Poly mode. There are two ways, copying the chord sequence into a poly sequencer or changing the mode of the sequencer from Chord to Poly.

MULTITRACK ?

128 steps.

8 tracks

1 modulation lane per track

Multitrack mode can handle 8 melodic or drum/sample tracks.

You can copy one track that you made in a mono sequencer to one of the tracks of a multitrack sequencer.

In the future we will add the option to show and edit a single track of a multitrack sequencer like if you were in the mono mode, with octave navigation.

Multitrack is not only for drums! You can set notes per step and other parameters as in mono mode, furthermore there is a transposition control per track, independent length , time division, and midi channel. Although, there is only one modulation lane per track (8 in total) and the glide control affects all the steps or the track.

MONOME GRID

Keep the **SHIFT** button pressed when powering on your OXI One to enable the operation as a **128 GRID** device. To go back to normal operation, restart your OXI One by pressing the power button.

OXI APP

Refer to our website to download the Desktop / Mobile app which will allow you to upgrade your OXI One's firmware.

In the future it will be possible to backup the project's data as well as manage the configuration.

CALIBRATION

Every OXI One comes calibrated from factory. The calibration has been made using high precision equipment. If for any reason the calibration procedure has to be repeated, please follow these instructions. Make sure to use a good reference like a 5 digit multimeter or a well tuned VCO (with V/Oct CV input) along with a Tuner.

To enter calibration mode, press SHIFT + cv gate for more than 2 seconds until OXI One switches to calibration mode indicated in the screen.

OXI One's Cvs have a range from -3V to +5V which represent the octaves from C-1 to C7 in the V/Oct format. ONE takes the MIDI note 12 as C-1.

CALIBRATION TABLE:

For each octave the following table indicates the values that ONE should output. This applies to each of the eighth CV outputs.

NOTE	EXPECTED VOLTAGE
C-1	-3V
C0	-2V
C1	-1V
C2	0V
C3	1V
C4	2V
C5	3V
C6	4V
C7	5V

Every point of the table has to be calibrated for each CV.

For example, if pressing C2, OXI shows 0.123V, the CV is uncalibrated in the C2 point by an offset of +0.123V

- To adjust it down you should press the immediate key below C2 which is B1. The output voltage would decrease around -0.002V (+2mV).
- To adjust it up, you should press the immediate key above C2 which is C#2. The output voltage would increase around +0.002V (-2mV).

If you press A#1 (instead of B1) or D2 (instead of C#2) the jump is bigger (20mV instead of 2mV) to speed up the process.

Press it repeatedly until the voltage offset is $\pm 0.003V$ ($\pm 3mV$) off the expected value.

Once you have finished with all the points of the calibration curve, press C8 to save.

You have to repeat the process with all the CV outputs.

Every CV listens to a different MIDI channel, CV1 listens to MIDI Channel 1 and CV2, to the MIDI channel 2 and so on, until CV8 in channel 8.

You can do it with any keyboard connected to the MIDI IN port, but we recommend doing it in your DAW to better see the octave range.

DECLARATION OF CONFORMITY

SPECIAL MESSAGE SECTION

This product utilizes rechargeable batteries. DO NOT connect this product to any power supply or adapter different than one described in the manual or specifically recommended by OXI Instruments. This product should be used only with the components supplied or, in case a non-official accessory is used, please observe that the specifications are the same as the official ones.

IMPORTANT: Don't try to open or disassembly the OXI One. For any technical problem it may have, please contact OXI Instruments for further information. Opening or disassembling the OXI One will void your warranty.

FCC INFORMATION (U.S.A)

1. IMPORTANT NOTICE: DO NOT MODIFY THIS UNIT!

This product meets FCC requirements once it is produced and assembled. Modifications not expressly approved by OXI Instruments may void your authority, granted by the FCC, to use the product.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Contains FCC ID: 2A094-MK02

2. IMPORTANT

When connecting this product to accessories and/or another product use only high- quality shielded cables. Cable/s supplied with this product MUST be used. Follow all installation instructions. Failure to follow instructions could void your FCC authorization to use this product in the USA.

3. NOTE

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.devices.

DECLARATION OF CONFORMITY

The full text of the US declaration of conformity is available at the following internet address:
www.oxiinstruments.com/



EUROPE

This product complies with the requirements of **European Directive 2014/53/EU & Directive 2011/65/EU**.

The full text of the EU declaration of conformity is available at the following internet address
www.oxiinstruments.com/



ENVIRONMENTAL ISSUES:

OXI Instruments strives to produce products that are both user safe and environmentally friendly. We sincerely believe that our products and the production methods used to produce them, meet these goals. In keeping with both the letter and the spirit of the law, we want you to be aware of the following:



This product should not be discarded as unsorted waste but must be sent to separate collection facilities for recovery and recycling.

This product is classified as **Radio Equipment**.

Battery Notice

This product incorporates a **Li-Po type Battery**.

Disposal Notice

Should this product become damaged beyond repair, or for some reason its useful life is considered to be at an end, please observe all local, state, and federal regulations that relate to the disposal of products that contain lead, batteries, plastics, etc. If your dealer is unable to assist you, please contact OXI Instruments directly.

SERIAL NUMBER LOCATION:

The serial number is located on the instrument body, in the label placed in the bottom side.

TERMS OF WARRANTY

REFUND POLICY (only in European Union)

The consumer has a total of 14 days from the acquisition of the OXI One to be able to return the product thus receiving a full refund of the price of it. The product must be in the same state and with all the original content in order to receive a full refund.

Shipping costs will be paid by the customer.

WARRANTY

OXI Instruments warrants the included hardware product and accessories against defects in materials and workmanship for two years from the date of original purchase. Unless proven otherwise, it will be presumed that the breaches of conformity manifested in a period of six months from the delivery of the product already existed on that date.

The warranty will not cover the repairing costs of the following cases:

- Misuse of OXI One, whether subject to extreme conditions, as using it incorrectly.
- Improper handling of the product.
- Normal wear and tear, nor damage caused by accident or abuse.
- Malfunction due to the use of accessories not authorized by OXI Instruments.

© 2021 OXI ELECTRONIC INSTRUMENTS SLU. All rights reserved. OXI INSTRUMENTS and the OXI logo are registered trademarks of OXI INSTRUMENTS in the UE and registered in many other countries. OXI ONE is a trademark of OXI INSTRUMENTS. Design and specifications subject to change without notice. The OXI ONE may not be authorised for use in some countries.

