ELECTRIC ENGINES

POWERTRAIN CONTROLLER FOR DIY ELECTRIC VEHICLES

LEAF ECU

Installation manual

Installation and setup guide for the powertrain controller built around Nissan Leaf components for DIY electric vehicles.



Revision 2.0 · October 2026
Interactive version with circuit highlighting:
https://diag.electricengines.com.ua/manual/en/

Contents

1 General Information 3
1.1 Controller Connectors 3
1.2 Dimensions and Mounting 5
1.3 CAN Bus 6
1.4 How to Read the Diagrams 6
2 12 V Power System 8
3 Inverter 10
3.1 Leaf Inverter Gen 1 (ZE0) 10
3.2 Leaf Inverter Gen 2 (AZE0) 10
3.3 Leaf Inverter Gen 3 (ZE1) 12
4 PDM Module 14
4.1 Type 1 (J1772) Charge Inlet 14
4.2 Type 2 Charge Inlet 15
5 Controls 16
5.1 Selector Buttons 16
5.2 Brake Vacuum Booster 16
6 Power Relays (Contactors) 18
7 Accelerator Pedal 20
8 BMS 22
8.1 Chevrolet Volt Gen 1 22
8.2 Nissan Leaf (ZE0 / AZE0) 26
8.3 Orion 2 39
9 Current Sensor 40
10 Cooling System 42
11 Brake Light (Regeneration) 44
12 CHAdeMO 45
13 Display 47
13.1 Display Controller 47
13.2 Nextion Intelligent Display 48
14 Selector 51
14.1 Leaf Selector 53
14.2 Momentary Buttons 54
15 OBD2 Diagnostics 55
15.1 OBD2 Connector 55
15.2 Software 55
16 Web Configurator 56
16.1 Requirements 56
16.2 Connecting 56
16.3 Configurator Pages 57
16.4 Writing Parameters 58
16.5 Saving and Restoring Settings 58
16.6 Firmware Update 58

17 **Initial Setup** 60
17.1 Start-up Procedure 60
17.2 Accelerator Pedal Setup 61
17.3 Controller Configuration 62
18 **FAQ / Troubleshooting** 64
Revision History 66

1 General Information

Leaf ECU is the master powertrain controller: it drives the inverter and the traction-battery contactors, handles charging through the PDM and CHAdeMO, controls cooling and peripherals, and exchanges data with the BMS, the display and the gear selector over CAN.



Fig. 1 Leaf ECU controller

1.1 Controller Connectors

The controller has two 24-way connectors:

- **X1** — black;
- **X2** — grey.

Pin numbering is moulded on the connectors: rows A–C and positions 1–8. Pins can be inserted into the mating connector from the back of the housing without taking it apart — just pull out the yellow lock at the front of the connector first.


The pinout is compiled from the wiring diagrams in this manual. The "Diagrams" column lists the figures where the pin is used; hover a pin or a table row to see it on the connector. In the text pins are written as X1-B2 — hover such a tag and the same connector pops up.



Row letters A–C and pin numbers 1–8 are moulded on the connector

PIN	WIRE	FUNCTION	DIAGRAMS
X1-A1		Current sensor — input SIG 2 (LEM sensor channel 1, pin D)	32
X1-A2		Accelerator pedal — sensor 2 signal (not used by firmware yet)	17
X1-A3		CAN0 Powertrain — High, 500 kbps (inverter, PDM, OBD2, display, selector)	5 6
X1-A4		CAN1 — High: BMS (no CHAdeMO) or CHAdeMO	20 24 39
X1-A5		CAN2 — High: BMS when CAN1 is used by CHAdeMO	
X1-A6		CAN3 — High: expansion	
X1-A7		Ground	5 6 32
X1-A8		+12 V permanent from the battery (KL30)	5 6
X1-B1		Current sensor — input SIG 1 (LEM sensor channel 2, pin A)	32
X1-B2		Accelerator pedal — primary sensor signal	17
X1-B3		CAN0 Powertrain — Low	5 6
X1-B4		CAN1 — Low	20 24 39
X1-B5		CAN2 — Low	
X1-B6		CAN3 — Low	
X1-B7		Charge-port PP line to the PDM (pin 29)	6
X1-B8		+12 V output to the IGN relay coil	6
X1-C1		+5 V output (pedal, sensors)	17 32
X1-C2		Ground (pedal, sensors)	17
X1-C3		Radiator fan relay — high speed	37
X1-C4		CHAdeMO output 0 — enable relay	39
X1-C5		CHAdeMO output 1 — charge permission (inlet pin 4)	39
X1-C6		Coolant pump relay	37
X1-C7		PP (proximity) from the charge inlet	6
X1-C8		+12 V from the ignition switch (KL15)	6

Fig. 2 ECU — connector X1 (black)

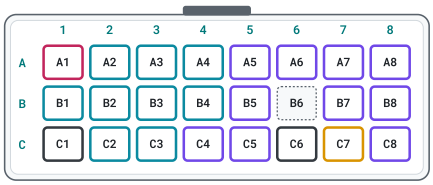

Row letters A–C and pin numbers 1–8 are moulded on the connector

PIN	WIRE	FUNCTION	DIAGRAMS
X2-A1		+12 V after the ignition relay	
X2-A2		Brake vacuum pump relay	14
X2-A3		Main contactor HV− coil	15 24
X2-A4		Main contactor HV+ coil	15 24
X2-A5		Start button input (+12 V = pressed)	13
X2-A6		Brake booster vacuum sensor signal	14
X2-A7		Analog input (via 10 kΩ) — reserved	
X2-A8		CHAdeMO input 1 — charge sequence 1 (pin 2)	39
X2-B1		Status LED / IGN (D28)	
X2-B2		Power output via MOSFET — reserved	
X2-B3		Brake-light relay (regeneration)	38
X2-B4		Precharge relay coil	15 24
X2-B5		Drive button input (+12 V = on)	13
X2-B6		Not connected (reserved)	
X2-B7		CHAdeMO input 0 — charge sequence 2 (pin 10)	39
X2-B8		Brake-light sense — brake pedal pressed	38
X2-C1		Ground	
X2-C2		Radiator fan relay — low speed	37
X2-C3		Brake-light relay (duplicate of X2-B3)	
X2-C4		CHAdeMO input 2 — proximity (pin 7) / AC gun	39
X2-C5		Reverse button input (+12 V = on)	13
X2-C6		Ground	20
X2-C7		+5 V output (sensors)	14 20
X2-C8		Digital input (optocoupler) — reserved	

Fig. 3 ECU — connector X2 (grey)

1.2 Dimensions and Mounting

The controller is built into an aluminium enclosure with two 24-way connectors. It is fixed with two M6 bolts through the ears on the long sides.

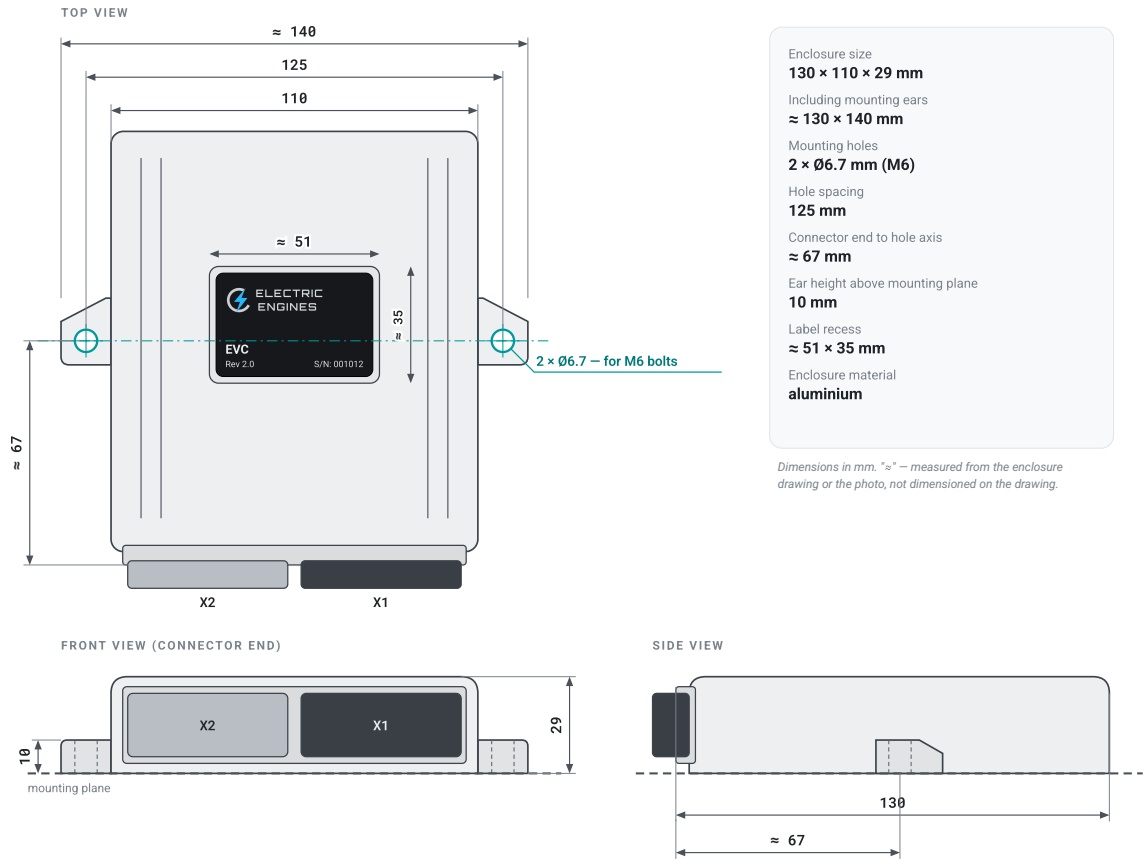


Fig. 4 ECU enclosure dimensions, mounting holes and label: top, connector-end and side views

- The mounting holes lie on one line across the enclosure, 125 mm apart.
- Leave free space in front of the connector end: the plugs are inserted and removed along the enclosure, and the harness needs room to bend.

1.3 CAN Bus

> **WARNING**
> All CAN bus wires must be twisted into twisted pairs!

The controller has four CAN buses; the main one is CAN0 Powertrain (X1-A3 / X1-B3), which connects the inverter, the PDM, the OBD2 socket, the display and the selector. The BMS connects to CAN1 (X1-A4 / X1-B4), or to CAN2 (X1-A5 / X1-B5) when CAN1 is used by CHAdeMO.

1.4 How to Read the Diagrams

All diagrams in this manual share one style. A wire's colour shows its purpose, not the insulation colour:

COLOUR	PURPOSE
	Traction battery power cables (HV)

COLOUR	PURPOSE
red	+12 V — supply from the battery / vehicle 12 V system
crimson	+12 V switched — from the ignition switch or through a relay
orange	+5 V — sensor supply from the controller
black	Ground
blue / green	CAN-H / CAN-L
violet	Signals into the controller (sensors, buttons, pilot lines)
teal	Controller outputs (relay coils, LEDs)

Relay contacts are numbered **1–2**, the coil **4–3**: pin 4 receives the drive signal from the controller, pin 3 is ground.

In the web edition of this manual the diagrams are interactive: click a wire to highlight the whole circuit and open a card listing its connections; click a pin or a device to open its connector view with the pinout. The Expand button opens a diagram full-screen with zoom.

2 12 V Power System

Version 4 controller boards have a new power supply circuit. The controller needs:

- **permanent +12 V** from the battery;
- separately, **+12 V from the ignition switch** (IGN KEY).

After the ignition key is turned off the controller stays on until the motor stops, then it opens the battery contactors and switches itself off.

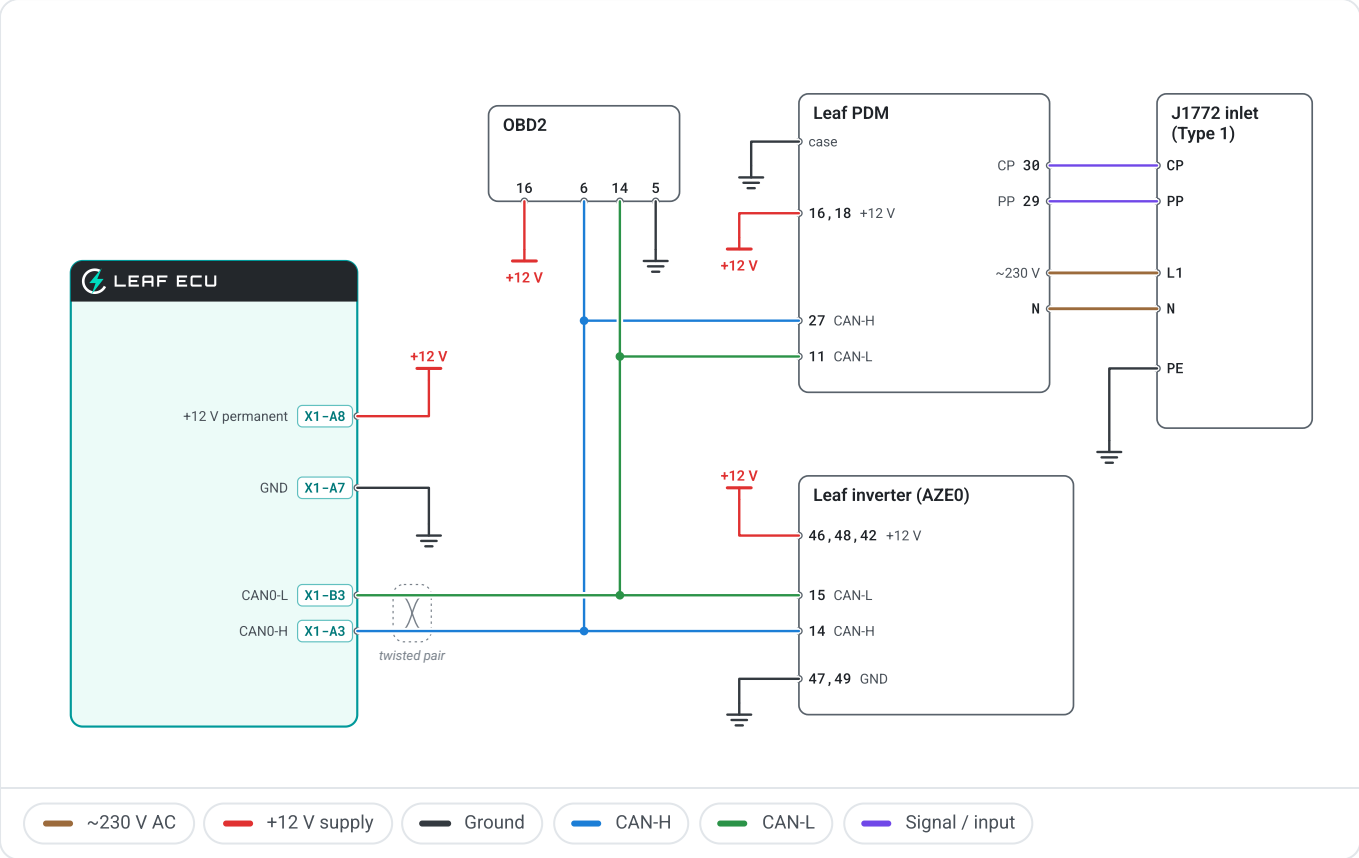


Fig. 5 Basic CAN bus and 12 V connection (for the AZE0 inverter; for other inverters see the connector pinouts below — the wiring is similar)

> **NOTE**
>
> The Leaf Type 1 charge inlet has resistor R5 right at the socket, under the rubber boot. It must be relocated and wired as shown in Fig. 6.

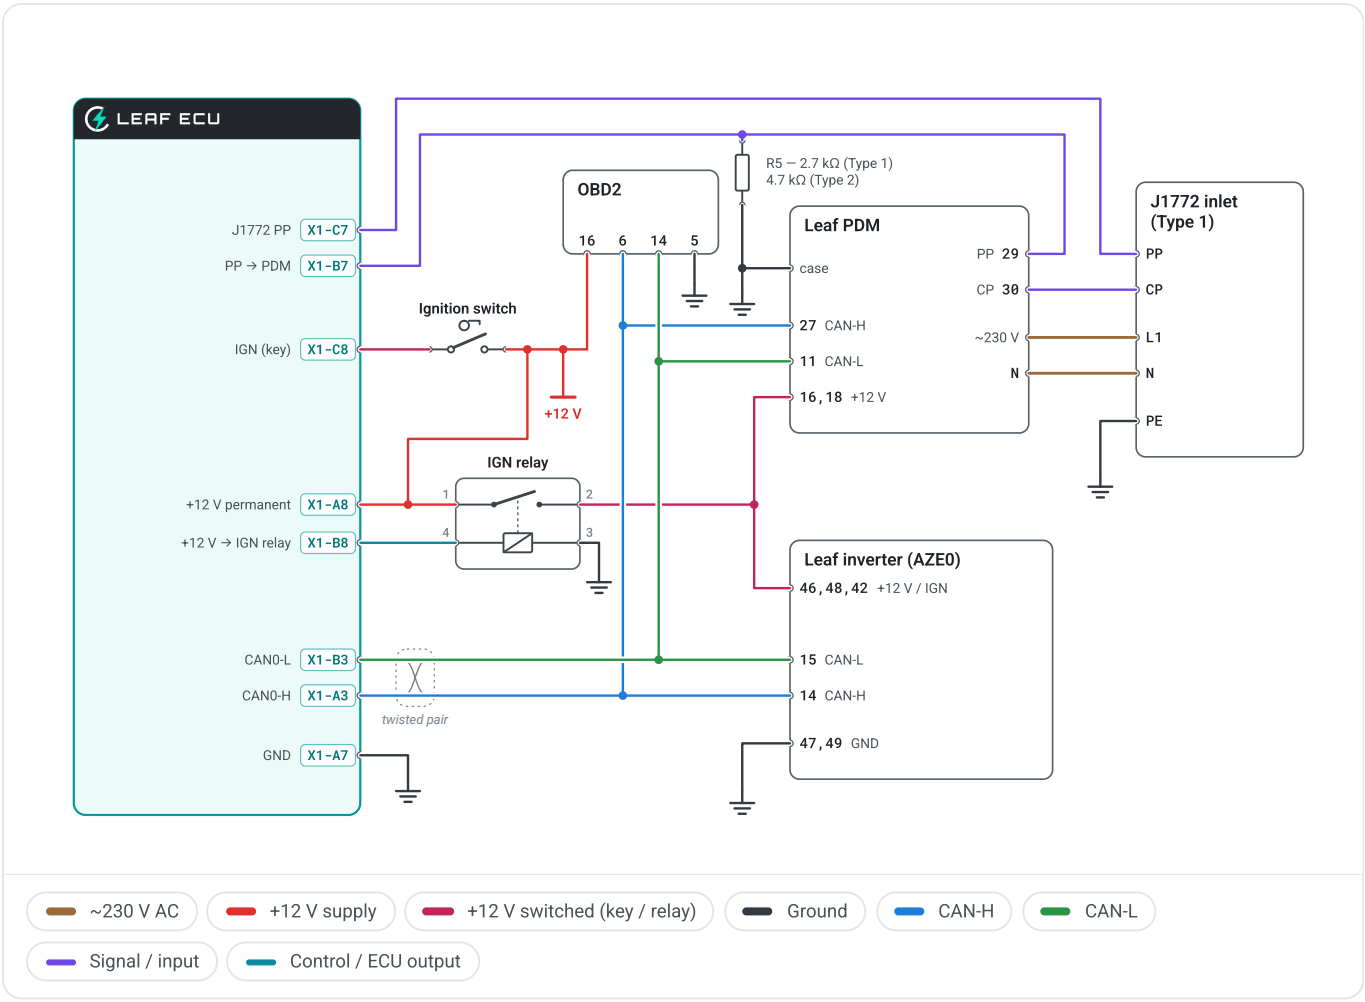



Fig. 6 V4 board 12 V supply: ignition switch, IGN relay, charge inlet and R5 resistor

The PP line between the PDM and the charge inlet must also be broken: the inlet PP goes to the controller (● X1-C7), and the controller drives its own PP signal to the PDM (● X1-B7). When a charging gun is plugged into the inlet, the controller wakes up and starts charging.

3 Inverter

To connect the inverter and the PDM it is best to reuse the factory Leaf harness: strip everything unnecessary, keeping the connectors for the inverter, the PDM and the motor resolver.

3.1 Leaf Inverter Gen 1 (ZE0)

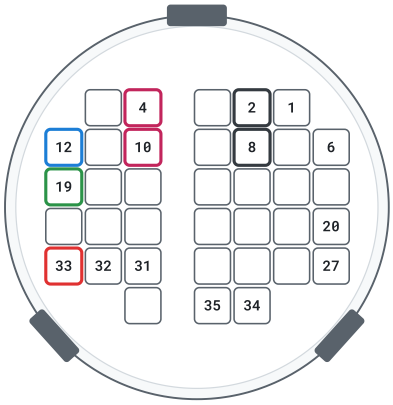


PIN	WIRE	FUNCTION
2		12 V ground
8		12 V ground
10		+12 V key switch (ignition)
4		+12 V key switch (ignition)
12		CAN-H (Powertrain, CAN0)
19		CAN-L (Powertrain, CAN0)
33		Always-on +12 V

Fig. 7 Leaf Gen 1 (ZE0) inverter — traction-motor-inverter connector

3.2 Leaf Inverter Gen 2 (AZE0)

Pins 46 and 48 are the permanent +12 V supply input, pin 42 is +12 V from the ignition switch, pins 47 and 49 are ground.

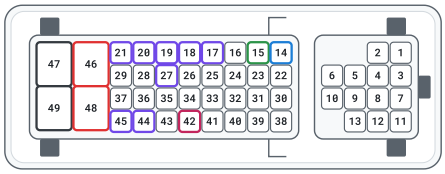


H.S. — harness (wire) side view

PIN	WIRE	FUNCTION	DIAGRAMS
14		EV SYSTEM CAN-H — CAN-H (Powertrain, CAN0) · wire L (blue)	5 6
15		EV SYSTEM CAN-L — CAN-L (Powertrain, CAN0) · wire G (green)	5 6
17		REZ_S2 — resolver, winding S2 · wire P (pink)	
18		REZ_S4 — resolver, winding S4 · wire L (blue)	
19		REZ_R1 — resolver, excitation R1 · wire R (red)	
20		REZ_S1 — resolver, winding S1 · wire B (black)	
21		REZ_S3 — resolver, winding S3 · wire W (white)	
27		REZ_R2 — resolver, excitation R2 · wire G (green)	
42		IGN_SW — +12 V ignition · wire LG (light green)	
44		TMGND — traction-motor temperature sensor ground · wire O (orange)	
45		TM — traction-motor temperature sensor · wire Y (yellow)	
46		VB1 — +12 V permanent, supply 1 · wire G (green)	
47		VBGND1 — supply ground 1 · wire B (black)	
48		VB2 — +12 V permanent, supply 2 · wire G (green)	
49		VBGND2 — supply ground 2 · wire B (black)	

Fig. 8 Leaf Gen 2 (AZE0) inverter — connector F13 (black)

3.3 Leaf Inverter Gen 3 (ZE1)

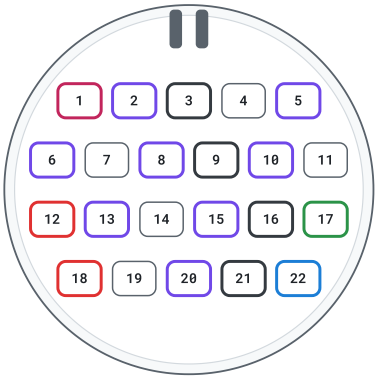

View looking into the panel-mount connector on the inverter

PIN	WIRE	FUNCTION
1		+12 V from the ignition switch (IGNSW) · red wire
2		Resolver S1 · light green wire
3		Ground · black wire
5		Resolver R1 — excitation · purple wire
6		Motor temperature sensor (MTEMP) · grey wire
8		Resolver S3 · light blue wire
9		Ground · black wire
10		Resolver R2 — excitation · brown wire
12		+12 V · red wire
13		Motor temperature sensor (MTEMP) · grey wire
15		Resolver S4 · blue wire
16		Ground · black wire
17		CAN-L (Powertrain, CAN0) · orange wire
18		+12 V · red wire
20		Resolver S2 · yellow wire
21		Ground · black wire
22		CAN-H (Powertrain, CAN0) · green wire

Fig. 9 Leaf Gen 3 (ZE1, 2018) inverter — control connector

Gen 2 ↔ Gen 3 pin map with the factory harness wire colours:

SIGNAL	GEN 2 PIN	GEN 2 COLOUR	GEN 3 PIN	GEN 3 COLOUR
CAN-H	14	L — Blue	5	L — Blue
CAN-L	15	G — Green	11	G — Green
Resolver S2	17	P — Pink	9	P — Pink
Resolver S4	18	L — Blue	3	L — Blue
Resolver R1	27	G — Green	16	G — Green
Resolver R2	19	R — Red	22	R — Red
Resolver S1	21	W — White	14	W — White
Resolver S3	20	B — Black	19	B — Black
12 V ignition	42	LG — Light green	18	LG — Light green
Traction motor temp	44	O — Orange	20	V — Violet
Traction motor temp	45	Y — Yellow	7	Y — Yellow

SIGNAL	GEN 2 PIN	GEN 2 COLOUR	GEN 3 PIN	GEN 3 COLOUR
12 V	46	G — Green	1	G — Green
Ground	47	B — Black	4	B — Black
12 V	48	G — Green	6	G — Green
Ground	49	B — Black	10	B — Black


CHECK THE PINS BEFORE WIRING

The Gen 3 pinout sources number the pins differently: Fig. 9 is the view into the connector on the inverter housing, while the table above comes from earlier revisions of this manual and uses different Gen 3 pin numbers. Also, the Gen 2 resolver winding names in the table (R1/R2, S1/S3) are swapped relative to the Nissan factory table (Fig. 8), although the pin numbers and wire colours match. Before wiring, check every pin by the wire colour of the factory harness.

WARNING

CAN-H and CAN-L wires must be twisted into a twisted pair.

4 PDM Module

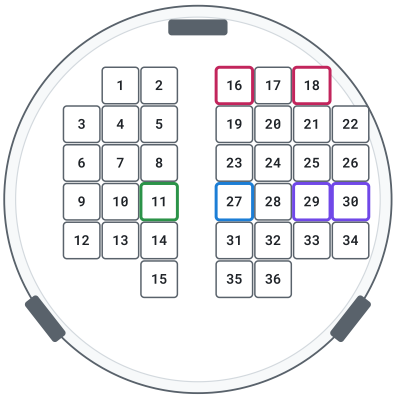

Harness side view (H.S.)

PIN	WIRE	FUNCTION	DIAGRAMS
11		CAN-L (Powertrain, CAN0)	5 6
16		+12 V PDM supply (V4 board: from the IGN relay)	
18		+12 V PDM supply (V4 board: from the IGN relay)	
27		CAN-H (Powertrain, CAN0)	5 6
29		Charge-inlet PP (V4 board: from ECU X1-B7)	5 6
30		Charge-inlet CP (Control Pilot)	5 6

Fig. 10 PDM module interface connector (F23)


PDM pins 30 and 29 (charge inlet) connect to the two-pin connector on the inlet itself: white wire to white, green to brown (when using the Leaf harness). With the V4 board wire the PP line as shown in Fig. 6.

The PDM case must be connected to ground — the case is the negative output of the DC-DC converter. The stud on the side of the module is the +12 V output of the DC-DC converter.

4.1 Type 1 (J1772) Charge Inlet

The vehicle inlet and the charging gun are mirror images: on the left of the figure is the inlet (front view, from the side the gun plugs into), on the right the gun (view onto its face). The tag under each connector says which side you are looking at.

Type 1 (J1772) — vehicle inlet

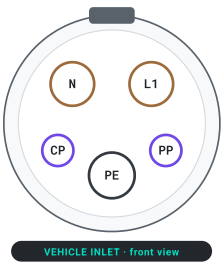

Front view of the vehicle inlet (the side the gun plugs into)

Type 1 (J1772) — charging gun



View onto the face of the charging gun — the mirror image of the inlet

PIN	WIRE	FUNCTION	DIAGRAMS
L1		1 — phase L1 (~230 V) → PDM	5 6
N		2 — neutral N (L2) → PDM	5 6
PE		3 — protective earth → chassis	5 6
CP		4 — Control Pilot → PDM (pin 30)	5 6
PP		5 — Proximity Pilot → ECU X1-C7 (V4 board; in the basic wiring — PDM 29)	5 6


Fig. 11 Type 1 (J1772): vehicle inlet and charging gun

Resistor R5 of the stock Leaf inlet (2.7 kΩ) is relocated and wired as shown in Fig. 6.

4.2 Type 2 Charge Inlet


Type 2 is a three-phase connector; the single-phase Leaf PDM uses only L1, N, PE, CP and PP. With a Type 2 inlet, resistor R5 must be changed to 4.7 kΩ (Fig. 6).

Type 2 (IEC 62196-2) — vehicle inlet

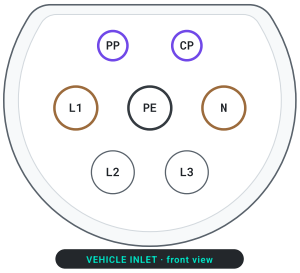

Front view of the vehicle inlet (the side the gun plugs into)

Type 2 (IEC 62196-2) — charging gun

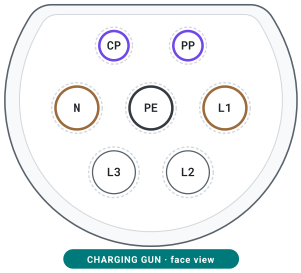

View onto the face of the charging gun — the mirror image of the inlet

PIN	WIRE	FUNCTION
L1		L1 — phase L1 (~230 V) → PDM
L2		L2 — phase L2 (not used by the single-phase PDM)
L3		L3 — phase L3 (not used by the single-phase PDM)
N		N — neutral → PDM
PE		PE — protective earth → chassis
CP		CP — Control Pilot → PDM (pin 30)
PP		PP — Proximity Pilot → ECU X1-C7

Fig. 12 Type 2 (IEC 62196-2): vehicle inlet and charging gun

TYPE 2 CABLE — 32 A ONLY

With a Type 2 inlet use only a **32 A** charging cable (gun) — its plug has a **220 Ω** resistor between PP and PE. Cables of other ratings have a different resistor (13 A — 1.5 kΩ, 20 A — 680 Ω, 63 A — 100 Ω) and are not suitable for this wiring.

5 Controls

5.1 Selector Buttons

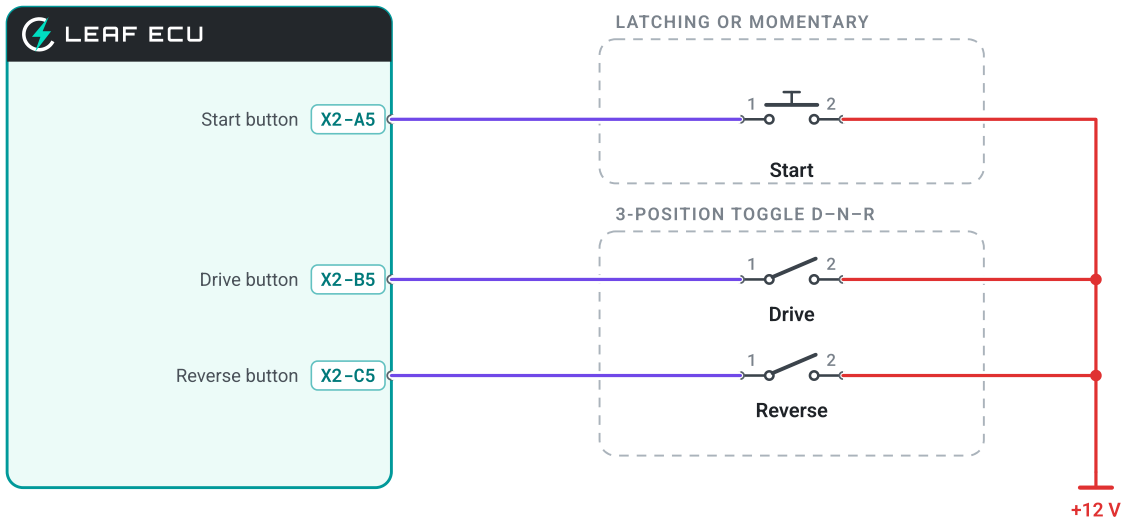


Fig. 13 Start, Drive and Reverse control buttons

Driving direction (the selector) can be chosen with buttons or with the original Nissan Leaf selector. The selector type must be set in the web configurator (**ECU → Settings**, see 17.3).

- **Drive and Reverse buttons** — latching.
- **Start button** — latching or momentary; its mode is set in the configurator.

How it works:

1. Pressing **Start** closes the contactors; the inverter is ready, the selector is in neutral.
2. To drive off, switch on **Drive** or **Reverse**.
3. If Drive and Reverse are active at the same time, the controller goes to neutral.

> **RECOMMENDATION**
> Use a 3-position toggle switch for Drive and Reverse: centre position = neutral, end positions = Drive and Reverse.

5.2 Brake Vacuum Booster

The controller can run the vacuum pump of the brake booster. Connect the vacuum sensor to the controller and the pump through a relay.

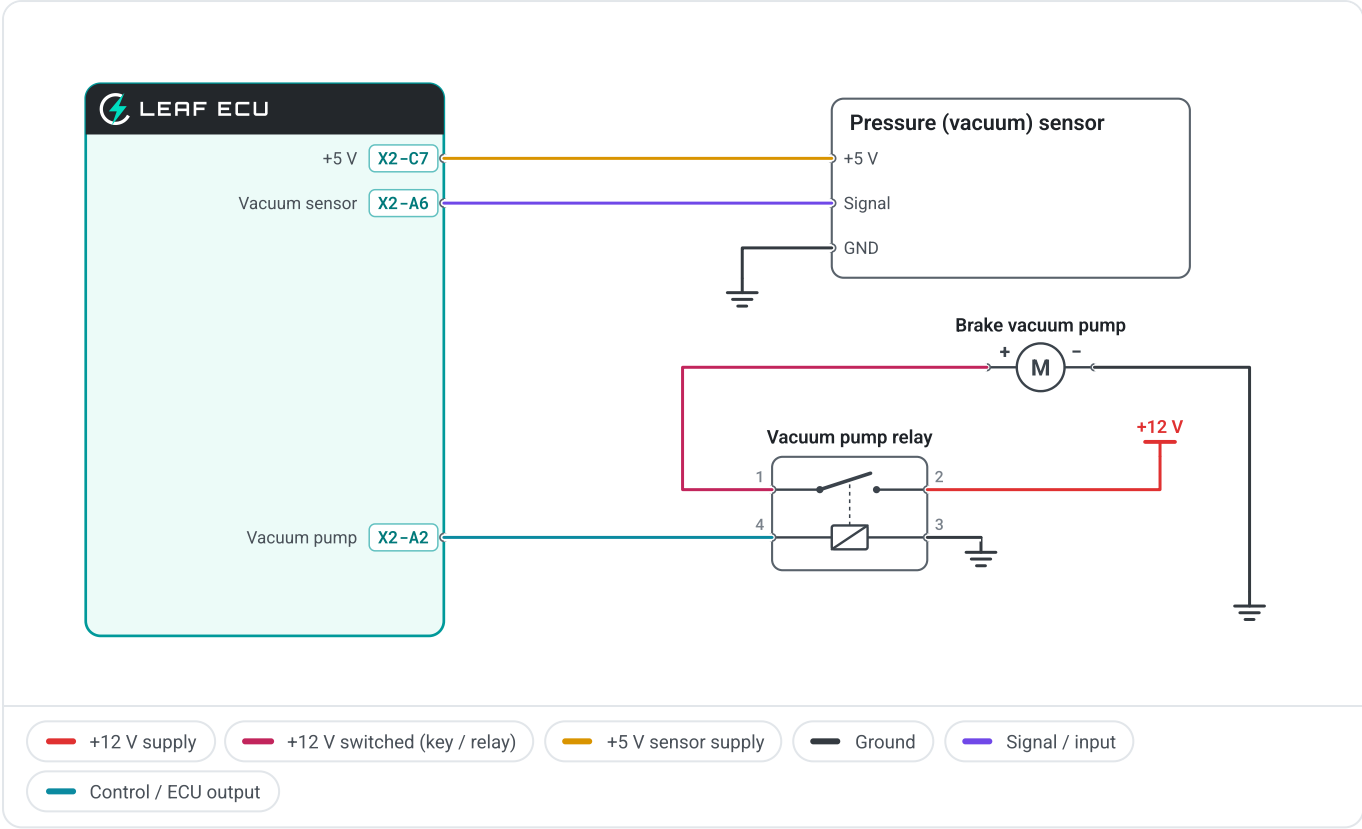


Fig. 14 Brake vacuum booster: vacuum sensor and vacuum pump relay

The sensor voltage thresholds that switch the pump on and off are set in the web configurator on **ECU → Brake** (values are entered in mV).

6 Power Relays (Contactors)

Choose power relays with ratings close to those used in the Nissan Leaf.

TESLA CONTACTORS ARE NOT SUITABLE

They have a high coil holding current and need an economiser. Similar contactors with a built-in current-reduction circuit exist — those can be used.

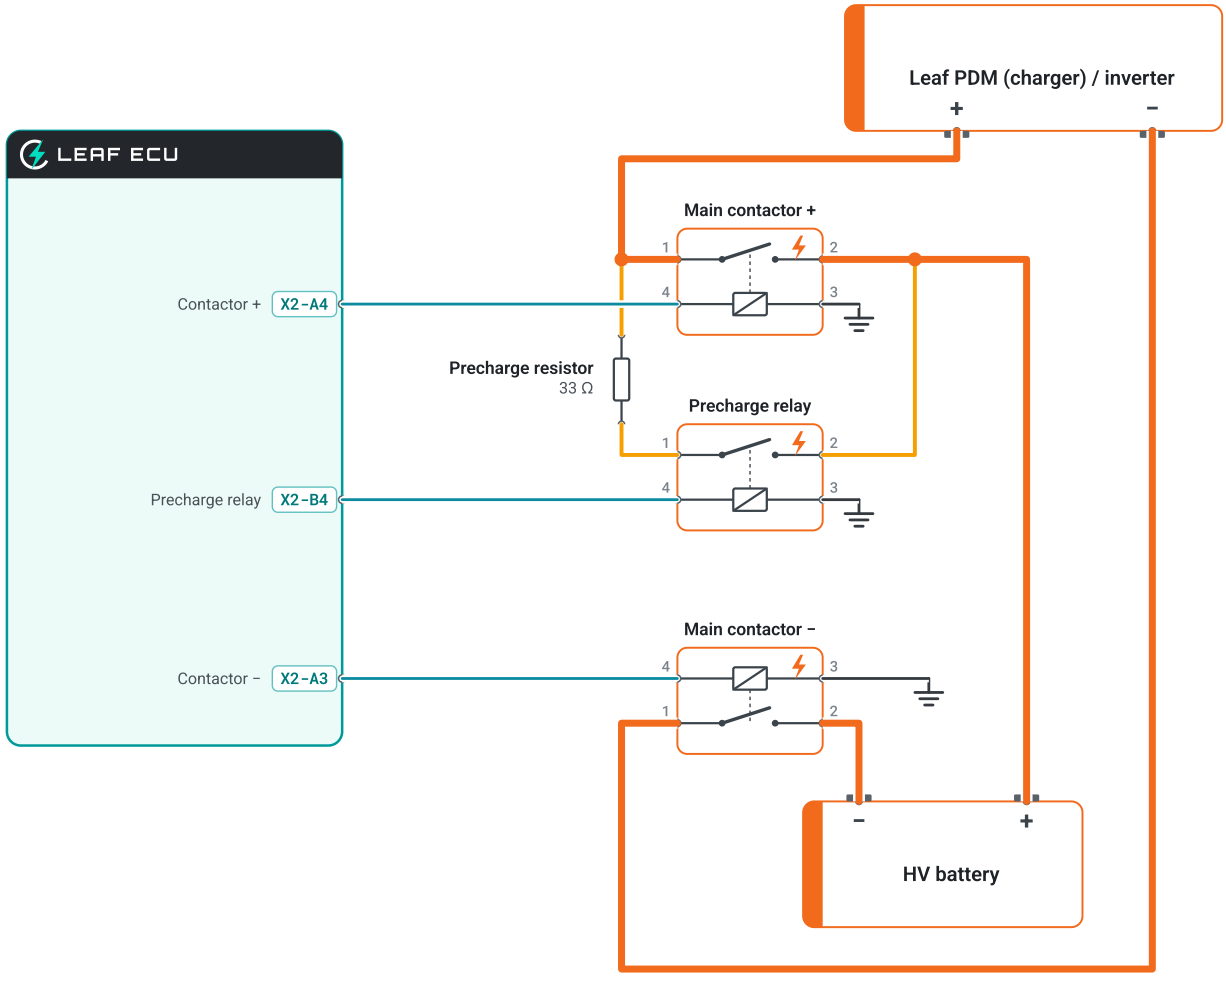


Fig. 15 Power contactors and precharge: main contactors + and −, precharge relay and resistor

Wire cross-sections in the diagram:

WIRE	CROSS-SECTION	PURPOSE
Power	35 mm²	Main traction battery cables
Precharge	2.5 mm²	Precharge path through the 33 Ω resistor
Control	0.75 mm²	Relay coils

Observe polarity when connecting the traction battery to the PDM:

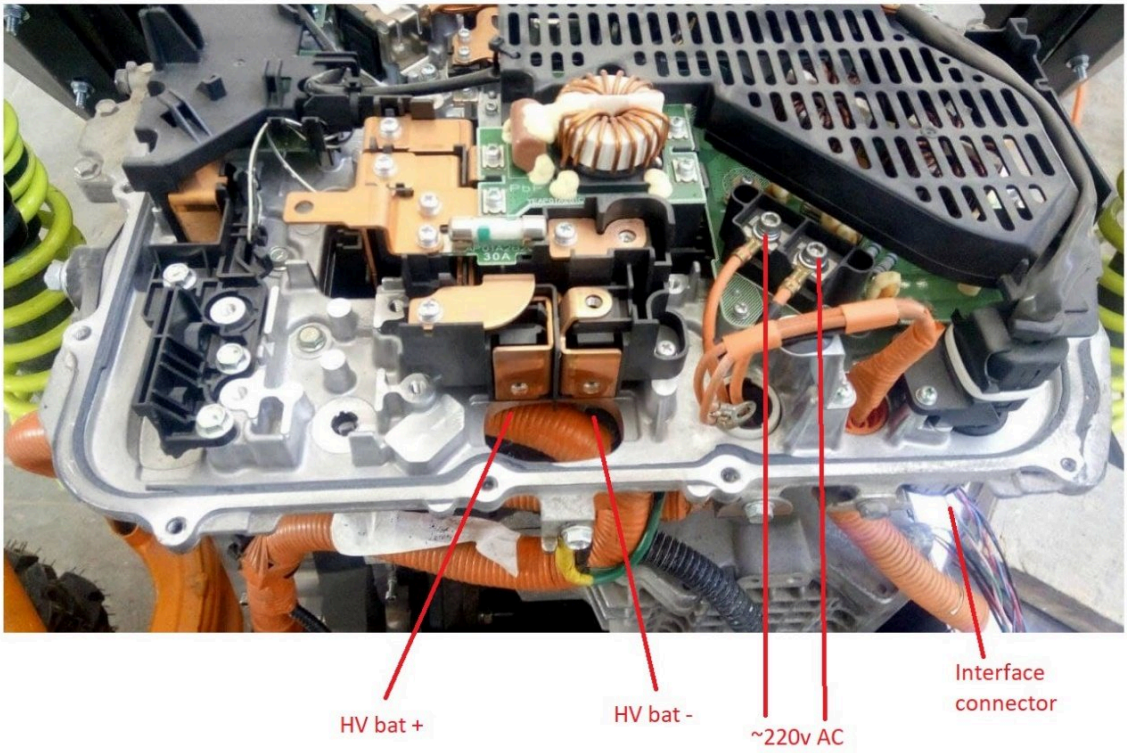


Fig. 16 Traction battery polarity at the PDM: HV bat + / HV bat −, ~230 V input and interface connector

7 Accelerator Pedal

The pedal signal wire connects to pin X1-B2.

PIN	FUNCTION
X1-B2	Pedal signal — primary sensor
X1-A2	Pedal signal — second sensor (not used by the firmware yet)
X1-C1	+5 V pedal supply
X1-C2	Pedal ground

The signal voltage must swing within 0–5 V — check this before connecting to the controller.

TIP

If your pedal has a second sensor, wire it to X1-A2 right away.

Both resistive and Hall-effect pedals can be used.

WARNING

When connecting a Hall-effect pedal, double-check the sensor supply polarity and which wire is the signal output — otherwise you can damage the sensor or the controller's 5 V regulator.

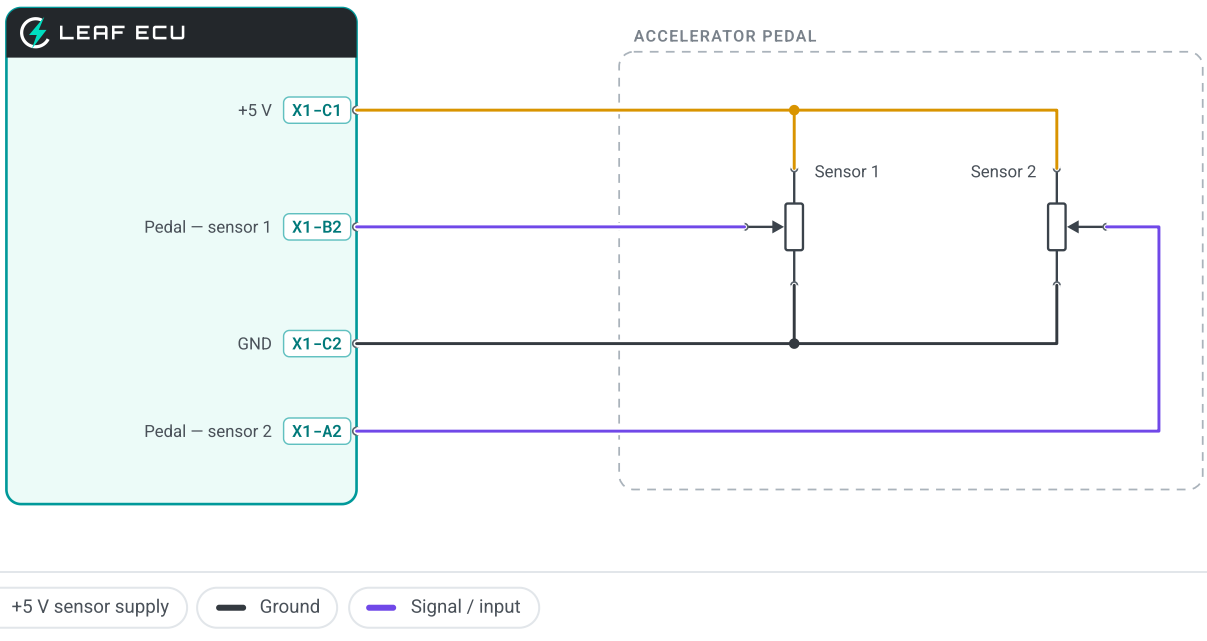


Fig. 17 Accelerator pedal wiring (two potentiometer tracks)



Fig. 18 Nissan Leaf accelerator pedal



PIN	WIRE	FUNCTION
1		Sensor 2 — signal
2		Sensor 2 — supply "+"
3		Sensor 1 — supply "+"
4		Sensor 1 — signal
5		Sensor 1 — ground "–"
6		Sensor 2 — ground "–"

Fig. 19 Nissan Leaf accelerator pedal connector (the same connector is used in other Nissan and Renault models)

The pedal MIN and MAX positions must be set in the web configurator (see 17.2).

8 BMS

The controller supports the Chevrolet Volt Gen 1 BMS, Orion 2 and the Nissan Leaf BMS.

8.1 Chevrolet Volt Gen 1

The BMS consists of 4 satellite modules marked 1, 2/3 (two modules) and 4. With the satellites the battery can be split into up to four separate packs.

> **NOTE**
> Satellites 2/3 have a jumper that sets the satellite's position in the battery. Without it the satellite will not work.


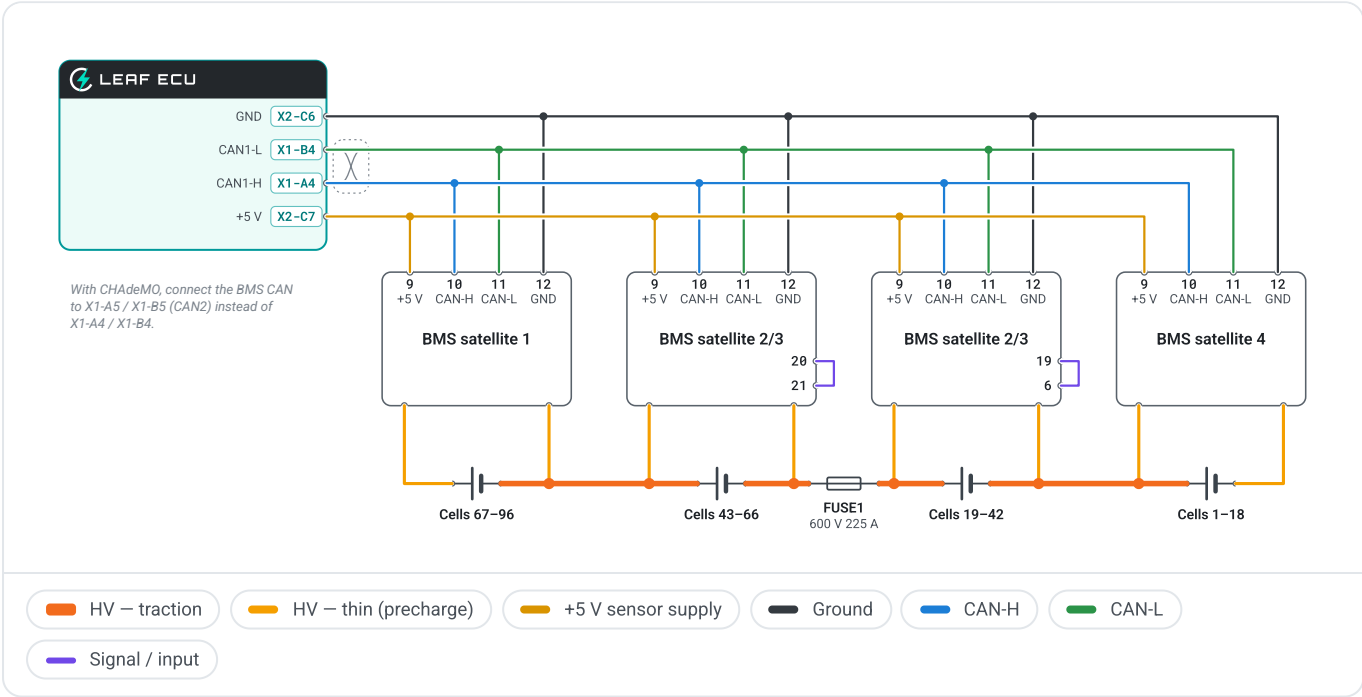


Fig. 20 Chevrolet Volt Gen 1 BMS: connecting the four satellites to the ECU and the battery cell split

The **black connector** on a satellite is the interface connector. We recommend wiring CAN and power as shown in the diagram rather than through the Volt factory harness, where wires pass through the satellites in a daisy chain, which makes diagnostics harder.

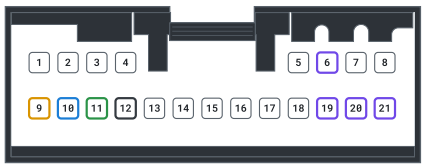

View from the BMS (satellite) side


PIN	WIRE	FUNCTION	DIAGRAMS
6		Jumper 19–6 — sets the position of satellite 2/3 (cell group 19–42)	20
9		+5 V — satellite supply (ECU X2-C7)	20
10		CAN-H (ECU X1-A4; with CHAdeMO — X1-A5)	20
11		CAN-L (ECU X1-B4; with CHAdeMO — X1-B5)	20
12		Ground (ECU X2-C6)	20
19		Jumper 19–6 — sets the position of satellite 2/3 (cell group 19–42)	20
20		Jumper 20–21 — sets the position of satellite 2/3 (cell group 43–66)	20
21		Jumper 20–21 — sets the position of satellite 2/3 (cell group 43–66)	20

Fig. 21 Volt BMS satellite — interface connector (black)

The **orange connectors** on the satellites are for the cell balancing wires and temperature sensors. This BMS requires **NTC 10 kΩ** temperature sensors.


There are two connector types: 12-cell (satellites 2/3 have only this type) and 6-cell (found on satellites 1 and 4).

Volt BMS satellite — cell / temperature connector, 12 cells (orange)

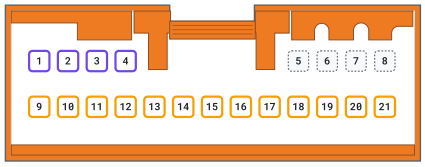


PIN	WIRE	FUNCTION
1		Battery module temperature signal (NTC 10 kΩ)
2		Low reference — temperature sensor return
3		Battery module temperature signal (NTC 10 kΩ)
4		Low reference — temperature sensor return
5		Not used
6		Not used
7		Not used
8		Not used
9		Battery voltage signal (12)
10		Battery voltage signal (11)
11		Battery voltage signal (10)
12		Battery voltage signal (9)
13		Battery voltage signal (8)
14		Battery voltage signal (7)
15		Battery voltage signal (6)
16		Battery voltage signal (5)
17		Battery voltage signal (4)
18		Battery voltage signal (3)
19		Battery voltage signal (2)
20		Battery voltage signal (1)
21		Low reference — bottom sense point of the cell voltages


Volt BMS satellite — cell / temperature connector, 6 cells (orange)

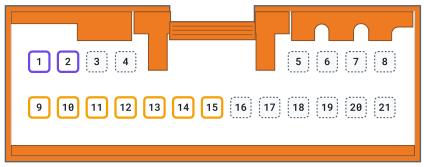

PIN	WIRE	FUNCTION
1		Battery module temperature signal (NTC 10 kΩ)
2		Low reference — temperature sensor return
3		Not used
4		Not used
5		Not used
6		Not used
7		Not used
8		Not used
9		Battery voltage signal (18)
10		Battery voltage signal (17)
11		Battery voltage signal (16)
12		Battery voltage signal (15)
13		Battery voltage signal (14)
14		Battery voltage signal (13)
15		Battery voltage signal (12)
16		Not used
17		Not used
18		Not used
19		Not used
20		Not used
21		Not used

Fig. 22 Volt satellite cell connectors: 12-cell and 6-cell variants

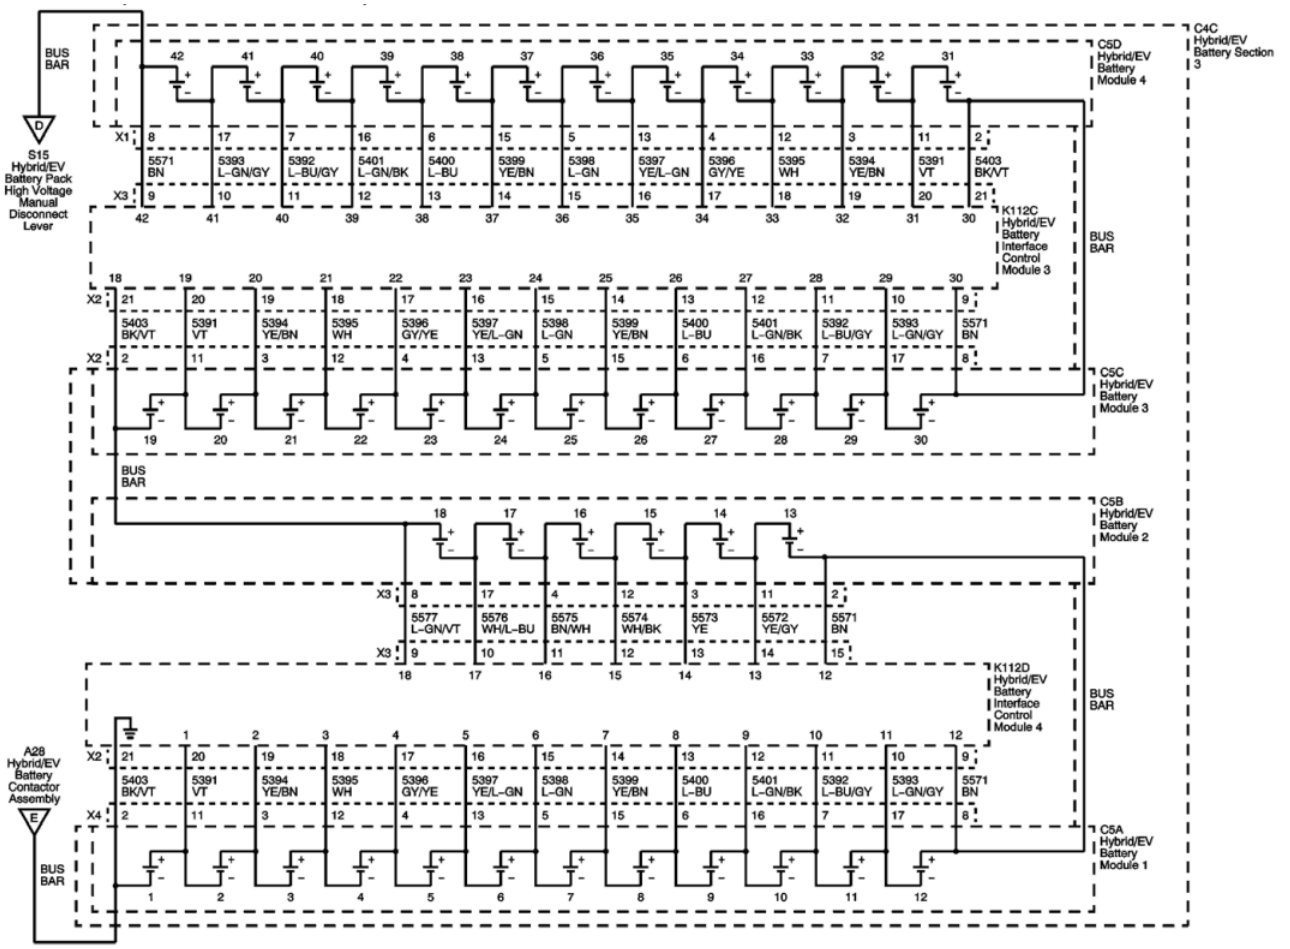
BUS BAR
S15 Hybrid/EV Battery Pack High Voltage Manual Disconnect Lever
C4C Hybrid/EV Battery Section 3
C5D Hybrid/EV Battery Module 4
C5C Hybrid/EV Battery Module 3
C5B Hybrid/EV Battery Module 2
C5A Hybrid/EV Battery Module 1
K112C Hybrid/EV Battery Interface Control Module 3
K112D Hybrid/EV Battery Interface Control Module 4
A28 Hybrid/EV Battery Contactor Assembly
X1
X2
X3
X4
5571 BN
5393 L-GN/GY
5392 L-BU/GY
5401 L-GN/BK
5400 L-BU
5399 YE/BN
5398 L-GN
5397 YE/L-GN
5396 GY/YE
5395 WH
5394 YE/BN
5391 VT
5403 BK/VT
5577 L-GN/VT
5576 WH/L-BU
5575 BN/WH
5574 WH/BK
5573 YE
5572 YE/GY

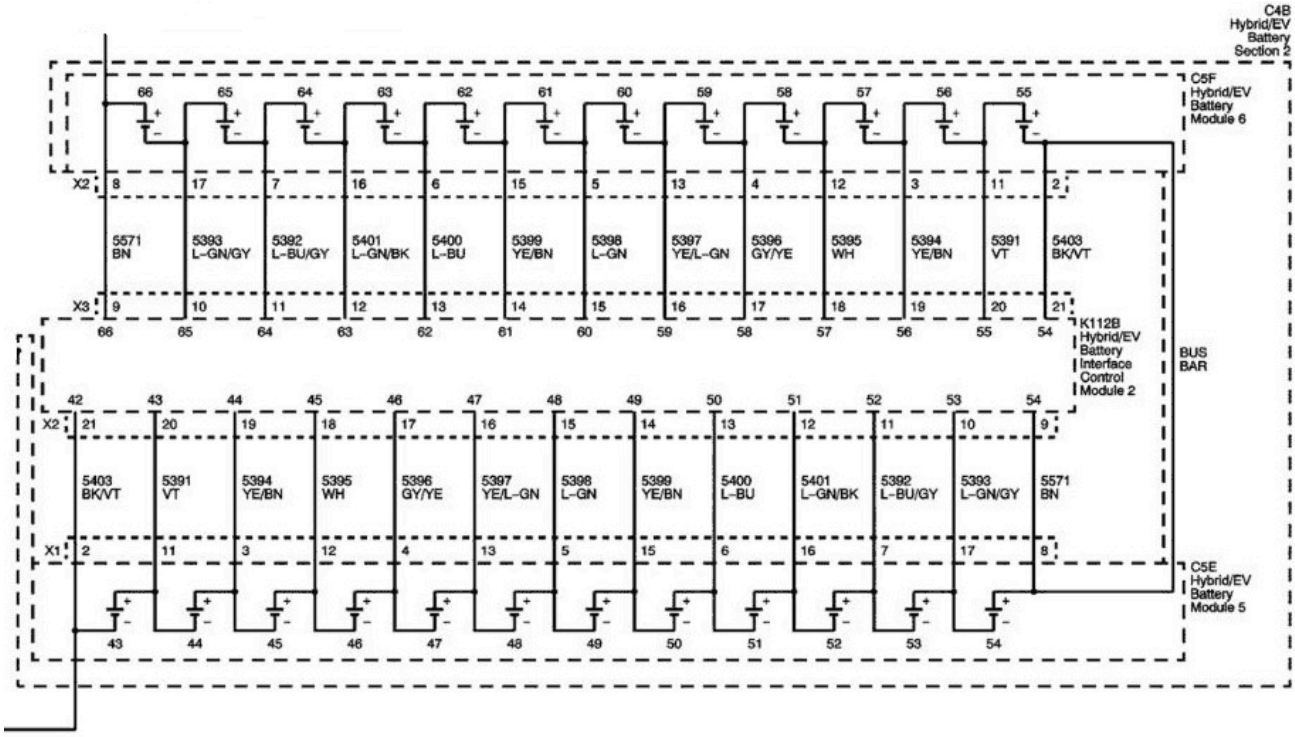
C4B Hybrid/EV Battery Section 2
C5F Hybrid/EV Battery Module 6
C5E Hybrid/EV Battery Module 5
K112B Hybrid/EV Battery Interface Control Module 2
BUS BAR
X1
X2
X3
5571 BN
5393 L-GN/GY
5392 L-BU/GY
5401 L-GN/BK
5400 L-BU
5399 YE/BN
5398 L-GN
5397 YE/L-GN
5396 GY/YE
5395 WH
5394 YE/BN
5391 VT
5403 BK/VT

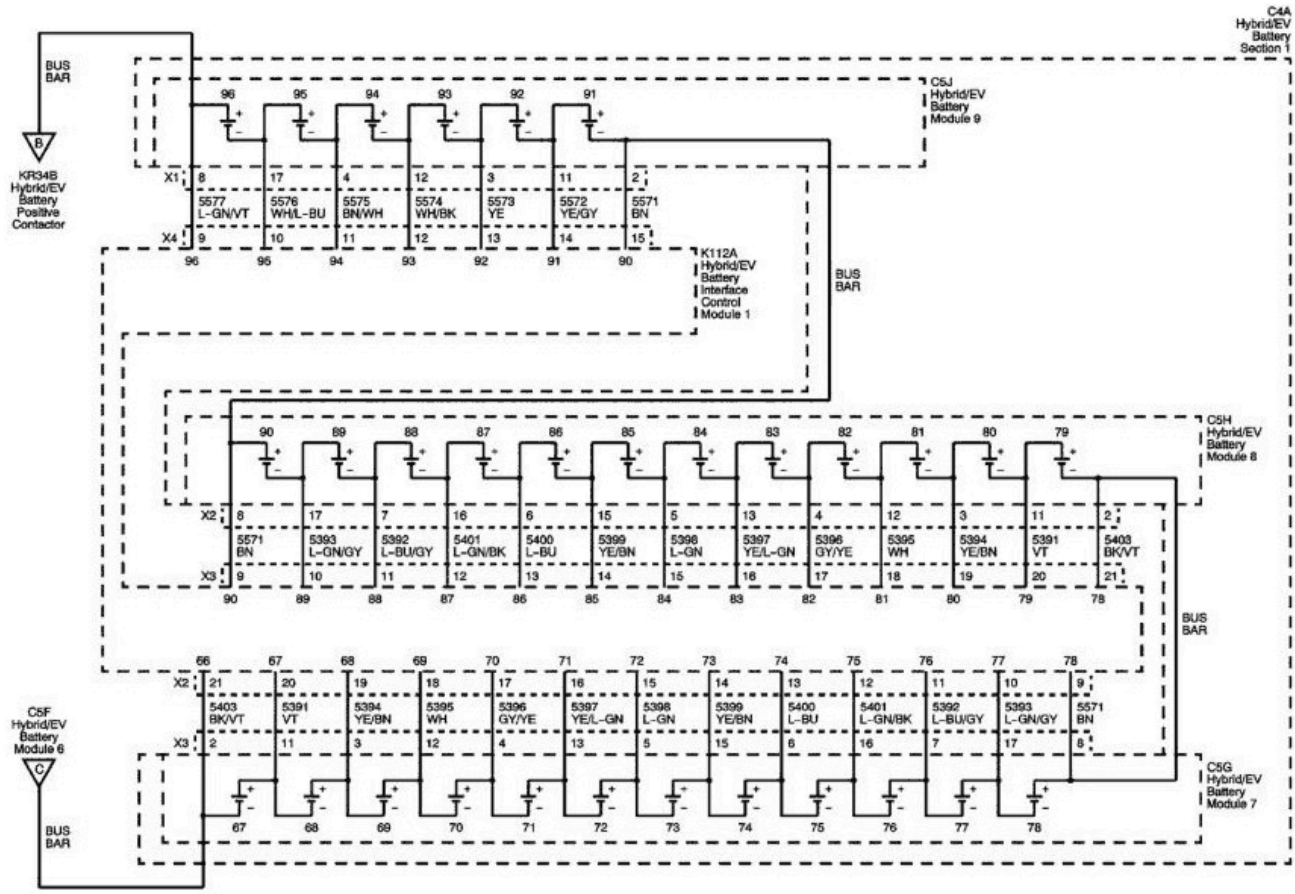


Fig. 23 Satellite placement sequence in the battery — original GM drawing

> **NOTE**
>
> The satellite sequence can be changed, but the cell map will then show positions incorrectly.

8.2 Nissan Leaf (ZE0 / AZE0)

The Nissan Leaf AZE0 and ZE0 BMS can be used (ZE1 is being tested). The BMS connects over CAN:

CONFIGURATION	CAN-H	CAN-L
Without CHAdeMO	X1-A4	X1-B4
With CHAdeMO	X1-A5	X1-B5


The original temperature sensors and the current sensor must also be connected to the BMS. The interlocks can be left out.

The Leaf battery connects to the controller through its LB1 connector:

LB1	GOES TO
5	+12 V permanent
4, 31	+12 V from the IGN relay
1 / 2	CAN-H X1-A4 / CAN-L X1-B4 (with CHAdeMO — X1-A5 / X1-B5)

LB1	GOES TO
17	X2-A4 — "+" contactor coil (SYSTEM MAIN RELAY 1)
14	X2-A3 — "−" contactor coil (SYSTEM MAIN RELAY 2)
11	X2-B4 — pre-charge relay coil
6, 7, 8, 10, 13, 16	Ground

The contactors and the pre-charge relay sit in the battery junction box, so the separate power relays of section 6 are not needed — the ECU drives the stock ones from the same outputs.

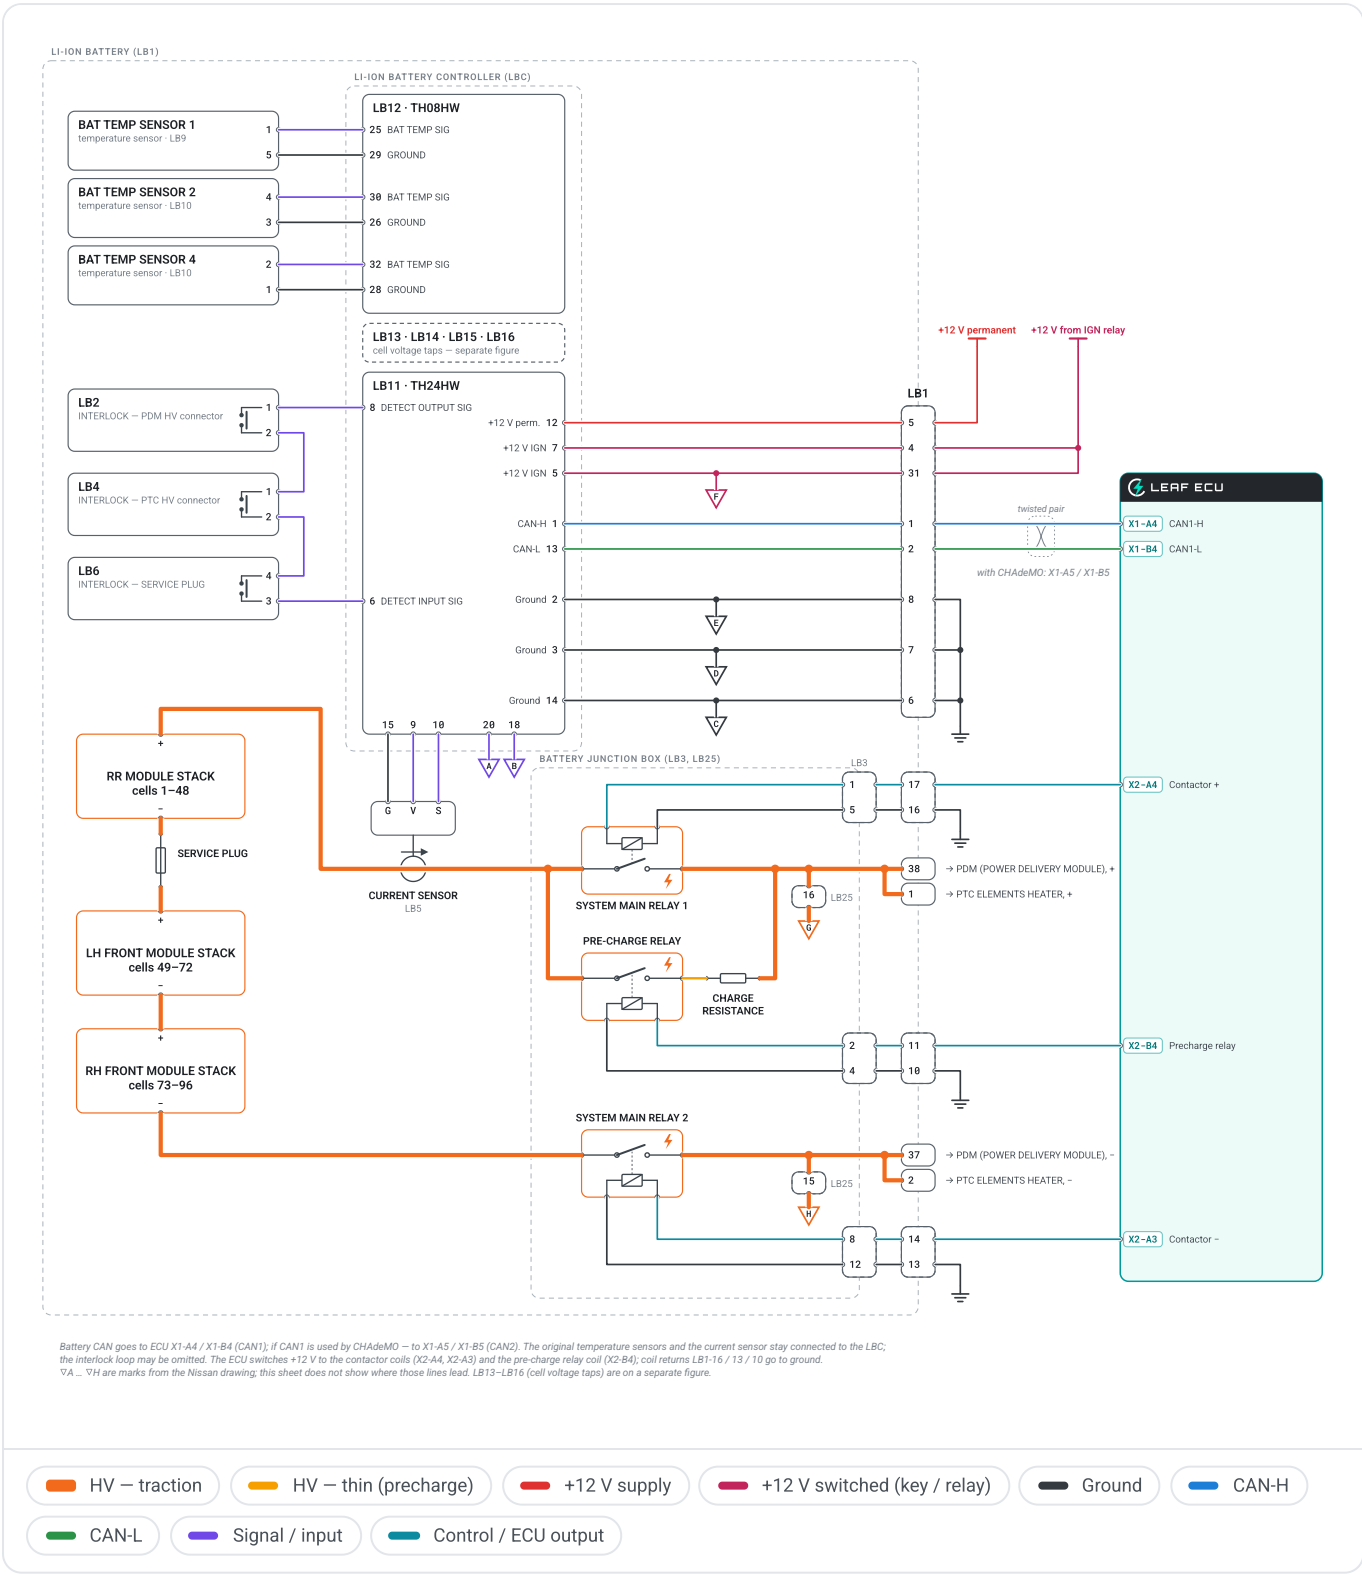

Battery CAN goes to ECU X1-A4 / X1-B4 (CAN1); if CAN1 is used by CHAdeMO — to X1-A5 / X1-B5 (CAN2). The original temperature sensors and the current sensor stay connected to the LBC; the interlock loop may be omitted. The ECU switches +12 V to the contactor coils (X2-A4, X2-A3) and the pre-charge relay coil (X2-B4); coil returns LB1-16 / 13 / 10 go to ground. ▽A … ▽H are marks from the Nissan drawing; this sheet does not show where those lines lead. LB13–LB16 (cell voltage taps) are on a separate figure.

Fig. 24 Leaf AZE0 traction battery wired to the Leaf ECU: 12 V supply and CAN of the battery controller (LBC), contactor and pre-charge relay control, ground; inside the pack — temperature and current sensors, interlocks, battery junction box and LB1 pack-connector pins

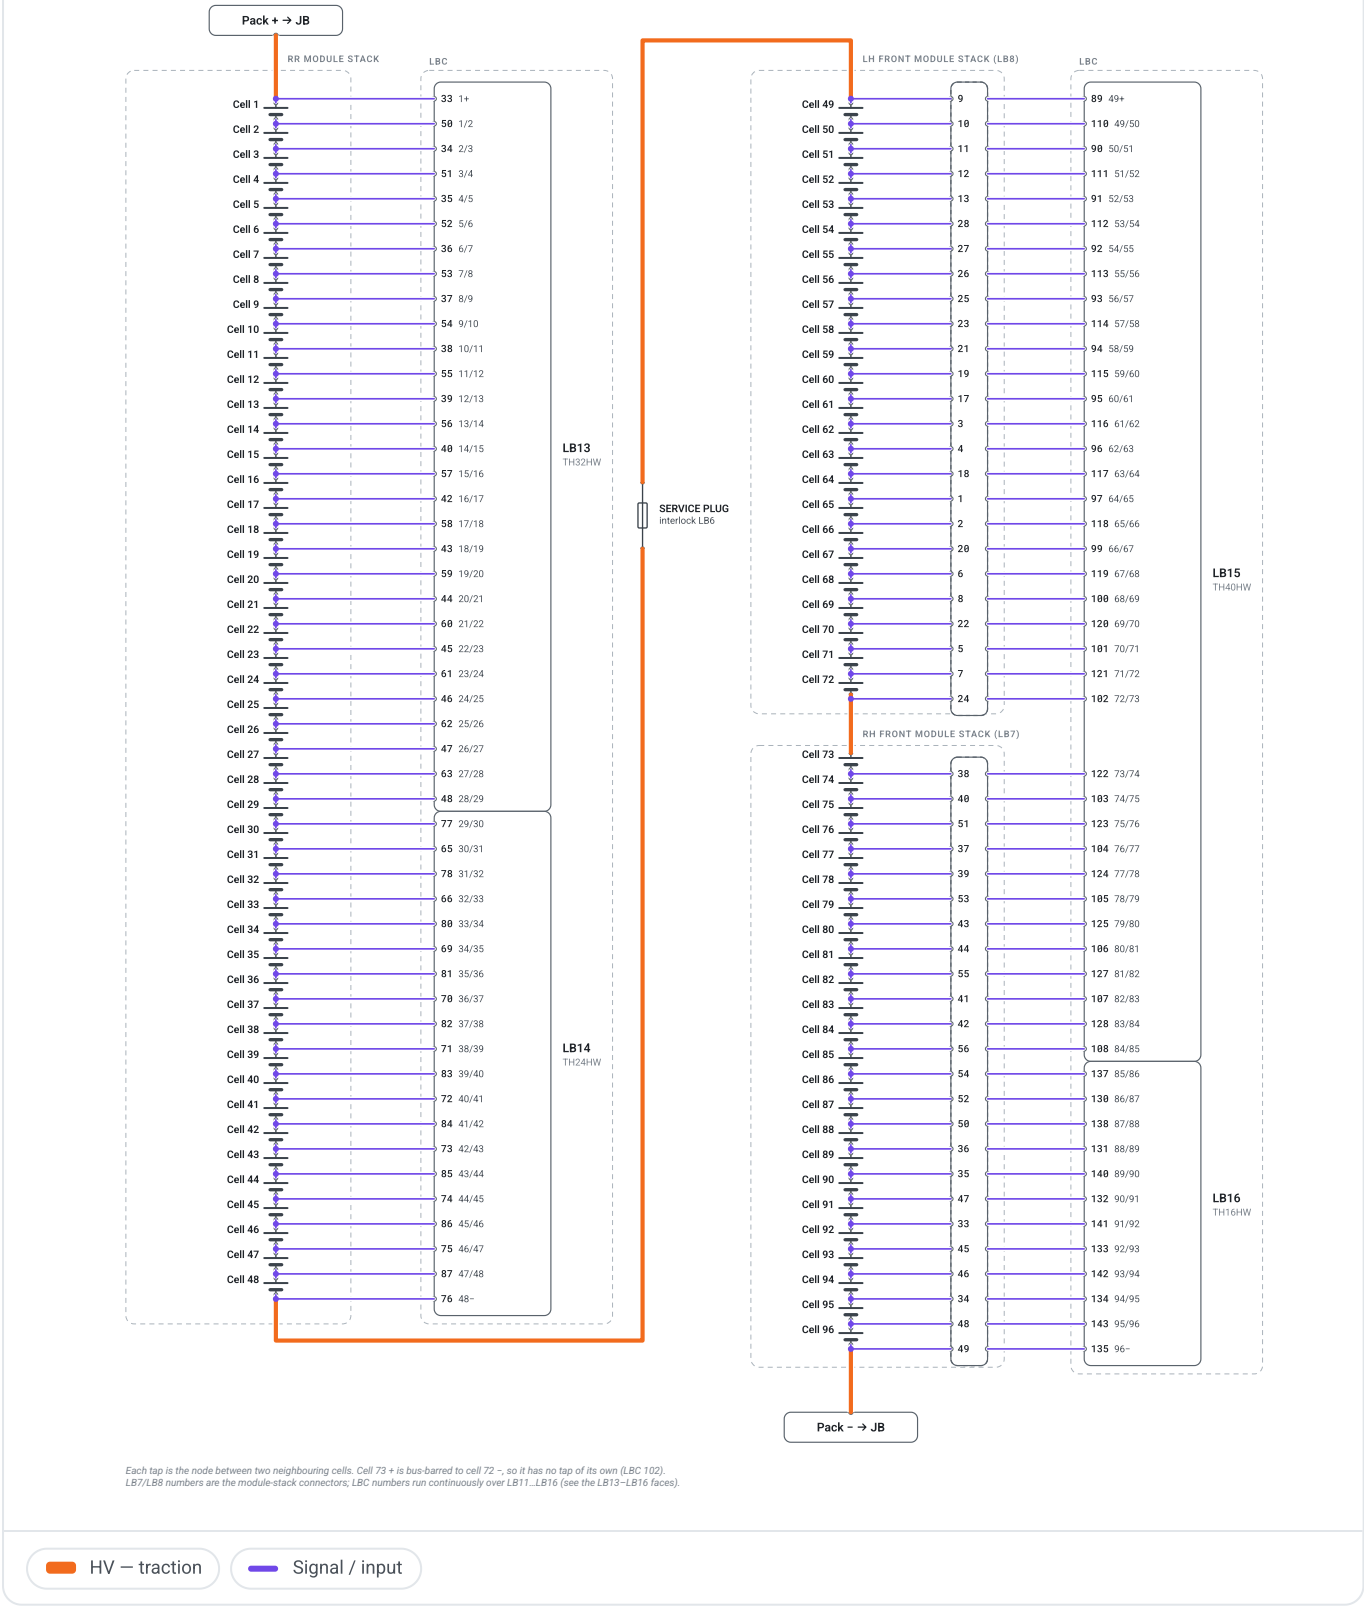


Fig. 25 Leaf AZE0 traction battery: voltage taps of the 96 cells → LBC (LB13–LB16) via stack connectors LB8 and LB7

LBC — connector LB11 (TH24HW): supply, CAN, ground, current sensor, interlock



PIN	WIRE	FUNCTION	DIAGRAMS
1		CAN-H → LB1-1 → ECU X1-A4 (with CHAdeMO — X1-A5)	24
2		Ground → LB1-8 (branch ▽E)	24
3		Ground → LB1-7 (branch ▽D)	24
5		+12 V from the M/C RELAY via fuse No.74 10 A → LB1-31 (branch ▽F)	24
6		DETECT INPUT SIG — interlock loop input (from LB6-3)	24
7		+12 V "PWR" via fuse No.57 10 A → LB1-4	24
8		DETECT OUTPUT SIG — interlock loop output (to LB2-1)	24
9		VOLTAGE — current sensor supply (LB5 "V")	24
10		CURRENT SIG — current sensor signal (LB5 "S")	24
12		+12 V "12 V BAT" via fuse No.79 20 A → LB1-5	24
13		CAN-L → LB1-2 → ECU X1-B4 (with CHAdeMO — X1-B5)	24
14		Ground → LB1-6 (branch ▽C)	24
15		GROUND — current sensor ground (LB5 "G")	24
18		Line to ▽B (destination not shown on the drawing)	24
20		Line to ▽A (destination not shown on the drawing)	24

LBC — connector LB12 (TH08HW): battery temperature sensors



PIN	WIRE	FUNCTION	DIAGRAMS
25		BAT TEMP SIG — sensor 1 (LB9-1)	24
26		GROUND — sensor 2 (LB10-3)	24
28		GROUND — sensor 4 (LB10-1)	24
29		GROUND — sensor 1 (LB9-5)	24
30		BAT TEMP SIG — sensor 2 (LB10-4)	24
32		BAT TEMP SIG — sensor 4 (LB10-2)	24

LBC — connector LB13 (TH32HW): cell voltage taps (RR stack, cells 1–29)



PIN	WIRE	FUNCTION	DIAGRAMS
33		Cell 1 + (pack +) — voltage tap (RR module stack)	25
34		Cells 2/3 — voltage tap (RR module stack)	25
35		Cells 4/5 — voltage tap (RR module stack)	25
36		Cells 6/7 — voltage tap (RR module stack)	25
37		Cells 8/9 — voltage tap (RR module stack)	25
38		Cells 10/11 — voltage tap (RR module stack)	25
39		Cells 12/13 — voltage tap (RR module stack)	25
40		Cells 14/15 — voltage tap (RR module stack)	25
42		Cells 16/17 — voltage tap (RR module stack)	25
43		Cells 18/19 — voltage tap (RR module stack)	25
44		Cells 20/21 — voltage tap (RR module stack)	25
45		Cells 22/23 — voltage tap (RR module stack)	25
46		Cells 24/25 — voltage tap (RR module stack)	25
47		Cells 26/27 — voltage tap (RR module stack)	25
48		Cells 28/29 — voltage tap (RR module stack)	25
50		Cells 1/2 — voltage tap (RR module stack)	25
51		Cells 3/4 — voltage tap (RR module stack)	25
52		Cells 5/6 — voltage tap (RR module stack)	25
53		Cells 7/8 — voltage tap (RR module stack)	25
54		Cells 9/10 — voltage tap (RR module stack)	25
55		Cells 11/12 — voltage tap (RR module stack)	25
56		Cells 13/14 — voltage tap (RR module stack)	25
57		Cells 15/16 — voltage tap (RR module stack)	25
58		Cells 17/18 — voltage tap (RR module stack)	25
59		Cells 19/20 — voltage tap (RR module stack)	25
60		Cells 21/22 — voltage tap (RR module stack)	25
61		Cells 23/24 — voltage tap (RR module stack)	25
62		Cells 25/26 — voltage tap (RR module stack)	25
63		Cells 27/28 — voltage tap (RR module stack)	25

LBC — connector LB14 (TH24HW): cell voltage taps (RR stack, cells 29–48)



PIN	WIRE	FUNCTION	DIAGRAMS
65		Cells 30/31 — voltage tap (RR module stack)	25
66		Cells 32/33 — voltage tap (RR module stack)	25
69		Cells 34/35 — voltage tap (RR module stack)	25
70		Cells 36/37 — voltage tap (RR module stack)	25
71		Cells 38/39 — voltage tap (RR module stack)	25
72		Cells 40/41 — voltage tap (RR module stack)	25
73		Cells 42/43 — voltage tap (RR module stack)	25
74		Cells 44/45 — voltage tap (RR module stack)	25
75		Cells 46/47 — voltage tap (RR module stack)	25
76		Cell 48 − (to the service plug) — voltage tap (RR module stack)	25
77		Cells 29/30 — voltage tap (RR module stack)	25
78		Cells 31/32 — voltage tap (RR module stack)	25
80		Cells 33/34 — voltage tap (RR module stack)	25
81		Cells 35/36 — voltage tap (RR module stack)	25
82		Cells 37/38 — voltage tap (RR module stack)	25
83		Cells 39/40 — voltage tap (RR module stack)	25
84		Cells 41/42 — voltage tap (RR module stack)	25
85		Cells 43/44 — voltage tap (RR module stack)	25
86		Cells 45/46 — voltage tap (RR module stack)	25
87		Cells 47/48 — voltage tap (RR module stack)	25

LBC — connector LB15 (TH40HW): cell voltage taps (LH stack cells 49–72 and RH stack cells 73–85)



PIN	WIRE	FUNCTION	DIAGRAMS
89		Cell 49 + (after the service plug) — voltage tap (LH front stack, via LB8-9)	25
90		Cells 50/51 — voltage tap (LH front stack, via LB8-11)	25
91		Cells 52/53 — voltage tap (LH front stack, via LB8-13)	25
92		Cells 54/55 — voltage tap (LH front stack, via LB8-27)	25
93		Cells 56/57 — voltage tap (LH front stack, via LB8-25)	25
94		Cells 58/59 — voltage tap (LH front stack, via LB8-21)	25
95		Cells 60/61 — voltage tap (LH front stack, via LB8-17)	25
96		Cells 62/63 — voltage tap (LH front stack, via LB8-4)	25
97		Cells 64/65 — voltage tap (LH front stack, via LB8-1)	25
99		Cells 66/67 — voltage tap (LH front stack, via LB8-20)	25
100		Cells 68/69 — voltage tap (LH front stack, via LB8-8)	25
101		Cells 70/71 — voltage tap (LH front stack, via LB8-5)	25
102		Cells 72/73 — voltage tap (LH front stack, via LB8-24)	25
103		Cells 74/75 — voltage tap (RH front stack, via LB7-40)	25
104		Cells 76/77 — voltage tap (RH front stack, via LB7-37)	25
105		Cells 78/79 — voltage tap (RH front stack, via LB7-53)	25
106		Cells 80/81 — voltage tap (RH front stack, via LB7-44)	25
107		Cells 82/83 — voltage tap (RH front stack, via LB7-41)	25
108		Cells 84/85 — voltage tap (RH front stack, via LB7-56)	25
110		Cells 49/50 — voltage tap (LH front stack, via LB8-10)	25
111		Cells 51/52 — voltage tap (LH front stack, via LB8-12)	25
112		Cells 53/54 — voltage tap (LH front stack, via LB8-28)	25
113		Cells 55/56 — voltage tap (LH front stack, via LB8-26)	25
114		Cells 57/58 — voltage tap (LH front stack, via LB8-23)	25
115		Cells 59/60 — voltage tap (LH front stack, via LB8-19)	25
116		Cells 61/62 — voltage tap (LH front stack, via LB8-3)	25
117		Cells 63/64 — voltage tap (LH front stack, via LB8-18)	25
118		Cells 65/66 — voltage tap (LH front stack, via LB8-2)	25
119		Cells 67/68 — voltage tap (LH front stack, via LB8-6)	25
120		Cells 69/70 — voltage tap (LH front stack, via LB8-22)	25
121		Cells 71/72 — voltage tap (LH front stack, via LB8-7)	25
122		Cells 73/74 — voltage tap (RH front stack, via LB7-38)	25
123		Cells 75/76 — voltage tap (RH front stack, via LB7-51)	25
124		Cells 77/78 — voltage tap (RH front stack, via LB7-39)	25
125		Cells 79/80 — voltage tap (RH front stack, via LB7-43)	25
127		Cells 81/82 — voltage tap (RH front stack, via LB7-55)	25


PIN	WIRE	FUNCTION	DIAGRAMS
128		Cells 83/84 — voltage tap (RH front stack, via LB7-42)	25

LBC — connector LB16 (TH16HW): cell voltage taps (RH stack, cells 85–96)



PIN	WIRE	FUNCTION	DIAGRAMS
130		Cells 86/87 — voltage tap (RH front stack, via LB7-52)	25
131		Cells 88/89 — voltage tap (RH front stack, via LB7-36)	25
132		Cells 90/91 — voltage tap (RH front stack, via LB7-47)	25
133		Cells 92/93 — voltage tap (RH front stack, via LB7-45)	25
134		Cells 94/95 — voltage tap (RH front stack, via LB7-34)	25
135		Cell 96 − (pack −) — voltage tap (RH front stack, via LB7-49)	25
137		Cells 85/86 — voltage tap (RH front stack, via LB7-54)	25
138		Cells 87/88 — voltage tap (RH front stack, via LB7-50)	25
140		Cells 89/90 — voltage tap (RH front stack, via LB7-35)	25
141		Cells 91/92 — voltage tap (RH front stack, via LB7-33)	25
142		Cells 93/94 — voltage tap (RH front stack, via LB7-46)	25
143		Cells 95/96 — voltage tap (RH front stack, via LB7-48)	25

Fig. 26 Li-ion battery controller (LBC) connectors LB11–LB16

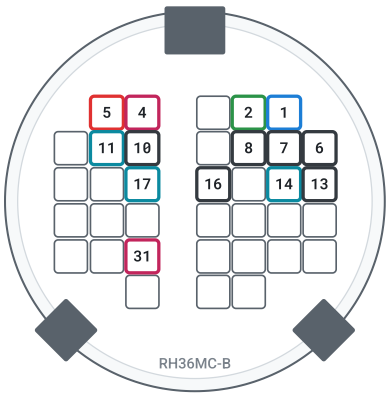


PIN	WIRE	FUNCTION	DIAGRAMS
1		CAN-H (LBC 1) → ECU X1-A4 (with CHAdeMO — X1-A5)	24
2		CAN-L (LBC 13) → ECU X1-B4 (with CHAdeMO — X1-B5)	24
4		+12 V from the IGN relay → LBC 7 ("PWR")	24
5		+12 V permanent → LBC 12 ("12 V BAT")	24
31		+12 V from the IGN relay → LBC 5	24
6		Ground (LBC 14)	24
7		Ground (LBC 3)	24
8		Ground (LBC 2)	24
17		SYSTEM MAIN RELAY 1 coil, "+" contactor (LB3-1) ← ECU X2-A4	24
16		SYSTEM MAIN RELAY 1 coil ground (LB3-5)	24
14		SYSTEM MAIN RELAY 2 coil, "−" contactor (LB3-8) ← ECU X2-A3	24
13		SYSTEM MAIN RELAY 2 coil ground (LB3-12)	24
11		Pre-charge relay coil (LB3-2) ← ECU X2-B4	24
10		Pre-charge relay coil ground (LB3-4)	24

Fig. 27 Battery connector LB1

The stock Leaf current sensor (LB5) stays connected to the LBC: G — ground (LBC 15), V — sensor supply (LBC 9), S — signal (LBC 10).

LB5

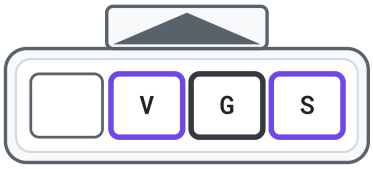

PIN	WIRE	FUNCTION	DIAGRAMS
V		V — sensor supply ← LBC 9 (VOLTAGE)	24
G		G — sensor ground ← LBC 15 (GROUND)	24
S		S — current signal → LBC 10 (CURRENT SIG)	24

Fig. 28 Leaf battery current sensor — connector LB5

LB8 (TH24FW-NH) — LH front module stack connector (cells 49–72)



PIN	WIRE	FUNCTION	DIAGRAMS
1		Cells 64/65 → LBC 97	25
2		Cells 65/66 → LBC 118	25
3		Cells 61/62 → LBC 116	25
4		Cells 62/63 → LBC 96	25
5		Cells 70/71 → LBC 101	25
6		Cells 67/68 → LBC 119	25
7		Cells 71/72 → LBC 121	25
8		Cells 68/69 → LBC 100	25
9		Cell 49 + (after the service plug) → LBC 89	25
10		Cells 49/50 → LBC 110	25
11		Cells 50/51 → LBC 90	25
12		Cells 51/52 → LBC 111	25
13		Cells 52/53 → LBC 91	25
17		Cells 60/61 → LBC 95	25
18		Cells 63/64 → LBC 117	25
19		Cells 59/60 → LBC 115	25
20		Cells 66/67 → LBC 99	25
21		Cells 58/59 → LBC 94	25
22		Cells 69/70 → LBC 120	25
23		Cells 57/58 → LBC 114	25
24		Cells 72/73 → LBC 102	25
25		Cells 56/57 → LBC 93	25
26		Cells 55/56 → LBC 113	25
27		Cells 54/55 → LBC 92	25
28		Cells 53/54 → LBC 112	25

LB7 (TH32FW-NH) — RH front module stack connector (cells 73–96)



PIN	WIRE	FUNCTION	DIAGRAMS
33		Cells 91/92 → LBC 141	25
34		Cells 94/95 → LBC 134	25
35		Cells 89/90 → LBC 140	25
36		Cells 88/89 → LBC 131	25
37		Cells 76/77 → LBC 104	25
38		Cells 73/74 → LBC 122	25
39		Cells 77/78 → LBC 124	25
40		Cells 74/75 → LBC 103	25
41		Cells 82/83 → LBC 107	25
42		Cells 83/84 → LBC 128	25
43		Cells 79/80 → LBC 125	25
44		Cells 80/81 → LBC 106	25
45		Cells 92/93 → LBC 133	25
46		Cells 93/94 → LBC 142	25
47		Cells 90/91 → LBC 132	25
48		Cells 95/96 → LBC 143	25
49		Cell 96 − (pack −) → LBC 135	25
50		Cells 87/88 → LBC 138	25
51		Cells 75/76 → LBC 123	25
52		Cells 86/87 → LBC 130	25
53		Cells 78/79 → LBC 105	25
54		Cells 85/86 → LBC 137	25
55		Cells 81/82 → LBC 127	25
56		Cells 84/85 → LBC 108	25

Fig. 29 Module stack connectors: LB8 (left front) and LB7 (right front)

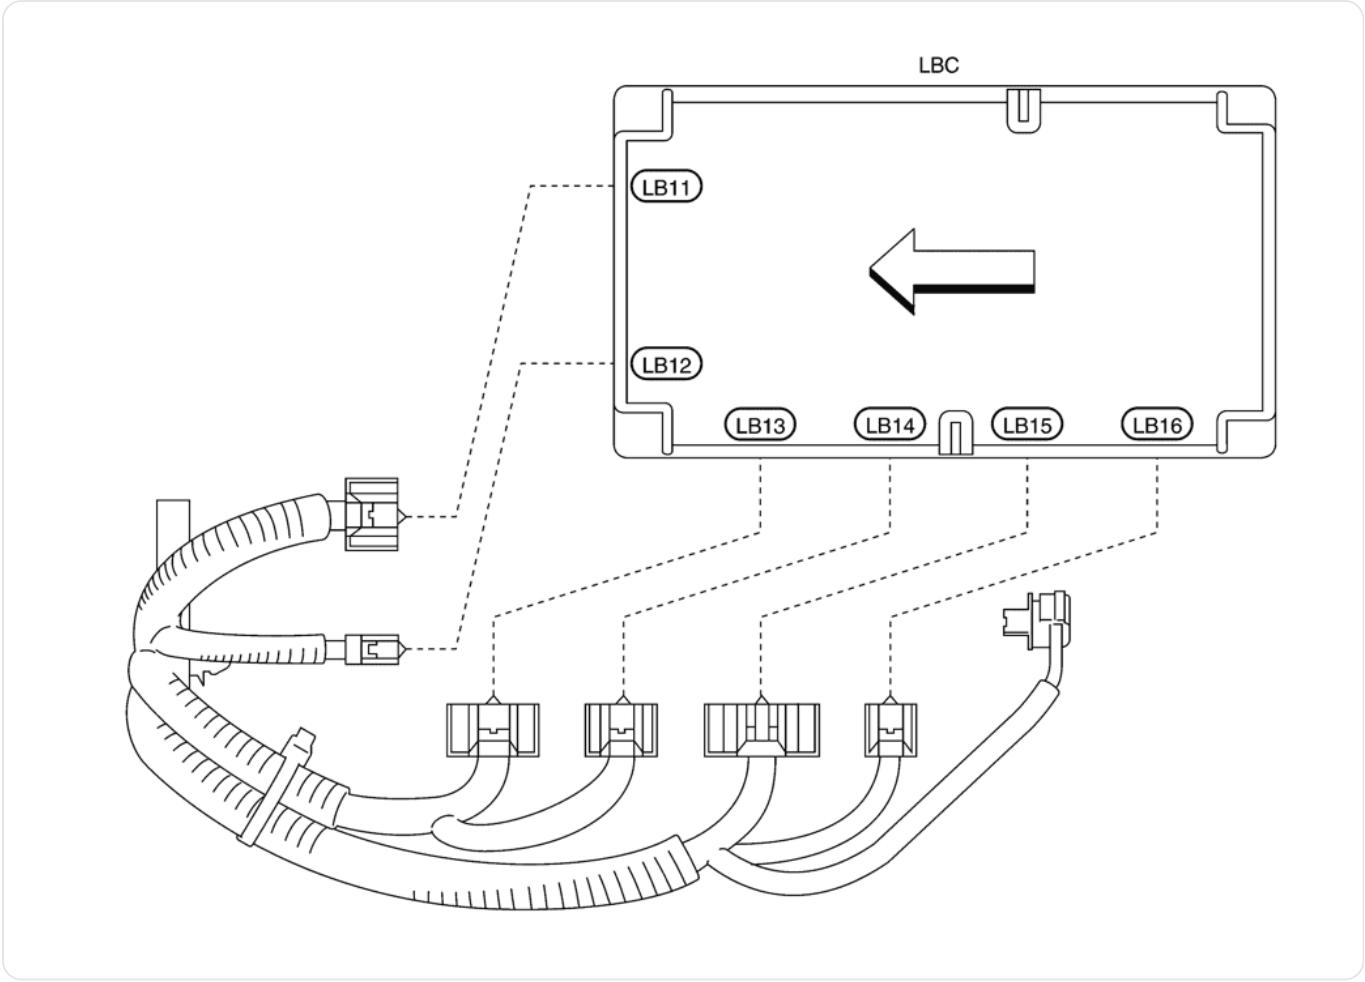


Fig. 30 LBC connector locations LB11–LB16 and harness

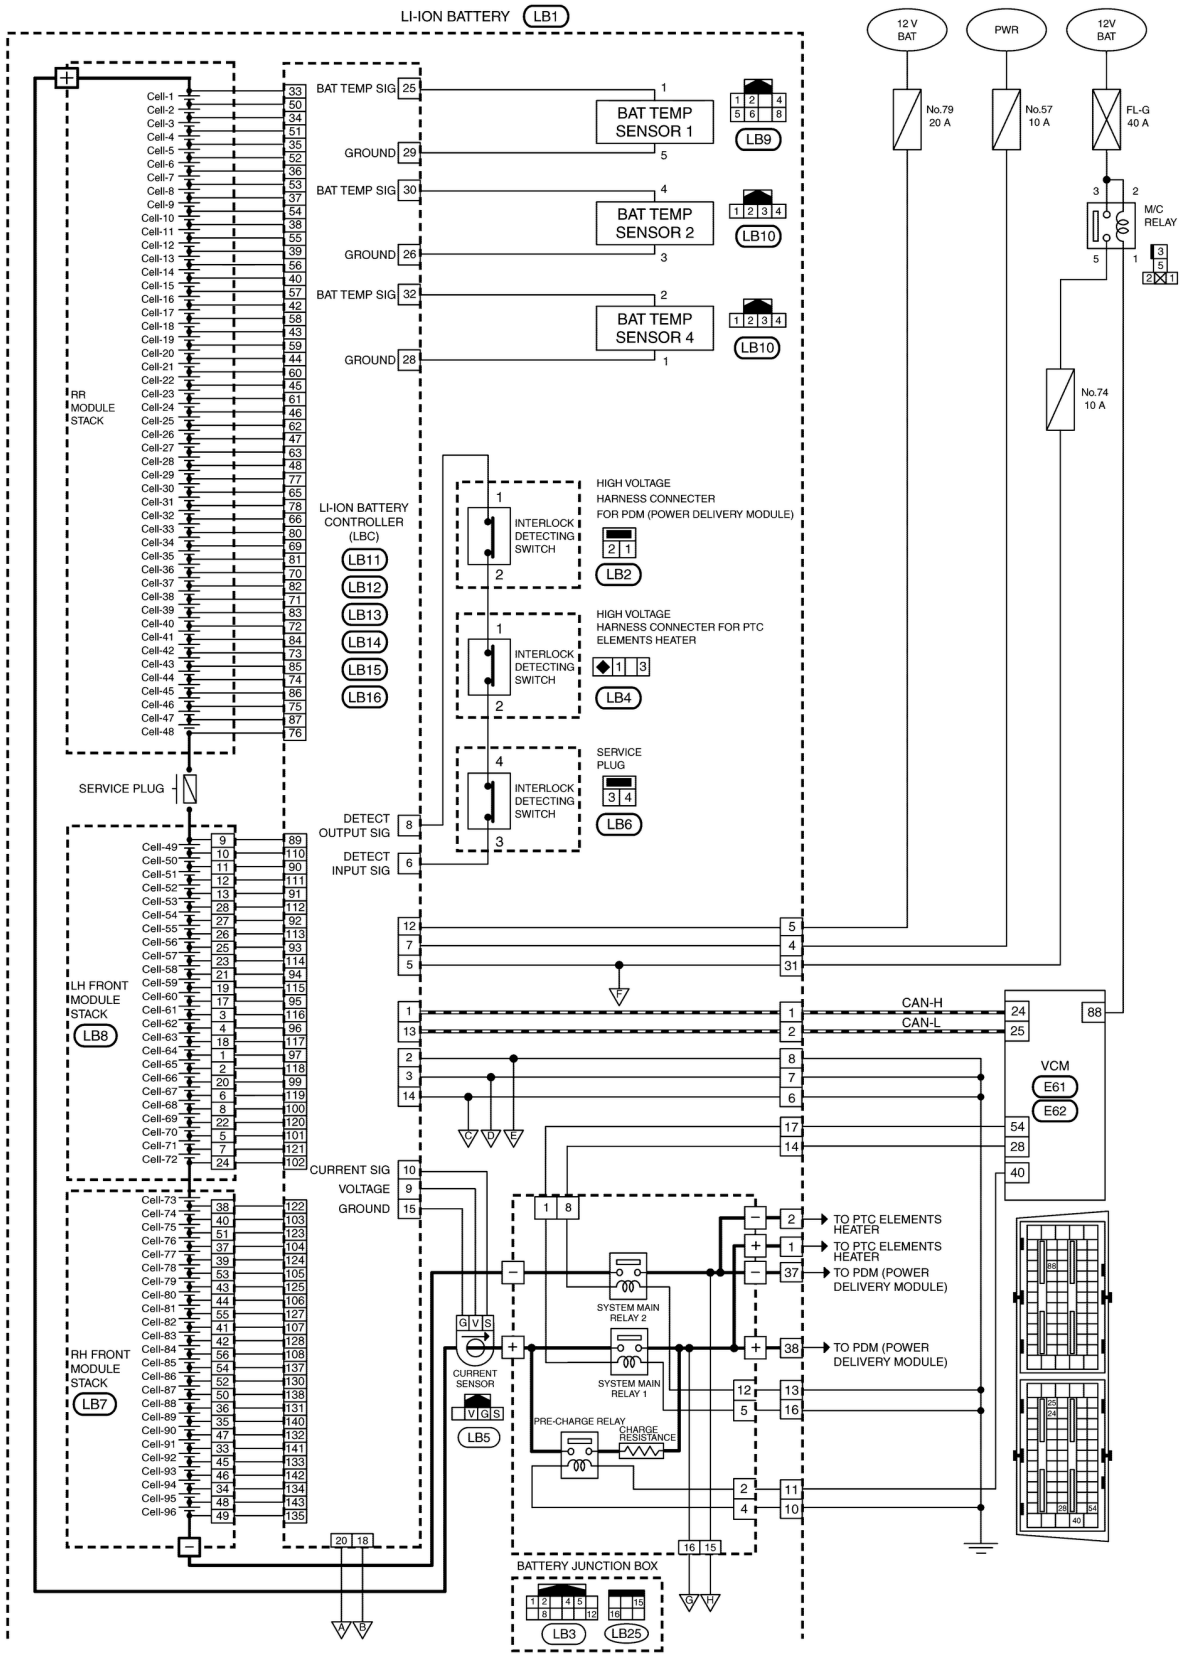


Fig. 31 Nissan Leaf AZE0 battery wiring — original factory drawing

> **NOTE**
>
> The diagrams are for the AZE0 BMS; other versions differ slightly.

8.3 Orion 2

Supported by the controller. Detailed documentation will be added in future revisions.

9 Current Sensor

The current sensor can be placed anywhere inside the battery before the power relays.


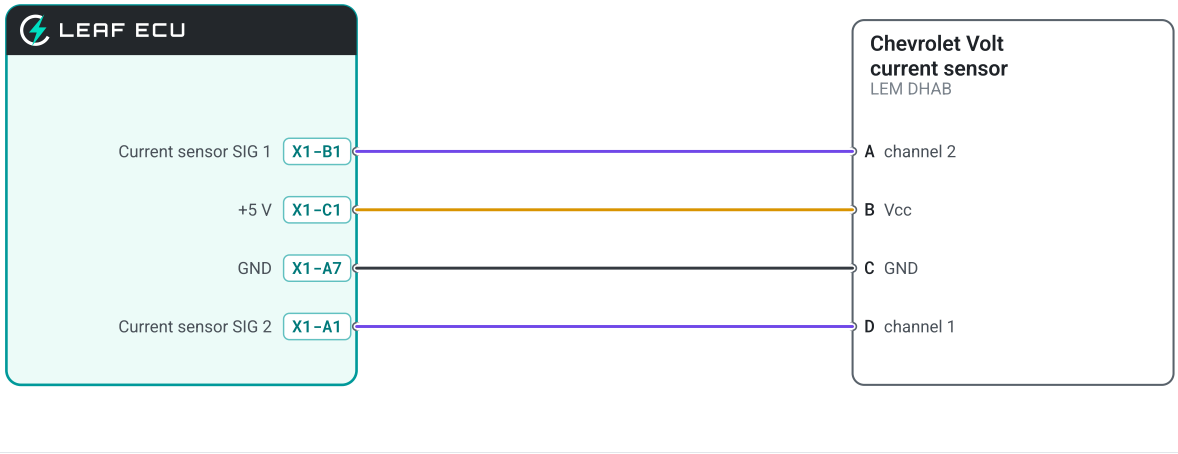



Fig. 32 Chevrolet Volt current sensor wiring

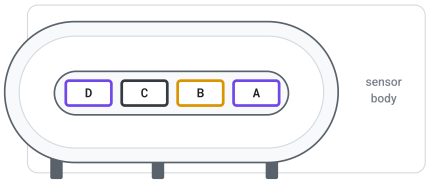

Front view into the sensor connector (as in the LEM drawing)

PIN	WIRE	FUNCTION	DIAGRAMS
A		Channel 2 → ECU X1-B1 (SIG 1)	32
B		Vcc, +5 V ← ECU X1-C1	32
C		Gnd, ground ← ECU X1-A7	32
D		Channel 1 → ECU X1-A1 (SIG 2)	32

Fig. 33 Chevrolet Volt current sensor connector (LEM DHAB)

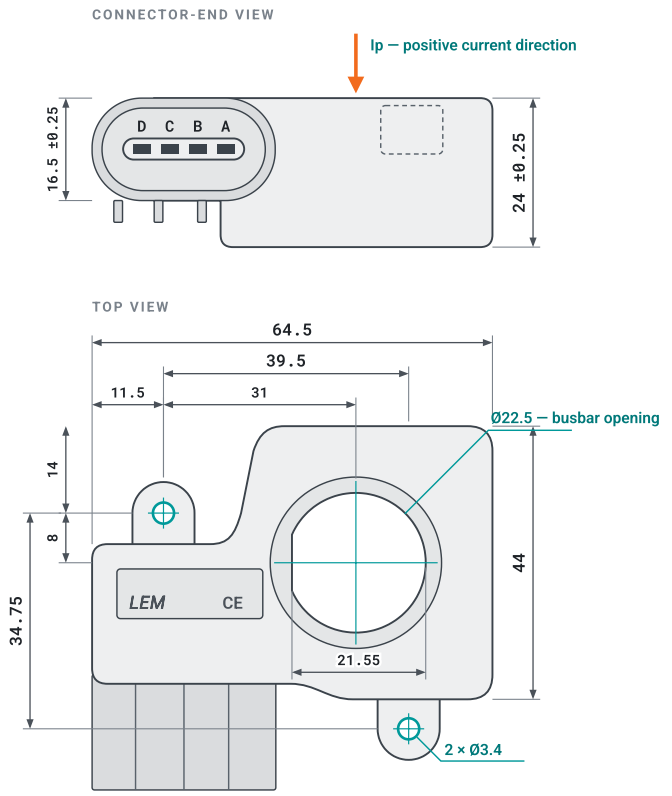

Enclosure size
64.5 × 44 × 24 mm

Busbar opening
Ø22.5 mm (flat at 21.55)

Mounting
2 × Ø3.4 mm

Between mounting holes
39.5 × 34.75 mm

Connector
4 pins: D C B A

A	channel 2 → ECU X1-B1 (SIG 1)
B	Vcc +5 V ← ECU X1-C1
C	ground ← ECU X1-A7
D	channel 1 → ECU X1-A1 (SIG 2)

Dimensions in mm from the LEM drawing. Current direction as on the LEM drawing: the Ip arrow above the connector-end view.

Fig. 34 LEM DHAB current sensor: dimensions, mounting, busbar opening, pinout and current direction



Fig. 35 Current sensor connector

10 Cooling System

A liquid cooling system is required for the powertrain to work properly.

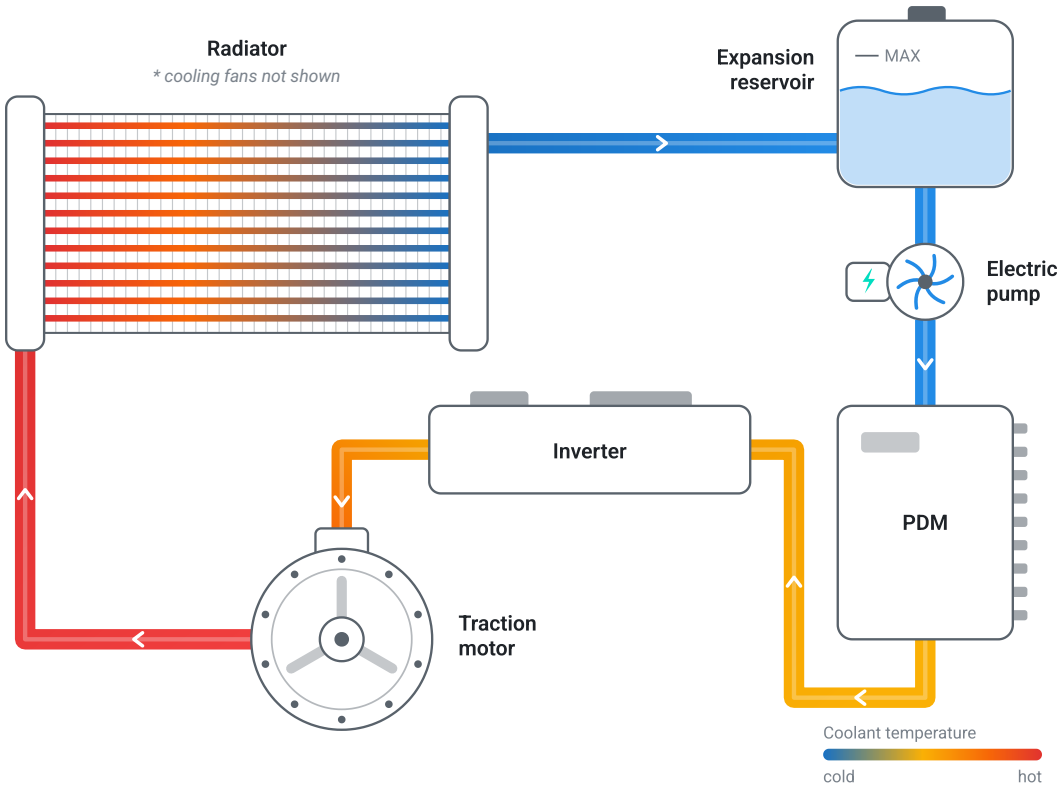


Fig. 36 Liquid cooling loop: radiator → reservoir → pump → PDM → inverter → motor

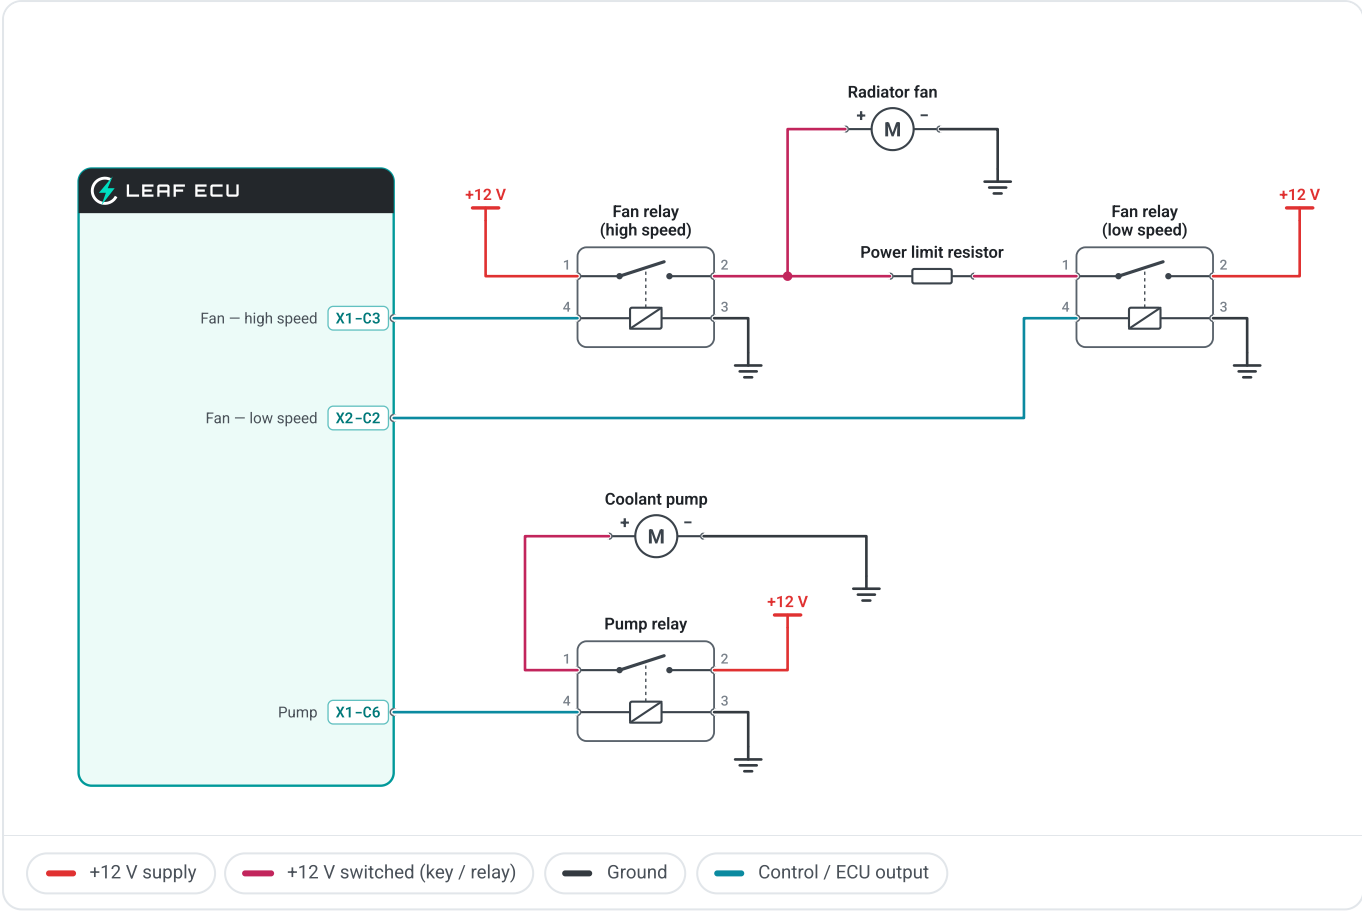


Fig. 37 Radiator fan (two speeds) and coolant pump control

Pump and fan switch-on temperatures are set in the web configurator on **ECU → Settings**. The controller can run the fan at two speeds:

- full;
- reduced — through a power-limiting resistor.

The fan can also be driven by an external PWM controller (without the resistor).

11 Brake Light (Regeneration)

The controller can switch on the brake light during regenerative braking. To do this, install a relay in parallel with the brake pedal switch.

Feed the brake-light signal to pin X2-B8 so the controller can see the brake pedal being pressed.

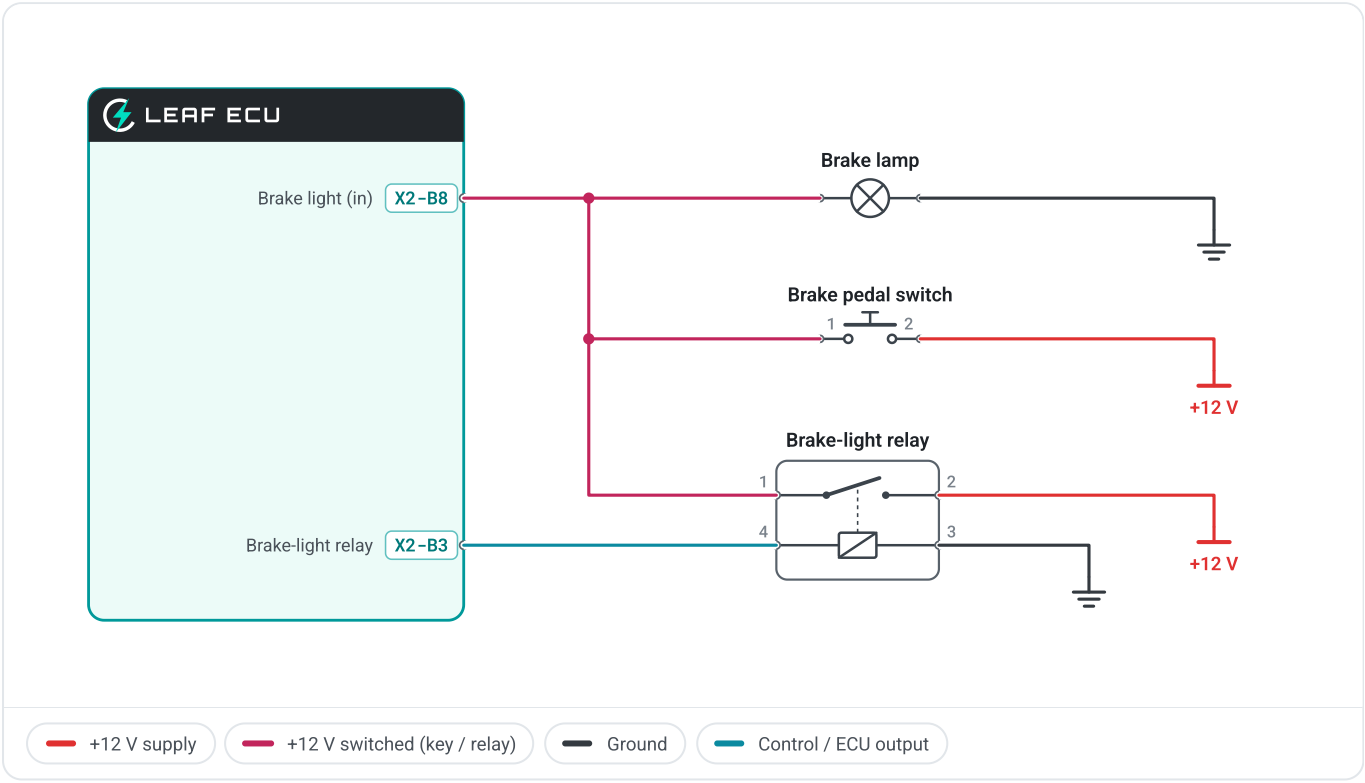


Fig. 38 Brake light during regeneration: relay in parallel with the brake pedal switch

12 CHAdeMO

If the PDM has a CHAdeMO port, its internal power contactors (CHAdeMO Power Relay + and −) can be used by running separate wires from them. If the PDM has no CHAdeMO port, two additional power contactors must be installed.

The Enable Relay is installed separately regardless of the PDM version. It does not need to be high-power — only strong enough to switch the power contactor coils.


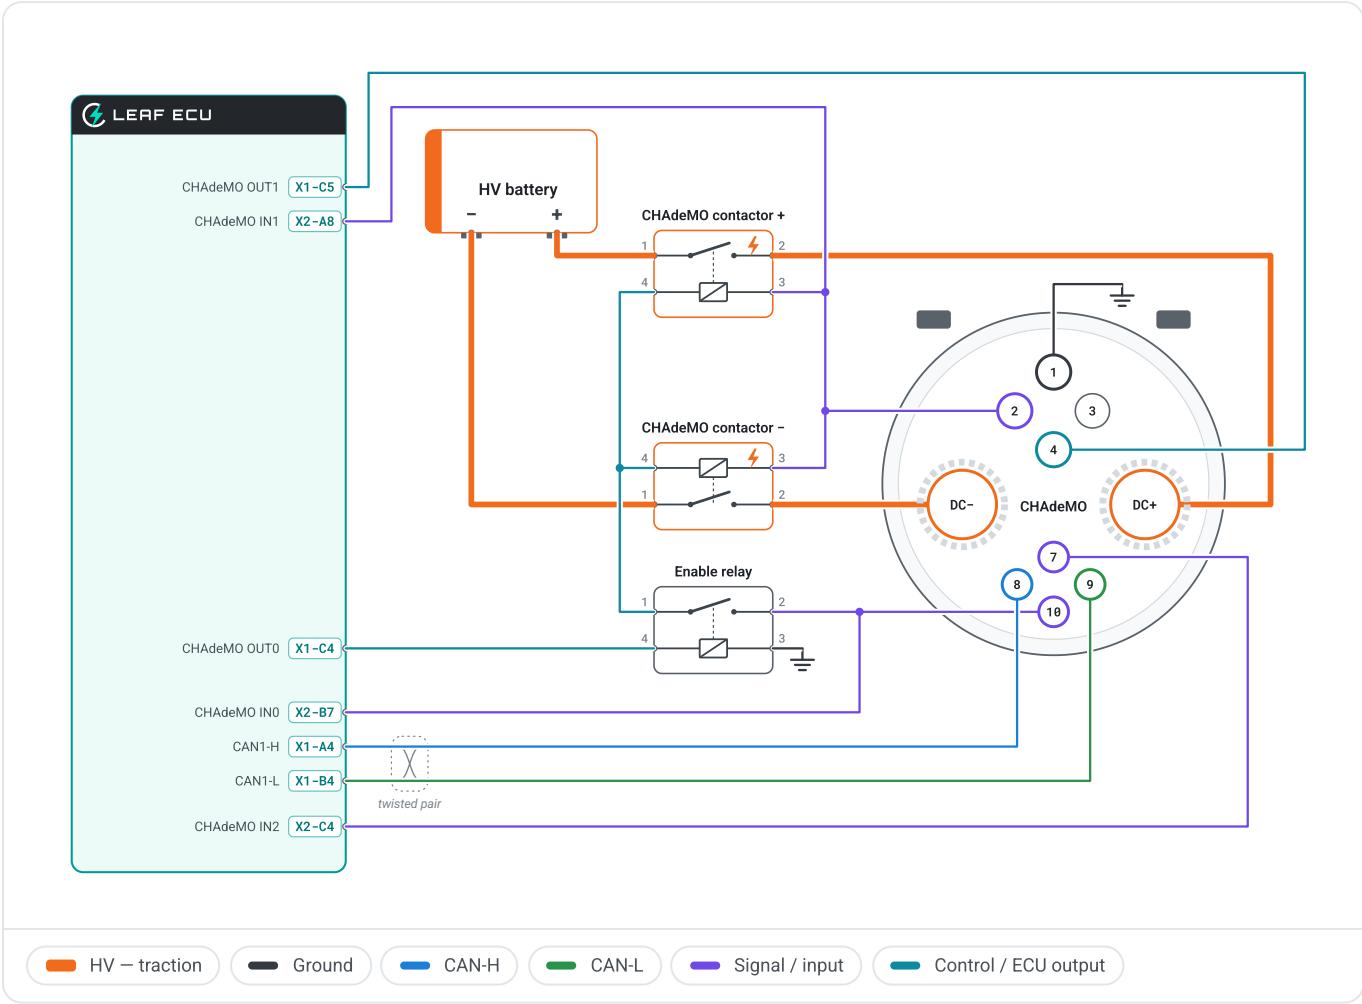



Fig. 39 CHAdeMO inlet wiring: power contactors, enable relay and charge sequence signals

CHAdeMO — vehicle inlet

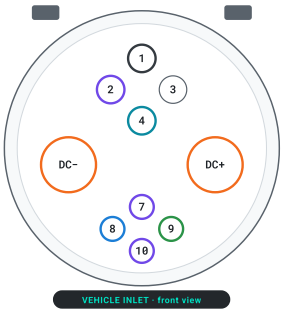

Front view of the vehicle inlet (the side the gun plugs into)

CHAdeMO — charger gun

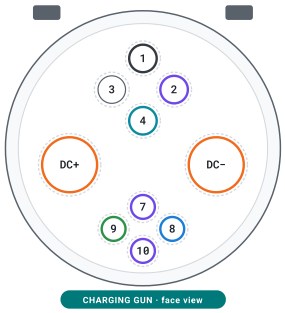

View onto the face of the charging gun — the mirror image of the inlet

PIN	WIRE	FUNCTION	DIAGRAMS
1		FG, protective earth → ground	39
2		charge sequence signal 1 → ECU X2-A8	39
3		not used	
4		vehicle charge permission ← ECU X1-C5	39
5		DC− → CHAdeMO contactor −	39
6		DC+ → CHAdeMO contactor +	39
7		proximity detection → ECU X2-C4	39
8		CAN-H → ECU X1-A4	39
9		CAN-L → ECU X1-B4	39
10		charge sequence signal 2 → ECU X2-B7	39

Fig. 40 CHAdeMO: vehicle inlet and charger gun

DC POLARITY

Pin **5 is DC−**, pin **6 is DC+**: on the vehicle inlet (front view) DC− is on the left, DC+ on the right. The diagram in earlier revisions of this manual showed DC+ and DC− on the inlet the other way round. Before the first charge, check with a continuity tester that inlet pin 6 goes to the CHAdeMO "+" contactor and pin 5 to the "−" contactor.

13 Display

The display controller sits on CAN0 Powertrain and reads the warning-lamp states through its own inputs; it drives a Nextion touch display.

13.1 Display Controller


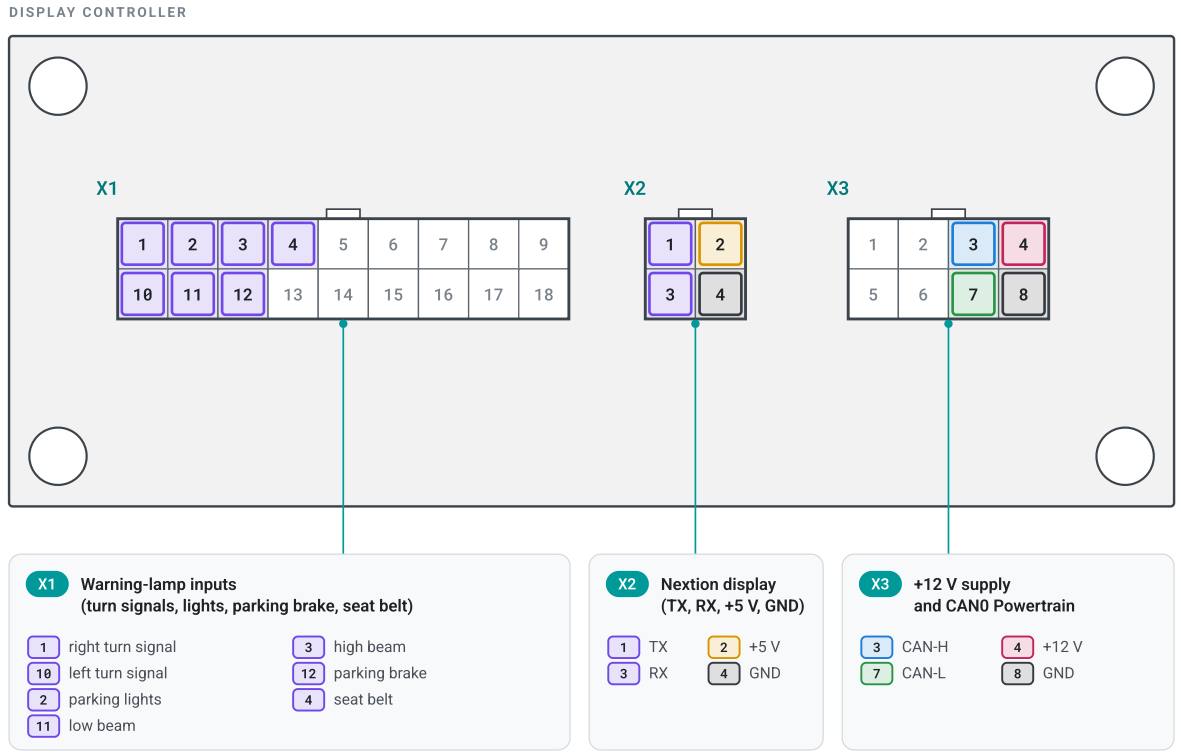


Fig. 41 Display controller: connectors X1–X3 and mounting holes

Display controller — connector X1 (signal-lamp inputs)

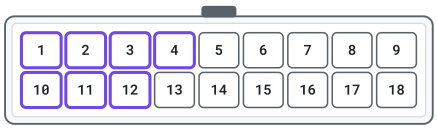

PIN	WIRE	FUNCTION
1		Right turn signal (IN1)
10		Left turn signal (IN2)
2		Parking lights (IN3)
11		Low beam (IN4)
3		High beam (IN5)
12		Parking brake (IN6)
4		Seat belt (IN7)

Display controller — connector X2 (Nextion display)



PIN	WIRE	FUNCTION	DIAGRAMS
1		TX — data out to the Nextion display	44
3		RX — data in from the Nextion display	44
2		+5 V — display supply output	44
4		Display ground (GND)	44

Display controller — connector X3 (interface)




PIN	WIRE	FUNCTION
3		CAN-H — Powertrain bus (CAN0)
7		CAN-L — Powertrain bus (CAN0)
4		+12 V — controller supply
8		Ground (GND)

Fig. 42 Display controller connectors: X1 — warning-lamp inputs, X2 — display, X3 — interface

13.2 Nextion Intelligent Display

The display connects to the controller's X2 connector with four wires: +5 V supply, ground and the serial port (controller TX to display RX, RX to TX).

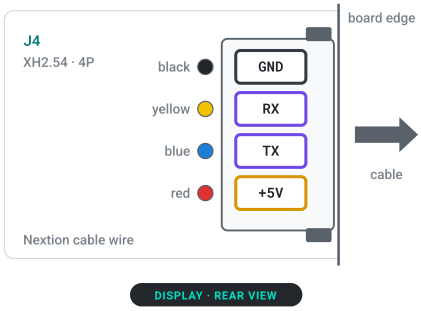

Rear view onto the display board (as on the Nextion drawing): J4 at the right board edge

PIN	WIRE	FUNCTION	DIAGRAMS
+5V		+5 V — display supply, red wire ← controller X2-2. Current 7": 430 mA, 5": 220 mA (typ., 100 % brightness); Nextion recommends a 5 V / 1 A supply	44
TX		TX — data out of the display, blue wire → controller RX, X2-3	44
RX		RX — data into the display, yellow wire ← controller TX, X2-1	44
GND		GND — ground, black wire ← controller X2-4	44

Fig. 43 Nextion Intelligent 7" (and 5") display — interface connector J4

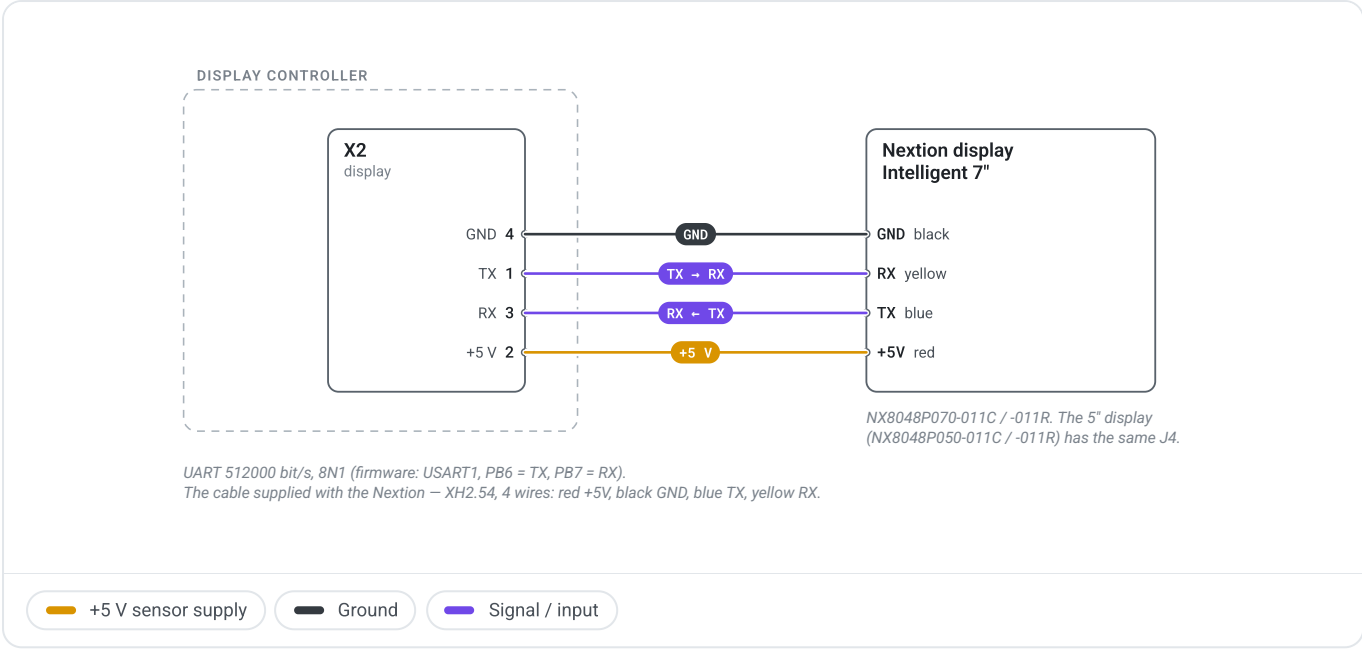


Fig. 44 Connecting the Nextion Intelligent 7" display to connector X2 of the display controller


The controller works with the Nextion Intelligent 7" and 5" displays. Dimensions and mounting holes of both:

7" · NX8048P070-011C / -011R



-011R: 7.45, TP glass 1.45

5" · NX8048P050-011C / -011R

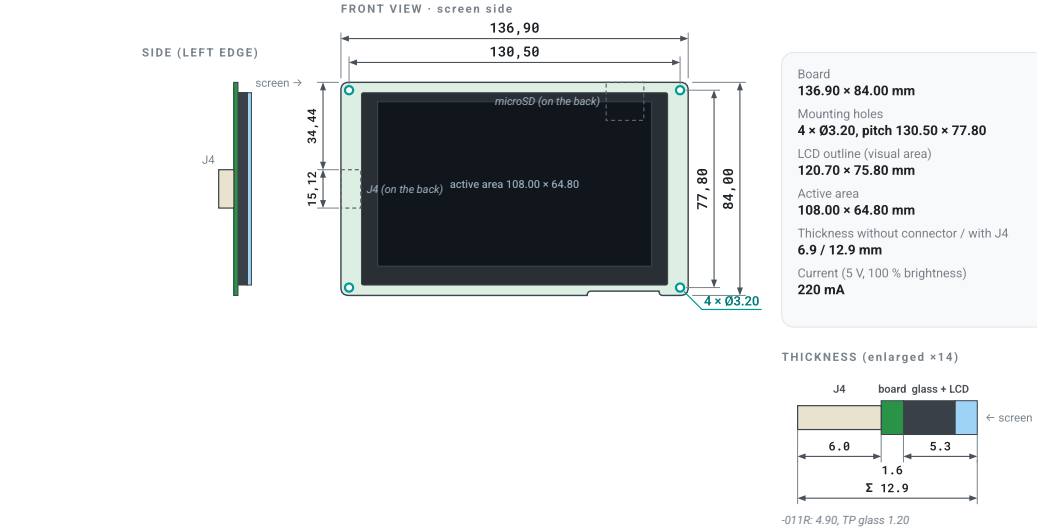

-011R: 4.90, TP glass 1.20

Dimensions in mm from the Nextion drawings (-011C). Dashed — parts on the back of the board. "Σ" — sum of the layers.

Fig. 45 Nextion Intelligent 7" and 5" displays: screen-side view, side view and thickness

14 Selector

To use the Leaf selector or separate momentary buttons with position backlighting, an additional selector controller is required. Like the display, it connects to the main Powertrain CAN bus; its +12 V comes from the relay that powers the ECU.

Pin `X1-17` of the selector controller is the reverse-light signal (in both wiring options).

> **NOTE**
> Pin numbering on the selector connector itself may be mirrored. Wire according to the diagrams below — they show the connectors from the wire side. The interface connector (power and CAN) is X3; some older drawings label it X2.

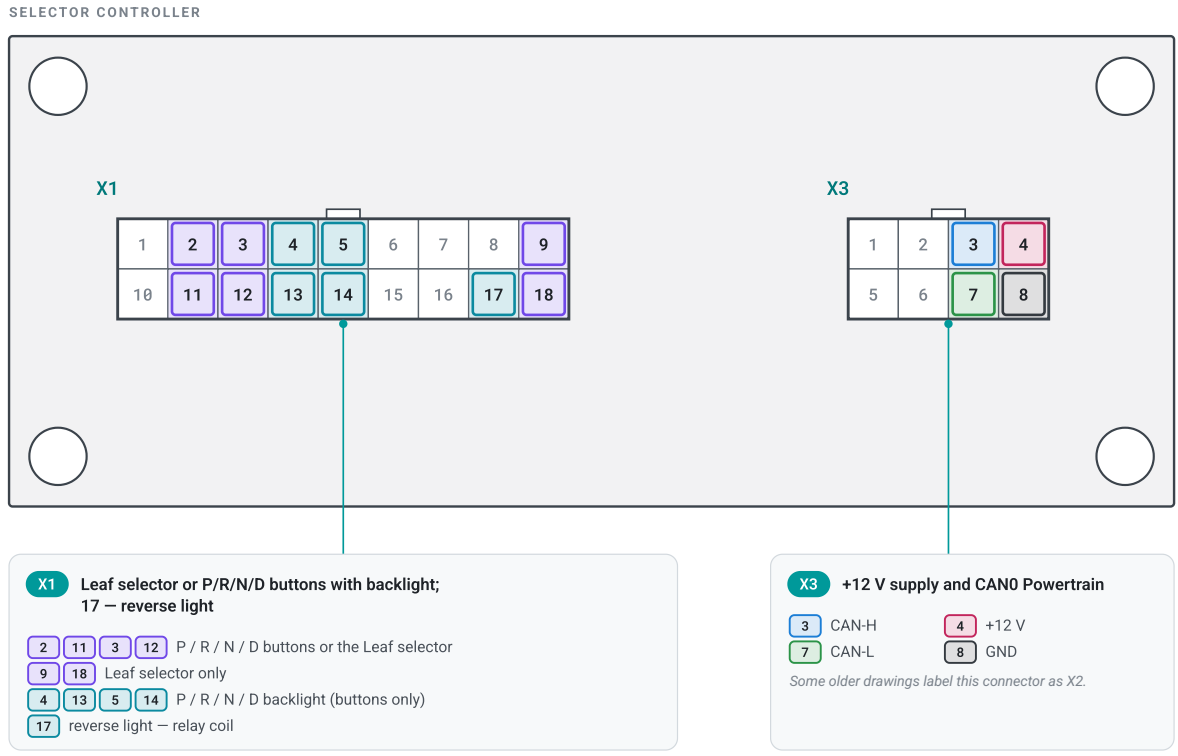


Fig. 46 Selector controller: connectors X1, X3 and mounting holes

Selector controller — connector X1 (selector / buttons)



Wire-side view

PIN	WIRE	FUNCTION	DIAGRAMS
9		Leaf selector: → selector pins 1, 7	48
18		Leaf selector: → selector pins 6, 12	48
2		Leaf selector: → selector pin 8 · Buttons: button P	48 50
11		Leaf selector: → selector pin 9 · Buttons: button R	48 50
3		Leaf selector: → selector pin 3 · Buttons: button N	48 50
12		Leaf selector: → selector pin 4 · Buttons: button D	48 50
4		Buttons: P backlight (LED anode)	50
13		Buttons: R backlight (LED anode)	50
5		Buttons: N backlight (LED anode)	50
14		Buttons: D backlight (LED anode)	50
17		Reverse light — relay coil (both configurations)	48

Selector controller — connector X3 (interface)



Wire-side view

PIN	WIRE	FUNCTION	DIAGRAMS
4		+12 V — from the relay that powers the ECU	48 50
8		Ground (GND)	48 50
3		CAN-H — Powertrain bus (CAN0)	48 50
7		CAN-L — Powertrain bus (CAN0)	48 50

Fig. 47 Selector controller connectors

14.1 Leaf Selector


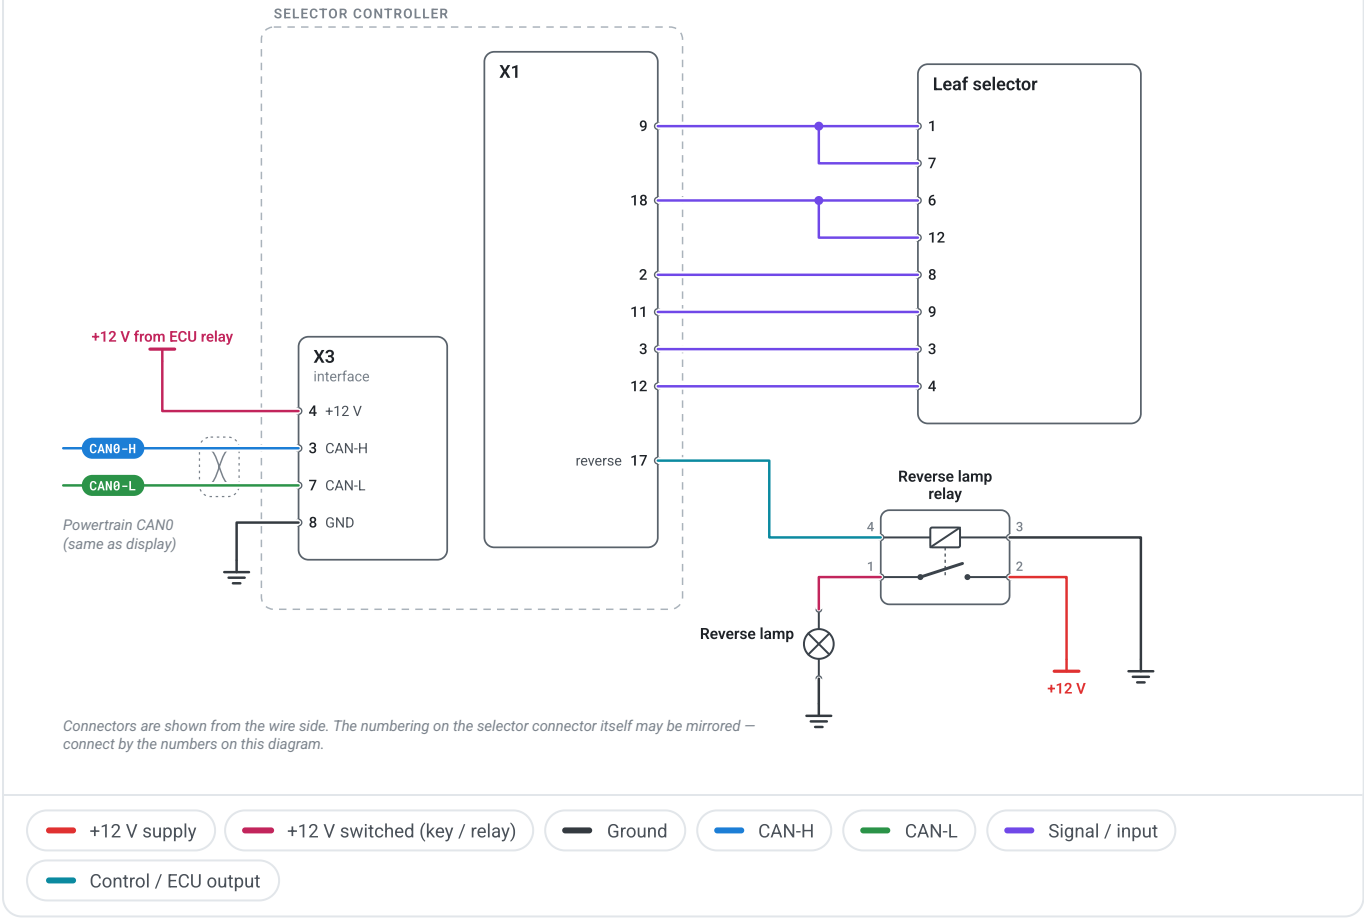


Fig. 48 Selector controller with the Nissan Leaf selector and the reverse-lamp relay

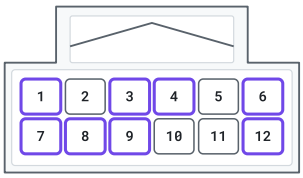

H.S. — harness (wire) side view

PIN	WIRE	FUNCTION	DIAGRAMS
1		To selector controller X1-9 (together with pin 7)	48
7		To selector controller X1-9 (together with pin 1)	48
6		To selector controller X1-18 (together with pin 12)	48
12		To selector controller X1-18 (together with pin 6)	48
8		To selector controller X1-2	48
9		To selector controller X1-11	48
3		To selector controller X1-3	48
4		To selector controller X1-12	48

Fig. 49 Nissan Leaf selector — 12-way connector

14.2 Momentary Buttons


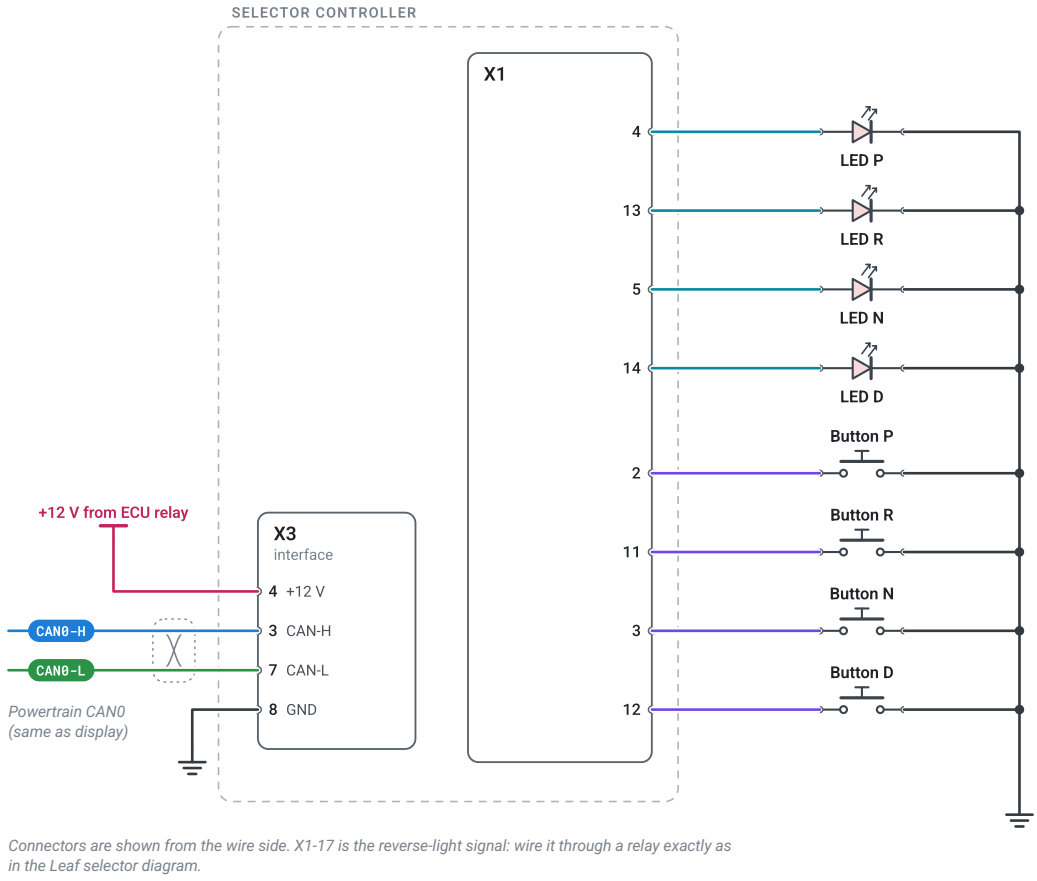


Fig. 50 Selector controller: momentary P/R/N/D buttons with backlight LEDs

15 OBD2 Diagnostics

15.1 OBD2 Connector

An OBD2 socket must be installed for controller setup and diagnostics. Use an ELM327 v1.5 adapter (USB or Bluetooth) or an OBDLink. The web configurator does not support Wi-Fi adapters.

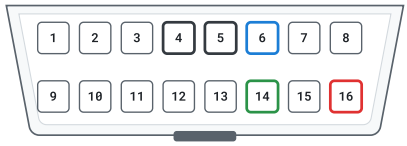

Front view, from the scan-tool side

PIN	WIRE	FUNCTION	DIAGRAMS
4		Chassis ground	
5		Signal ground (GND)	5 6
6		CAN-H (Powertrain, CAN0)	5 6
14		CAN-L (Powertrain, CAN0)	5 6
16		+12 V permanent	5 6

Fig. 51 OBD2 socket (vehicle side)

15.2 Software

- **E-Engines web configurator** — the main tool: configuration, live parameters, cell map, firmware update. Runs in the browser, see section 16.
- **CanZE** — Android app: cell map and battery temperature.
- **DDT4ALL** — alternative configurator for Windows and Linux.

16 Web Configurator

The E-Engines web configurator runs in the browser at diag.electricengines.com.ua — nothing to install. Through an OBD2 adapter it reads the controller's live parameters, writes settings, saves them to a file and updates the firmware.

16.1 Requirements

- **Chrome or Edge** on Windows, macOS, Linux or ChromeOS. On Android — Chrome with a Bluetooth LE adapter. Firefox, Safari and iOS browsers are not supported.
- **Adapter:**
  - USB or classic Bluetooth — ELM327 v1.5 (a dual-board one is recommended) or OBDLink; connect with the **BT** button;
  - Bluetooth LE (vLinker, Vgate iCar Pro BLE and compatible) — with the **BLE** button;
  - Wi-Fi adapters are not supported.
- After the first visit the site also works offline — you still need the adapter.

16.2 Connecting

1. Switch the ignition on and plug the adapter into the OBD2 socket.
2. Open the configurator. Pair a classic Bluetooth adapter in the system settings first.
3. Press **BT** (USB or Bluetooth) or **BLE** and choose the adapter in the browser's dialog.
4. When the connection is up, the button is highlighted and the log on the Terminal page shows "✓ Стан: Підключено" (connected). The "CAN Bus" indicator flashes yellow on every controller response.
5. Open any page — values start updating automatically. To disconnect, press the highlighted button again.

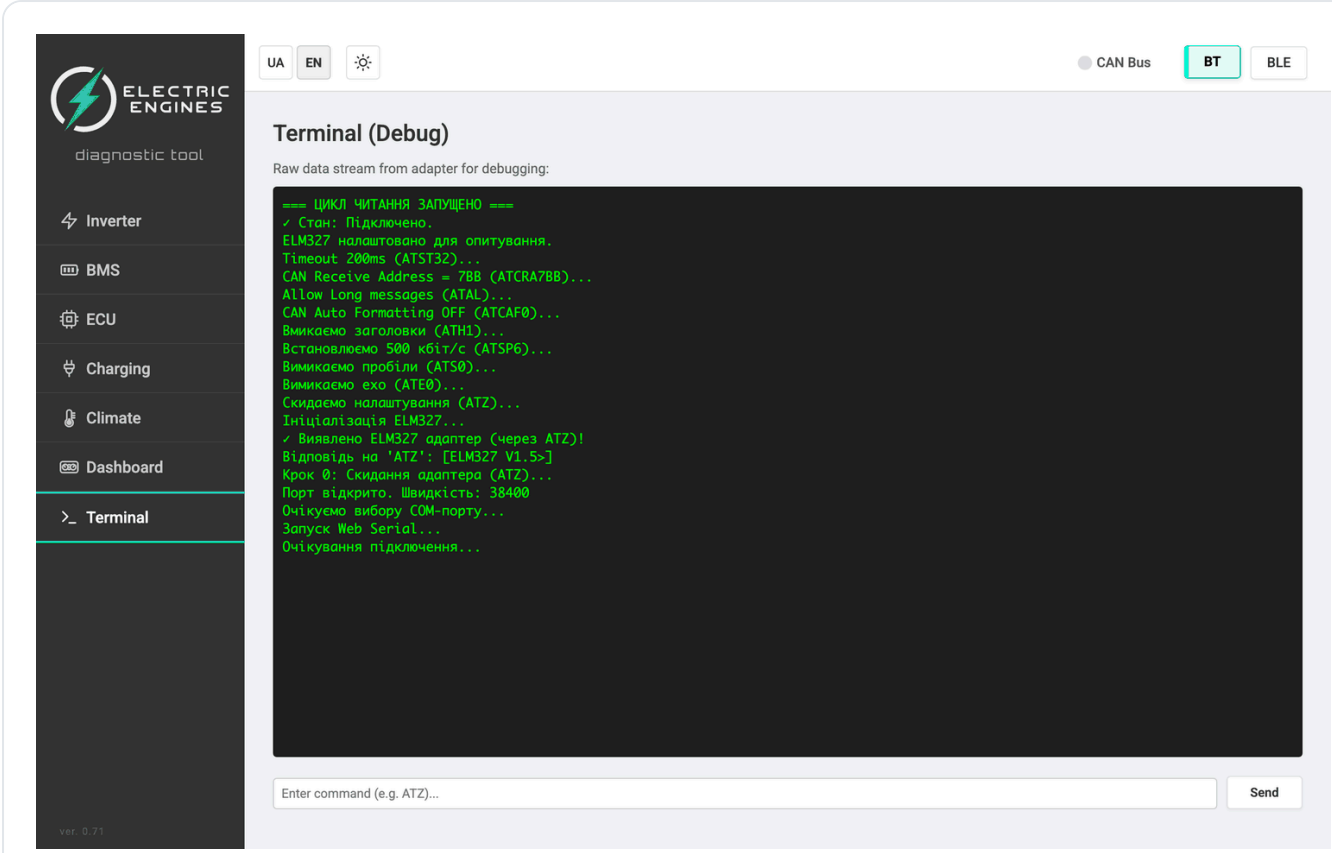


Fig. 52 Web configurator after connecting: adapter log on the Terminal page

> **NOTE**
>
> If the BT/BLE button is highlighted but the "CAN Bus" indicator stays grey, the adapter works but the controller does not answer: check the controller power and the CAN bus. Over BLE the indicator does not flash — go by the values on the pages.

16.3 Configurator Pages

SECTION	CONTENTS
Inverter	HV voltage, status, motor and inverter temperatures, selector position, rpm, pedal position (mV), torque request. Pedal parameters and chart — see 17.2
BMS → Parameters	Pack voltage, SOC, min/max cell voltage, current. Charge/discharge current limits, balancing, **recuperation**, cell voltage thresholds, SOC/SOH, current sensor type
BMS → Cells, Temp Map, SOC Map	All cell voltages, temperatures, SOC calibration by cell voltage
ECU → Settings	Inverter, BMS, selector, start button, charger and CHAdeMO types; wheel circumference; contactor ON voltage; pump and fan temperatures — see 17.3
ECU → Internal	Analog input voltages, input and output states, firmware and bootloader versions
ECU → Brake	Vacuum sensor, vacuum pump on/off thresholds
ECU → Cruise Control	Speed, kP/kI/kD gains, chart and CSV log recording

SECTION	CONTENTS
ECU → Update	Firmware update, export and import of parameters
Charging → AC, CHAdeMO, CCS	Charging state, maximum AC charge current
Climate	Climate system states, temperatures and pressure
Dashboard	Speed / RPM display mode, turn signals, odometer and trip, clock sync
Terminal	Adapter log; manual commands are sent with the Enter key

16.4 Writing Parameters

Each parameter is a row: **Current Value** (what the controller holds now), a field for the new value and a **Write** button. The value is applied and stored in the controller's memory immediately — there is no separate "save" command.

- After writing, check the **Current Value**: that is what confirms the controller accepted the parameter. The "✓" in the log only means the command was sent.
- Enter whole numbers in the unit shown in the field. Cell voltage thresholds and vacuum pump thresholds are entered **in mV** although they are displayed in volts; cruise gains are entered ×10 (15 = 1.5).
- Drop-down lists always open on the first option, not on the current value — pick the option explicitly before pressing Write.
- After changing the inverter type, restart the controller (ignition off and on).

DANGER — HIGH VOLTAGE

Change parameters only with the car stationary in P or N. Writing is not blocked while driving, and, for example, "Max torque" takes effect immediately.

16.5 Saving and Restoring Settings

On the **ECU → Update** page, **Export Parameters** reads the controller settings and downloads `ecu_preset_<date>.json`. **Import Parameters** writes every parameter from the file and reads them back for verification; the result is shown in a message and in the log.

The file contains the pedal and torque parameters, BMS and current sensor settings, inverter and selector types, temperatures, thresholds and cruise control. Charger type, CHAdeMO type, cell count, SOC map and dashboard settings are not included.

WARNING

Importing does not ask for confirmation and does not check which controller the file came from. The SOC charge counter (Ah) is restored to its value at export time as well.

16.6 Firmware Update

1. Put the car in P or N and stop; make sure the 12 V supply is stable. USB is preferable.
2. On **ECU → Update**, click the file area and choose the firmware file (`.ota`) from E-Engines.
3. Leave **Update target** at **Application (FLASH0)**.
4. Press **Upload Firmware** and confirm. Flashing takes about 6–15 min over USB or 15–30 min over BLE.

5. Do not close, reload or hide the tab: in a background tab the browser slows the upload down.

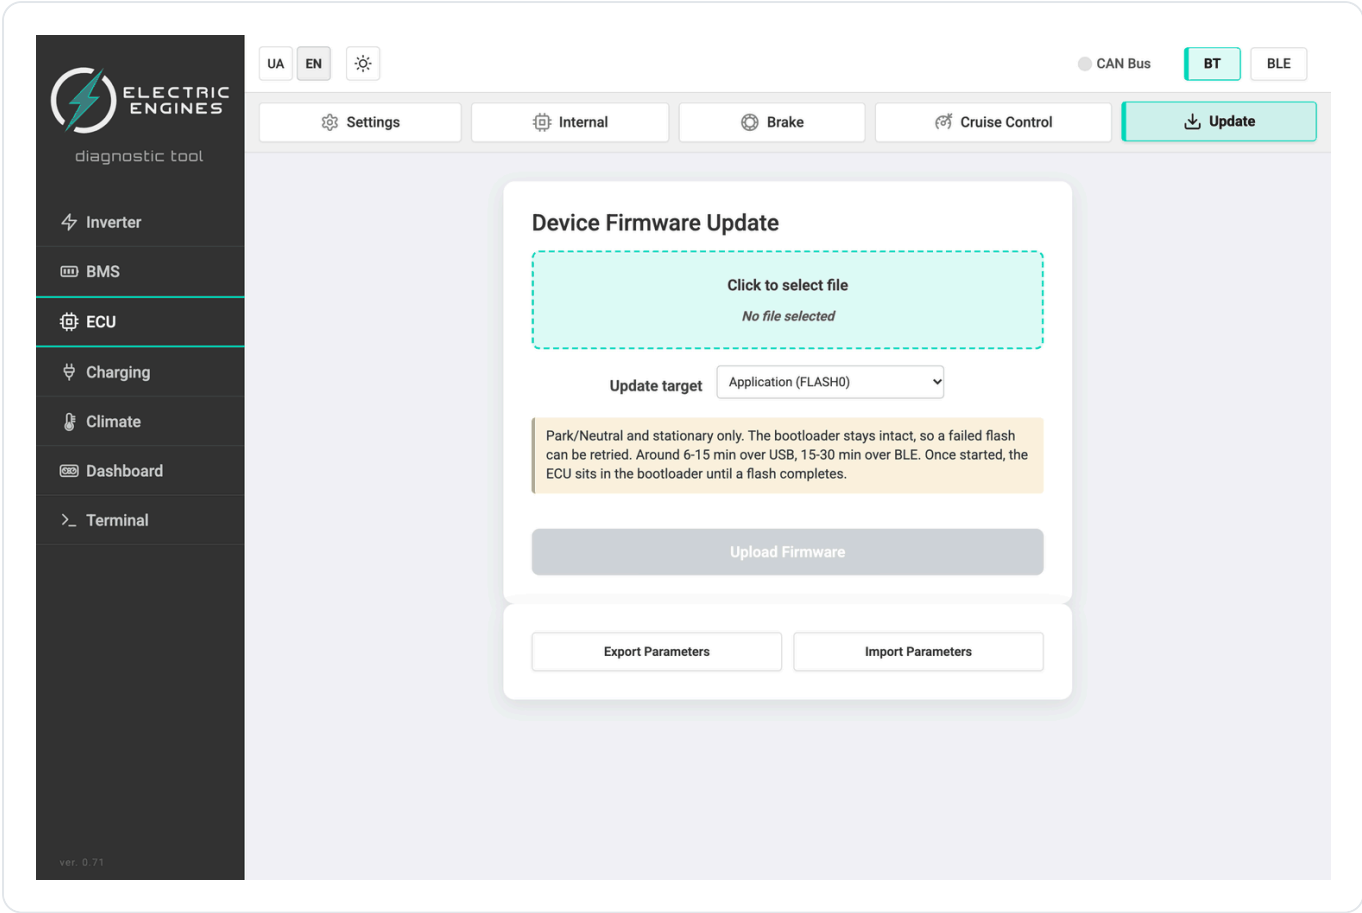


Fig. 53 Firmware update page: file selection, update target, parameter export and import

An application update leaves the bootloader untouched, so a failed upload can simply be repeated.

BOOTLOADER

Choose **Bootloader (FLASH1)** only when E-Engines asks you to: losing power while the bootloader is written leaves the controller unusable, with USB-only recovery.

17 Initial Setup

Once all wiring is connected and carefully checked (make sure no connector is pinned mirrored), proceed with the setup.

17.1 Start-up Procedure

Step 1. Power checks (before connecting the controller to the car)

- ☐ Permanent +12 V on pin `X1-A8` relative to `X1-A7` (ground).
- ☐ +12 V from the ignition switch on pin `X1-C8`.
- ☐ Charge inlet without a gun: resistance between `X1-B7` and `X1-A7` is **4.7 kΩ** or **2.7 kΩ** (depending on inlet type).
- ☐ Charge inlet with the gun plugged in: resistance between `X1-B7` and `X1-A7` is **infinite (OL)**.

Step 2. Wake-up and sleep checks

- ☐ Connect the controller to the car.
- ☐ Turn the ignition on — power appears on `X1-B8`, the IGN relay closes.
- ☐ Turn the ignition off and wait 10 s — power on `X1-B8` disappears, the IGN relay opens.
- ☐ Check wake-up and sleep by plugging and unplugging the AC charging gun.

Step 3. Configuration in the web configurator

> **DANGER — HIGH VOLTAGE**
> Do not continue without configuring the controller — the motor may spin at full speed or not spin at all!

- ☐ Connect to the controller with the web configurator (16.2).
- ☐ **ECU → Settings:** set the inverter, BMS and selector types and the other parameters (17.3).
- ☐ **Inverter:** motor and inverter temperatures, no inverter error.
- ☐ **Charging → AC Charging:** PDM module temperature.
- ☐ Selector: the position must change on the **Inverter** page.
- ☐ Pedal: **Pedal position** (mV) on the **Inverter** page must rise as you press the pedal.

Step 4. Power relay and battery polarity checks

1. Disconnect the traction battery from the powertrain (pull the service disconnect).
2. Connect a voltmeter to the battery output after the contactors.
3. Press Start — the voltmeter must show voltage of the correct polarity.
4. The controller enters protection mode and reports a precharge error — this is expected.
5. Restart the controller (let it go to sleep and switch it on again).
6. Repeat the test measuring resistance across the positive contactor with a multimeter:
   - before start — infinite;
   - at start — 30–50 Ω;
   - after one second — 0 Ω.

17.2 Accelerator Pedal Setup

The pedal parameters are on the **Inverter** page, recuperation is on **BMS → Parameters**. Pedal position is the pedal signal voltage in millivolts; the live value is shown in the **Pedal position** row.

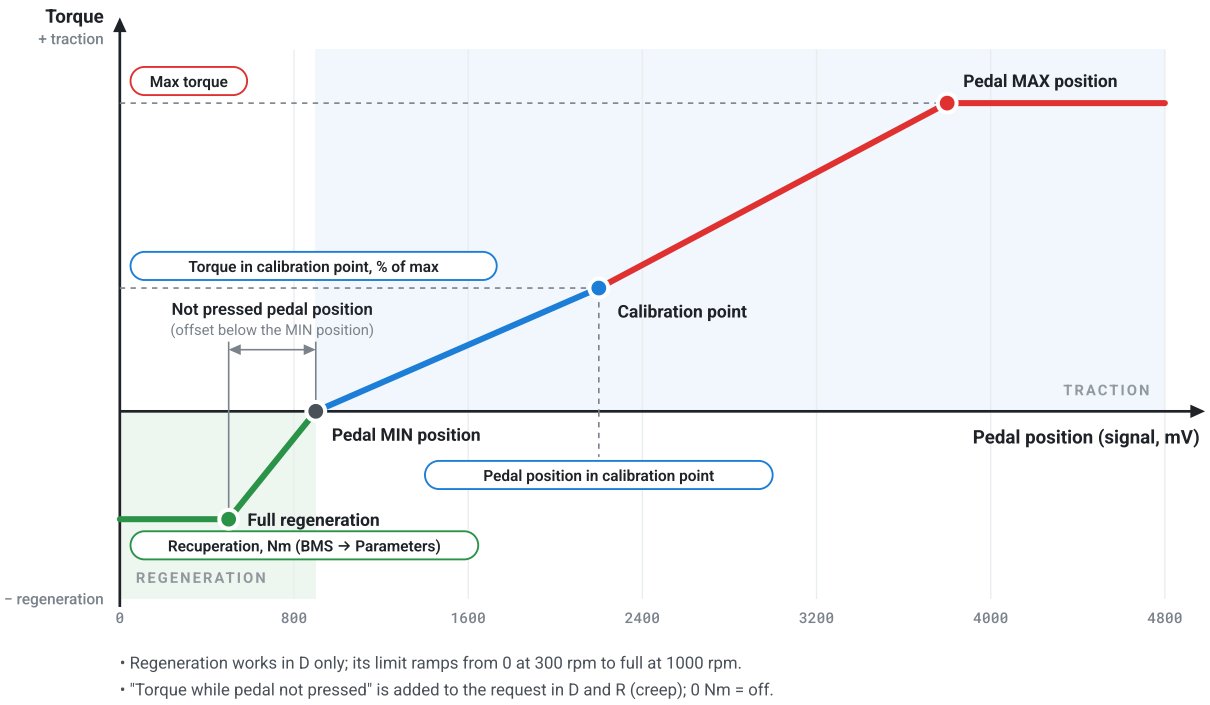


Fig. 54 Accelerator pedal map: how the setup parameters define torque and regeneration

PARAMETER	DESCRIPTION
Pedal MIN position, mV	Where traction starts. Below it is the regeneration zone
Pedal MAX position, mV	Where "Max torque" is reached
Pedal position in calibration point, mV	The break point of the curve: two linear segments before and after it
Torque in calibration point, %	Torque at the calibration point as a percentage of "Max torque"
Not pressed pedal position, mV	How many millivolts **below** the MIN position full regeneration is reached. This is an offset, not an absolute pedal position
Torque while pedal not pressed, Nm	Torque added to the request in D and R (creep); 0 = off
Max torque, Nm	Torque at the MAX position and beyond
Recuperation, Nm (BMS → Parameters)	Full regeneration torque. Works in D only and ramps from 0 at 300 rpm to the full value at 1000 rpm

Setup order:

1. Without touching the pedal, note the **Pedal position** reading; then press the pedal to the floor and note it again.

2. Set **Pedal MIN position** above the released reading: the span between them becomes the regeneration zone — the wider it is, the more gradually regeneration fades as you press. Set **Pedal MAX position** slightly below the fully pressed reading.
3. Set **Not pressed pedal position** to the difference between the MIN position and the released reading.
4. Use the calibration point to tune the sensitivity at the start of the pedal travel, then set "Max torque" and "Recuperation".

> **WARNING**
>
> Do not set "Not pressed pedal position" lower than the difference from step 3: the firmware does not clamp regeneration, and with the pedal released it would exceed the set value.

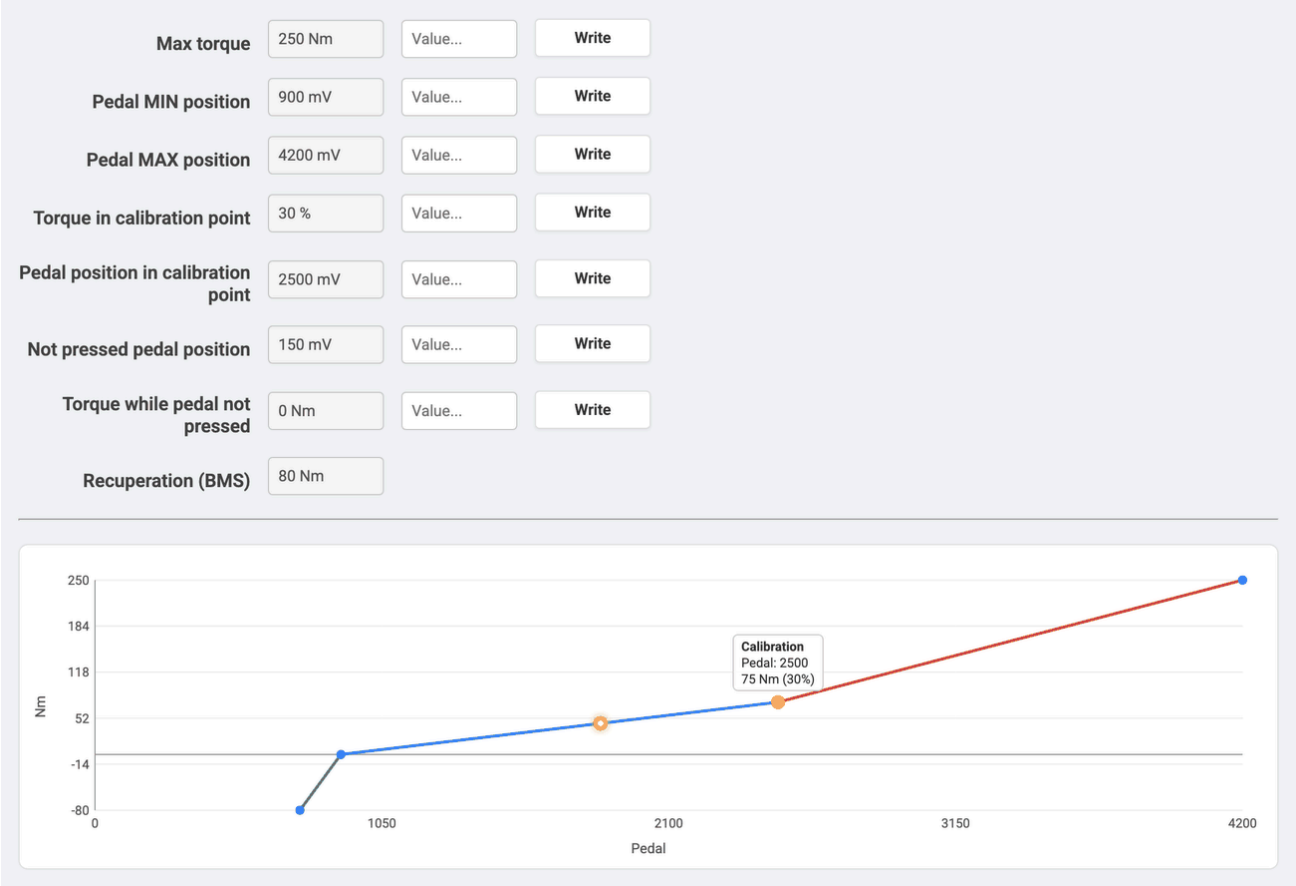


Fig. 55 Pedal parameters and chart in the web configurator (Inverter page)

17.3 Controller Configuration

After the pedal is set up, open **ECU → Settings** and check every parameter.

PARAMETER	DESCRIPTION
Wheel circumference	Wheel circumference in mm (used for the speed calculation)
Contactor ON voltage, V	The main contactor will not close if the inverter voltage after precharge is below this value — protection against a broken power wire or precharge resistor
Type selector	**Button** — toggle switch or buttons on the controller inputs (5.1); **CAN** — separate selector controller (14); **CAN inverted** — the same with D and R swapped; **PSA**

PARAMETER	DESCRIPTION
Type start button	With or without fixation (latching / momentary)
Type inverter	Leaf AZE0, ZE0, ZE1 or Tesla M3 — select exactly the one installed. Restart the controller after changing it
Charger type	Leaf PDM, Tesla PCS or OFF
CHAdeMO type	OFF, internal (CAN1 or CAN3) or external CHAdeMO controller
Pump start temperature, °C	See section 10
Fan ON temperature, °C	Separately for high and low speed
Type BMS	OFF, Volt Gen 1, Leaf, Orion 2, VW ID, JK-BMS, Deye HV

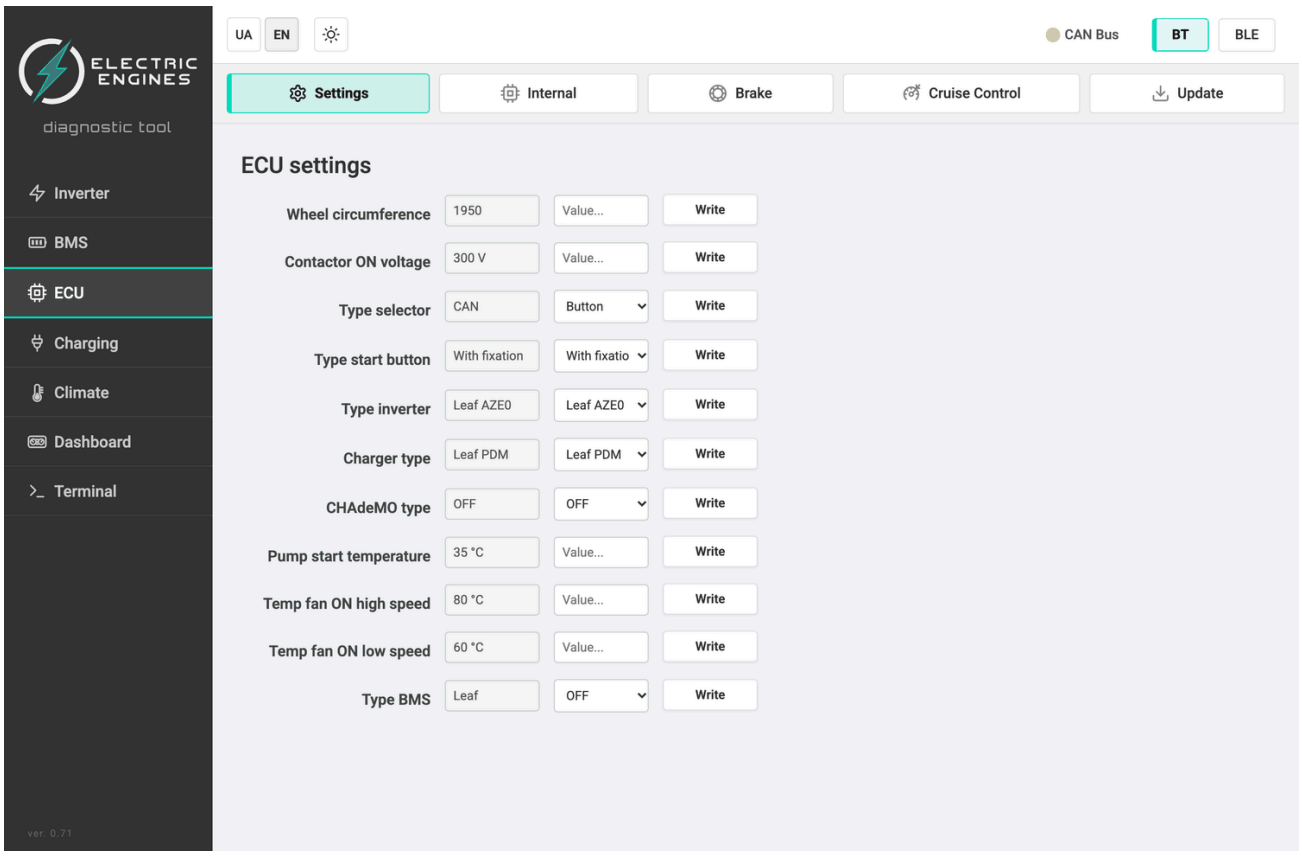


Fig. 56 The ECU → Settings page in the web configurator

18 FAQ / Troubleshooting

The web configurator does not connect to the adapter

- Use Chrome or Edge; Firefox, Safari and iOS are not supported.
- Pair a classic Bluetooth adapter in the system settings first and connect with BT. A Bluetooth LE adapter connects with BLE.
- Wi-Fi adapters are not supported.
- The adapter must be ELM327 v1.5 compatible (a dual-board one is recommended) or an OBDLink. The error reason is shown in the log on the Terminal page.

Values do not update, the "CAN Bus" indicator is grey

The adapter is connected but has no CAN communication with the controller. Possible causes:

- no power to the controller;
- CAN bus wired incorrectly (CAN-H and CAN-L swapped);
- controller fault.

All voltages from the BMS = 0 V

The controller does not see the BMS. Check the CAN bus wiring and the BMS power supply.

One cell reads much higher and its neighbour much lower

Most likely a poor balancing-wire contact with the cell. If it happens under load — a poor contact in the power busbars between cells. Check every connection in the battery.

The motor whines but does not turn

With the original gearbox, check that it is not locked: turn both driven wheels in the same direction. If they don't turn, rotate the parking-lock shaft counter-clockwise.

The motor turns only in reverse

This happens when a ZE0 inverter is installed but a different inverter type is selected in the controller settings.

The car briefly accelerates or regenerates by itself while driving

Seen with resistive pedals: over time the resistor tracks wear and give an unstable voltage. **Solution:** replace the pedal.

The traction battery contactors weld

1. Check the contactor wiring.
2. Check the precharge resistor value.
3. Check the battery activation voltage parameter (above 200 V) in the configurator — it protects against a failed relay or precharge resistor.

The DC-DC converter in the PDM burned out

A ground fault (especially when the traction battery negative is tied to the 12 V system negative) can destroy the PDM.

DANGER — HIGH VOLTAGE

Always check the insulation resistance of the traction battery to the chassis.

Revision History

REVISION	CHANGES
2.0	New format: interactive web edition and PDF in Ukrainian and English. All diagrams redrawn in one style, connector views with pinouts added. Web configurator chapter added; setup moved from DDT4ALL to the web configurator. Enclosure drawing (dimensions, mounting holes, label), display and selector controller housings, the Nextion 7" and 5" pinout and dimensions and the LEM current sensor drawing added. ECU pinout moved to section 1.1, appendices removed. Leaf battery wiring now shows the connection to the Leaf ECU; current sensor connector LB5 added. Type 1, Type 2 and CHAdeMO pinouts from both the inlet and the gun side; DC polarity on the CHAdeMO inlet corrected. New pedal chart matching the firmware: "Not pressed pedal position" is an offset from the MIN position. Wheel circumference in mm. Figure captions corrected; the ECU pinout is compiled from the wiring diagrams.
1.13	Translated to English. Improved structure: contents, numbered sections, figure captions, full pinout tables.
1.12	Added information on the selector and reverse light.
1.11	Added the selector CAN diagram.
1.10	Added FAQ and start-up procedure. Added the selector wiring diagram.
1.9	Fixed an error in the fan diagram. Added more information about IGN KEY.
1.8	Added the Volt BMS pinout.
1.7	Added Leaf BMS information. Fixed an error in the 12 V supply diagram with the charge-inlet resistor. Fixed an error in the current sensor diagram (pin A7 X1 → C7 X1). Added revision history.

ELECTRIC ENGINES

www.electricengines.com.ua

Interactive version with circuit highlighting:

https://diag.electricengines.com.ua/manual/en/

© E-Engines. Diagrams and text for installing the Leaf ECU controller.