# QuickAlignment — User Guide

ANTARES beamline (SOLEIL) · finding samples on the plate, keeping them on the beam when rotating, and choosing the rotation for a Brillouin-zone point

## Contents


1. What QuickAlignment does
2. Starting the program
3. Coordinates and motors
4. Samples tab: drawing the plate
5. Stage & Optics tab: going to a sample
6. Rotate sample tab: turning without losing the sample
7. Finding the angles for a Brillouin-zone point
8. Sessions, plate and configuration
9. A typical beamtime
10. Messages and what to do


## What QuickAlignment does

On ANTARES the beam spot is at the micrometre scale or below, while the sample plate is 18 × 15.5 mm. QuickAlignment turns the plate and sample geometry into **motor positions**:


- where each sample or device is at the start orientation (ST, SZ, SN at SRn = 120°, SRz = 0°);
- the ST / SN / SZ and the optic position that put a sample on the beam, in the analyzer focus;
- after a rotation (SRn, SRz), the positions that bring the same point back onto the beam;
- for a 2-D hexagonal crystal (graphene, WSe2, …), the SRn / SRz that bring Γ, K or M to the slit centre, and what to do when the stage cannot reach them.

The program never moves a motor. It computes numbers; you enter them on the beamline control system.

## Starting the program

Install once: `pip install PyQt5 numpy matplotlib`. Then double-click **`QuickAlignment.py`** (Windows: `QuickAlignment.pyw`, no console window), or run `python QuickAlignment.py [session.json]`.

At every start the program asks which **sample plate** is mounted and which **focusing optic** is used:

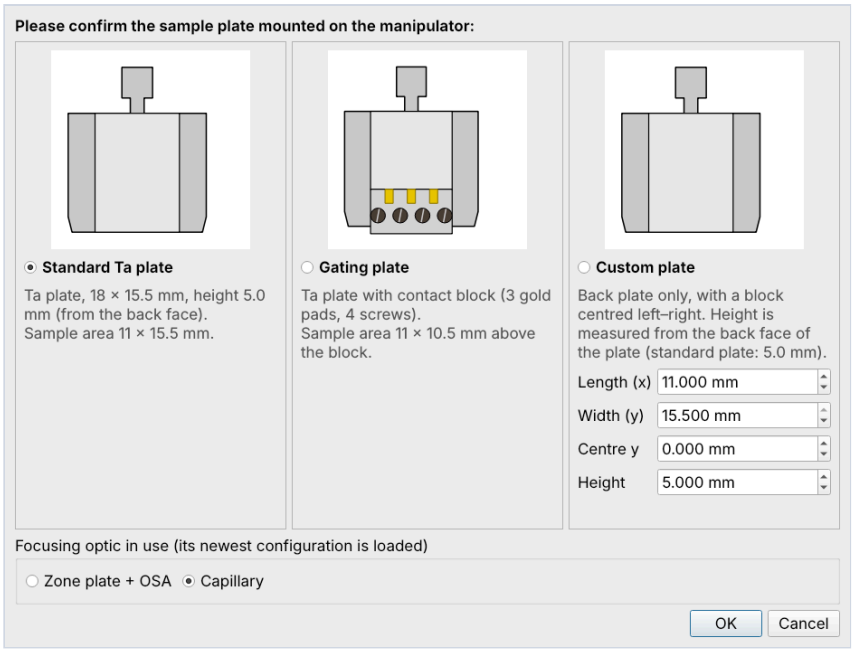



- **Standard Ta plate**: 18 × 15.5 mm back plate with an 11 mm wide raised part, 5.0 mm high.
- **Gating plate**: the same, with a contact block (3 gold pads, 4 screws); samples go only on the 11 × 10.5 mm above the block.
- **Custom plate**: the back plate with your own block (length, width, centre y and height from the back face).
- **Optic**: *zone plate + OSA* (95 eV only) or *capillary* (30–180 eV). The newest configuration made by the beamline staff for that optic is loaded (shown in the toolbar).

## Coordinates and motors

| name | meaning | range |
|---|---|---|
| x, y | position on the plate (mm), front view with the tab up, origin = centre of the back plate | – |
| H | sample height above the plate surface (mm) | – |
| ST | along the analyzer focal plane; ST < 0 moves the sample upper-left (top view) | −6 … 6 mm |
| SN | perpendicular to the analyzer focal plane; SN = 65 is the transfer position | −30 … 65 mm; below SN_f the limit is a collision (see *Anti-collision*) |
| SZ | vertical | 35 … 45 mm |
| SRn | azimuth about the sample normal; SRn = 120°: plate vertical, tab up | usable 60 … 180° |
| SRz | rotation about the vertical; SRz = 0: plate parallel to the analyzer focal plane | usable −25 … +10° |
| PIX, PIY | piezo stage, 0 … 300 µm, centre 150 µm | – |

At the start orientation a plate point (x, y) comes onto the beam at **ST = ST0 − x, SZ = SZ0 − y**, and a sample of height H is in the analyzer focus at **SN = SN_f + H** (ST0, SZ0, SN_f come from the configuration). The motor fields refuse values outside the travel ranges.

# Samples tab: drawing the plate

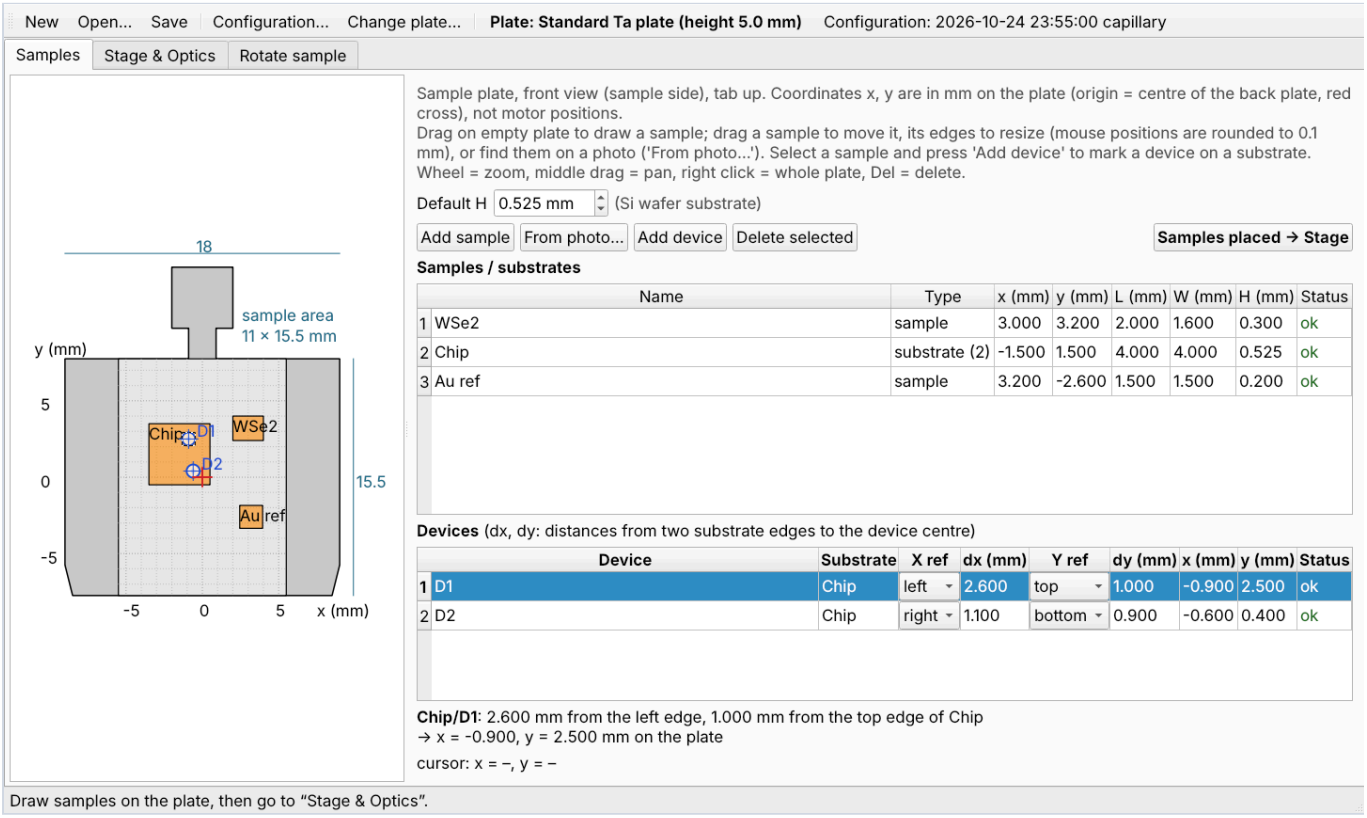


- **Draw a sample**: drag on an empty part of the plate. **Move** it by dragging it, **resize** it by dragging an edge or corner (mouse positions are rounded to 0.1 mm). Or press *Add sample* and type the values.
- **Table**: name, x, y, length L, width W and height H can be typed exactly (typed values are not rounded). *Default H* is the height of new samples (0.525 mm: a standard Si wafer).
- **Devices on a substrate**: select the substrate, press *Add device*, choose the two reference edges (left/right, bottom/top) and the distances dx, dy to the device centre, or drag the blue marker. Devices move with their substrate. A substrate with devices is listed by its devices only in the target lists.
- **Status**: `ok`, or what is wrong (outside the sample area, overlapping, device outside its substrate). Red items on the drawing have a problem.
- Wheel = zoom, middle drag = pan, right click = whole plate, Del = delete the selection.

## Samples from a photo

Instead of drawing, the samples can be found on a photo of the plate taken from straight above (sample side; a phone photo is fine). Press **From photo…**:





1. *Open photo...*. The right view shows the plate model with the four corners of the sample area numbered **1–4**; the one to click next is **red**. Click that point on the photo, then the next red one (1 top left, 2 top right on the tab side, 3 bottom right, 4 bottom left; gating plate: 3 and 4 are where the sample area meets the contact block). Wheel = zoom (zoom in as far as needed to place the point), middle drag = pan, right click = whole photo; drag the markers afterwards to refine. *Clear points* starts again.
2. The photo is mapped onto the plate model (right view, blue outlines). Check that the outlines lie on the plate. The cursor shows plate coordinates (x, y in mm) in the right view and on the photo.
3. Samples are found by their colour (green boxes, magenta = what is taken):
    - *colour of picked samples* (default): click on a sample, on the photo or in the right view, to pick its colour (*Pick sample colour* for another kind of sample); only regions close to these colours are taken, silver paint and glue are left out.
    - *colour different from the bare plate*: everything on the plate, also silver paint and glue. If samples cover most of the sample area, *Pick bare plate colour* and click on bare plate.
    - *ΔE threshold*: the colour difference (CIELAB) that separates them; *min. size* drops dust; *border left out* ignores the edge of the sample area.
4. Correct by hand. Every box in the list is added; *select* boxes by clicking them in the right view (Ctrl + click: several) or their rows, then: **Delete selected** (or Del) removes what is not a sample, **Merge selected** joins the pieces of a sample broken up by paint or wires. **Draw box** and drag in the right view adds a sample that was not found. These edits are kept when the threshold is changed; *Undo hand edits* forgets them.
5. Enter the **height H** (it cannot be seen from above; default: *Default H*), per sample in the table or with *Set H of all*.
6. Optionally locate the devices on a second photo (tab 2, below), then press **Add to plate**. *Remove the samples already on the plate* replaces the present ones.

The boxes are the bounding rectangles of what was found, in plate coordinates; they can then be moved, resized and given devices like drawn samples. The accuracy is set by the corner clicks (about 0.1–0.3 mm); *Found here* in the Stage & Optics tab corrects the rest. Everything runs on the computer, nothing is sent anywhere.

### Tab 2: devices from a second photo

The plate photo shows where a substrate is, but usually not its devices; a closer photo (microscope, camera) shows the devices but often not the substrate edges. The two photos are matched by points you mark on both:

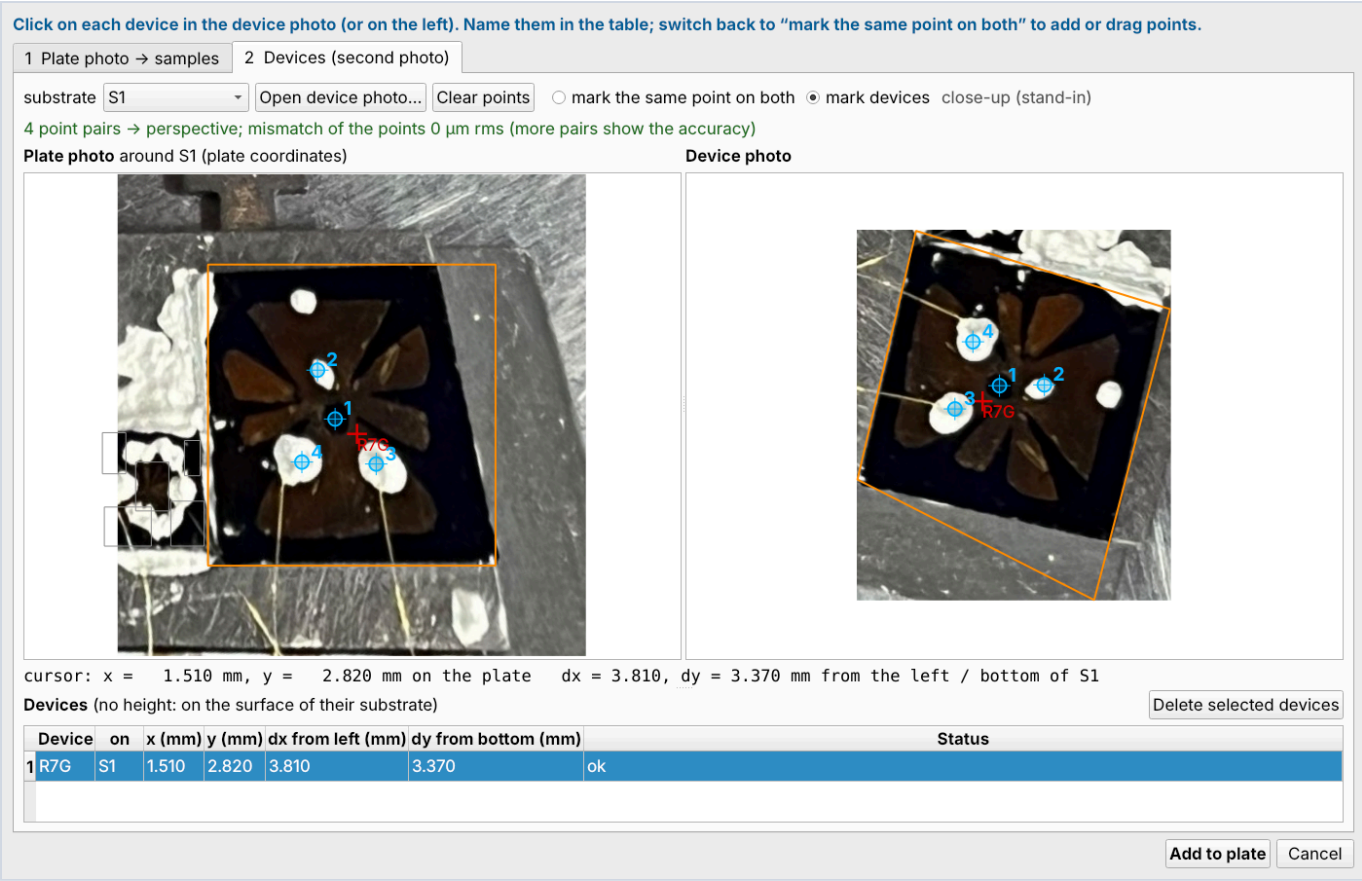



1. Choose the **substrate** (or select its box in tab 1). The left view shows the plate photo around it, already in plate coordinates. **Open device photo…** (right view).
2. *mark the same point on both*: click a feature on the left that you also see on the device photo (a paint dot, a pattern corner, a scratch), then the same feature on the right; numbered markers, draggable. With 2 pairs the device photo is placed by rotation + scale + shift, with 3 by an affine map, with 4 or more by a perspective map. The line above the views gives the mismatch of the points (µm): with more pairs than needed it shows a wrong point. The substrate outline (orange) is drawn on the device photo as a check.
3. *mark devices*: click on each device in the device photo (or on the left). The table gives its plate position, its substrate and dx, dy from the left / bottom substrate edges; rename the devices there, delete wrong ones. Devices have no height: they are on the surface of their substrate.
4. Another device photo (for another substrate, or another part) can be opened: the devices already marked keep their positions. *Add to plate* adds each device to the sample it lies on (devices on no sample are left out).

The accuracy is that of the plate photo (corner clicks, 0.1–0.3 mm) plus the point matching.

When all samples are drawn, press **Samples placed → Stage**.

# Stage & Optics tab: going to a sample

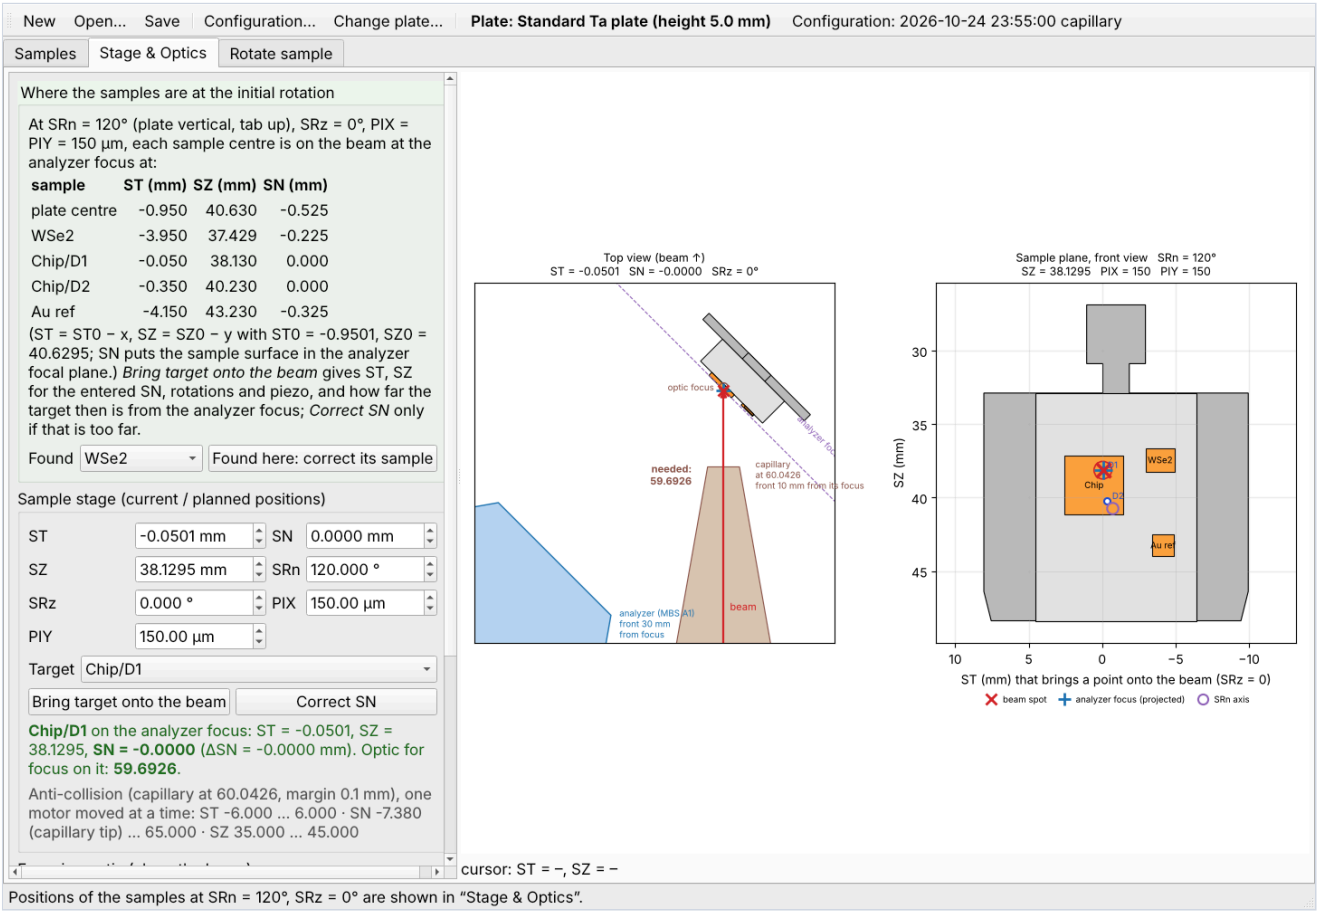


The green box lists, for every sample and device, the **ST / SZ / SN at the start orientation** (SRn = 120°, SRz = 0°, PIX = PIY = 150 µm) that put its centre on the beam in the analyzer focus.


1. Enter the current motor positions (absolute values, as on the control system).
2. Choose a **Target** and press **Bring target onto the beam**: ST and SZ are computed for the entered SN, SRn, SRz, PIX, PIY (**SN kept**, as the stage is usually run). The text below says how far the target then is from the analyzer focus along the beam (red above 50 µm: the spectra would be distorted) and the ΔSN that would remove it. Only if you judge it too far, press **Correct SN**: SN, ST, SZ that put the target on the analyzer focus. If a motor would leave its range, nothing is changed and you are told which one.
3. **Focusing optic**: enter the optic position; press **Update schematic & optics**. The schematic shows the beam, the analyzer focus, the optic and the position **needed** for focus on the illuminated surface. *Use required position* copies it into the field.
4. After focusing by hand, **Set as optics reference** takes the current state as the optics reference for this session.
5. **Found here: correct its sample**: once a device is really on the beam and in focus, enter the positions, choose the device and press the button. Its sample (with all its devices) is moved on the drawing by Δx, Δy, ΔH: the error of the drawing. All other predictions then use the corrected position (saved with the session). A correction above 0.3 mm suggests that the configuration is outdated: tell the beamline staff.

The schematic is redrawn only with *Update schematic & optics*. Moving the mouse over the sample plane view shows the ST, SZ that bring that point onto the beam and what lies there.

### Anti-collision

After *Update*, the line under the motors gives the **collision-free range** of ST, SN and SZ at the entered positions (one motor moved, the others and the optic kept) and what sets each limit, e.g. *SN −4.1 (OSA) … 65*. The top view draws the analyzer nose (MBS A1, 30 mm from the focus), the zone plate and OSA (thin plates; the OSA stays where it is when the zone plate refocuses) or the capillary at scale, in red when the plate touches them. *Bring target onto the beam*, *Correct SN* and the Rotate tab refuse a position where the plate would touch something. Lowering SN brings the surface towards the optic and the analyzer: SN is limited from below only. ST and SZ are free for a plate parallel to the focal plane, and limited when SRz tilts it or when something stands out (gating plate screws). The dimensions are estimates kept in the configuration: if you know better, type the **working distances** (OSA, zone plate or capillary front from the focus) in the fields under the optic position (for this session). Keep a safe distance and watch the camera.


## Rotate sample tab: turning without losing the sample

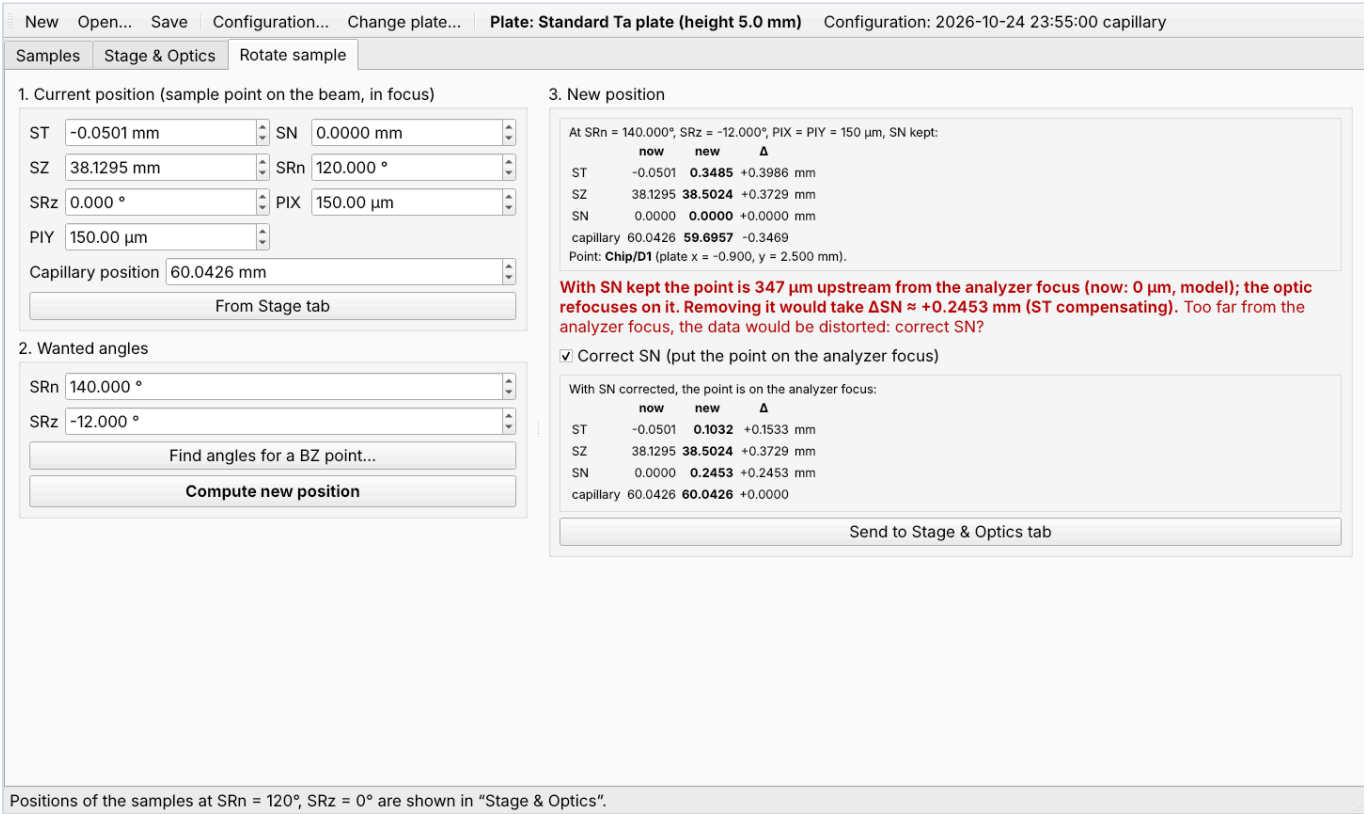


1. **Current position**: the positions with the point of interest on the beam and in focus, and the optic position (*From Stage tab* copies them).
2. **Wanted angles**: the new SRn and SRz (or use *Find angles for a BZ point…*, next section).
3. **Compute new position**: ST and SZ with the piezo centred and **SN kept**, and the optic position that refocuses. The text says how far the point then is from the analyzer focus (red above 50 µm: the spectra would be distorted). SRn alone keeps the surface plane; SRz does not.
4. Only if the point is too far from the focus, tick **Correct SN** to see SN, ST, SZ and the optic position that put the point **on the analyzer focus** (every new computation starts unticked). If a motor range does not allow it, the closest reachable position is given with its distance from the focus.
5. **Send to Stage & Optics tab** takes the shown solution (refused if it is out of range).

# Finding the angles for a Brillouin-zone point

Under *Wanted angles*, **Find angles for a BZ point…** answers the question *"how much do I turn SRn and SRz so that K is at the centre of the slit, the slit runs along Γ–K and the deflector stays near 0?"* for 2-D hexagonal crystals.

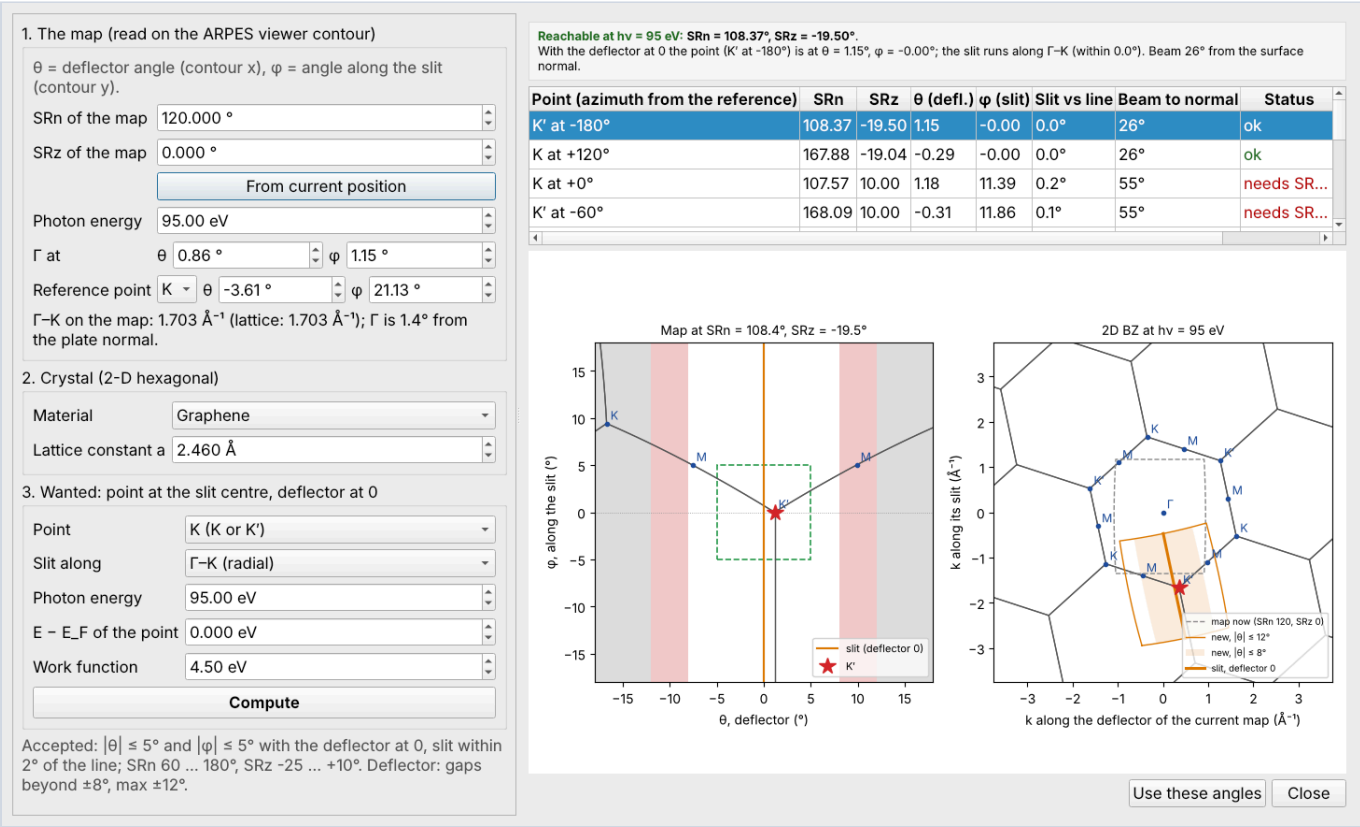


**What to enter** (read on the contour of a map in ARPES viewer; θ = deflector angle, contour x; φ = angle along the slit, contour y):

1. **The map**: SRn and SRz at which it was measured (*From current position* takes them from the Rotate tab), its photon energy, the angles of **Γ** and of **one K or M point**.
2. **Crystal**: the in-plane lattice constant a (presets: graphene 2.46 Å, WSe2 3.282 Å, WS2, MoSe2, MoS2, hBN).
3. **Wanted**: the point (Γ, K or K′, only K, only K′, M), the **slit direction** (Γ–K, K–M, Γ–M, M–K), the photon energy of the new measurement, E − E_F of the point (e.g. −1.0 for the valence band top of WSe2 at K) and the work function (4.5 eV).

Press **Compute**. Below the inputs, *Γ–K on the map* compares the measured distance with the lattice constant (a difference above 10 % means a wrong number, point or photon energy) and gives the tilt of the sample on the plate (taken into account in the result).

**Result**: *Reachable* when, with the deflector at 0, the point is within |θ| ≤ 5° and |φ| ≤ 5° of the slit centre, the slit within 2° of the wanted line, with SRn 60 … 180° and SRz −25 … +10°. The table lists every equivalent point and both turning senses; the first row is the recommended one (SRz ≤ 0 first: the beam is then closer to the surface normal and the spot smaller; then the smallest turn). *Beam to normal* is the incidence angle, 45° + SRz.


**Preview**: left, the map you will measure at the proposed angles (deflector across, slit angle up; the deflector has gaps beyond ±8° and stops at ±12°; the green box is the accepted ±5°). Right, the 2-D zone in momentum, oriented like your current map, with the current map (dashed) and the new analyzer

window and slit (orange).

**Use these angles** writes SRn / SRz into *Wanted angles* and computes the new position. Set the deflector to 0 (and the photon energy, if it changed).


## When it cannot be reached

The manipulator has **no tilt axis**. A consequence: with a point at the slit centre and the deflector at 0, the slit always runs along the line from Γ to that point (Γ–K for K). A slit *across* it (K–M, M–K) needs the deflector at the emission angle of the point (15–20° at 95 eV), which the analyzer cannot do well:

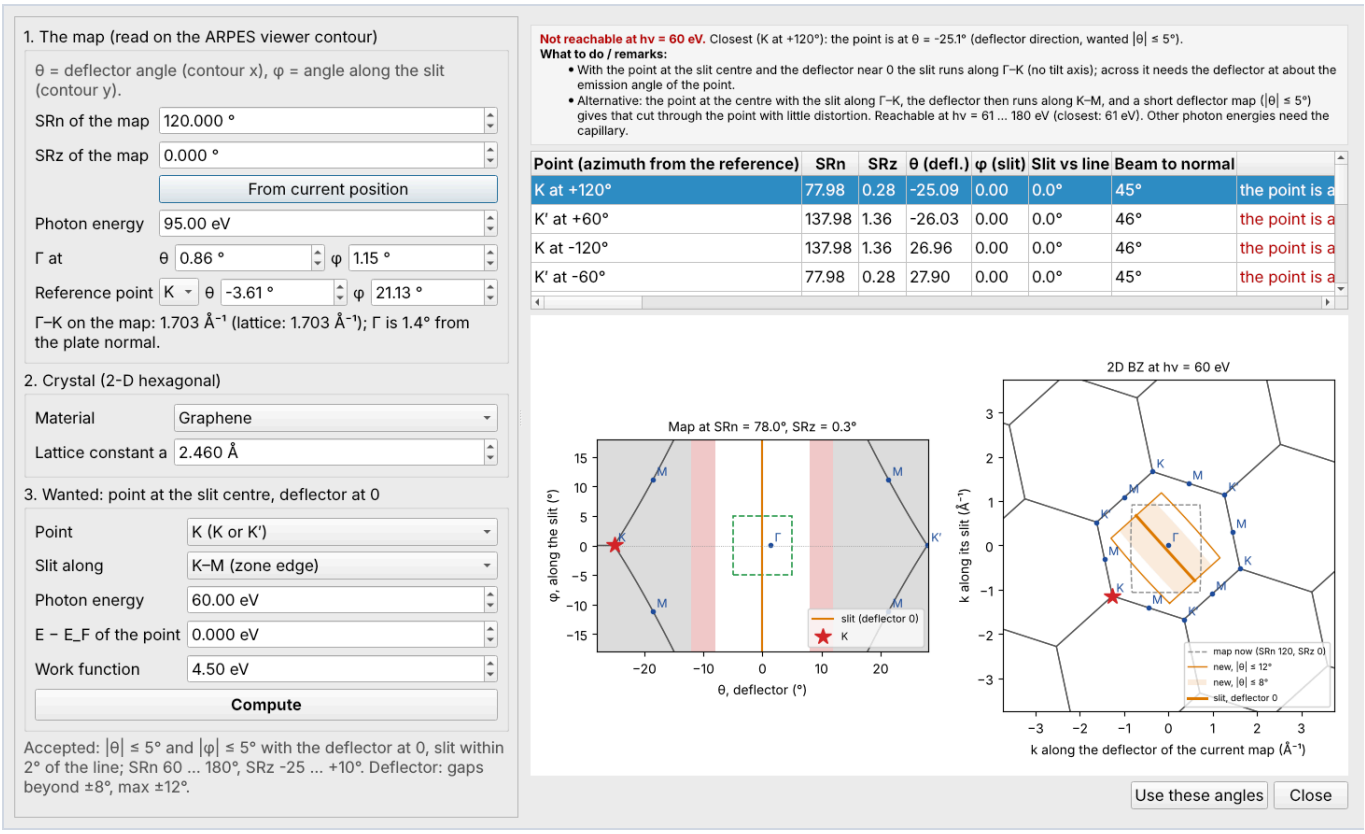


The window then proposes the **radial alternative**: K at the centre with the slit along Γ–K; the deflector direction then runs along K–M, so a short **deflector map** (|θ| ≤ 5°) gives the K–M cut through K with little distortion. *Show the radial alternative* switches to it.

When the emission angle is too large for the SRz range, the window gives the **photon energies** at which the point is reachable:

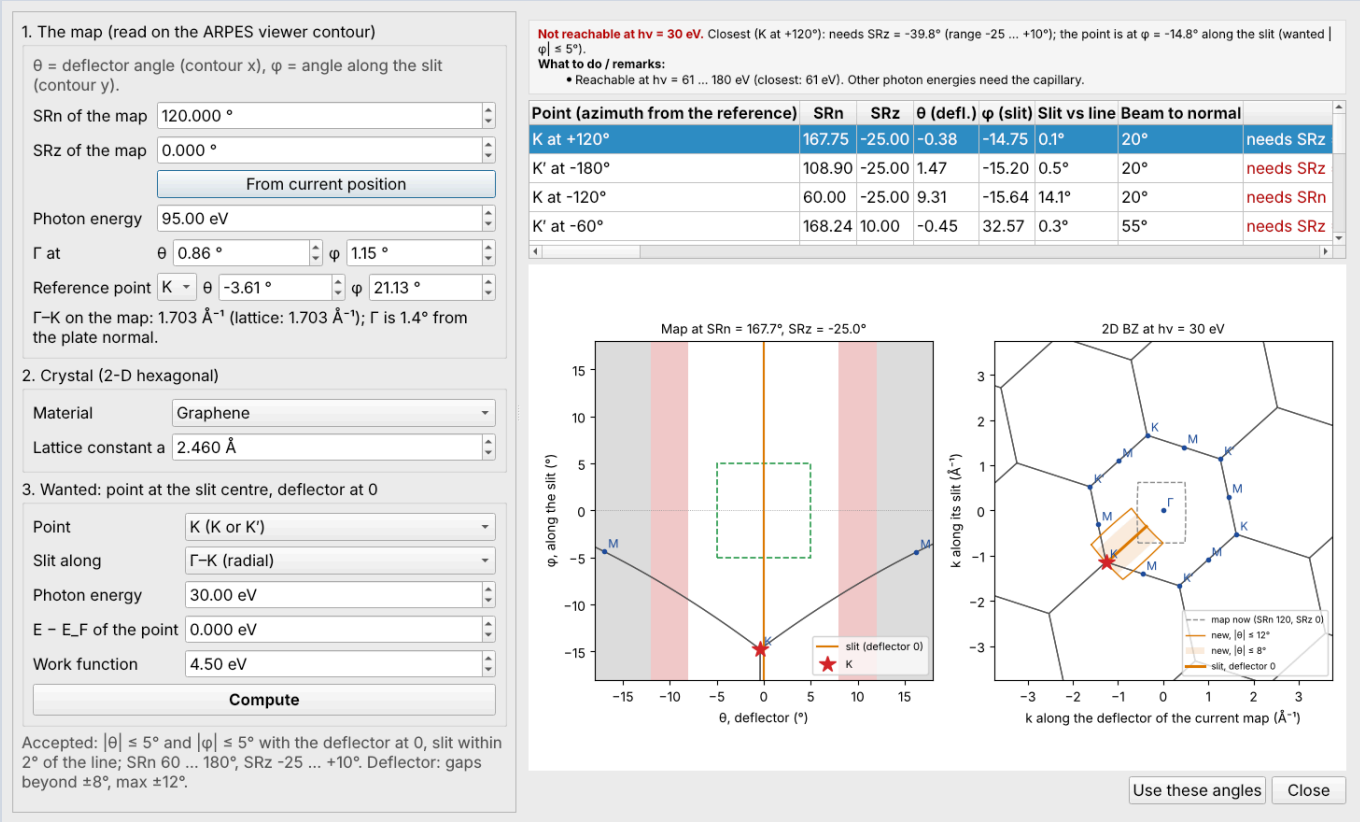



- ANTARES: 30–180 eV with the **capillary**; the **zone plate works at 95 eV only**. Changing the photon energy with the zone plate means changing to the capillary (realignment, capillary configuration).
- If SRn is the limit, the window says by how much to **turn the sample on the plate** when remounting it.
- If nothing works, the sample has to be remounted, or another, equivalent point chosen.

| **example (E_F, work function 4.5 eV)** | **emission angle of K at 30 / 95 / 180 eV** | **K, slit along Γ–K** |
|---|---|---|
| WSe2, a = 3.282 Å, Γ–K = 1.28 Å$^{-1}$ | 29.6° / 15.2° / 10.8° | reachable at 95 eV with SRz ≈ −15° |
| graphene, a = 2.46 Å, Γ–K = 1.70 Å$^{-1}$ | 41.2° / 20.4° / 14.5° | 95 eV: SRz ≈ −20°; 30 eV: not reachable (needs ≥ ~61 eV) |

The signs between the stage and the ARPES viewer contour have been checked once (deflector sign, 2026-09); on the first use of a new kind of measurement, check that the point appears where the preview shows it.

## Sessions, plate and configuration

- **New / Open… / Save** (toolbar): a session holds the plate, the samples and devices (with their corrections) and the motor positions, in one JSON file. The first *Save* asks for the file name. Files are written safely: if saving fails (disk full, no permission), the previous file stays intact and a message tells you why.
- **Change plate…**: another plate; the samples are kept and misplaced ones are flagged.
- **Configuration…**: read-only view of the configuration in use (stage constants and optics reference), made by the beamline staff. An older configuration can be chosen for this session.

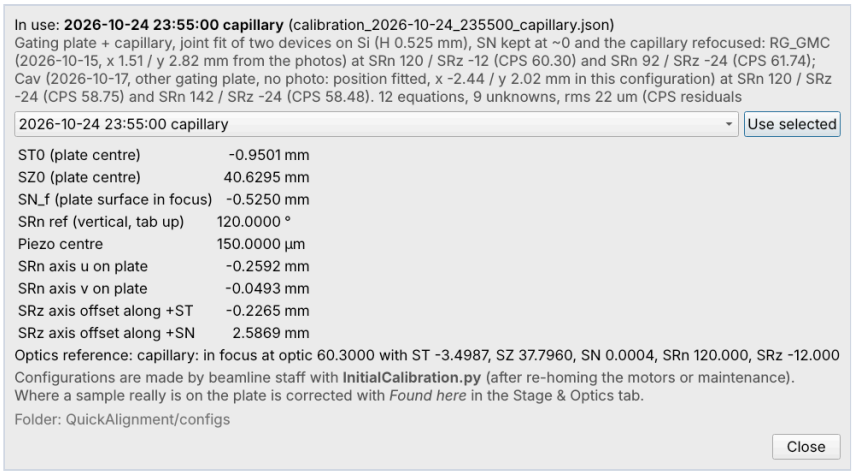


# A typical beamtime

1. Start QuickAlignment, confirm plate and optic.
2. Draw the samples from your mounting photo (or open the session prepared before the beamtime); press *Samples placed → Stage*.
3. Go to the first sample with the listed ST / SZ / SN; find it with the beam (camera, photoemission map).
4. *Found here*: correct its position. The others now come out right too.
5. Measure a map at SRn = 120°, SRz = 0°; read Γ and one K / M point in ARPES viewer.
6. *Find angles for a BZ point… → Use these angles → Compute new position* (tick *Correct SN* if the point is more than 50 µm from the analyzer focus) → *Send to Stage & Optics tab*.
7. Save the session.

# Messages and what to do

| message | meaning / what to do |
|---|---|
| *Out of range: ST = … (range …)* | the point cannot be reached at these angles; choose other angles or use the corrected solution |
| *… µm from the analyzer focus* (red) | after an SRz turn the point left the focal plane: tick *Correct SN* |
| *Found here* moves a sample by > 0.3 mm | the drawing was off, or the configuration is outdated (motors re-homed): ask the staff |
| *The beam misses the plate* | ST / SZ do not put the beam on the plate |
| *Check the input: Γ–K on the map is …* | lattice constant, point or photon energy does not match the map |
| *An unexpected error occurred* | the program keeps running; check the last result, save the session and send the details to the staff |