

## **INTERIOR TRIM LOCATION INDEX**



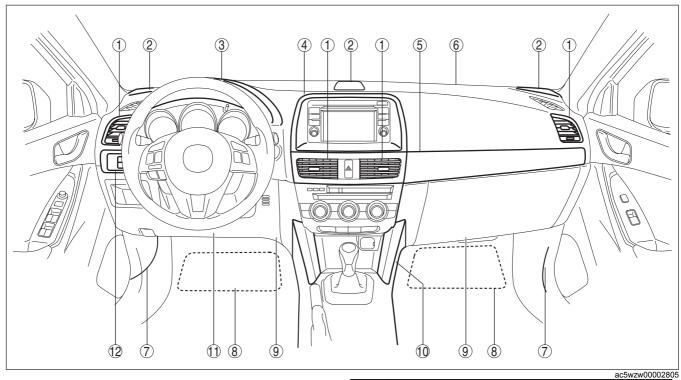


1	Ventilator grille
	(See VENTILATOR GRILLE REMOVAL/
	INSTALLATION.)
2	Speaker grille
	(See SPEAKER GRILLE REMOVAL/
	INSTALLATION.)
3	Meter hood
	(See METER HOOD REMOVAL/INSTALLATION.)
4	Center panel
	(See CENTER PANEL REMOVAL/INSTALLATION.)
5	Decoration panel
	(See DECORATION PANEL REMOVAL/
	INSTALLATION.)
6	Dashboard
	(See DASHBOARD REMOVAL/INSTALLATION.)
	(See DASHBOARD DISASSEMBLY/ASSEMBLY.)
7	Front side trim
	(See FRONT SIDE TRIM REMOVAL/
	INSTALLATION.)

8	Floor insulator
	(See FLOOR INSULATOR REMOVAL/
	INSTALLATION.)
9	Lower panel
	(See LOWER PANEL REMOVAL/INSTALLATION.)
10	Front console
	(See FRONT CONSOLE REMOVAL/
	INSTALLATION.)
11	Dashboard under cover
	(See DASHBOARD UNDER COVER REMOVAL/
	INSTALLATION.)
12	Switch panel
	(See SWITCH PANEL REMOVAL/INSTALLATION.)

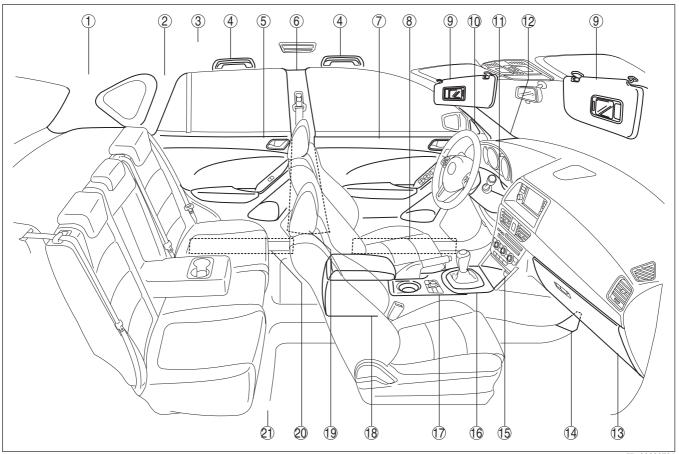

1	D-pillar trim
	(See D-PILLAR TRIM REMOVAL/INSTALLATION.)
2	C-pillar trim
	(See C-PILLAR TRIM REMOVAL/INSTALLATION.)
3	Headliner
	(See HEADLINER REMOVAL/INSTALLATION.)
4	Assist handle
	(See ASSIST HANDLE REMOVAL/
	INSTALLATION.)
5	Rear door trim
	(See REAR DOOR TRIM REMOVAL/
	INSTALLATION.)
	(See REAR DOOR TRIM DISASSEMBLY/ ASSEMBLY.)
6	B-pillar upper trim
O	(See B-PILLAR UPPER TRIM REMOVAL/
	INSTALLATION.)
7	Front door trim
	(See FRONT DOOR TRIM REMOVAL/
	INSTALLATION.)
	(See FRONT DOOR TRIM DISASSEMBLY/
	ASSEMBLY.)
8	Front scuff plate
	(See FRONT SCUFF PLATE REMOVAL/
	INSTALLATION.)
9	Sunvisor
	(See SUNVISOR REMOVAL/INSTALLATION.)
10	Inner garnish
	(See INNER GARNISH REMOVAL/
11	INSTALLATION.)
11	Column cover   (See COLUMN COVER REMOVAL/
	INSTALLATION.)
	INOTALLATION.)

	ac5jjw000007
12	A-pillar trim
	(See A-PILLAR TRIM REMOVAL/INSTALLATION.)
13	Glove compartment
	(See GLOVE COMPARTMENT REMOVAL/
	INSTALLATION.)
14	Side wall
	(See SIDE WALL REMOVAL/INSTALLATION.)
15	Front console box
	(See FRONT CONSOLE BOX REMOVAL/
	INSTALLATION.)
16	Shift panel
	(See SHIFT PANEL REMOVAL/INSTALLATION.)
17	Upper panel
	(See UPPER PANEL REMOVAL/INSTALLATION.)
18	Rear console
	(See REAR CONSOLE REMOVAL/
	INSTALLATION.)
	(See REAR CONSOLE DISASSEMBLY/
	ASSEMBLY.)
19	B-pillar lower trim
	(See B-PILLAR LOWER TRIM REMOVAL/
	INSTALLATION.)
20	Rear scuff plate
	(See REAR SCUFF PLATE REMOVAL/
	INSTALLATION.)
21	Floor covering
	(See FLOOR COVERING REMOVAL/
	INSTALLATION.)

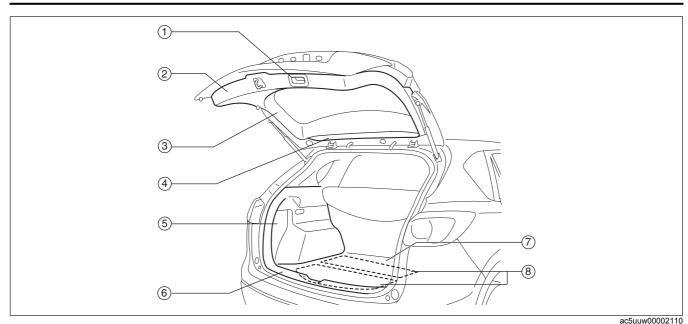

	1.16
1	Liftgate recess
	(See LIFTGATE RECESS REMOVAL/
	INSTALLATION.)
2	Liftgate lower trim
	(See LIFTGATE LOWER TRIM REMOVAL/
	INSTALLATION.)
3	Liftgate side trim
	(See LIFTGATE SIDE TRIM REMOVAL/
	INSTALLATION.)
4	Liftgate upper trim
	(See LIFTGATE UPPER TRIM REMOVAL/
	INSTALLATION.)

	acsuuw000021
5	Trunk side trim
	(See TRUNK SIDE TRIM REMOVAL/
	INSTALLATION.)
6	Trunk end trim
	(See TRUNK END TRIM REMOVAL/
	INSTALLATION.)
7	Trunk covering
	(See TRUNK COVERING REMOVAL/
	INSTALLATION.)
8	Trunk board
	(See TRUNK BOARD REMOVAL/INSTALLATION.)