
MANUAL TRANSAXLE SHIFT MECHANISM LOCATION INDEX [D66M-R, D66MX-R]

id0516cb160600

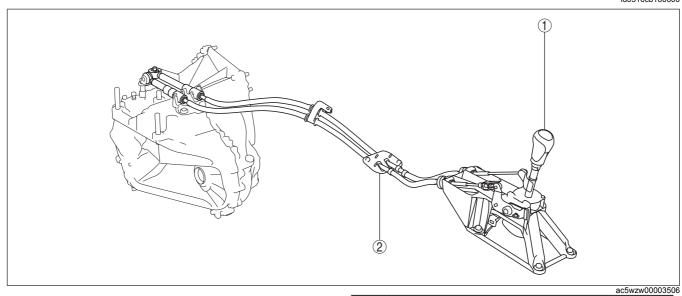

1 Shift lever
(See MANUAL TRANSAXLE SHIFT MECHANISM REMOVAL/INSTALLATION [D66M-R, D66MX-R].)

2 Control cable (See MANUAL TRANSAXLE SHIFT MECHANISM REMOVAL/INSTALLATION [D66M-R, D66MX-R].)