CHARGE AIR COOLER [SKYACTIV-D 2.2]


id0113z7706800

Purpose, Function

• Cools the intake air which is compressed and heated by the turbocharger.


Construction

· The charge air cooler is installed to the backside of the front bumper.

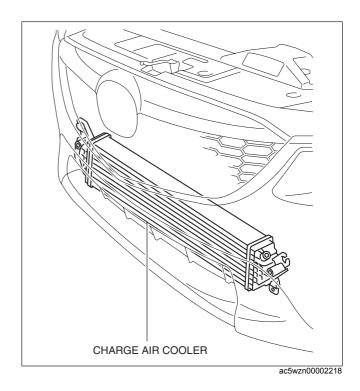

Operation

The charge air cooler cools the intake air which is compressed and heated by the turbochargers to concentrate the air density of the intake air.

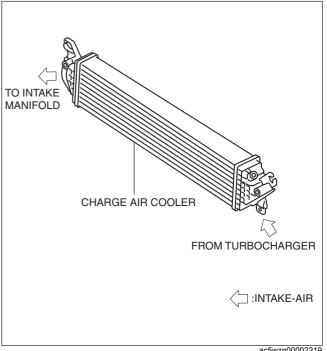

ac5wzn00002219