
## ON-BOARD DIAGNOSTIC SYSTEM MALFUNCTION DISPLAY FUNCTION [SKYACTIV-D 2.2]

id0102s4142000

## **Outline**

• Illuminates the check engine light to notify the driver of a malfunction occurring in the engine control system.

• The check engine light is built into the instrument cluster.

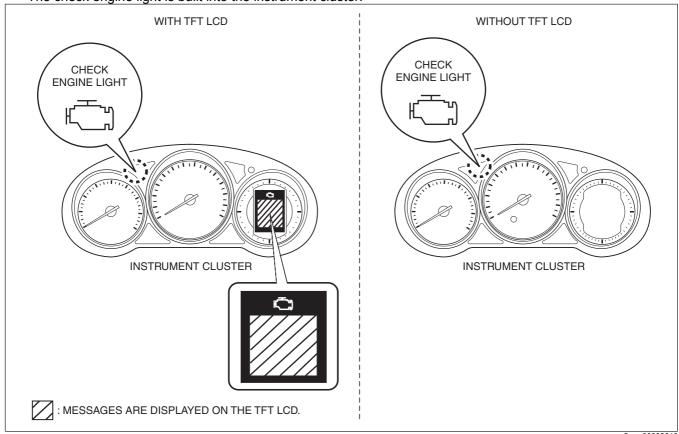

ac5wzn00002613

## **Function**

- The check engine light illuminates when a malfunction occurs in the engine control system, and it illuminates at the same time a DTC is recorded in the PCM.
- The illumination/non-illumination conditions of the check engine light are determined by the number of drive cycles. (See ON-BOARD DIAGNOSTIC SYSTEM TEST MODE [SKYACTIV-D 2.2].)