FRONT COMBINATION LIGHT

id091800010200

Purpose

 Parts related to the front exterior lights are grouped and housed together such as the headlight, parking light, front turn light, headlight leveling actuator, wiring harnesses, and connectors.

Function

• Each light illuminates or flashes when the light switch, turn switch, or hazard switch is operated.

Construction


· A halogen type or discharge type headlight is available for the front combination light.

Halogen type

- The following parts are an integrated structure.
 - Headlight LO
 - Headlight HI/Running light
 - Parking light
 - Front turn light
 - Headlight leveling actuator
- A projector type headlight has been adopted for the headlight LO.
- · A clear lens has been adopted for the front combination light.

Note

- Fogging or condensation on the inside of the front combination lights may occur, however, it is a natural phenomenon occurring as a result of a temperature difference between the interior and exterior of the front combination lights and has no effect on the light performance.
- Fogging or condensation occurring as a natural phenomenon will dissipate when the temperature inside the front combination lights rises after the headlights are illuminated and a period of time has elapsed.

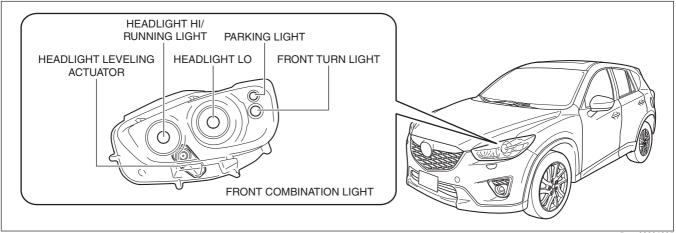


ac5wzn00001395

Discharge type

- The following parts are an integrated structure.
 - Headlight HI/LO
 - Running light
 - Parking light
 - Front turn light
 - Headlight leveling actuator
 - Swivel actuator
- A projector type headlight has been adopted for the headlight.
- The discharge headlight control module is assembled to the lower area of the front combination light.
- A clear lens has been adopted for the front combination light.

Note


- Fogging or condensation on the inside of the front combination lights may occur, however, it is a natural phenomenon occurring as a result of a temperature difference between the interior and exterior of the front combination lights and has no effect on the light performance.
- Fogging or condensation occurring as a natural phenomenon will dissipate when the temperature inside the front combination lights rises after the headlights are illuminated and a period of time has elapsed.

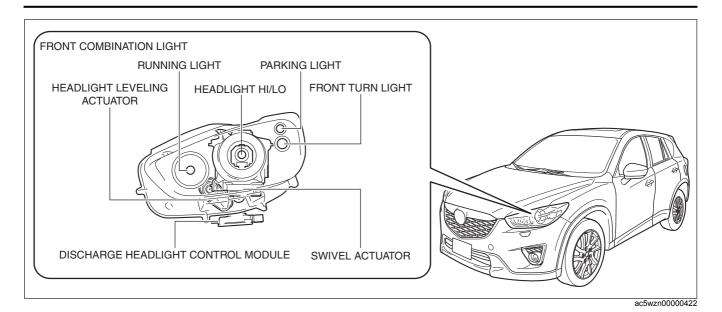

Operation Headlight LO Halogen type

- 1. When the light switch is operated to the HEAD position, a light switch LO signal is input to the start stop unit.
- 2. The start stop unit sends the light switch LO signal to the front body control module (FBCM) as a CAN signal.
- 3. When the front body control module (FBCM) receives the light switch LO signal, it turns the headlight LO relay on.

4. When the headlight LO relay turns on, the headlight LO bulbs are illuminated.

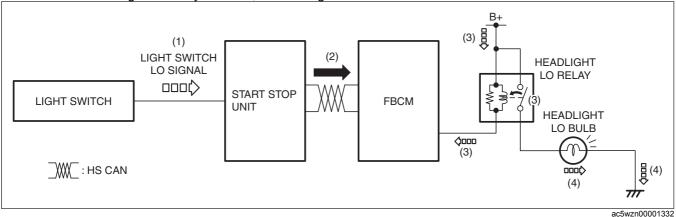


Discharge type

Refer to the discharge headlight system. (See DISCHARGE HEADLIGHT SYSTEM.)

Headlight HI Halogen type

- 1. When the light switch is operated to the HEAD position, a light switch LO signal is input to the start stop unit.
- 2. The start stop unit sends the light switch LO signal to the front body control module (FBCM) as a CAN signal.
- 3. When the front body control module (FBCM) receives the light switch LO signal, it turns the headlight LO relay on.
- 4. When the headlight LO relay turns on, the headlight LO bulbs are illuminated.
- 5. When the light switch is operated to the HI position, a light switch HI signal is input to the start stop unit.
- The start stop unit sends the light switch HI signal to the front body control module (FBCM) as a CAN signal.
- 7. When the front body control module (FBCM) receives the light switch HI signal, it turns the headlight HI relay on.
- 8. When the headlight HI relay turns on, the headlight HI bulbs are illuminated.

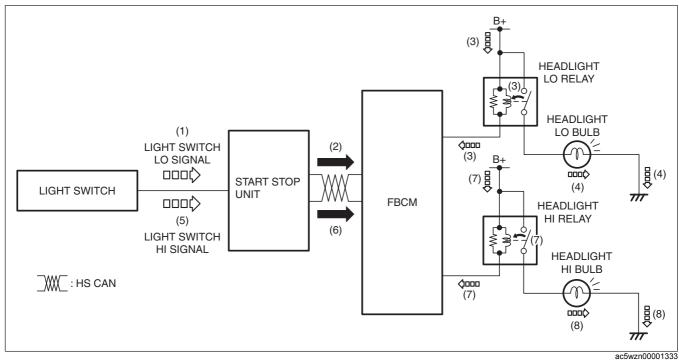


Discharge type

• Refer to the discharge headlight system. (See DISCHARGE HEADLIGHT SYSTEM.)

Flash-to pass Halogen type

- 1. When the light switch is operated to the passing position, a light switch passing signal is input to the start stop unit.
- 2. The start stop unit sends the light switch passing signal to the front body control module (FBCM) as a CAN signal.
- 3. When the front body control module (FBCM) receives the light switch passing signal, it turns the headlight LO and HI relays on.

4. When the headlight LO and HI relays turn on, the headlight LO and HI bulbs are illuminated.

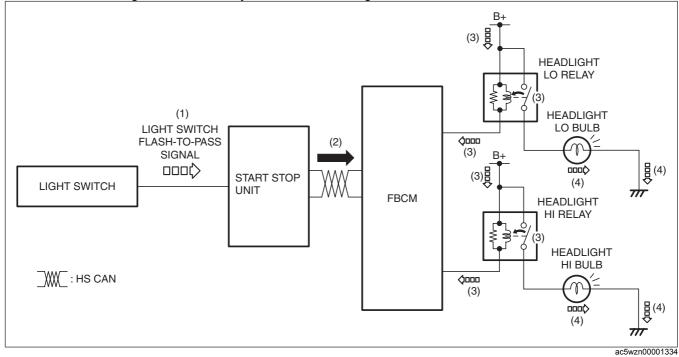

Discharge type

Refer to the discharge headlight system. (See DISCHARGE HEADLIGHT SYSTEM.)


Running light

Refer to the running light system. (See RUNNING LIGHT SYSTEM.)

ac3w2110000133


Parking light

- 1. When the light switch is operated to the TNS position, a light switch TNS signal is input to the start stop unit.
- 2. The start stop unit sends the light switch TNS signal to the front body control module (FBCM) as a CAN signal.
- 3. When the front body control module (FBCM) receives the light switch TNS signal, the parking light bulbs are illuminated.

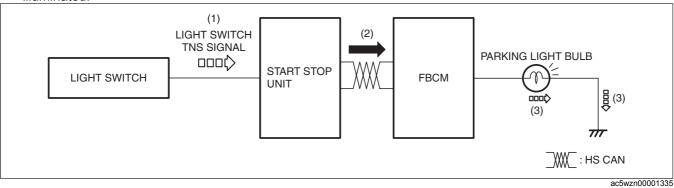

Front turn light


- 1. When the turn switch is operated to the LH or RH position, a turn switch LH or RH signal is input to the start stop
- The start stop unit sends the turn switch LH or RH signal to the front body control module (FBCM) as a CAN signal.
- 3. When the front body control module (FBCM) receives the turn switch LH or RH signal, the front turn light bulb (LH) or (RH) is illuminated.

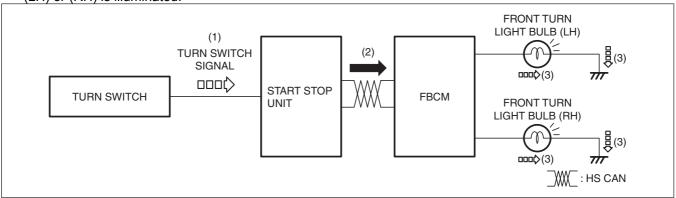

ac5wzn00001336

Front turn light (hazard warning)

- 1. When the hazard warning switch is turned on, a hazard signal is input to the start stop unit.
- 2. The start stop unit sends a hazard warning signal to the front body control module (FBCM).
- 3. When the front body control module (FBCM) receives the hazard warning signal, the front turn lights (RH) and (LH) flash.

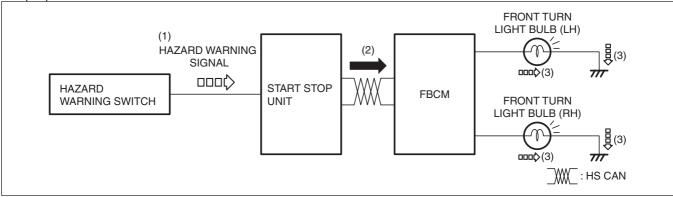

ac5wzn00001510

Headlight leveling actuator

Refer to the headlight leveling actuator. (See HEADLIGHT LEVELING ACTUATOR.)

Swivel actuator (with AFS)Refer to the swivel actuator. (See AFS (ADAPTIVE FRONT LIGHTING SYSTEM).)

Fail-safe

• Function not equipped.