
COMPRESSOR BYPASS SOLENOID VALVE REMOVAL/INSTALLATION [SKYACTIV-D 2.2]

id0113z7265600


Caution

- If the vacuum hose is installed incorrectly, it could cause a vehicle malfunction. To prevent this, refer to "VACUUM HOSE STRUCTURAL VIEW" and install the vacuum hose correctly. (See Vacuum hose structural view.)
- 1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-D 2.2].)
- 2. Remove the battery and the battery tray. (See BATTERY REMOVAL/INSTALLATION [SKYACTIV-D 2.2].)
- 3. Remove in the order shown in the figure.

ATX

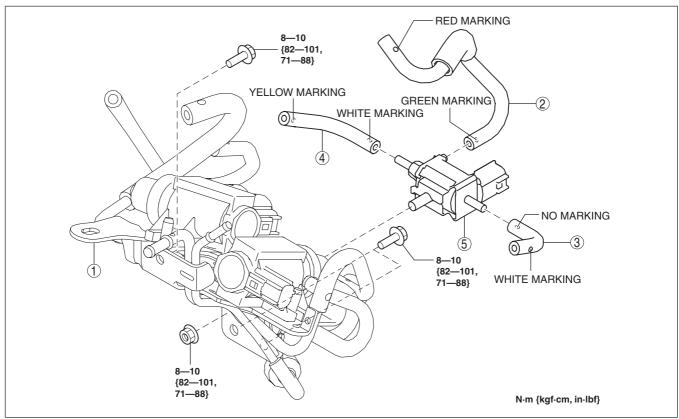

MTX

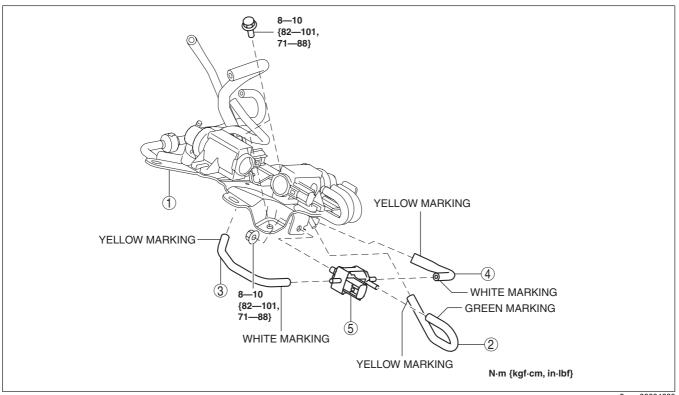

ac5wzw00004660


1	Vacuum pipe bracket
2	Vacuum hose No.1
	(See Vacuum Hose No.1 Installation Note.)
3	Vacuum hose No.2
	(See Vacuum Hose No.2 Installation Note.)
4	Vacuum hose No.3
	(See Vacuum Hose No.3 Installation Note.)
5	Compressor bypass solenoid valve

4. Install in the reverse order of removal.


Vacuum Hose No.3 Installation Note


1. Install vacuum hose No.3 as shown in the figure.

Compressor bypass solenoid valve side

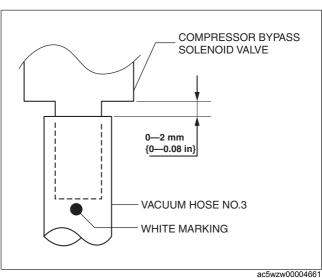

Vacuum pipe bracket side

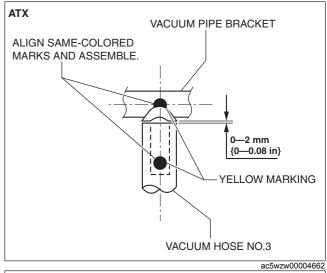


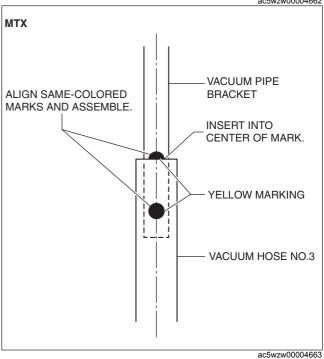


Vacuum Hose No.2 Installation Note


1. Install vacuum hose No.2 as shown in the figure.

Compressor bypass solenoid valve side

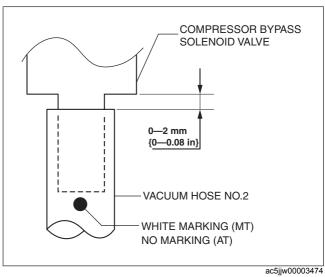


Vacuum pipe bracket side

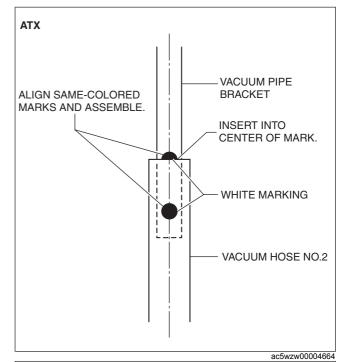

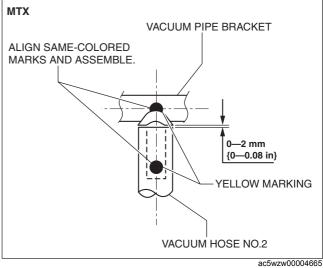


Vacuum Hose No.1 Installation Note


1. Install vacuum hose No.1 as shown in the figure. Compressor bypass solenoid valve side

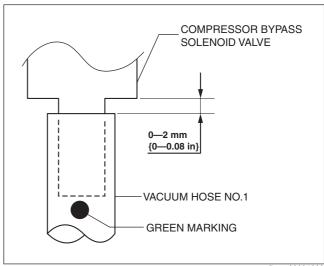

ac5wzw00004666

Compressor bypass valve actuator side

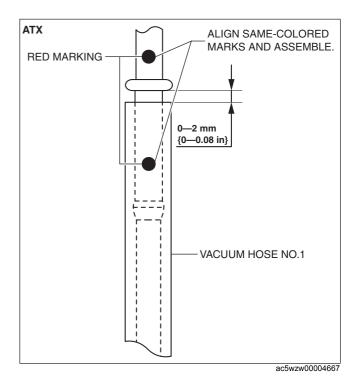


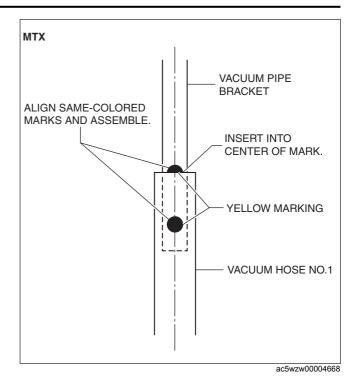


Vacuum hose structural view

1. Verify that the vacuum hose is installed correctly as shown in the figure.


Whole figure (ATX)

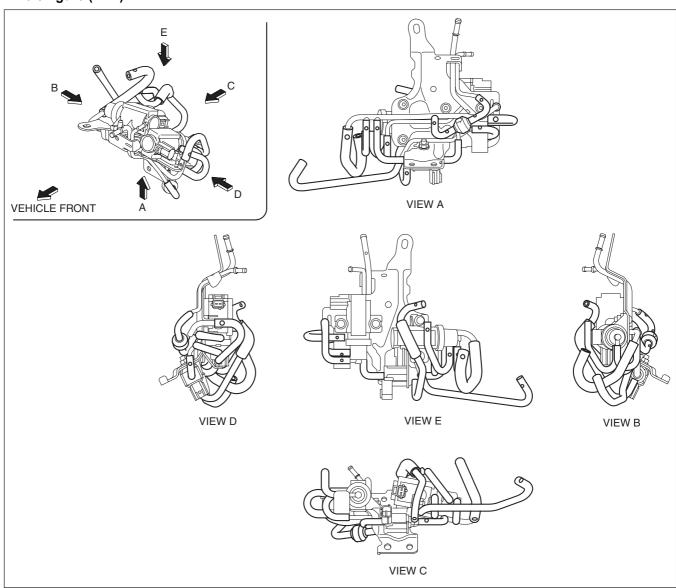


Whole figure (MTX)

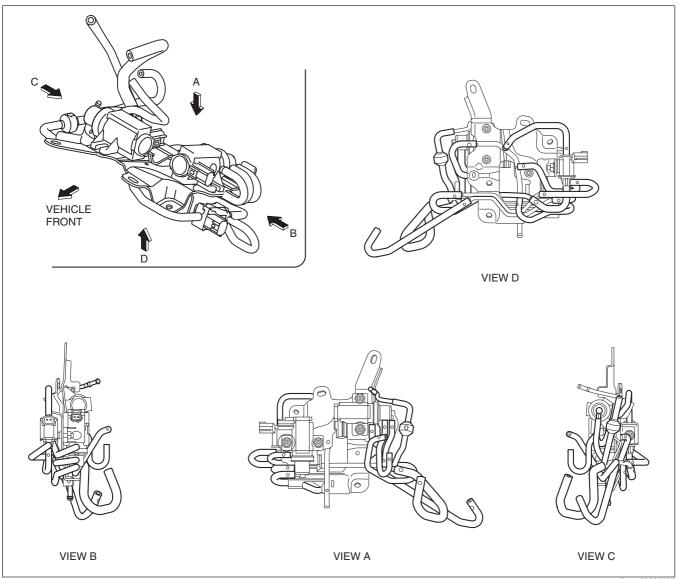


Compressor bypass solenoid valve side (ATX)

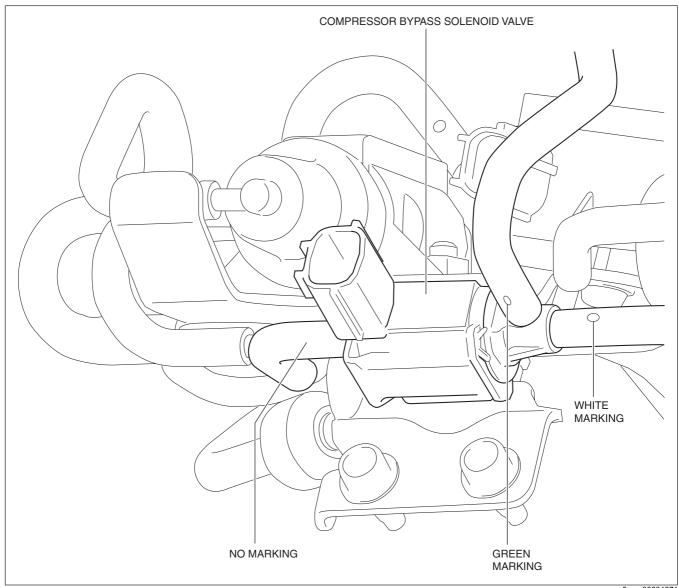

Compressor bypass solenoid valve side (MTX)

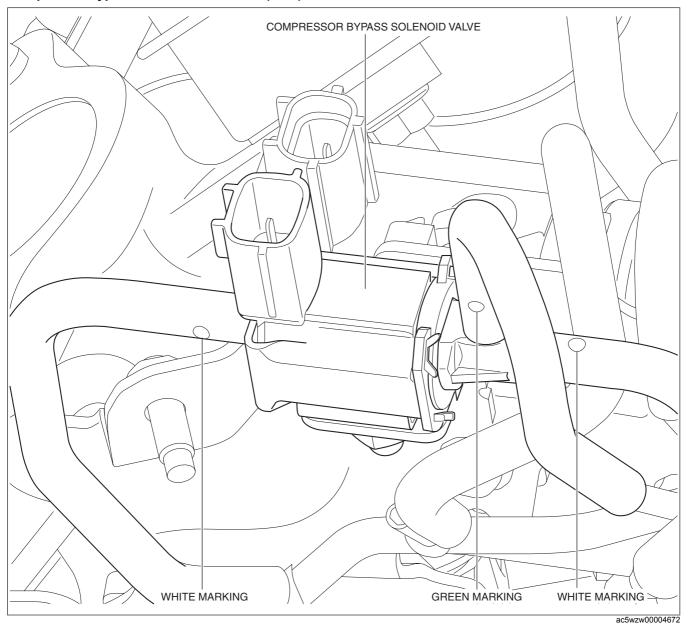

Vacuum pipe bracket side (ATX)

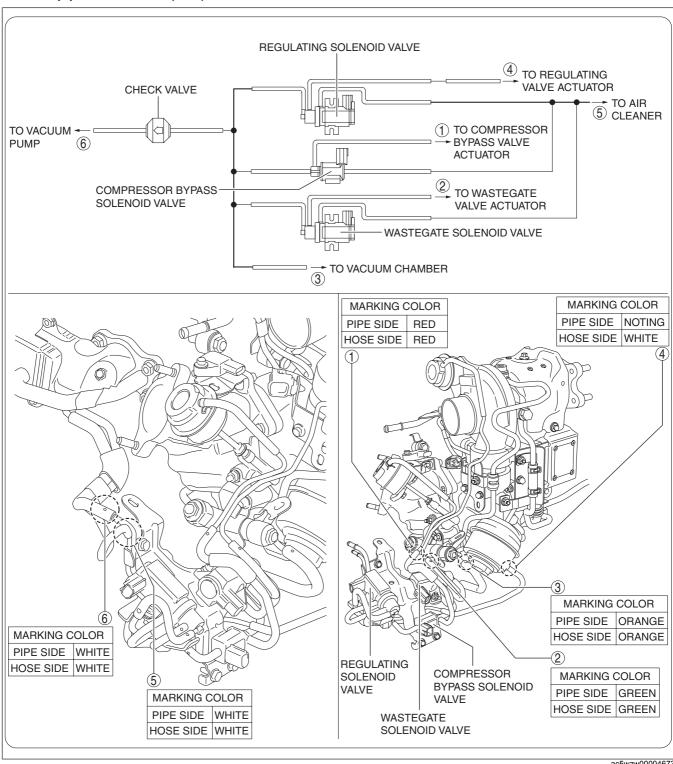

Vacuum pipe bracket side (MTX)

