GROUND POINTS

This shows ground points of the harness.

Ground points

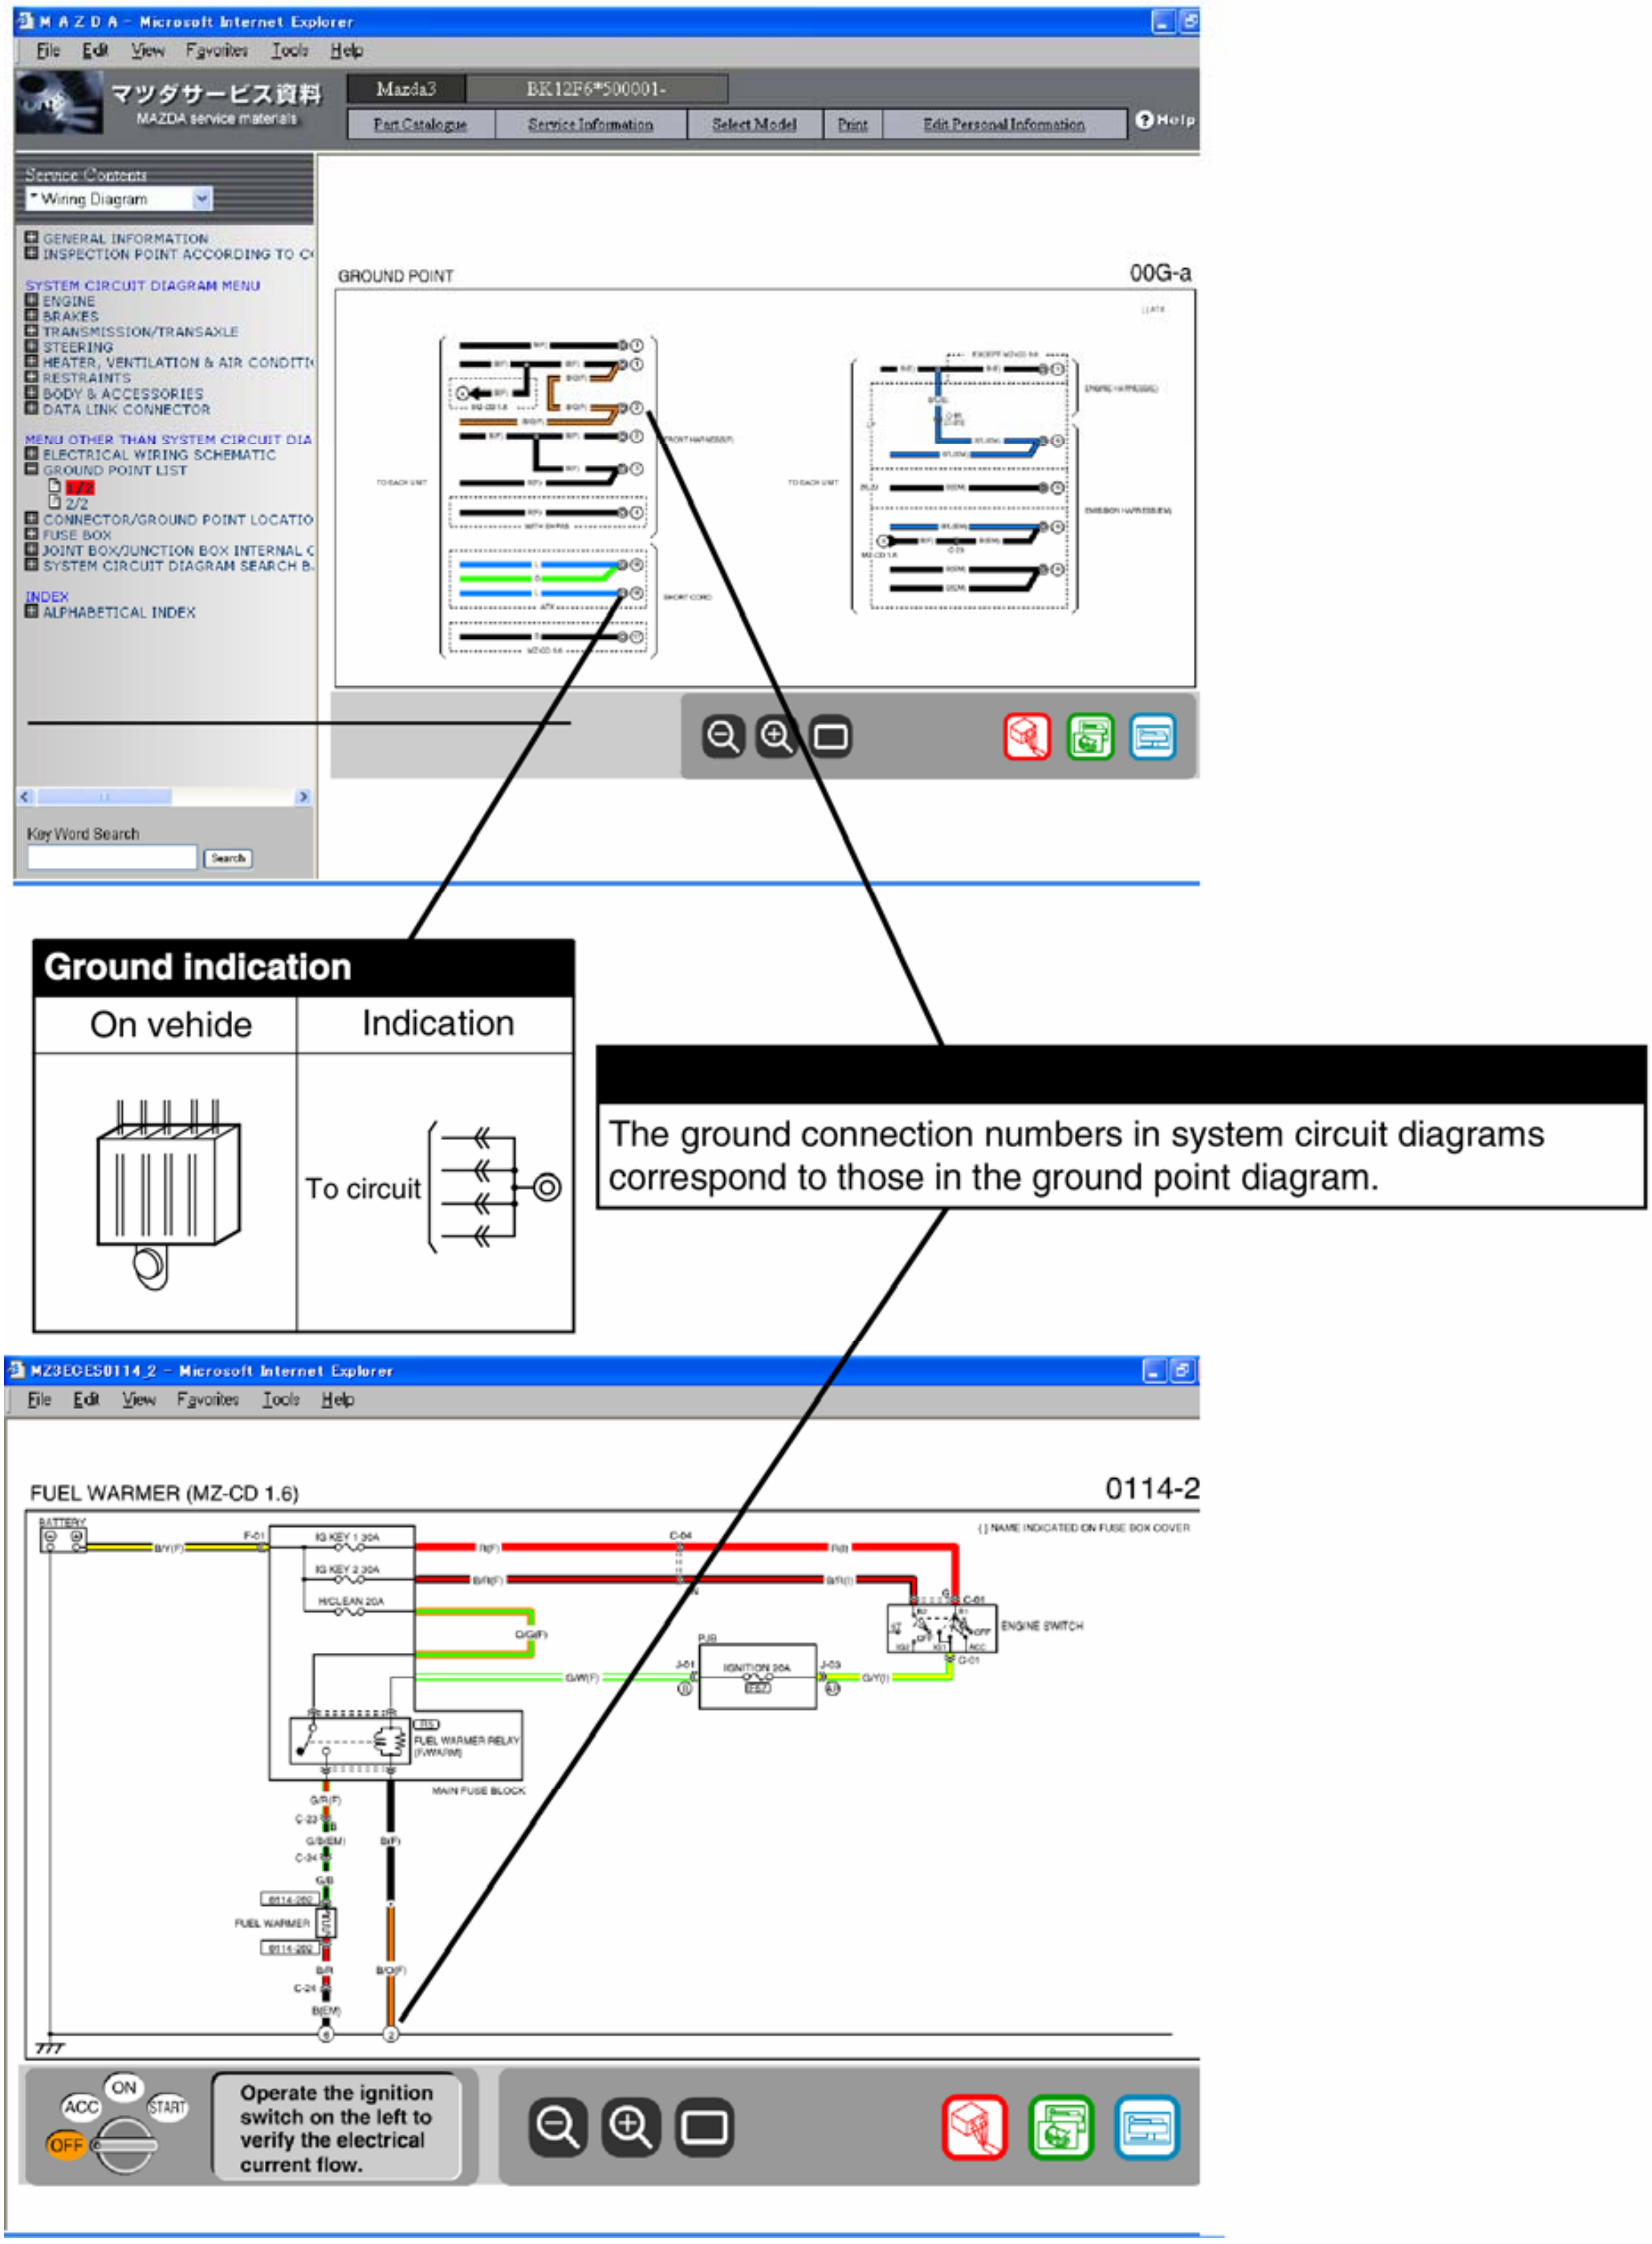
M A Z D A - Microsoft Internet Explorer
File Edit View Favorites Tools Help
マツダサービス資料
MAZDA service materials
Mazda3
BK12F6*500001-
Part Catalogue
Service Information
Select Model
Print
Edit Personal Information
Help
Service Contents
Wiring Diagram
GENERAL INFORMATION
INSPECTION POINT ACCORDING TO C
SYSTEM CIRCUIT DIAGRAM MENU
ENGINE
BRAKES
TRANSMISSION/TRANSAXLE
STEERING
HEATER, VENTILATION & AIR CONDITI
RESTRAINTS
BODY & ACCESSORIES
DATA LINK CONNECTOR
MENU OTHER THAN SYSTEM CIRCUIT DIA
ELECTRICAL WIRING SCHEMATIC
GROUND POINT LIST
1/2
2/2
CONNECTOR/GROUND POINT LOCATIO
FUSE BOX
JOINT BOX/JUNCTION BOX INTERNAL C
SYSTEM CIRCUIT DIAGRAM SEARCH B
INDEX
ALPHABETICAL INDEX
Key Word Search
Search
GROUND POINT
00G-a
TO EACH UNIT
FRONT HARNESS
SHORT CORD
ENGINE HARNESS
EMISSION HARNESS
Ground indication
On vehide
Indication
To circuit
MZ3EOES0114_2 - Microsoft Internet Explorer
File Edit View Favorites Tools Help
FUEL WARMER (MZ-CD 1.6)
0114-2
( ) NAME INDICATED ON FUSE BOX COVER
BATTERY
F-01
IG KEY 1 30A
IG KEY 2 30A
H/CLEAN 20A
C-04
ENGINE SWITCH
IGNITION 20A
FUEL WARMER RELAY (FWARM)
MAIN FUSE BLOCK
FUEL WARMER
ON
ACC
START
OFF

Operate the ignition switch on the left to verify the electrical current flow.

The ground connection numbers in system circuit diagrams correspond to those in the ground point diagram.