FRONT DOOR LOCK-LINK SWITCH

id091400108500

Purpose


• Switches on/off in conjunction with the front door lock knob lock/unlock, and detects the front door lock/unlock condition by the voltage which is changed by the rear body control module (RBCM).

Function

• The door lock-link switch contact point changes in conjunction with the front door lock knob lock/unlock operation.

Construction

• The front door lock knob and door lock-link switch are connected by the door lock-link cable, and are built into the front door latch and lock actuator.

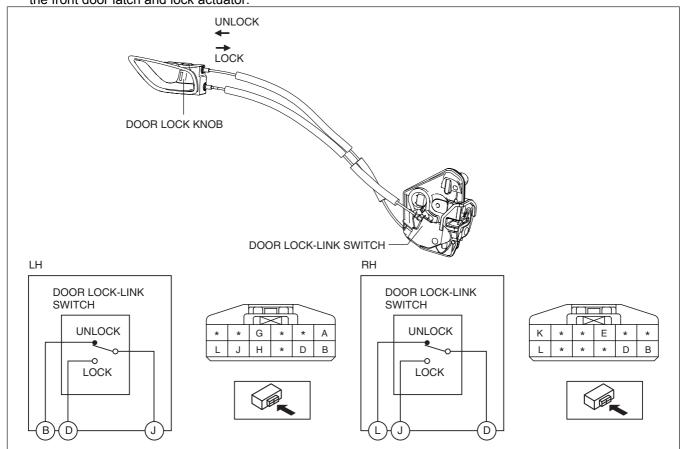

ac5wzn00001514

Operation

Lock operation

• When the front door lock knob is turned to the lock position, the door lock-link cable is pressed, and the door lock-link switch is switched to the lock side.

Unlock operation

• When the front door lock knob is turned to the unlock position, the door lock-link cable is pulled, and the door lock-link switch is switched to the unlock side.

Fail-safe

· Function not equipped.