
AUTOMATIC TRANSAXLE SHIFT MECHANISM REMOVAL/INSTALLATION


id051800296900

Selector Lever Removal/Installation

- 1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5 (WITHOUT i-stop)].) (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5].) (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-D 2.2].)
- 2. Remove the front console. (See FRONT CONSOLE REMOVAL/INSTALLATION.)
- 3. Disconnect the selector lever component connector.
- 4. Remove the selector cable (selector lever side). (See Selector Cable Removal/Installation.)

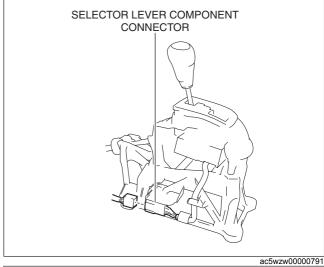


5. Remove the nuts from the selector lever component.

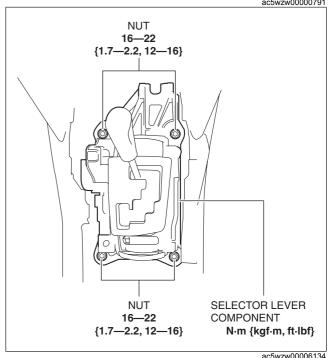


ac5wzw00006134

- 6. Remove the knob.
- 7. Remove the selector lever component.
- 8. Install in the reverse order of removal.

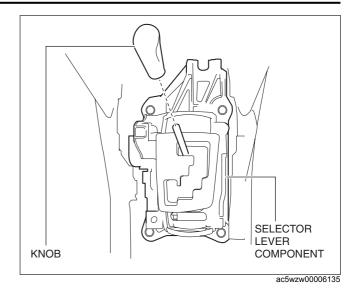


Selector Cable Removal/Installation

- 1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5 (WITHOUT i-stop)].) (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5].) (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-D 2.2].)
- 2. Perform the following procedure to remove the selector cable (selector lever side).
 - (1) Remove the front console. (See FRONT CONSOLE REMOVAL/INSTALLATION.)
 - (2) Pull out the safety lock in the direction of the arrow (1) shown in the figure, pull out the lock piece in the direction of the arrow (2) shown in the figure, and release the lock. (See Selector Cable (Selector Lever Side) Installation Note.)

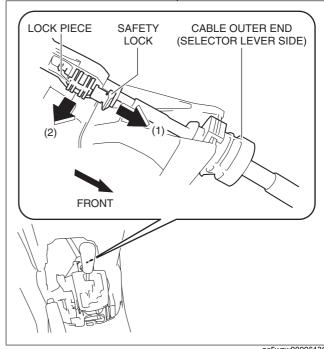


ac5wzw00006136

- (3) While pressing the cable outer end tab (selector lever side) in the direction of the arrow (3) shown in the figure, lift up cable outer end (selector lever side) in the direction of the arrow (4) shown in the figure to detach the cable outer end tab (selector lever side) from the bracket.
- (4) Remove the cable outer end (selector lever side) from the bracket.

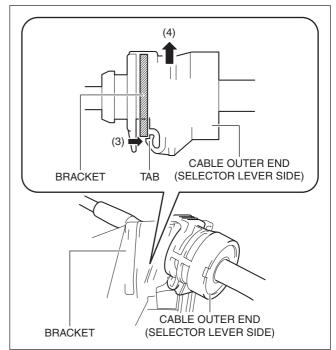

(5) Remove the selector cable end (selector lever side) from the selector lever.

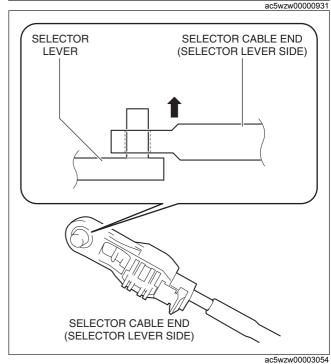


3. Perform the following procedure to remove the selector cable (transaxle side).


(1) Remove the air cleaner case. (See INTAKE-AIR SYSTEM REMOVAL/INSTALLATION [SKYACTIV-G 2.0, SKYACTIV-G 2.5].) (See INTAKE-AIR SYSTEM REMOVAL/INSTALLATION [SKYACTIV-D 2.2].)

(2) Remove the battery tray. (See BATTERY REMOVAL/INSTALLATION [SKYACTIV-G 2.0, SKYACTIV-G 2.5].) (See BATTERY REMOVAL/INSTALLATION [SKYACTIV-D 2.2].)


- (3) While pressing the bracket tabs in the direction of the arrows (5) shown in the figure, lift up the cable outer end (transaxle side) in the direction of the arrow (6) shown in the figure to detach the bracket tab from the cable outer end (transaxle side).
- (4) Remove the cable outer end (transaxle side) from the bracket. (See Cable Outer End (Transaxle Side) Installation Note.)

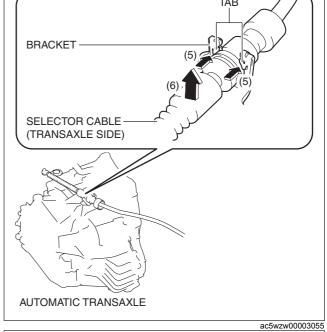


(5) Remove the clip from the selector cable end (transaxle side).

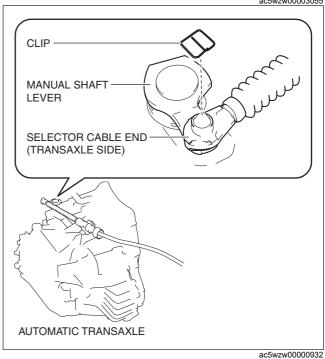


- (6) Remove the selector cable end (transaxle side) from the manual shaft lever.
- 4. Remove the side wall. (See SIDE WALL REMOVAL/INSTALLATION.)

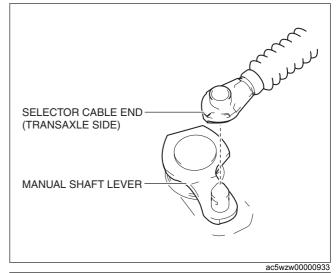

5. Remove the clip as shown in the figure and remove the nut.

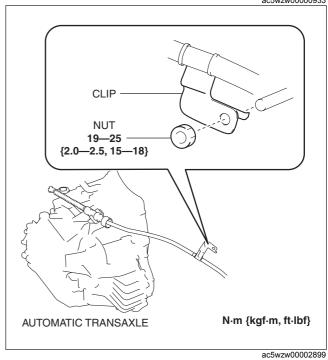


- 6. Remove the grommet as shown in the figure and remove the nuts.
- 7. Install in the reverse order of removal.

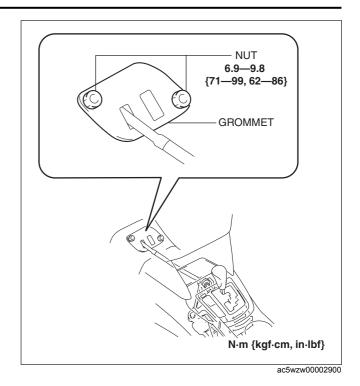


Selector Illumination Bulb Removal/Installation

- 1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5 (WITHOUT i-stop)].) (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5].) (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-D 2.2].)
- 2. Remove the shift panel. (See SHIFT PANEL REMOVAL/INSTALLATION.)
- 3. Remove the socket from the shift panel.

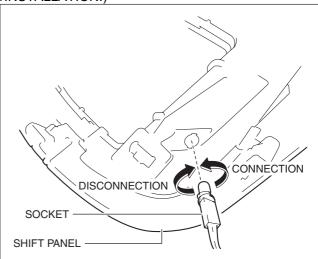


- Remove the selector illumination bulb from the socket.
- 5. Install in the reverse order of removal.

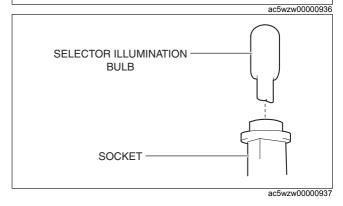


Selector Cable Adjustment

- 1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5 (WITHOUT i-stop)].) (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5].) (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-D 2.2].)
- 2. Remove the shift panel. (See SHIFT PANEL REMOVAL/INSTALLATION.)
- 3. Remove the screws from the bracket.
- 4. Remove the bracket from the rear console.
- 5. Shift the selector lever to the P position.

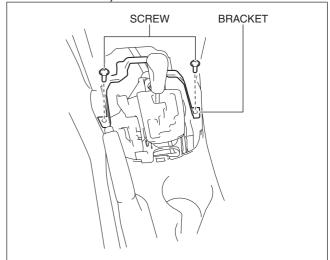


Pull out the safety lock in the direction of the arrow

 (1) shown in the figure, pull out the lock piece in the direction of the arrow (2) shown in the figure, and release the lock. (See Selector Cable (Selector Lever Side) Installation Note.)

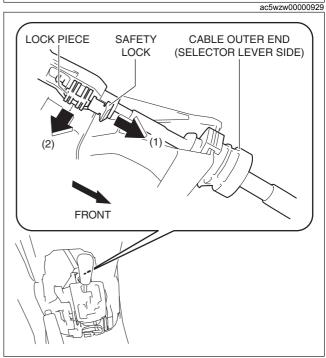


ac5wzw00006136

7. Set the manual shaft to the P position.

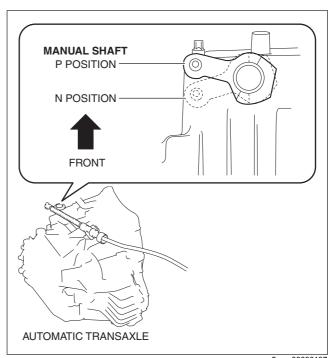


- 8. Press in the lock piece in the direction of the arrow (1) shown in the figure, press in the safety lock in the direction of the arrow (2) shown in the figure, and lock it.
- 9. Perform the procedure in the reverse order of Step 1 to 4 to install the removed part.
- 10. Perform the selector lever inspection. (See SELECTOR LEVER INSPECTION.)

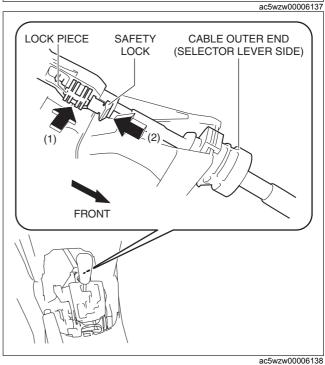


Selector Cable (Selector Lever Side) Installation Note

1. Verify that the selector lever is in the P position.

2. Verify that the manual shaft is in the P position.

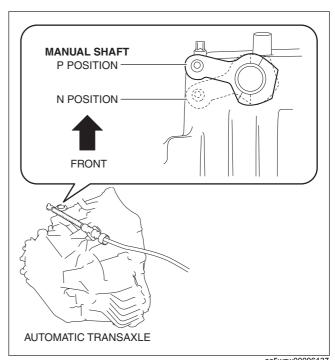

3. Press in the lock piece in the direction of the arrow (1) shown in the figure, press in the safety lock in the direction of the arrow (2) shown in the figure, and lock it.

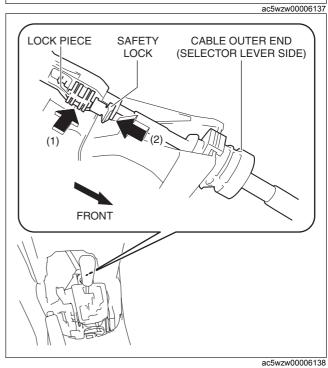

Cable Outer End (Transaxle Side) Installation Note
 Assemble the cable outer end (transaxle side) to the bracket so that the marking is in the area of the arrow shown in the figure.

