
TCS OFF SWITCH, TCS OFF INDICATOR LIGHT

id041500108700


Purpose/Function

 The TCS OFF switch, located on the dashboard, allows for optionally enabling/disabling the TCS control at driver discretion.

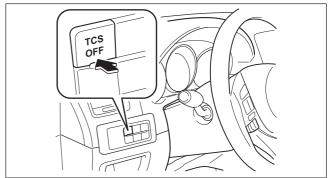

ac5wzn00000348

• The TCS OFF indicator light, built into the instrument cluster, informs the driver that TCS control has been disabled by operation of the TCS OFF switch.

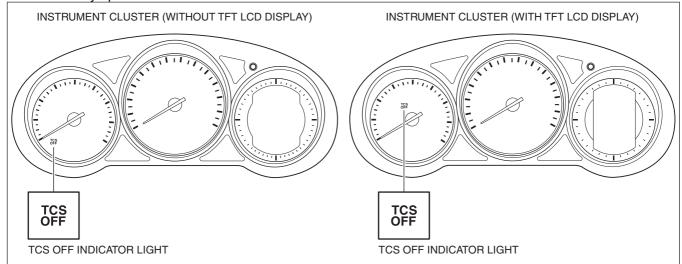

ac5wzn00000900

Operation

- When the DSC system and CAN lines are functionally normally, the TCS OFF indicator light illuminates for approx. 3.0 s when the ignition is switched to ON to check the light function.
- When the TCS OFF switch is pressed to disable TCS control, the TCS OFF indicator light illuminates.

Note

- To inhibit the TCS control, continue to press the TCS OFF switch until the TCS OFF indicator light illuminates.
- The TCS OFF indicator light illumination and TCS/DSC/roll over mitigation (ROM) control conditions while operating the TCS OFF switch are as indicated in the table.

		TCS control conditions			Roll over
	TCS OFF indicator light illumination conditions	Brake control	Engine control	DSC control conditions	mitigation (ROM) control conditions
TCS ON	Not illuminated	Permitted	Permitted	Permitted	Permitted
TCS OFF	Illuminated	Permitted	Inhibited	Permitted	Permitted

Fail-safe

DTC No.	Fail-safe function			
C0089:64	Permits the control and does not illuminate			
00000.01	each warning/indicator light.			