

CLUTCH PEDAL POSITION SWITCH REMOVAL/INSTALLATION [C66M-R, C66MX-R]


- 1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5].) (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5 (WITHOUT i-stop)].)
- 2. Disconnect the clutch pedal position switch connector.3. Rotate the clutch pedal position switch 45° counterclockwise.

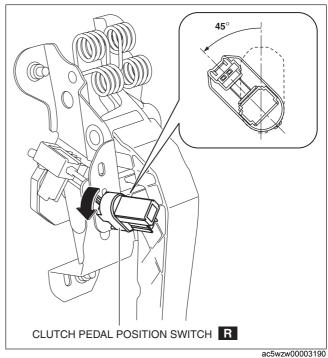

- 4. Remove the clutch pedal position switch from the clutch pedal.
- 5. Insert a new clutch pedal position switch into the clutch pedal hole until the switch stops.

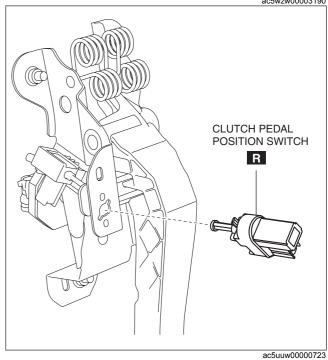

- 6. Rotate the clutch pedal position switch 45° clockwise.
- 7. Verify that the clutch pedal position switch is locked securely.
- 8. Connect the clutch pedal position switch connector.9. Connect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/ CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5].) (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5 (WITHOUT i-stop)].)

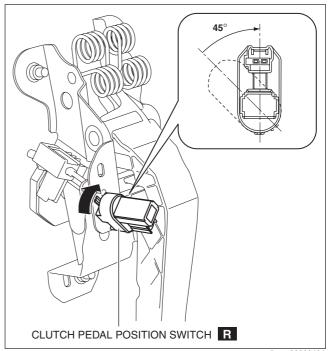

ac5wzw00003191