
## **CONVENTIONAL BRAKE SYSTEM LOCATION INDEX**

## id041100800100

## Vehicle front side

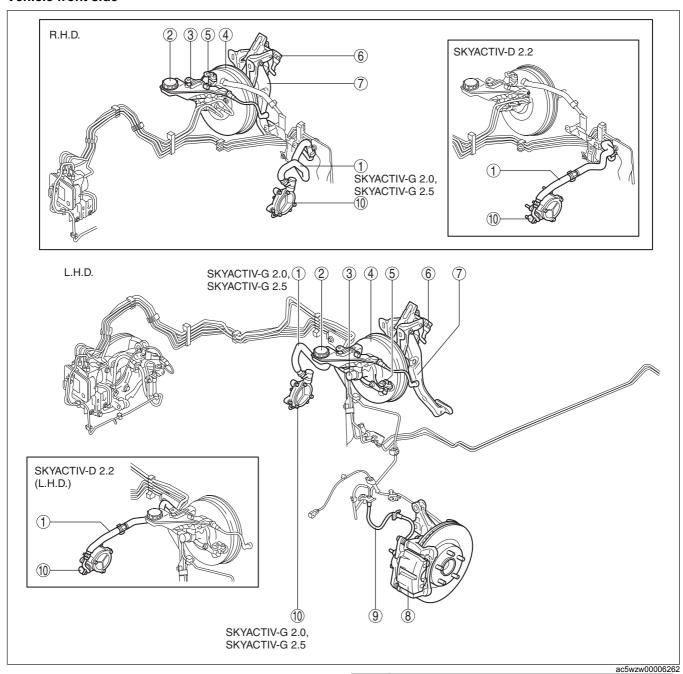


1	Vacuum line
	(See VACUUM LINE INSPECTION.)
	(See VACUUM HOSE REMOVAL/INSTALLATION.)
2	Brake fluid
	(See BRAKE FLUID INSPECTION.)
	(See BRAKE FLUID AIR BLEEDING.)
3	Master cylinder
	(See MASTER CYLINDER REMOVAL/
	INSTALLATION.)
	(See BRAKE FLUID LEVEL SENSOR
	INSPECTION.)
	•

4	Power brake unit
	(See POWER BRAKE UNIT INSPECTION.)
	(See POWER BRAKE UNIT REMOVAL/
	INSTALLATION [L.H.D.].)
	(See POWER BRAKE UNIT REMOVAL/
	INSTALLATION [R.H.D.].)
5	Power brake unit vacuum sensor (Vehicles with i-
	stop)
	(See POWER BRAKE UNIT VACUUM SENSOR
	REMOVAL/INSTALLATION.)
6	Brake switch
	(See BRAKE SWITCH INSPECTION.)

7	Brake pedal (See BRAKE PEDAL INSPECTION.) (See BRAKE PEDAL REMOVAL/INSTALLATION [L.H.D.].) (See BRAKE PEDAL REMOVAL/INSTALLATION [R.H.D.].)
8	Front brake (disc) (See FRONT BRAKE (DISC) INSPECTION.) (See FRONT BRAKE (DISC) REMOVAL/ INSTALLATION.) (See DISC PAD (FRONT) REPLACEMENT.) (See CALIPER (FRONT) DISASSEMBLY/ ASSEMBLY.)

9	Front brake hose (See BRAKE HOSE (FRONT) REMOVAL/
	INSTALLATION.)
10	Vacuum pump
	(See VACUUM PUMP INSPECTION.)
	(See VACUUM PUMP REMOVAL/INSTALLATION
	[SKYACTIV-G 2.0, SKYACTIV-G 2.5].)
	(See VACUUM PUMP REMOVAL/INSTALLATION
	[SKYACTIV-D 2.2].)

## Vehicle rear side

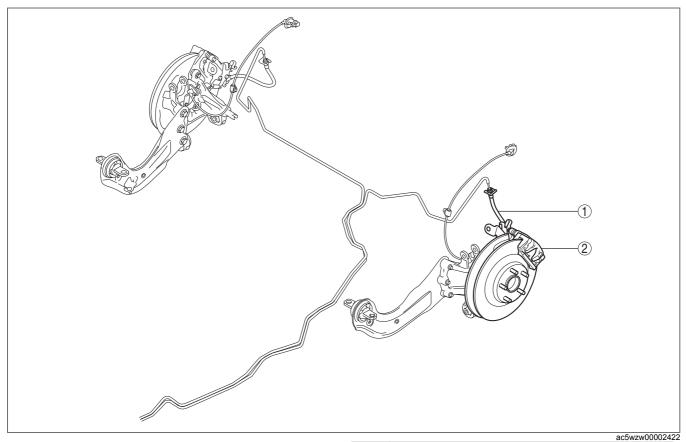

1 Rear brake hose (See BRAKE HOSE (REAR) REMOVAL/ INSTALLATION.) 2 Rear brake (disc)
(See REAR BRAKE (DISC) INSPECTION.)
(See REAR BRAKE (DISC) REMOVAL/
INSTALLATION.)
(See DISC PAD (REAR) REPLACEMENT.)
(See CALIPER (REAR) DISASSEMBLY/
ASSEMBLY.)