
#### **VENTILATOR GRILLE REMOVAL/INSTALLATION**

id091700804600

# **Side Ventilator Grille**

#### Driver-side

- Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5].) (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5 (WITHOUT i-stop)].) (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-D 2.2].)
- 2. Remove the switch panel. (See SWITCH PANEL REMOVAL/INSTALLATION.)
- 3. Insert your hand from the area where the switch panel was installed, remove the side ventilator grille in the direction of the arrow shown in the figure while detaching hooks A.

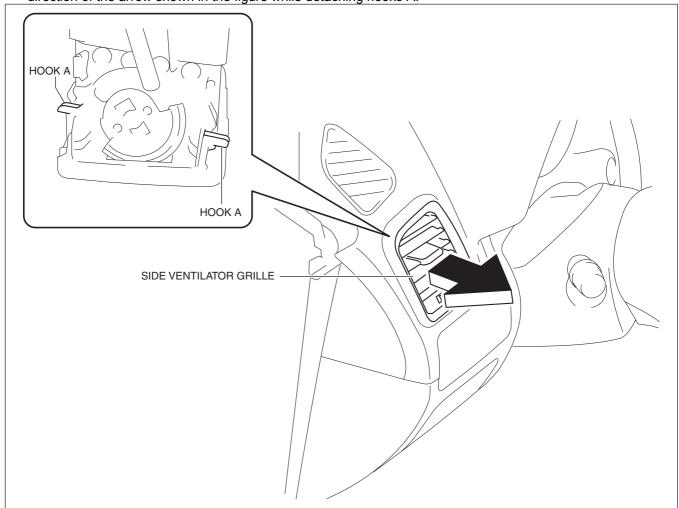


ac5uuw00001792

4. Install in the reverse order of removal.

### Passenger-side


- Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5].) (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5 (WITHOUT i-stop)].) (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-D 2.2].)
- 2. Open the glove compartment.
- 3. Remove the glove compartment. (See GLOVE COMPARTMENT REMOVAL/INSTALLATION.)
- 4. Insert your hand from the area where the glove compartment was installed, remove the side ventilator grille in the direction of the arrow shown in the figure while detaching hooks B.

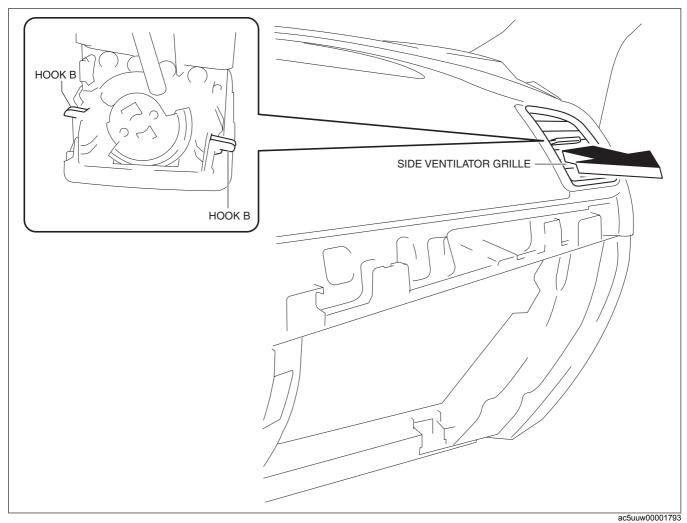

5. Install in the reverse order of removal.

## **Center Ventilator Grille**

- 1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5].) (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.5 (WITHOUT i-stop)].) (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-D 2.2].)
- 2. Remove the decoration panel. (See DECORATION PANEL REMOVAL/INSTALLATION.)
- 3. Push the edge of center ventilator grille in the direction of arrow (1) and detach hooks C.

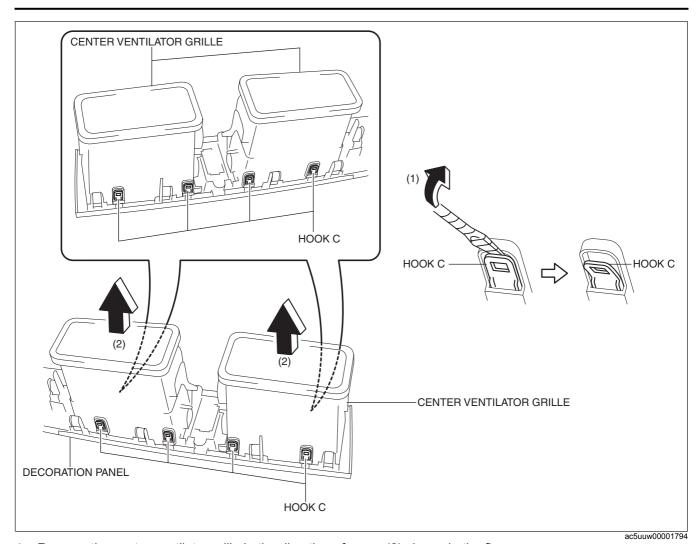

Remove the center ventilator grille in the direction of arrow (2) shown in the figure. Install in the reverse order of removal.