

EXTERIOR TRIM LOCATION INDEX



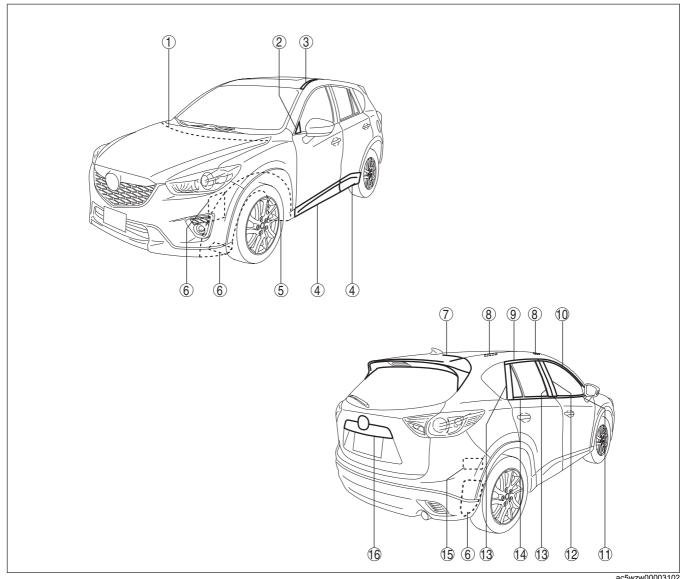

1	Cowl grille
	(See COWL GRILLE REMOVAL/INSTALLATION.)
2	Sail garnish
	(See SAIL GARNISH REMOVAL/INSTALLATION.)
3	Roof molding
	(See ROOF MOLDING REMOVAL.)
	(See ROOF MOLDING INSTALLATION.)
4	Side garnish
	(See SIDE GARNISH INSTALLATION.)
	(See SIDE GARNISH REMOVAL.)
5	Mudguard
	(See MUDGUARD REMOVAL/INSTALLATION.)
6	Splash shield
	(See SPLASH SHIELD REMOVAL/
	INSTALLATION.)
7	Rear spoiler
	(See REAR SPOILER REMOVAL/INSTALLATION.)
8	Roof carrier bracket
	(See ROOF CARRIER BRACKET REMOVAL/
	INSTALLATION.)
9	Rear sash molding
	(See REAR SASH MOLDING REMOVAL.)
	(See REAR SASH MOLDING INSTALLATION.)

	ac5wzw0000310
10	Front sash molding
	(See FRONT SASH MOLDING REMOVAL.)
	(See FRONT SASH MOLDING INSTALLATION.)
11	Front beltline molding
	(See FRONT BELTLINE MOLDING REMOVAL/
	INSTALLATION.)
12	Front door garnish
	(See FRONT DOOR GARNISH REMOVAL/
	INSTALLATION.)
13	Rear door garnish
	(See REAR DOOR GARNISH REMOVAL/
	INSTALLATION.)
14	Rear beltline molding
	(See REAR BELTLINE MOLDING REMOVAL/
	INSTALLATION.)
15	Extractor chamber
	(See EXTRACTOR CHAMBER REMOVAL/
	INSTALLATION.)
16	Liftgate garnish
	(See LIFTGATE GARNISH REMOVAL/
	INSTALLATION.)

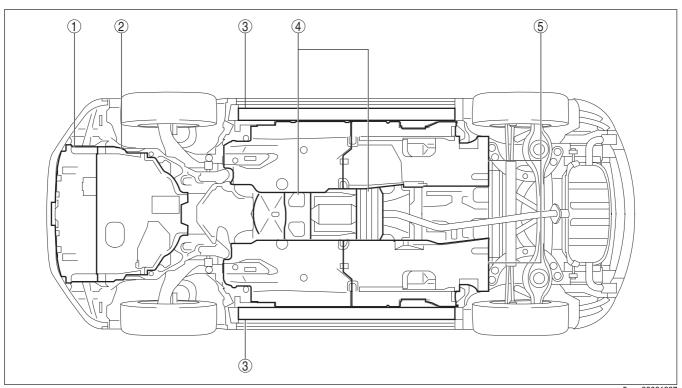

1	Front under cover No.1
	(See FRONT UNDER COVER No.1 REMOVAL/
	INSTALLATION.)
2	Front under cover No.2
	(See FRONT UNDER COVER No.2 REMOVAL/
	INSTALLATION.)
3	Side step molding
	(SeeSIDE STEP MOLDING REMOVAL/
	INSTALLATION.)
	•

	ac5uuw0000186	7
4	Center under cover	
	(See CENTER UNDER COVER REMOVAL/	
	INSTALLATION.)	
5	Floor under cover	
	(See FLOOR UNDER COVER REMOVAL/	
	INSTALLATION.)	