
## TIRE PRESSURE MONITORING SYSTEM SET SWITCH

id021200203000

## **Purpose**

• The tire pressure monitoring system set switch is used to initialize the tire pressure monitoring system.

Construction, Operation
The tire pressure monitoring system set switch is installed to the instrument panel.

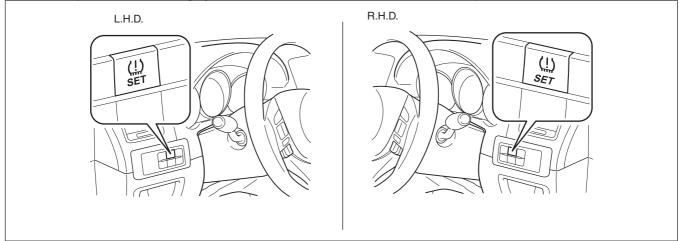

ac5wzn00001071

- The tire pressure monitoring system set switch has adopted a monitoring type switch.
- The tire pressure monitoring system set switch sends a tire pressure monitoring system initialization signal to the instrument cluster.

## Fail-safe

| ſ | DTC      | Fail-safe                  |
|---|----------|----------------------------|
| ſ | C1031:35 | Inhibits the TPMS control. |