
EXTRACTOR CHAMBER REMOVAL/INSTALLATION

id091600801500

- 1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5].) (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.5 (WITHOUT i-stop)].) (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-D 2.2].)
- 2. Remove the following parts:
 - (1) Rear splash shield (See SPLASH SHIELD REMOVAL/INSTALLATION.)
 - (2) Rear combination light (See REAR COMBINATION LIGHT REMOVAL/INSTALLATION.)
 - (3) Rear bumper (See REAR BUMPER REMOVAL/INSTALLATION.)
- 3. Insert a tape-wrapped flathead screwdriver shown in the figure and remove clips in the direction of arrow (1).

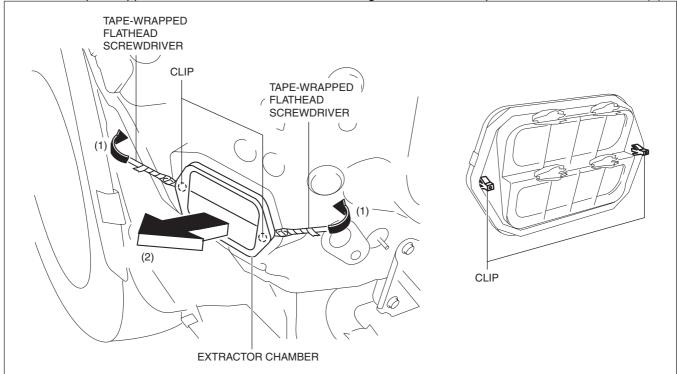

ac5wzw00001273

- 4. Remove the extractor chamber in the direction of arrow (2).
- 5. Install in the reverse order of removal.