
## Warning


 Handling a side air bag improperly can accidentally operate (deploy) the air bag, which may seriously injure you. Read the service warnings/cautions in the Workshop Manual before handling the front seat (side air bag integrated). (See AIR BAG SYSTEM SERVICE WARNINGS.) (See AIR BAG SYSTEM SERVICE CAUTIONS.)

## L.H.D.

- 1. Disconnect the negative battery cable and wait for **1 min or more**. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5].) (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5 (WITHOUT i-stop)].) (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-D 2.2].)
- 2. Slide hooks A in the order of arrows (1), (2), (3) shown in the figure and disconnect them from hooks B

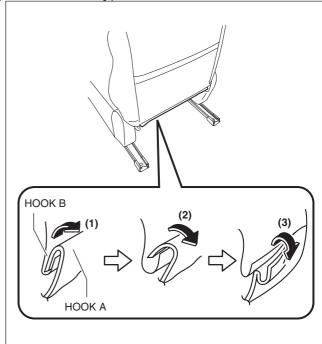


- 3. Open fasteners C.
- 4. Disconnect the recliner motor connector.

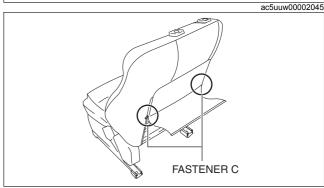

5. Apply battery positive voltage to the recliner motor terminals and inspect the front seat operation.


| Front seat | Connection |     |
|------------|------------|-----|
| operation  | Α          | В   |
| Forward    | B+         | GND |
| Backward   | GND        | B+  |

 If not as specified, replace the front seat back frame. (See FRONT SEAT BACK TRIM REMOVAL/ INSTALLATION.)

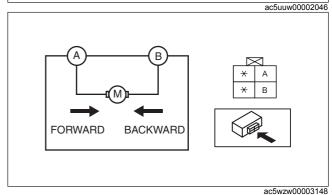


## R.H.D.

- 1. Disconnect the negative battery cable and wait for 1 min or more. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5].) (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5 (WITHOUT i-stop)].) (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-D 2.2].)
- 2. Slide hooks A in the order of arrows (1), (2), (3) shown in the figure and disconnect them from hooks В.

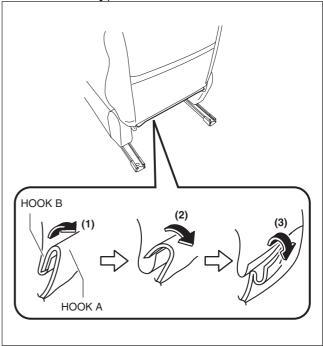

- 3. Open fasteners C.
- 4. Disconnect the recliner motor connector.

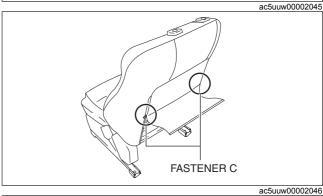

5. Apply battery positive voltage to the recliner motor terminals and inspect the front seat operation.

| Front seat | Connection |     |
|------------|------------|-----|
| operation  | Α          | В   |
| Forward    | GND        | B+  |
| Backward   | B+         | GND |

If not as specified, replace the front seat back frame. (See FRONT SEAT BACK TRIM REMOVAL/ **INSTALLATION.)** 

