

STEERING LOCATION INDEX

L.H.D.

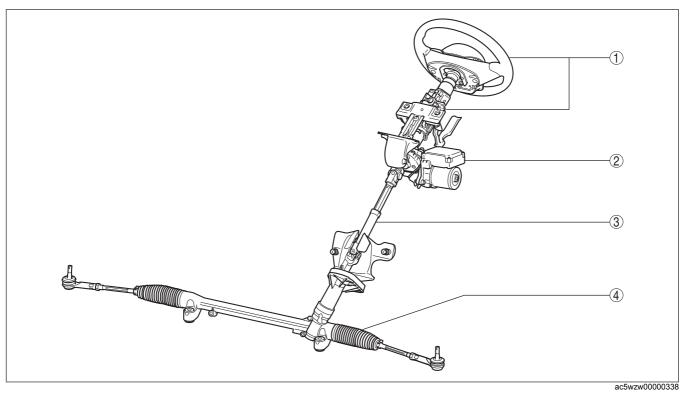



R.H.D.

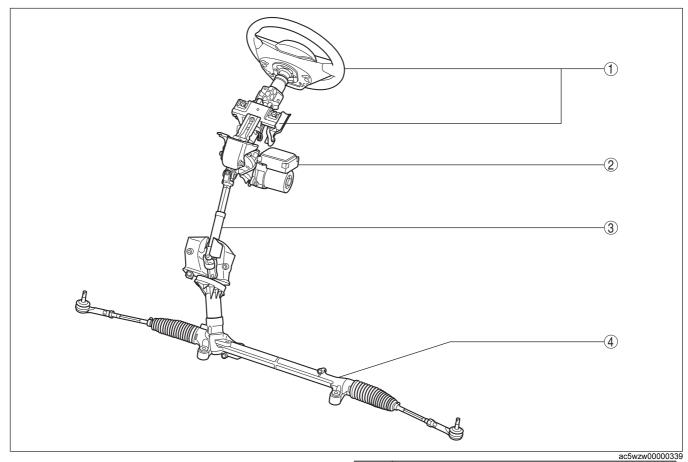

1 Steering wheel and column
(See STEERING WHEEL AND COLUMN
INSPECTION.)
(See STEERING WHEEL AND COLUMN
REMOVAL/INSTALLATION.)
(See STEERING SHAFT INSPECTION.)

2 | EPS CM (See EPS CONTROL MODULE INSPECTION.) Intermediate shaft
(See INTERMEDIATE SHAFT REMOVAL/
INSTALLATION.)
(See STEERING SHAFT INSPECTION.)

4 Steering gear and linkage
(See TIE-ROD END REPLACEMENT.)
(See STEERING GEAR AND LINKAGE REMOVAL/
INSTALLATION.)
(See STEERING GEAR AND LINKAGE
INSPECTION.)
(See STEERING GEAR AND LINKAGE
DISASSEMBLY.)
(See TIE-ROD END INSPECTION.)
(See STEERING GEAR AND LINKAGE
ASSEMBLY.)