Clearing a memory channel

You can clear any no-longer-used memory channel and set it as a blank channel.

[Example: Clearing Memory channel 3]

- 1. Push **WM** to select the Memory mode.
- 2. Push
 or
 to select the channel to clear.
- 3. Touch the channel number.
 - The VFO/MEMORY screen is displayed.



- Touch [M-CLR] for 1 second to clear the memory channel.
 - "BLANK" is displayed.



Copying the Memory channel contents

You can copy a Memory channel contents to the VFO or another memory channel.


♦ Copying to the other memory channel

You can copy the Memory contents to another memory channel.

[Example: Copying the contents of Memory channel 1 to the Memory channel 2]


- 1. Push **WM** to select the Memory mode.
- 2. Push ▲ or ▼ to select the channel to be copied. (Example: memory channel 1)
- 3. Open the MEMORY screen.

 MENU » MEMORY
- Select the desired memory channel to be overwritten (Example: memory channel 2), and then touch ■.
 - The MEMORY MENU is displayed.

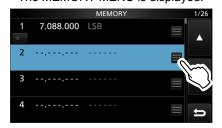



5. Select "Memory Write."

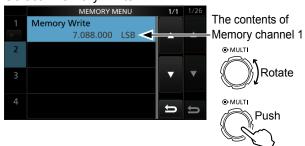

- 6. Touch [Yes].
 - A beep sounds and the selected memory contents are copied.
 - · Returns to the MEMORY screen.



♦ Copying to the VFO

You can copy the Memory contents to the VFO.

[Example: Copying the contents of Memory channel 1 to the VFO]

- 1. Push **WM** to select the Memory mode.
- 2. Push ▲ or ▼ to select the channel to be copied. (Example: memory channel 1)



- 3. Hold down MM for 1 second.
 - A beep sounds and the selected memory contents are copied to the VFO.