
14 MAINTENANCE

Touch screen calibration function

When no screen action occurs, or a different function is activated after touching the screen, the touched point and the detected range may be different. In that case, the Touch screen calibration function helps to correct the touch screen sensing performance.

- 1. Open the OTHERS screen.
 - MENU » SET > Others
- 2. Touch "Touch Screen Calibration."
 - A dot is displayed on the screen.

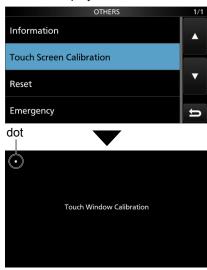

- 3. Touch the dot on the screen.
 - A new dot is displayed in another position.
- 4. Repeat step 2.
 - ① When the calibration is completed, the transceiver returns to the OTHERS screen.